

## **PSoC<sup>®</sup> Creator™**

# System Reference Guide

cy\_boot Component v4.20

Document Number: 001-93937, Rev. \*B

Cypress Semiconductor 198 Champion Court San Jose, CA 95134-1709 Phone (USA): 800.858.1810 Phone (Intl): 408.943.2600 http://www.cypress.com



© Cypress Semiconductor Corporation, 2014-2017. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.

# Contents



| 1 | Introduction                         | 9  |
|---|--------------------------------------|----|
|   | Conventions                          | 10 |
|   | References                           | 10 |
|   | Sample Firmware Source Code          | 10 |
|   | Revision History                     | 10 |
| 2 | Standard Types, APIs, and Defines    | 11 |
|   | Base Types                           | 11 |
|   | Hardware Register Types              | 11 |
|   | Compiler Defines                     | 11 |
|   | Keil 8051 Compatibility Defines      | 12 |
|   | Return Codes                         | 12 |
|   | Interrupt Types and Macros           | 13 |
|   | Interrupt vector address type        | 13 |
|   | Intrinsic Defines                    | 13 |
|   | Device Version Defines               | 13 |
|   | Variable Attributes                  | 13 |
|   | Instance APIs                        | 14 |
|   | General APIs                         | 14 |
|   | Low Power APIs                       | 15 |
|   | PSoC Creator Generated Defines       | 16 |
|   | Project Type                         | 16 |
|   | Chip Configuration Mode              | 16 |
|   | Debugging Mode                       | 17 |
|   | Chip Protection Mode                 | 17 |
|   | Stack and Heap                       | 17 |
|   | Voltage Settings                     | 18 |
|   | System Clock Frequency               | 18 |
|   | JTAG/Silicon ID                      | 19 |
|   | IP Block Information                 | 19 |
| 3 | Clocking                             | 21 |
|   | PSoC Creator Clocking Implementation | 21 |
|   | PSoC 3/PSoC 5LP                      | 21 |
|   | PSoC 4                               | 22 |



| Clock Connectivity   | 23  |
|--|---|
| Clock Synchronization  | 24  |
| Routed Clock Implementation  | 25  |
| Using Asynchronous Clocks  | 29  |
| Clock Crossing   | 29  |
| Gated Clocks   | 30  |
| Fixed-Function Clocking  | 31  |
| UDB-Based Clocking   | 31  |
| Changing Clocks in Run-time  | 32  |
| Low Voltage Analog Boost Clocks                                    | 32  |
| PSoC 4 Devices Only  | 32  |
| PSoC 3 / PSoC 5LP Devices Only                                     | 32  |
| APIs   | 33  |
| All Devices  | 33  |
| PSoC 3/PSoC 5LP APIs   | 34  |
|  |   |
| PSoC 4100 BLE and 4200 BLE APIs                                    | 46  |
| Power Management   | 49  |
| PSoC 3/PSoC 5LP Implementation                                     | 49  |
| Low Power Usage  | 49  |
| Clock Configuration  | 50  |
| Wakeup Time Configuration  | 50  |
| Wakeup Source Configuration  | 51  |
| Power Management APIs  | 52  |
| PSoC 4 Implementation  | 58  |
| Clock Configuration (PSoC 4100 BLE and PSoC 4200 BLE)              | 58  |
| Power Management APIs  | 58  |
| Interrupts   | 63  |
| APIs   | 63  |
| CyGlobalIntEnable  | 63  |
|  |   |
| uint32 CyDisableInts()   | 63  |
| void CyEnableInts(uint32 mask)                                     | 63  |
| void CyIntEnable(uint8 number)                                     | 64  |
| void CyIntDisable(uint8 number)                                    | 64  |
| uint8 CyIntGetState(uint8 number)                                  | 64  |
| cyisraddress CyIntSetVector(uint8 number, cyisraddress address)    | 64  |
| cyisraddress CyIntGetVector(uint8 number)                          | 64  |
| cyisraddress CyIntSetSysVector(uint8 number, cyisraddress address) | 65  |
| cyisraddress CyIntGetSysVector(uint8 number)                       | 65  |
| void CyIntSetPriority(uint8 number, uint8 priority)                | 65  |
|  | Clock Connectivity.  Clock Synchronization  Routed Clock Implementation  Using Asynchronous Clocks  Clock Crossing  Gated Clocks  Fixed-Function Clocking  UDB-Based Clocking  Changing Clocks in Run-time  Low Voltage Analog Boost Clocks  PSoC 4 Devices Only  PSoC 3 / PSoC 5LP Devices Only.  APIs  All Devices  PSoC 3/PSoC 5LP APIs  PSoC 4 APIs  PSoC 4 APIs  PSoC 3/PSoC 5LP Implementation  Low Power Usage  Clock Configuration  Wakeup Time Configuration  Wakeup Time Configuration  Wakeup Source Configuration  PSoC 4 Implementation  Clock Configuration (PSoC 4100 BLE and PSoC 4200 BLE)  Power Management APIs  PSoC 4 Implementation  Clock Configuration (PSoC 4100 BLE and PSoC 4200 BLE)  Power Management APIs  Interrupts  APIs  CyGlobalIntEnable  CyGlobalIntDisable  uint32 CyDisableInts()  void CyIntEnableInts(uint32 mask)  void CyIntEnable(uint8 number)  uint8 CyIntGetState(uint8 number)  cyisraddress CyIntSetSysVector(uint8 number, cyisraddress address)  cyisraddress CyIntGetSysVector(uint8 number),  void CyIntSetSysVector(uint8 number),  cyisraddress CyIntGetSysVector(uint8 number),  cyisraddress CyIntGetSysVector(uint8 number),  cyisraddress CyIntGetSysVector(uint8 number),  void CyIntSetPriority(uint8 number),  void C |



|   | uint8 CyIntGetPriority(uint8 number)                         | 66 |
|---|--|----|
|   | void CyIntSetPending(uint8 number)                           | 66 |
|   | void CyIntClearPending(uint8 number)                         | 66 |
| 6 | Pins   | 67 |
|   | PSoC 3/PSoC 5LP APIs   | 67 |
|   | uint8 CyPins_ReadPin(uint16/uint32 pinPC)                    | 67 |
|   | void CyPins_SetPin(uint16/uint32 pinPC)                      |    |
|   | void CyPins_ClearPin(uint16/uint32 pinPC)                    | 68 |
|   | void CyPins_SetPinDriveMode(uint16/uint32 pinPC, uint8 mode) | 68 |
|   | uint8 CyPins_ReadPinDriveMode(uint16/uint32 pinPC)           | 68 |
|   | void CyPins_FastSlew(uint16/uint32 pinPC)                    | 68 |
|   | void CyPins_SlowSlew(uint16/uint32 pinPC)                    | 69 |
|   | PSoC 4 APIs  | 69 |
|   | CY_SYS_PINS_READ_PIN(portPS, pin)                            | 69 |
|   | CY_SYS_PINS_SET_PIN(portDR, pin)                             | 69 |
|   | CY_SYS_PINS_CLEAR_PIN(portDR, pin)                           | 70 |
|   | CY_SYS_PINS_SET_DRIVE_MODE(portPC, pin, mode)                | 70 |
|   | CY_SYS_PINS_READ_DRIVE_MODE(portPC, pin)                     | 71 |
| 7 | Register Access  | 73 |
|   | Register Access APIs   | 73 |
|   | uint8 CY_GET_REG8(uint16/uint32 reg)                         | 73 |
|   | void CY_SET_REG8(uint16/uint32 reg, uint8 value)             | 73 |
|   | uint16 CY_GET_REG16(uint16/uint32 reg)                       | 74 |
|   | void CY_SET_REG16(uint16/uint32 reg, uint16 value)           | 74 |
|   | uint32 CY_GET_REG24(uint16/uint32 reg)                       | 74 |
|   | void CY_SET_REG24(uint16/uint32 reg, uint32 value)           | 74 |
|   | uint32 CY_GET_REG32(uint16/uint32 reg)                       | 74 |
|   | void CY_SET_REG32(uint16/uint32 reg, uint32 value)           | 75 |
|   | uint8 CY_GET_XTND_REG8(uint32 reg)                           | 75 |
|   | void CY_SET_XTND_REG8(uint32 reg, uint8 value)               | 75 |
|   | uint16 CY_GET_XTND_REG16(uint32 reg)                         | 75 |
|   | void CY_SET_XTND_REG16(uint32 reg, uint16 value)             | 75 |
|   | uint32 CY_GET_XTND_REG24(uint32 reg)                         | 76 |
|   | void CY_SET_XTND_REG24(uint32 reg, uint32 value)             | 76 |
|   | uint32 CY_GET_XTND_REG32(uint32 reg)                         | 76 |
|   | void CY_SET_XTND_REG32(uint32 reg, uint32 value)             | 76 |
| 8 | DMA  | 77 |
| 9 | Flash and EEPROM   | 79 |
|   | PSoC 3/PSoC 5LP Implementation                               | 79 |
|   | Flash Architecture   | 79 |
|   | EEPROM Architecture  | 80 |



|    | Working with Flash and EEPROM   | 80  |
|----|---|-----|
|    | Flash and EEPROM APIs   | 83  |
|    | PSoC 4 Implementation   | 87  |
|    | Memory Architecture   | 87  |
|    | Working with Flash  | 88  |
|    | Flash APIs  | 89  |
| 10 | Bootloader Migration  | 91  |
|    | Introduction  | 91  |
|    | Complete Migration to PSoC Creator 2.1 or later                             | 91  |
|    | Migrating to PSoC Creator 2.1 or later without cy_boot Component Update     | 92  |
|    | Migrating to PSoC Creator 2.1 or later for Bootloadable Designs Only        | 92  |
|    | Migrating Bootloader Designs  |     |
|    | Migrating Bootloadable Designs  |     |
|    | Project Application Type Property Changes                                   |     |
|    | Migrating Bootloadable Dependency to Bootloader Design                      | 94  |
| 11 | System Functions  | 95  |
|    | General APIs  | 95  |
|    | uint8 CyEnterCriticalSection(void)  | 95  |
|    | void CyExitCriticalSection(uint8 savedIntrStatus)                           | 95  |
|    | void CYASSERT(uint32 expr)  | 96  |
|    | void CyHalt(uint8 reason)   | 96  |
|    | void CySoftwareReset(void)  | 96  |
|    | CyDelay APIs  | 96  |
|    | void CyDelay(uint32 milliseconds)   | 96  |
|    | void CyDelayUs(uint16 microseconds)   |     |
|    | void CyDelayFreq(uint32 freq)   |     |
|    | void CyDelayCycles(uint32 cycles)   |     |
|    | PSoC 3/PSoC 5LP Voltage Detect APIs   |     |
|    | void CyVdLvDigitEnable(uint8 reset, uint8 threshold)                        |     |
|    | void CyVdLvAnalogEnable(uint8 reset, uint8 threshold)                       |     |
|    | void CyVdLvDigitDisable(void)   |     |
|    | void CyVdLvAnalogDisable(void)  |     |
|    | void CyVdHvAnalogEnable(void)   |     |
|    | void CyVdHvAnalogDisable(void)  |     |
|    | uint8 CyVdStickyStatus(uint8 mask)  |     |
|    | uint8 CyVdRealTimeStatus(void)  |     |
|    | Voltage Detect APIs (PSoC 4100 / PSoC 4200 / PSoC 4100 BLE / PSoC 4200 BLE) |     |
|    | void CySysLvdEnable(uint32 threshold)                                       |     |
|    | void CySysLvdDisable(void)  |     |
|    | uint32 CySysLvdGetInterruptSource(void)                                     |     |
|    | void CySysLvdClearInterrupt(void)   | 102 |



|    | Cache Functionality                                    | 102 |
|----|--|-----|
|    | PSoC 3   | 102 |
|    | PSoC 5LP   | 102 |
|    | PSoC 4   | 102 |
| 12 | Startup and Linking                                    | 103 |
|    | PSoC 3   | 104 |
|    | PSoC 4/PSoC 5LP  | 104 |
|    | Unaligned Transfers (PSoC 5LP)                         | 104 |
|    | GCC Implementation                                     |     |
|    | Realview Implementation (applicable for MDK and RVDS)  | 105 |
|    | CMSIS Support  | 105 |
|    | High-Level I/O Functions                               | 107 |
|    | The printf() Usage Model                               | 107 |
|    | Preservation of Reset Status                           | 108 |
|    | PSoC 3/PSoC 5LP  | 108 |
|    | PSoC 4   | 108 |
|    | API Memory Usage                                       | 109 |
|    | PSoC 3 (Keil PK51)                                     | 109 |
|    | PSoC 5LP (GCC)   | 109 |
|    | PSoC 4 (GCC)   | 109 |
|    | Performance  | 110 |
|    | Functions Execution Time                               | 110 |
|    | Critical Sections Duration                             | 111 |
| 13 | Watchdog Timer (WDT)                                   | 113 |
|    | PSoC 3/PSoC 5LP  |     |
|    | void CyWdtStart(uint8 ticks, uint8 lpMode)             | 113 |
|    | void CyWdtStart(uint8 ticks, uint8 lpMode) (continued) | 113 |
|    | void CyWdtClear()                                      | 113 |
|    | PSoC 4100 / PSoC 4200 / PSoC 4100 BLE / PSoC 4200 BLE  | 114 |
|    | Functional Description                                 | 114 |
|    | APIs   | 116 |
|    | PSoC 4000  | 121 |
|    | PSoC 4000 Functional Description                       | 121 |
|    | PSoC 4000 APIs   | 123 |
| 14 | MISRA Compliance                                       |     |
|    | Verification Environment                               | 127 |
|    | Project Deviations                                     | 128 |
|    | Documentation Related Rules                            | 129 |
|    | PSoC Creator Generated Sources Deviations              | 130 |
|    | cy_boot Component-Specific Deviations                  | 131 |



| 15 | System Timer (SysTick)    | 133 |
|----|---------------------------|-----|
|    | Functional Description    | 133 |
|    | APIs                      | 133 |
|    | Functions                 | 133 |
|    | Global Variables          | 137 |
| 16 | cy_boot Component Changes | 139 |
|    | Version 4.20              | 139 |
|    | Version 4.11              | 142 |
|    | Version 4.10              | 142 |
|    | Version 4.0               | 143 |
|    | Version 3.40 and Older    | 144 |
|    | Version 3.40              | 144 |
|    | Version 3.30              | 144 |
|    | Version 3.20              | 144 |
|    | Version 3.10              | 145 |
|    | Version 3.0               | 145 |
|    | Version 2.40 and Older    | 147 |
|    | Version 2.40              | 147 |
|    | Version 2.30              | 147 |
|    | Version 2.21              |     |

## 1 Introduction



This System Reference Guide describes functions supplied by the PSoC Creator cy\_boot component. The cy\_boot component provides the system functionality for a project to give better access to chip resources. The functions are not part of the component libraries but may be used by them. You can use the function calls to reliably perform needed chip functions.

The cy\_boot component is unique:

- Included automatically into every project
- Only a single instance can be present
- No symbol representation
- Not present in the Component Catalog (by default)

As the system component, cy\_boot includes various pieces of library functionality. This guide is organized by these functions:

- DMA (unavailable for PSoC 4)
- Flash
- Clocking
- Power management
- Startup code
- Various library functions
- Linker scripts

The cy\_boot component presents an API that enables user firmware to accomplish the tasks described in this guide. There are multiple major functional areas that are described separately.



## **Conventions**

The following table lists the conventions used throughout this guide:

| Convention  | Usage   |  |
|---|---|--|
| Courier New   | Displays file locations and source code:                                      |  |
|   | C:\cd\icc user entered text   |  |
| Italics   | Displays file names and reference documentation:                              |  |
|   | sourcefile.hex  |  |
| [bracketed, bold]   | d, bold] Displays keyboard commands in procedures:                            |  |
|   | [Enter] or [Ctrl] [C]   |  |
| File > New Project  | •   |  |
|   | File > New Project > Clone  |  |
| <b>Bold</b> Displays commands, menu paths and selections, and icon names in |   |  |
|   | procedures:   |  |
|   | Click the <b>Debugger</b> icon, and then click <b>Next</b> .                  |  |
| Text in gray boxes  | Displays cautions or functionality unique to PSoC Creator or the PSoC device. |  |

## References

This guide is one of a set of documents pertaining to PSoC Creator and PSoC devices. Refer to the following other documents as needed:

- PSoC Creator Help
- PSoC Creator Component Datasheets
- PSoC Creator Component Author Guide
- PSoC Technical Reference Manual (TRM)

## **Sample Firmware Source Code**

PSoC Creator provides numerous example projects that include schematics and example code in the Find Example Project dialog. For component-specific examples, open the dialog from the Component Catalog or an instance of the component in a schematic. For general examples, open the dialog from the Start Page or **File** menu. As needed, use the **Filter Options** in the dialog to narrow the list of projects available to select.

Refer to the "Find Example Project" topic in the PSoC Creator Help for more information.

## **Revision History**

| Document Title: PSoC® Creator™ System Reference Guide, cy_boot Component v4.20 Document Number: 001-93937 |          |  |  |
|---|----------|--|--|
| Revision Date Description of Change   |          |  |  |
| **  | 8/27/14  | New document for version 4.20 of the cy_boot component. Refer to the change section for component changes from previous versions of cy_boot. |  |
| *A  | 12/2/14  | Various edits throughout to clarify APIs and side effects.   |  |
| *B  | 11/28/17 | Minor edits.   |  |

## 2 Standard Types, APIs, and Defines



To support the operation of the same code across multiple CPUs with multiple compilers, the cy\_boot component provides types and defines that create consistent results across platforms.

## **Base Types**

| Туре    | Description  |  |
|---------|--|--|
| char8   | 8-bit (signed or unsigned, depending on the compiler selection for char) |  |
| uint8   | 8-bit unsigned   |  |
| uint16  | 16-bit unsigned  |  |
| uint32  | 32-bit unsigned  |  |
| int8    | 8-bit signed   |  |
| int16   | 16-bit signed  |  |
| int32   | 32-bit signed  |  |
| float32 | 32-bit float   |  |
| float64 | 64-bit float (unavailable for PSoC 3)                                    |  |
| int64   | 64-bit signed (unavailable for PSoC 3)                                   |  |
| uint64  | 64-bit unsigned (unavailable for PSoC 3)                                 |  |

## **Hardware Register Types**

Hardware registers typically have side effects and therefore are referenced with a volatile type.

| Define                         | Description              |  |
|--------------------------------|--------------------------|--|
| reg8                           | Volatile 8-bit unsigned  |  |
| reg16                          | Volatile 16-bit unsigned |  |
| reg32 Volatile 32-bit unsigned |                          |  |

## **Compiler Defines**

The compiler being used can be determined by testing for the definition of the specific compiler. For example, to test for the PSoC 3 Keil compiler:

| Define        | Description   |
|---------------|---|
| C51           | Keil 8051 compiler  |
| GNUC          | ARM GCC compiler  |
| ARMCC_VERSION | ARM Realview compiler used by Keil MDK and RVDS tool sets |



## **Keil 8051 Compatibility Defines**

The Keil 8051 compiler supports type modifiers that are specific to this platform. For other platforms these modifiers must not be present. For compatibility these types are supported by defines that map to the appropriate string when compiled for Keil and an empty string for other platforms. These defines are used to create optimized Keil 8051 code while still supporting compilation on other platforms.

| Define      | Keil Type | Other Platforms |
|-------------|-----------|-----------------|
| CYBDTA      | bdata     |                 |
| CYBIT       | bit       | uint8           |
| CYCODE      | code      |                 |
| CYCOMPACT   | compact   |                 |
| CYDATA      | data      |                 |
| CYFAR       | far       |                 |
| CYIDATA     | idata     |                 |
| CYLARGE     | large     |                 |
| CYPDATA     | pdata     |                 |
| CYREENTRANT | reentrant |                 |
| CYSMALL     | small     |                 |
| CYXDATA     | xdata     |                 |

## **Return Codes**

Return codes from Cypress routines are returned as an 8-bit unsigned value type: cystatus. The standard return values are:

| Define               | Description  |
|----------------------|--|
| CYRET_SUCCESS        | Successful   |
| CYRET_UNKNOWN        | Unknown failure                                      |
| CYRET_BAD_PARAM      | One or more invalid parameters                       |
| CYRET_INVALID_OBJECT | Invalid object specified                             |
| CYRET_MEMORY         | Memory related failure                               |
| CYRET_LOCKED         | Resource lock failure                                |
| CYRET_EMPTY          | No more objects available                            |
| CYRET_BAD_DATA       | Bad data received (CRC or other error check)         |
| CYRET_STARTED        | Operation started, but not necessarily completed yet |
| CYRET_FINISHED       | Operation completed                                  |
| CYRET_CANCELED       | Operation canceled                                   |
| CYRET_TIMEOUT        | Operation timed out                                  |
| CYRET_INVALID_STATE  | Operation not setup or is in an improper state       |



## **Interrupt Types and Macros**

Types and macros provide consistent definition of interrupt service routines across compilers and platforms. Note that the macro to use is different between the function definition and the function prototype.

Function definition example:

```
CY_ISR(MyISR)
{
    /* ISR Code here */
}
```

## Function prototype example:

```
CY_ISR_PROTO(MyISR);
```

Interrupt vector address type

| interrupt reeter address type |  |  |
|-------------------------------|--|--|
| Туре                          | Description                                    |  |
| cvisraddress                  | Interrupt vector (address of the ISR function) |  |

## **Intrinsic Defines**

| Define | Description               |
|--------|---------------------------|
| CY_NOP | Processor NOP instruction |

## **Device Version Defines**

| Define          | Description                               |
|-----------------|---|
| CY_PSOC3        | Any PSoC 3 Device                         |
| CY_PSOC4        | Any PSoC 4 Device                         |
| CY_PSOC4_4000   | PSoC 4000 device family.                  |
| CY_PSOC4_4100   | PSoC 4100 device family.                  |
| CY_PSOC4_4200   | PSoC 4200 device family.                  |
| CY_PSOC4_4100BL | PSoC 4100 device family with BLE support. |
| CY_PSOC4_4200BL | PSoC 4200 device family with BLE support. |
| CY_PSOC5        | Any PSoC 5 Device                         |

## **Variable Attributes**

| Define    | Description  |
|-----------|--|
| CY_NOINIT | Specifies that a variable should be placed into uninitialized data section that prevents this variable from being initialized to zero on startup.  For PSoC 3 no code is generated for this macro. |
| CY_ALIGN  | Specifies a minimum alignment (in bytes) for variables of the specified type.  |



| Define                       | Description  |  |
|------------------------------|--|--|
| CY_PACKED,<br>CY_PACKED_ATTR | Attached to an enum, struct, or union type definition, specified that the minimum required memory be used to represent the type. |  |
|                              | Example:   |  |
|                              | CYPACKED typedef struct {  |  |
|                              | uint8 freq;  |  |
|                              | <pre>uint8 absolute;</pre>   |  |
|                              | } CYPACKED_ATTR imoTrim;   |  |
| CY_INLINE                    | Specifies that compiler can perform inline expansion: insert the function code at the address of each function call.             |  |

## **Instance APIs**

#### **General APIs**

Most components have an instance-specific set of the APIs that allow you to initialize, enable and disable the component. These functions are listed below generically. Refer to the individual datasheet for specific information.

## `=instance name` InitVar

Description: This global variable Indicates whether the component has been initialized. The variable is initialized to 0 and set to 1 the first time \_Start() is called. This allows the component to restart without reinitialization after the first call to the \_Start() routine.

> If reinitialization of the component is required, then the <a href="Init()">Init()</a> function can be called before the \_Start() or \_Enable() function.

## void `=instance\_name`\_Start (void)

Description: This function intended to start component operation. The \_Start() sets the \_initVar

variable, calls the \_Init function, and then calls the \_Enable function.

Parameters: None Return Value: None

## void `=instance\_name`\_Stop (void)

**Description:** Disables the component operation.

Parameters: None Return Value: None



## void `=instance\_name`\_Init (void)

Description: Initializes component's parameters to those set in the customizer placed on the

schematic. All registers will be reset to their initial values. This reinitializes the

component. Usually called in Start().

Parameters: None Return Value: None

## void `=instance name` Enable (void)

**Description:** Enables the component block operation.

Parameters: None Return Value: None

## **Low Power APIs**

Most components have an instance-specific set of low power APIs that allow you to put the component into its low power state. These functions are listed below generically. Refer to the individual datasheet for specific information regarding register retention information if applicable.

## void `=instance name` Sleep (void)

Description: The \_Sleep() function checks to see if the component is enabled and saves that

state. Then it calls the Stop() function and calls SaveConfig() function to save the

user configuration.

PSoC 3/PSoC 5LP: Call the \_Sleep() function before calling the

CyPmSleep() or the CyPmHibernate() function.

PSoC 4: Call the \_Sleep() function before calling the CySysPmDeepSleep()

function.

Parameters: None Return Value: None

#### void `=instance\_name`\_Wakeup (void)

Description: The \_Wakeup() function calls the \_RestoreConfig() function to restore the user

configuration. If the component was enabled before the \_Sleep() function was

called, the Wakeup() function will re-enable the component.

Parameters: None Return Value: None

Side Effects: Calling the Wakeup() function without first calling the Sleep() or SaveConfig()

function may produce unexpected behavior.



## void `=instance\_name`\_SaveConfig(void)

Description: This function saves the component configuration. This will save non-retention

registers. This function will also save the current component parameter values, as defined in the Configure dialog or as modified by appropriate APIs. This function is

called by the Sleep() function.

Parameters: None Return Value: None

## void `=instance\_name`\_RestoreConfig(void)

**Description:** This function restores the component configuration. This will restore non-retention

registers. This function will also restore the component parameter values to what

they were prior to calling the \_Sleep() function.

Parameters: None Return Value: None

Side Effects: Calling this function without first calling the \_Sleep() or \_SaveConfig() function may

produce unexpected behavior.

## **PSoC Creator Generated Defines**

## **Project Type**

The following are defines for project type (from **Project > Build Settings**):

- CYDEV PROJ TYPE
- CYDEV\_PROJ\_TYPE\_BOOTLOADER
- CYDEV PROJ TYPE LOADABLE
- CYDEV\_PROJ\_TYPE\_MULTIAPPBOOTLOADER
- CYDEV PROJ TYPE STANDARD

## **Chip Configuration Mode**

The following are defines for chip configuration mode (from System DWR). Options vary by device:

## AII

- CYDEV CONFIGURATION MODE
- CYDEV CONFIGURATION MODE COMPRESSED
- CYDEV\_CONFIGURATION\_MODE\_DMA
- CYDEV CONFIGURATION MODE UNCOMPRESSED
- CYDEV\_DEBUGGING\_ENABLE or CYDEV PROTECTION ENABLE (Debugging or protection enabled. Mutually exclusive.)

#### PSoC 3

CYDEV CONFIGURATION CLEAR SRAM (Startup code clear SRAM?)



## PSoC 3 and PSoC 5LP

- CYDEV CONFIGURATION COMPRESSED (Configuration data compressed?)
- CYDEV\_CONFIGURATION\_DMA (Configuration data loaded via DMA?)
- CYDEV CONFIGURATION ECC (Configuration data stored in ECC?)
- CYDEV\_CONFIG\_FASTBOOT\_ENABLED (Device startup at 48 MHz at boot? If not, 12 MHz.)
- CYDEV INSTRUCT CACHE ENABLED (Instruction cache enabled?)
- CYDEV DMA CHANNELS AVAILABLE (Number of DMA channels available for configuration.)
- CYDEV ECC ENABLE (ECC enabled?)
- CYDEV\_DEBUGGING\_XRES (Optional XRES pin enabled as XRES?)

#### PSoC 4

CYDEV\_CONFIG\_READ\_ACCELERATOR (Flash read accelerator enabled?)

## PSoC 4 and PSoC 5LP

■ CYDEV\_USE\_BUNDLED\_CMSIS (Include the CMSIS standard library.)

## **Debugging Mode**

The following are defines for debugging mode (from System DWR):

- CYDEV\_DEBUGGING\_DPS
- CYDEV\_DEBUGGING\_DPS\_Disable
- CYDEV DEBUGGING DPS JTAG 4
- CYDEV DEBUGGING DPS JTAG 5
- CYDEV\_DEBUGGING\_DPS\_SWD
- CYDEV DEBUGGING DPS SWD SWV

## **Chip Protection Mode**

The following are defines for chip protection mode (from System DWR):

- CYDEV\_DEBUG\_PROTECT
- CYDEV\_DEBUG\_PROTECT\_KILL
- CYDEV\_DEBUG\_PROTECT\_OPEN
- CYDEV DEBUG PROTECT PROTECTED

## Stack and Heap

The following are defines for the number of bytes allocated to the stack and heap (from System DWR). These are only for PSoC 4 and PSoC 5LP.

- CYDEV\_HEAP\_SIZE
- CYDEV STACK SIZE



## **Voltage Settings**

The following are defines for voltage settings (from System DWR). Options vary by device:

- CYDEV VARIABLE VDDA
- CYDEV\_VDDA
- CYDEV\_VDDA\_MV
- CYDEV\_VDDD
- CYDEV\_VDDD\_MV
- CYDEV\_VDDIO0
- CYDEV VDDIO0 MV
- CYDEV\_VDDIO1
- CYDEV\_VDDIO1\_MV
- CYDEV\_VDDIO2
- CYDEV\_VDDIO2\_MV
- CYDEV\_VDDIO3
- CYDEV\_VDDIO3\_MV
- CYDEV\_VIO0
- CYDEV\_VIO0\_MV
- CYDEV VIO1
- CYDEV\_VIO1\_MV
- CYDEV\_VIO2
- CYDEV\_VIO2\_MV
- CYDEV\_VIO3
- CYDEV\_VIO3\_MV

## **System Clock Frequency**

The following are defines for system clock frequency (from Clock DWR):

## PSoC 3 and PSoC 5

- BCLK\_BUS\_CLK\_HZ
- BCLK\_BUS\_CLK\_KHZ
- BCLK BUS CLK MHZ

## PSoC 4

- CYDEV\_BCLK\_\_HFCLK\_\_HZ
- CYDEV\_BCLK\_\_HFCLK\_\_KHZ
- CYDEV\_BCLK\_\_HFCLK\_\_MHZ
- CYDEV BCLK SYSCLK HZ
- CYDEV\_BCLK\_\_SYSCLK\_\_KHZ



■ CYDEV\_BCLK\_\_SYSCLK\_\_MHZ

## JTAG/Silicon ID

The following is the define for JTAG/Silicon ID for the current device:

■ CYDEV\_CHIP\_JTAG\_ID

## **IP Block Information**

PSoC Creator generates the following macros in the *cyipblocks.h* file for the IP blocks that exist on the current device:

```
#define CYIPBLOCK <BLOCK NAME> VERSION <version>
```

## For example:

```
#define CYIPBLOCK_P3_TIMER_VERSION 0
#define CYIPBLOCK_P3_USB_VERSION 0
#define CYIPBLOCK P3 VIDAC VERSION 0
```



This page intentionally left blank.

## 3 Clocking



## **PSoC Creator Clocking Implementation**


PSoC devices supported by PSoC Creator have flexible clocking capabilities. These clocking capabilities are controlled in PSoC Creator by selections within the Design-Wide Resources settings, connectivity of clocking signals on the design schematic, and API calls that can modify the clocking at runtime.

This section describes how PSoC Creator maps clocks onto the device and provides guidance on clocking methodologies that are optimized for the PSoC architecture.

PSoC 3/PSoC 5LP devices have different clocking architectures than PSoC 4 devices. The System Clock consolidates Bus Clock (BUS\_CLK) on PSoC 3/PSoC 5LP devices and System Clock (SYSCLK) on PSoC 4 devices. The Master Clock consolidates Master Clock (MASTER\_CLK) on PSoC 3/PSoC 5LP devices and High-Frequency Clock (HFCLK) on PSoC 4 devices.

#### PSoC 3/PSoC 5LP

#### Overview

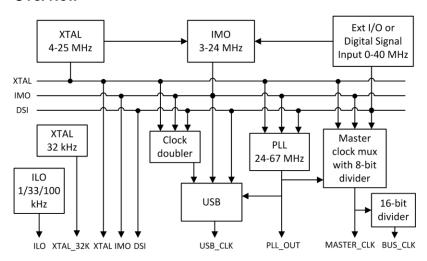

The clock system includes these clock resources:

- Four internal clock sources increase system integration:
  - □ 3 to 48 MHz Internal Main Oscillator (IMO) ±1% at 3 MHz
  - □ 1 kHz, 33 kHz, 100 kHz Internal Low Speed Oscillator (ILO) outputs
  - □ USB Clock Domain, sourced from IMO, MHz External Crystal Oscillator (MHzECO), and Digital System Interconnect (DSI)
  - □ 24 to 67 MHz fractional Phase-Locked Loop (PLL) sourced from IMO, MHzECO, and DSI



- Clock generated using a DSI signal from an external I/O pin or other logic
- Two external clock sources provide high precision clocks:
  - □ 4 to 25 MHzECO
  - □ 32.768 kHz External Crystal Oscillator (kHzECO) for Real Time Clock (RTC)
- Dedicated 16-bit divider for bus clock
- Eight individually sourced 16-bit clock dividers for the digital system peripherals
- Four individually sourced 16-bit clock dividers with skew for the analog system peripherals
- IMO has a USB mode that synchronizes to USB host traffic, requiring no external crystal for USB.
   (USB equipped parts only)

#### PSoC 4

#### Overview

The clock system includes these clock resources:

- Two internal clock sources increase system integration:
  - □ PSoC 4000: 24, 32 and 48 MHz IMO ±2% across all frequencies when Vddd is above or equal to 2.0 V and +/-4% below 2.0 V.
  - $\hfill\Box$  PSoC 4100 / PSoC 4200 / PSoC 4100 BLE / PSoC 4200 BLE: 3 to 48 MHz IMO  $\pm 2\%$  across all frequencies
  - □ 32 kHz ILO outputs
- External Clock (EXTCLK) generated using a signal from a single designated I/O pin:
  - ☐ The allowable external clock frequency has the same limits as the system clock frequency.
  - The device always starts up using the IMO and the external clock must be enabled, so the device cannot be started from a reset clocked by the external clock.
- HFCLK selected from IMO or external clock:
- PSoC 4000: The HFCLK frequency cannot exceed 16 MHz.
- PSoC 4100 / PSoC 4200 / PSoC 4100 BLE / PSoC 4200 BLE: The HFCLK frequency cannot exceed 48 MHz.
- Low-Frequency Clock (LFCLK) sourced by ILO. PSoC 4100 BLE / PSoC 4200 BLE: LFCLK can be sourced by Watch Crystal Oscillator (WCO).
- Dedicated prescaler for SYSCLK sourced by HFCLK. The SYSCLK must be equal to or faster than all other clocks in the device.
  - ☐ PSoC 4000: The SYSCLK frequency cannot exceed 16 MHz.
  - □ PSoC 4100 / PSoC 4200 / PSoC 4100 BLE / PSoC 4200 BLE: The SYSCLK frequency cannot exceed 48 MHz.
- Four peripheral clock dividers, each containing three chainable 16-bit dividers
- 16 digital and analog peripheral clocks



#### **Power Modes**

The IMO is available in Active and Sleep modes. It is automatically disabled/enabled for the proper Deep Sleep and Hibernate mode entry/exit. The IMO is disabled during Deep Sleep and Hibernate modes.

The EXTCLK is available in Active and Sleep modes. The system will enter/exit Deep Sleep and Hibernate using external clock. The device will re-enable the IMO if it was enabled before entering Deep Sleep or Hibernate, but it does not wait for the IMO before starting the CPU. After entering Active mode, the IMO may take an additional 2 us to begin toggling. The IMO will startup cleanly without glitches, but any dependency should account for this extra startup time. If desired, firmware may increase wakeup hold-off using <a href="CySysPmSetWakeupHoldoff(">CySysPmSetWakeupHoldoff()</a> function to include this 2 us and ensure the IMO is toggling by the time Active mode is reached.

The ILO is available in all modes except Hibernate and Stop.

## **Clock Connectivity**

The PSoC architecture includes flexible clock generation logic. Refer to the *Technical Reference Manual* for a detailed description of all the clocking sources available in a particular device. The usage of these various clocking sources can be categorized by how those clocks are connected to elements of a design.

## System Clock

This is a special clock. It is closely related to Master Clock. For most designs, Master Clock and System Clock will be the same frequency and considered to be the same clock. These must be the highest speed clocks in the system. The CPU will be running off of System Clock and all the peripherals will communicate to the CPU and DMA using System Clock. When a clock is synchronized, it is synchronized to Master Clock. When a pin is synchronized it is synchronized to System Clock.

#### Global Clock

This is a clock that is placed on one of the global low skew digital clock lines. This also includes System Clock. When a clock is created using a Clock component, it will be created as a global clock. This clock must be directly connected to a clock input or may be inverted before connection to a clock input. Global clock lines connect only to the clock input of the digital elements in PSoC. If a global clock line is connected to something other than a clock input (that is, combinatorial logic or a pin), then the signal is not sent using low skew clock lines.

#### Routed Clock

Any clock that is not a global clock is a routed clock. This includes clocks generated by logic (with the exception of a single inverter) and clocks that come in from a pin.



## **Clock Synchronization**

Each clock in a PSoC device is either synchronous or asynchronous. This is in reference to System Clock and Master Clock. PSoC is designed to operate as a synchronous system. This was done to enable communication between the programmable logic and either the CPU or DMA. If these are not synchronous to a common clock, then any communication requires clocking crossing circuitry. Generally, asynchronous clocking is not supported except for PLD logic that does not interact with the CPU system.

## Synchronous Clock (PSoC 3/ PSoC 5LP)

Examples of synchronous clocks include:

- Global clock with sync to Master Clock option set. This option is set by default on the Advanced tab of the Clock component Configure dialog.
- Clock from an input pin with the "Input Synchronized" option selected. This option is set by default on the Input tab of the Pins component Configure dialog.
- Clock derived combinatorially from signals that were all generated from registers that are clocked by synchronous clocks.

## Asynchronous Clock (PSoC 3/ PSoC 5LP)

An asynchronous clock is any clock that is not synchronous. Some examples are:

- Any signal coming in from the Digital System Interconnect (DSI) other than a synchronized pin. These signals must be considered asynchronous because their timing is not guaranteed. This includes:
  - □ What would normally be a global clock (if connected directly to a clock input) that is fed through logic before being used as a clock
  - ☐ Fixed function block outputs (that is, Counter, Timer, PWM)
  - □ Digital signals from the analog blocks
- Global clock without the sync option set
- Clock from an input pin with Input Synchronized not selected
- Clock that is combinatorially created using any asynchronous signal

## Making Signals Synchronous (PSoC 3/ PSoC 5LP)

Depending on the source of the clock signal, it can be made synchronous using different methods:

- An asynchronous global clock can be made synchronous by checking the Sync with
   MASTER\_CLK option in the Clock component Configure dialog (this is the default selection).
- A routed clock coming from a pin can be made synchronous by checking the Input
   Synchronized option in the Pins component Configure dialog (this is the default selection, under the Pins tab).
- Any signal can be made synchronous by using the Sync component and a synchronous clock as the clock signal.


When synchronizing a signal:

- The synchronizing clock must be at least 2x the frequency of the signal being synchronized. If this rule is violated, then incoming clock edges can be missed and therefore not reflected in the resulting synchronized clock.
- The clock signal output will have all its transitions on the rising edge of the synchronizing clock.



- The clock signal output will have its edges moved from their original timing.
- The clock signal output will have variation in the high and low pulse widths unless the incoming clock and the synchronizing clock are directly related to each other.

The following example shows two clocks that have been synchronized to System Clock. Clock\_1 has exactly 2x the period of System Clock. Clock\_2 has a period of approximately 3x the period of System Clock. That results in the high and low pulse widths varying between 1 and 2 System Clock periods. In both cases all transitions occur at the rising edge of System Clock.

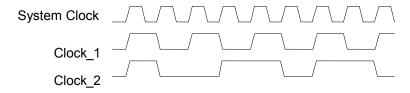

## **Routed Clock Implementation**

The clocking implementation in PSoC directly connects global clock signals to the clock input of clocked digital logic. This applies to both synchronous and asynchronous clocks. Since global clocks are distributed on low skew clock lines, all clocked elements connected to the same global clock will be clocked at the same time.


Routed clocks are distributed using the general digital routing fabric. This results in the clock arriving at each destination at different times. If that clock signal was used directly as the clock, then it would force the clock to be considered an asynchronous clock. This is because it cannot be guaranteed to transition at the rising edge of System Clock. This can also result in circuit failures if the output of a register clocked by an early arriving clock is used by a register clocked by a late arriving version of the same clock.

Under some circumstances, PSoC Creator can transform a routed clock circuit into a circuit that uses a global clock. If all the sources of a routed clock can be traced back to the output of registers that are clocked by common global clocks, then the circuit is transformed automatically by PSoC Creator. The cases where this is possible are:

- All signals are derived from the same global clock. This global clock can be asynchronous or synchronous.
- All signals are derived from more than one synchronous global clock. In this case, the common global clock is System Clock.

The clocking implementation in PSoC includes a built-in edge detection circuit that is used in this transformation. This does not use PLD resources to implement. The following shows the logical implementation and the resulting clock timing diagram.



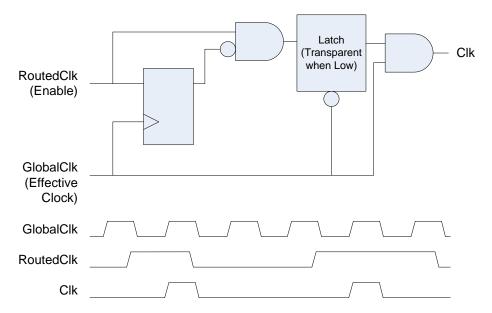


This diagram shows that the resulting clock occurs synchronous to the global clock on the first clock after a rising edge of the routed clock.

When analyzing the design to determine the source of a routed clock, another routed clock that was transformed may be encountered. In that case, the global clock used in that transformation is considered the source clock for that signal.

The clock transformation used for every routed clock is reported in the report file. This file is located in the Workspace Explorer under the **Results** tab after a successful build. The details are shown under the "Initial Mapping" heading. Each routed clock will be shown with the "Effective Clock" and the "Enable Signal". The "Effective Clock" is the global clock that is used and the "Enable Signal" is the routed clock that is edge detected and used as the enable for that clock.

## Example with a Divided Clock

A simple divided clock circuit can be used to observe how this transformation is done. The following circuit clocks the first flip-flop (cydff\_1) with a global clock. This generates a clock that is divided by 2 in frequency. That signal is used as a routed clock that clocks the next flip-flop (cydff\_2).

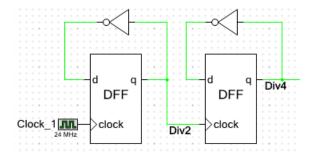


The report file indicates that one global clock has been used and that the single routed clock has been transformed using the global clock as the effective clock.



```
<pr
```


The resulting signals generated by this circuit are as follows.

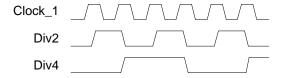

It may appear that the Div4 signal is generated by the falling edge of the Div2 signal. This is not the case. The Div4 signal is generated on the first Clock\_1 rising edge following a rising edge on Div2.

## Example with a Clock from a Pin

In the following circuit, a clock is brought in on a pin with synchronization turned on. Since synchronization of pins is done with System Clock, the transformed circuit uses System Clock as the Effective Clock and uses the rising edge of the pin as the Enable Signal.

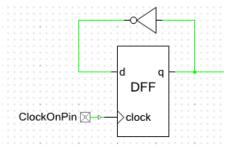


If input synchronization was not enabled at the pin, there would not be a global clock to use to transform the routed clock, and the routed clock would be used directly.

```
<pr
```



## **Example with Multiple Clock Sources**

In this example, the routed clock is derived from flip-flops that are clocked by two different clocks. Both of these clocks are synchronous, so System Clock is the common global clock that becomes the Effective Clock.

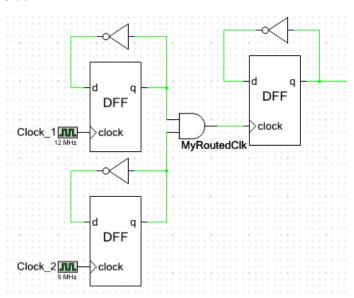


If either of these clocks had been asynchronous, then the routed clock would have been used directly.



## **Overriding Routed Clock Transformations**


The automatic transformation that PSoC Creator performs on routed clocks is generally the implementation that should be used. There is however a method to force the routed clock to be used directly. The UDBClkEn component configured in Async mode will force the clock used to be the routed clock, as shown in the following circuit.

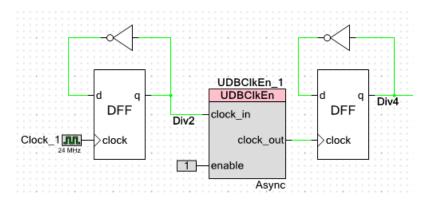

## **Using Asynchronous Clocks**

Asynchronous clocks can be used with PLD logic. However, they are not automatically supported by control registers, status registers and datapath elements because of the interaction with the CPU those elements have. Most Cypress library components will only work with synchronous clocks. They specifically force the insertion of a synchronizer automatically if the clock provided is asynchronous. Components that are designed to work with asynchronous clocks such as the SPI Slave will specifically describe how they handle clocking in their datasheet.

If an asynchronous clock is connected directly to something other than PLD logic, then a Design Rule Check (DRC) error is generated. For example, if an asynchronous pin is connected to a control register clock, a DRC error is generated.

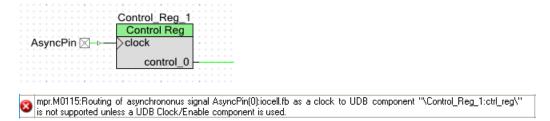

As stated in the error message, the error can be removed by using a UDBClkEn component in async mode. That won't remove the underlying synchronization issue, but it will allow the design to override the error if the design has handled synchronization in some other way.

## **Clock Crossing**

Multiple clock domains are commonly needed in a design. Often these multiple domains do not interact and therefore clocking crossings do not occur. In the case where signals generated in one clock domain need to be used in another clock domain, special care must be taken. There is the case where the two clock domains are asynchronous from each other and the case where both clock domains are synchronous to System Clock.



When both clocks are synchronous to System Clock, signals from the slower clock domain can be freely used in the other clock domain. In the other direction, care must be taken that the signals from the faster clock domain are active for a long enough period that they will be sampled by the slower clock domain. In both directions the timing constraints that must be met are based on the speed of System Clock not the speed of either of the clock domains.


The only guarantee between the clock domains is that their edges will always occur on a rising edge of System Clock. That means that the rising edges of the two clock domains can be as close as a single System Clock cycle apart. This is true even when the clock domains are multiples of each other, since their clock dividers are not necessarily aligned. If combinatorial logic exists between the two clock domains, a flip-flop may need to be inserted to keep from limiting the frequency of System Clock operation. By inserting the flip-flop, the crossing from one clock domain to the other is a direct flip-flop to flip-flop path.

When the clock domains are unrelated to each other, a synchronizer must be used between the clock domains. The Sync component can be used to implement the synchronization function. It should be clocked by the destination clock domain.

The Sync component is implemented using a special mode of the status register that implements a double synchronizer. The input signal must have a pulse width of at least the period of the sampling clock. The exact delay to go through the synchronizer will vary depending on the alignment of the incoming signal to the synchronizing clock. This can vary from just over one clock period to just over two clock periods. If multiple signals are being synchronized, the time difference between two signals entering the synchronizer and those same two signals at the output can change by as much as one clock period, depending on when each is successfully sampled by the synchronizer.

## **Gated Clocks**


Global clocks should not be used for anything other than directly clocking a circuit. If a global clock is used for logic functionality, the signal is routed using an entirely different path without guaranteed timing. A circuit such as the following should be avoided since timing analysis cannot be performed.

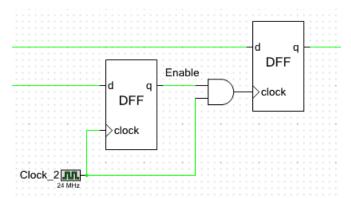

This circuit is implemented with a routed clock, has no timing analysis support, and is prone to the generation of glitches on the clock signal when the clock is enabled and disabled.

The following circuit implements the equivalent function and is supported by timing analysis, only uses global clocks, and has no reliability issues. This circuit does not gate the clock, but instead logically enables the clocking of new data or maintains the current data.




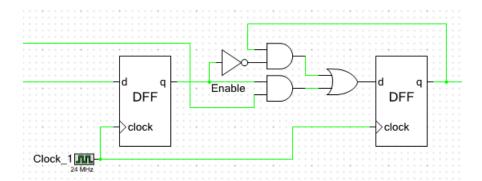

If access to a clock is needed, for example to generate a clock to send to a pin, then a 2x clock should be used to clock a toggle flip-flop. The output of that flip-flop can then be used with the associated timing analysis available.

## **Fixed-Function Clocking**

On the schematic, the clock signals sent to fixed-function peripherals and to UDB-based peripherals appear to be the same clock. However, the timing relationship between the clock signals as they arrive at these different peripheral types is not guaranteed. Additionally the routing delay for the data signals is not guaranteed. Therefore when fixed-function peripherals are connected to signals in the UDB array, the signals must be synchronized as shown in the following example. No timing assumptions should be made about signals coming from fixed-function peripherals.

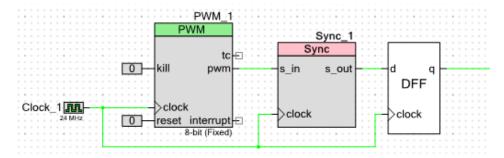

## **UDB-Based Clocking**

If the component allows asynchronous clocks, you may use any clock input frequency within the device's frequency range. If the component requires synchronization to the bus clock, then when using a routed clock for the component, the frequency of the routed clock cannot exceed one half the routed clock's source clock frequency.

- If the routed clock is synchronous to the bus clock, then it is one half the bus clock.
- If the routed clock is synchronous to one of the clock dividers, its maximum is one half of that clock rate.



## **Changing Clocks in Run-time**

## Impact on Components Operation

The components with internal clocks are directly impacted by the change of the system clock frequencies or sources. The components clock frequencies obtained using design-time dividers. The run-time change of components clock source will correspondingly change the internal component clock. Refer to the component datasheet for the details.

## CyDelay APIs

The CyDelay APIs implement simple software-based delay loops. The loops compensate for system clock frequency. The CyDelayFreq() function must be called in order to adjust CyDelay(), CyDelayUs() and CyDelayCycles() functions to the new system clock value.

## **Cache Configuration**

If the CPU clock frequency increases during device operation, the number of clock cycles cache will wait before sampling data coming back from Flash should be adjusted. If the CPU clock frequency decreases, the number of clock cycles can be also adjusted to improve CPU performance. See "CyFlash\_SetWaitCycles()" for PSoC 3/PSoC 5LP and "CySysFlashSetWaitCycles()" for PSoC 4 for more information.

## **Low Voltage Analog Boost Clocks**

When the operating voltage (Vdda) of a PSoC device drops below 4.0 V, the analog pumps for the analog routing switches must be enabled by calling the <a href="SetAnalogRoutingPumps">SetAnalogRoutingPumps</a>() function with the corresponding parameter. When Vdda rises above 4.0 V, the analog pumps for the analog routing switches must be disabled on PSoC 3/PSoC 5LP devices. On PSoC 4 devices the pumps may be left on at all voltages, but it is recommended to disable them above 4.0 V so as to reduce current draw. It is the user's responsibility to monitor the Vdda level at run-time and enable/disable the pumps as appropriate.

The analog pumps for the analog routing switches are configured on device startup based on the **Vdda** and **Variable Vdda** design-time options. The **Variable Vdda** option in the **System** tab of the PSoC Creator Design-Wide Resources (DWR) file is added to allow for designs in which the value of **Vdda** is expected to vary at runtime. If **Variable Vdda** is enabled, the SetAnalogRoutingPumps() function described above will be generated. If **Vdda** < 4.0 V, the routing pumps will be automatically enabled on reset.

## **PSoC 4 Devices Only**

On PSoC 4 devices, the IMO must be enabled if **Variable Vdda** is enabled or **Vdda** < 4.0 V. This is because the clock for the analog switch pump is driven from the IMO.

## **PSoC 3 / PSoC 5LP Devices Only**

Additionally, on PSoC 3/PSoC 5 LP devices, analog positive pumps of the SC-blocks require a boost clock input in order to keep performance within specification when **Vdda** is below 2.7 V. Between 2.7 V and 4.0 V, the boost is optional and may improve performance. Above 4.0 V, the boost must not be used.

If **Vdda** < 2.7 V or **Variable Vdda** is selected, a design-wide analog clock resource (ScBoostClk) is created to be used as a boost clock source for analog blocks. This clock is created with a desired frequency of 10 MHz. This means that one of the system clock sources (MASTER CLK, PLL OUT,



XTAL, etc) should have a value which can produce a 10-12 MHz frequency via an integer divide. In order to ensure that sufficient current is provided to the SC-block by the pump, this value cannot be changed.

In previous releases of PSoC Creator, an analog clock resource was silently reserved for every component instance of the requiring the boost (TIA, Mixer, PGA, and PGA\_Inv). This means that analog designs would prematurely exhaust available resources when Vdda was low. The design-wide clock allows for optimal resource usage by permitting all SC-block-based components to share a single clock resource.

Components that are implemented in SC-blocks (TIA, Mixer, PGA, and PGA\_Inv) will be initialized based on **Vdda** and **Variable Vdda** design-time options. The <u>CySetScPumps()</u> function can be used to enable/disable positive pumps and boost clock at run-time if operating voltage (Vdda) drops below the 2.7 V level. As with the switch pumps, it is the user's responsibility to monitor the Vdda level and call this function as appropriate.

The dependency between **Vdda** and **Variable Vdda** values configured in the System tab of the PSoC Creator Design-Wide Resources (DWR) file and their impact on design behavior is explained in the following table.

| Vdda   | < 2.7 V        | ≥ 2.7 V                | ≥ 2.7 V                |
|--|----------------|------------------------|------------------------|
| Variable Vdda                                      | Always Enabled | Enabled                | Disabled               |
| Routing pumps enabled on reset                     | Yes            | If <b>Vdda</b> < 4.0 V | If <b>Vdda</b> < 4.0 V |
| ScBoostClk clock created (PSoC 3/PSoC 5LP Only)    | Yes            | Yes                    | No                     |
| ScBoostClk started on reset (PSoC 3/PSoC 5LP Only) | Yes            | No                     | No                     |

**Note** The previous versions SC-block components (TIA, Mixer, PGA and, and PGA\_Inv) will continue to use a dedicated local clock and the new Low Voltage Analog Boost Clocks APIs will not affect those clocks.

## **APIs**

There is one API used for all devices: the SetAnalogRoutingPumps() function. Then, there is a set of APIs used for PSoC 3 and PSoC 5LP devices, and a different set of APIs used for PSoC 4 devices. Functions starting with CySysClk are applicable to PSoC 4 only. All other functions are applicable to PSoC 3 and PSoC 5LP only.

## **All Devices**

## void SetAnalogRoutingPumps(uint8 enabled)

Description: Enables or disables the analog pumps feeding analog routing switches. Intended

to be called at startup, based on the Vdda system configuration; may be called during operation when the user informs us that the Vdda voltage crossed the

pump threshold.

Parameters: enabled:

1: Enable the pumps.0: Disable the pumps.

Return Value: None



## **PSoC 3/PSoC 5LP APIs**

## uint8 CyPLL\_OUT\_Start(uint8 wait)

Description: Enables the PLL. Optionally waits for it to become stable. Waits at least 250 us or

until it is detected that the PLL is stable.

Parameters: wait:

0: Return immediately after configuration

1: Wait for PLL lock or timeout

Return Value: Status

CYRET\_SUCCESS - Completed successfully

CYRET TIMEOUT - Timeout occurred without detecting a stable clock. If the input source of the clock is jittery, then the lock indication may not occur. However, after the timeout has expired the generated PLL clock

can still be used.

Side Effects and If wait is enabled, this function uses the Fast Time Wheel (FTW) to time the wait. Restrictions: Any other use of the FTW will be stopped during the period of this function and

then restored.

This function uses the 100 KHz ILO. If the 100 KHz ILO is not enabled, this

function will enable it for the duration of this function execution.

No changes to the setup of the ILO, FTW, Central Time Wheel (CTW) or Once Per Second interrupt may be made by interrupt routines for the duration of this function execution. The current operation of the ILO, CTW and Once Per Second interrupt are maintained during the operation of this function, provided the reading

of the Power Manager Interrupt Status Register is only done using the

CyPmReadStatus() function.

## void CyPLL\_OUT\_Stop()

Description: Disables the PLL.

Parameters: None Return Value: None



## void CyPLL\_OUT\_SetPQ(uint8 pDiv, uint8 qDiv, uint8 current)

Description: Sets the P and Q dividers and the charge pump current. The Frequency Out will

be P/Q \* Frequency In. The PLL must be disabled before calling this function.

Parameters: P: Valid range [8 - 255]

Q: Valid range [1 - 16]. Input Frequency / Q must be in the range of 1 MHz to

3 MHz.

current: Valid range [1 - 7]. Charge pump current in uA. Refer to the device TRM

and datasheet for more information.

Return Value: None

Side Effects and If the CPU clock frequency increases during device operation, call

Restrictions: CyFlash\_SetWaitCycles() with the appropriate parameter to adjust the number of

clock cycles cache will wait before sampling data coming back from Flash. If the CPU clock frequency decreases, you can call CyFlash\_SetWaitCycles() to improve CPU performance. See "CyFlash\_SetWaitCycles()" for more information.

## void CyPLL\_OUT\_SetSource(uint8 source)

Description: Sets the input clock source to the PLL. The PLL must be disabled before calling

this function.

Parameters: source: One of the three available PLL clock sources

| Define             | Source      |
|--------------------|-------------|
| CY_PLL_SOURCE_IMO  | IMO         |
| CY_PLL_SOURCE_XTAL | MHz Crystal |
| CY_PLL_SOURCE_DSI  | DSI         |

Return Value: None

Side Effects and If the CPU clock frequency increases during device operation, call

Restrictions: CyFlash \_SetWaitCycles() with the appropriate parameter to adjust the number of

clock cycles cache will wait before sampling data coming back from Flash. If the CPU clock frequency decreases, you can call CyFlash\_SetWaitCycles() to improve CPU performance. See "CyFlash\_SetWaitCycles()" for more information.



## void CyIMO\_Start(uint8 wait)

**Description:** Enables the IMO. Optionally waits at least 6us for it to settle.

Parameters: wait:

0: Return immediately after configuration 1: Wait for at least 6us for the IMO to settle

Return Value: None

Side Effects and If wait is enabled, this function uses the FTW to time the wait. Any other use of **Restrictions:** the FTW will be stopped during the period of this function and then restored. This function uses the 100 KHz ILO. If the 100 KHz ILO is not enabled, this

function will enable it for the duration of this function execution.

No changes to the setup of the ILO, FTW, CTW, or Once Per Second interrupt may be made by interrupt routines for the duration of this function execution. The current operation of the ILO, CTW, and Once Per Second interrupt are maintained during the operation of this function, provided the reading of the Power Manager Interrupt Status Register is only done using the

CyPmReadStatus() function.

## void CyIMO\_Stop()

Description: Disables the IMO.

Parameters: None Return Value: None

#### void CyIMO SetFreg(uint8 freg)

**Description:** Sets the frequency of the IMO. Changes may be made while the IMO is running.

Parameters: freq: Frequency of IMO operation

| Define            | Frequency                          |
|-------------------|------------------------------------|
| CY_IMO_FREQ_3MHZ  | 3 MHz                              |
| CY_IMO_FREQ_6MHZ  | 6 MHz                              |
| CY_IMO_FREQ_12MHZ | 12 MHz                             |
| CY_IMO_FREQ_24MHZ | 24 MHz                             |
| CY_IMO_FREQ_48MHZ | 48 MHz                             |
| CY_IMO_FREQ_62MHZ | 62.6 MHz                           |
| CY_IMO_FREQ_74MHZ | 74.7 MHz                           |
| CY_IMO_FREQ_USB   | 24 MHz (Trimmed for USB operation) |

Return Value: None

Side Effects and If the CPU clock frequency increases during device operation, call

Restrictions: CyFlash\_SetWaitCycles() with the appropriate parameter to adjust the number of clock cycles cache will wait before sampling data coming back from Flash. If the CPU clock frequency decreases, you can call CyFlash\_SetWaitCycles() to improve CPU performance. See "CyFlash SetWaitCycles()" for more information.

> When the USB setting is chosen, the USB clock locking circuit is enabled. Otherwise this circuit is disabled. The USB block must be powered before

selecting the USB setting.



#### void CyIMO\_SetSource(uint8 source)

Description: Sets the source of the clock output from the IMO block. The output from the IMO

is by default the IMO itself. Optionally the MHz Crystal or a DSI input can be the

source of the IMO output instead.

Parameters: source: One of the three available IMO output sources

| Define             | Source      |
|--------------------|-------------|
| CY_IMO_SOURCE_IMO  | IMO         |
| CY_IMO_SOURCE_XTAL | MHz Crystal |
| CY_IMO_SOURCE_DSI  | DSI         |

Return Value: None

Side Effects and If the CPU clock frequency increases during device operation, call

Restrictions: CyFlash\_SetWaitCycles() with the appropriate parameter to adjust the number of

clock cycles cache will wait before sampling data coming back from Flash. If the CPU clock frequency decreases, you can call CyFlash\_SetWaitCycles() to improve CPU performance. See "CyFlash\_SetWaitCycles()" for more information.

# void CyIMO\_EnableDoubler()

Description: Enables the IMO doubler. The 2x frequency clock is used to convert a 24 MHz

input to a 48 MHz output for use by the USB block.

Parameters: None Return Value: None

#### void CyIMO DisableDoubler()

**Description:** Disables the IMO doubler.

Parameters: None Return Value: None

#### void CyBusClk\_SetDivider(uint16 divider)

**Description:** Sets the divider value used to generate Bus Clock.

Parameters: divider: Valid range [0-65535]. The clock will be divided by this value + 1. For

example to divide by 2 this parameter should be set to 1.

Return Value: None

Side Effects and If the CPU clock frequency increases during device operation, call

Restrictions: CyFlash\_SetWaitCycles() with the appropriate parameter to adjust the number of

clock cycles cache will wait before sampling data coming back from Flash. If the CPU clock frequency decreases, you can call CyFlash\_SetWaitCycles() to improve CPU performance. See "CyFlash\_SetWaitCycles()" for more information.



# void CyCpuClk\_SetDivider(uint8 divider)

**Description:** Sets the divider value used to generate the CPU Clock. Applies to PSoC 3 only.

Parameters: divider: Valid range [0-15]. The clock will be divided by this value + 1. For

example to divide by 2 this parameter should be set to 1.

Return Value: None

Side Effects and If the CPU clock frequency increases during device operation, call

Restrictions: CyFlash\_SetWaitCycles() with the appropriate parameter to adjust the number of

clock cycles cache will wait before sampling data coming back from Flash. If the CPU clock frequency decreases, you can call CyFlash\_SetWaitCycles() to improve CPU performance. See "CyFlash\_SetWaitCycles()" for more information.

# void CyMasterClk\_SetSource(uint8 source)

**Description:** Sets the source of the master clock.

Parameters: source: One of the four available Master clock sources

| Define                | Source      |
|-----------------------|-------------|
| CY_MASTER_SOURCE_IMO  | IMO         |
| CY_MASTER_SOURCE_PLL  | PLL         |
| CY_MASTER_SOURCE_XTAL | MHz Crystal |
| CY_MASTER_SOURCE_DSI  | DSI         |

Return Value: None

Side Effects and The current source and the new source must both be running and stable before

Restrictions: calling this function.

If the CPU clock frequency increases during device operation, call CyFlash\_SetWaitCycles() with the appropriate parameter to adjust the number of clock cycles cache will wait before sampling data coming back from Flash. If the CPU clock frequency decreases, you can call CyFlash\_SetWaitCycles() to improve CPU performance. See "CyFlash SetWaitCycles()" for more information.

#### void CyMasterClk\_SetDivider(uint8 divider)

**Description:** Sets the divider value used to generate Master Clock.

Parameters: divider: Valid range [0-255]. The clock will be divided by this value + 1. For

example to divide by 2 this parameter should be set to 1.

Return Value: None

Side Effects and When changing the Master or Bus Clock divider value from div-by-n to div-by-1,

Restrictions: the first clock cycle output after the div-by-1 can be up to 4 ns shorter than the

final/expected div-by-1 period.

If the CPU clock frequency increases during device operation, call CyFlash\_SetWaitCycles() with the appropriate parameter to adjust the number of clock cycles cache will wait before sampling data coming back from Flash. If the CPU clock frequency decreases, you can call CyFlash\_SetWaitCycles() to improve CPU performance. See "CyFlash\_SetWaitCycles()" for more information.



# void CyUsbClk\_SetSource(uint8 source)

Description: Sets the source of the USB clock.

Parameters: source: One of the four available USB clock sources

| Define              | Source |
|---------------------|--------|
| CY_USB_SOURCE_IMO2X | IMO 2x |
| CY_USB_SOURCE_IMO   | IMO    |
| CY_USB_SOURCE_PLL   | PLL    |
| CY_USB_SOURCE_DSI   | DSI    |

Return Value: None

#### void CylLO\_Start1K()

**Description:** Enables the ILO 1 KHz oscillator.

**Note** The ILO 1 KHz oscillator is always enabled by default, regardless of the selection in the Clock Editor. Therefore, this API is only needed if the oscillator

was turned off manually.

Parameters: None Return Value: None

#### void CylLO\_Stop1K()

**Description:** Disables the ILO 1 KHz oscillator.

**Note** The ILO 1 KHz oscillator must be enabled if Sleep or Hibernate low power mode APIs are expected to be used. For more information, refer to the Power

Management section of this document.

Parameters: None Return Value: None

#### void CylLO\_Start100K()

Description: Enables the ILO 100 KHz oscillator.

Parameters: None Return Value: None

# void CylLO\_Stop100K()

**Description:** Disables the ILO 100 KHz oscillator.

Parameters: None Return Value: None



# void CyILO\_Enable33K()

Description: Enables the ILO 33 KHz divider.

Note The 33 KHz clock is generated from the 100 KHz oscillator, so it must also

be running in order to generate the 33 KHz output.

Parameters: None Return Value: None

# void CylLO\_Disable33K()

Description: Disables the ILO 33 KHz divider.

Note that the 33 KHz clock is generated from the 100 KHz oscillator, but this API

does not disable the 100 KHz clock.

Parameters: None Return Value: None

#### void CyILO\_SetSource(uint8 source)

**Description:** Sets the source of the clock output from the ILO block. **Parameters:** source: One of the three available ILO output sources

| Define             | Source      |  |
|--------------------|-------------|--|
| CY_ILO_SOURCE_100K | ILO 100 KHz |  |
| CY_ILO_SOURCE_33K  | ILO 33 KHz  |  |
| CY_ILO_SOURCE_1K   | ILO 1 KHz   |  |

Return Value: None

#### uint8 CyILO\_SetPowerMode(uint8 mode)

Description: Sets the power mode used by the ILO during power down. Allows for lower power

down power usage resulting in a slower startup time.

Parameters: mode:

| Define            | Description   |
|-------------------|---|
| CY_ILO_FAST_START | Faster start-up, internal bias left on when powered down. |
| CY_ILO_SLOW_START | Slower start-up, internal bias off when powered down.     |

Return Value: Previous power mode



#### uint8 CyXTAL\_Start(uint8 wait)

Description: Enables the MHz crystal.

Waits until the XERR bit is low (no error) for a millisecond or until the number of

milliseconds specified by the wait parameter has expired.

Parameters: wait: Valid range [0-255]. This is the timeout value in milliseconds. The

appropriate value is crystal specific.

Return Value: Status

CYRET\_SUCCESS - Completed successfully

CYRET TIMEOUT - Timeout occurred without detecting a low value on XERR.

Side Effects and If wait is enabled (non-zero wait), this function uses the FTW to time the wait. Any Restrictions: other use of the FTW will be stopped during the period of this function and then

restored.

This function also uses the 100 KHz ILO. If the 100 KHz is not enabled, this

function will enable it for the duration of this function execution.

No changes to the setup of the ILO, FTW, CTW, or Once Per Second interrupt may be made by interrupt routines for the duration of this function execution. The

current operation of the ILO, CTW, and Once Per Second interrupt are

maintained during the operation of this function provided the reading of the Power Manager Interrupt Status Register is only done using the CyPmReadStatus()

function.

# void CyXTAL\_Stop()

**Description:** Disables the megahertz crystal oscillator.

Parameters: None Return Value: None

#### void CyXTAL\_EnableErrStatus()

Description: Enables the generation of the XERR status bit for the megahertz crystal.

Parameters: None Return Value: None

#### void CyXTAL\_DisableErrStatus()

**Description:** Disables the generation of the XERR status bit for the megahertz crystal.

Parameters: None Return Value: None



#### uint8 CyXTAL\_ReadStatus()

**Description:** Reads the XERR status bit for the megahertz crystal. This status bit is a sticky

clear on read value.

Parameters: None

Return Value: Status: 0: No error, 1: Error

# void CyXTAL\_EnableFaultRecovery()

Description: Enables the fault recovery circuit which will switch to the IMO in the case of a fault

in the megahertz crystal circuit. The crystal must be up and running with the XERR bit at 0, before calling this function to prevent immediate fault switchover.

Parameters: None Return Value: None

### void CyXTAL\_DisableFaultRecovery()

Description: Disables the fault recovery circuit which will switch to the IMO in the case of a

fault in the megahertz crystal circuit.

Parameters: None Return Value: None

# void CyXTAL\_SetStartup(uint8 setting)

**Description:** Sets the startup settings for the crystal.

Parameters: setting: Valid range [0-31]. Value is dependent on the frequency and quality of the

crystal being used. Refer to the device TRM and datasheet for more information.

Return Value: None

#### void CyXTAL\_SetFbVoltage(uint8 setting)

Description: Sets the feedback reference voltage to use for the crystal circuit.

Parameters: setting: Valid range [0-15]. Refer to the device TRM and datasheet for more

information.

Return Value: None

Side Effects and The feedback reference voltage must be greater than the watchdog reference

Restrictions: voltage.



# void CyXTAL\_SetWdVoltage(uint8 setting)

Description: Sets the reference voltage used by the watchdog to detect a failure in the crystal

circuit

Parameters: setting: Valid range [0-7]. Refer to the device TRM and datasheet for more

information.

Return Value: None

Side Effects and The feedback reference voltage must be greater than the watchdog reference

Restrictions: voltage.

#### void CyXTAL\_32KHZ\_Start()

Description: Enables the 32 KHz Crystal Oscillator.

Parameters: None Return Value: None

#### void CyXTAL\_32KHZ\_Stop()

Description: Disables the 32 KHz Crystal Oscillator.

Parameters: None Return Value: None

# uint8 CyXTAL\_32KHZ\_ReadStatus()

**Description:** Reads the two status bits for the 32 KHz oscillator.

Parameters: None Return Value: Status

| Define | Source                                     |
|--------|--|
|        | Analog measurement 1: Stable 0: Not stable |

# uint8 CyXTAL\_32KHZ\_SetPowerMode(uint8 mode)

**Description:** Sets the power mode for the 32 KHz oscillator used during sleep mode. Allows for

lower power during sleep when there are fewer sources of noise. During active

mode the oscillator is always run in high power mode.

Parameters: mode:

• 0: High power mode

1: Low power mode during sleep

Return Value: Previous power mode



#### void CySetScPumps(uint8 enable)

Description: Starts/stops analog boost clock and configures SC-blocks positive pumps.

Parameters: enable:

1: Starts analog boost clock and enables positive pumps.

0: Disables positive pumps for enabled SC-blocks and stops analog boost

clock if all SC-blocks are disabled.

Return Value: None

#### **PSoC 4 APIs**

#### void CySysClkImoStart(void)

Description: Enables the IMO.

Parameters: None Return Value: None Side Effects and None Restrictions:

#### void CySysClkImoStop(void)

Description: Disables the IMO.

Parameters: None Return Value: None Side Effects and None Restrictions:

#### void CySysClklloStart(void)

**Description:** Starts the ILO. Refer to the device datasheet for the ILO startup time.

Parameters: None Return Value: None Side Effects and None Restrictions:

#### void CySysClklloStop(void)

Description: Disables the ILO.

Parameters: None Return Value: None

Restrictions:

Side Effects and This function will have no effect if WDT is locked (CySysWdtLock() is called). Call CySysWdtUnlock() to unlock WDT and be able to stop ILO.

- **PSoC 4100 / PSoC 4200:** The ILO is required for the WDT operation.
- PSoC 4100 BLE / PSoC 4200 BLE: Stopping the ILO will affect the peripheral clocked by the LFCLK, if the LFCLK is configured to be sourced by the ILO.



#### void CySysClkWriteHfclkDirect (uint32 clkSelect)

Description: Selects the direct source for the HFCLK.

Parameters: clkSelect: One of the available HFCLK direct sources.

| Define                  | Source   |
|-------------------------|--|
| CY_SYS_CLK_HFCLK_IMO    | IMO  |
| CY_SYS_CLK_HFCLK_EXTCLK | External clock pin   |
| CY_SYS_CLK_HFCLK_ECO    | External crystal oscillator (applicable only for PSoC 4100 BLE and PSoC 4200 BLE). |

Return Value: None

Side Effects and The new source must be running and stable before calling this function.

Restrictions: If the SYSCLK frequency increases during device operation, call

CySysFlashSetWaitCycles() with the appropriate parameter to adjust the number of clock cycles the cache will wait before sampling data comes back from Flash. If the SYSCLK frequency decreases, call CySysFlashSetWaitCycles() to improve CPU performance. See CySysFlashSetWaitCycles() description for more

information.

**PSoC 4000:** The SYSCLK has a maximum speed of 16 MHz, so HFCLK and SYSCLK dividers should be selected in a way to not to exceed 16 MHz for the System clock.

#### void CySysClkWriteSysclkDiv (uint32 divider)

**Description:** Selects the prescaler divide amount for SYSCLK from HFCLK.

Parameters: divider: Power of 2 prescaler selection.

| Define                   | Divider |
|--------------------------|---------|
| Define                   | Dividei |
| CY_SYS_CLK_SYSCLK_DIV1   | 1       |
| CY_SYS_CLK_SYSCLK_DIV2   | 2       |
| CY_SYS_CLK_SYSCLK_DIV4   | 4       |
| CY_SYS_CLK_SYSCLK_DIV8   | 8       |
| CY_SYS_CLK_SYSCLK_DIV16  | 16      |
| CY_SYS_CLK_SYSCLK_DIV32  | 32      |
| CY_SYS_CLK_SYSCLK_DIV64  | 64      |
| CY_SYS_CLK_SYSCLK_DIV128 | 128     |

Note The dividers above CY\_SYS\_CLK\_SYSCLK\_DIV8 are not available for the PSoC 4000 family.

Return Value: None

Side Effects and If the SYSCLK frequency increases during device operation, call

Restrictions: CySysFlashSetWaitCycles() with the appropriate parameter to adjust the number of clock cycles the cache will wait before sampling data comes back from Flash. If the SYSCLK clock frequency decreases, call CySysFlashSetWaitCycles() to improve CPU performance. See CySysFlashSetWaitCycles() description for more

information.

PSoC 4000: The SYSCLK has a maximum speed of 16 MHz, so HFCLK and SYSCLK dividers should be selected in a way to not to exceed 16 MHz for the System clock.



# void CySysClkWriteImoFreq (uint32 freq)

Description: Sets the frequency of the IMO.

Parameters: freq: Frequency for operation of the IMO. Valid range [3-48] with step size equal

to 1 MHz.

PSoC 4000: Valid values are only 24, 32 and 48 MHz.

Return Value: None

Side Effects and If the SYSCLK frequency increases during device operation, call

Restrictions: CySysFlashSetWaitCycles() with the appropriate parameter to adjust the number

of clock cycles the cache will wait before sampling data comes back from Flash. If the SYSCLK clock frequency decreases, call CySysFlashSetWaitCycles() to improve CPU performance. See CySysFlashSetWaitCycles() description for more

information.

PSoC 4000: The SYSCLK has maximum speed of 16 MHz, so HFCLK and SYSCLK dividers should be selected in a way, to not to exceed 16 MHz for the

System clock.

#### PSoC 4100 BLE and 4200 BLE APIs

### void CySysClkSetLfclkSource(uint32 source)

**Description:** Sets the clock source for the LFCLK clock.

The switch between LFCLK sources must be done between positive edges of the LFCLK, because the glitch risk is around LFCLK positive edge. To ensure that the switch can be done safely, the WDT counter value is read until it changes.

That means that the positive edge just finished and the switch is performed. The enabled WDT counter is used for that purpose. If no counters are enabled, the counter 0 is enabled. And after LFCLK source is switched, the counter 0 configuration is restored back.

The function is applicable only for the PSoC 4100 BLE and PSoC 4200 BLE devices.

Parameters: source: One of the available LFCLK sources.

| Define                   | Source   |
|--------------------------|--|
| CY_SYS_CLK_LFCLK_SRC_ILO | Internal Low Frequency (32 kHz) Oscillator (ILO) |
| CY_SYS_CLK_LFCLK_SRC_WCO | Low Frequency Watch Crystal Oscillator (WCO)     |

Return Value: None

Side Effects and This function will have no effect if the WDT is locked (CySysWdtLock() is Restrictions: called). Call CySysWdtUnlock() to unlock the WDT.

The current source and the new source must both be running and stable before calling this function.

Changing the LFCLK clock source may change the LFCLK clock frequency and affect the functionality that uses this clock. For example, watchdog timer (WDT) is clocked by LFCLK.

The LFCLK must be sourced by the WCO for the ECO startup, if Deep Sleep mode operation is required for the BLE component. If no Deep Sleep mode operation is required for the BLE component, the LFCLK can be sourced by either ILO or WCO.



#### External Crystal Oscillator (ECO) APIs

cystatus CySysClkEcoStart(uint32 timeoutUs)

Description: Starts the External Crystal Oscillator (ECO). Refer to the device datasheet for

the ECO startup time.

The timeout interval is measured based on the system frequency defined by PSoC Creator at build time. If System clock frequency is changed in runtime,

the CyDelayFreg() with the appropriate parameter should be called.

Parameters: timeoutUs: Timeout in microseconds. If zero is specified, the function starts the

crystal and returns CYRET\_SUCCESS. If non-zero value is passed, the CYRET\_SUCCESS is returned once crystal is oscillating and amplitude reached 60% and it does not mean 24 MHz crystal is within 50 ppm. If it is not oscillating or amplitude didn't reach 60% after specified amount of time, the

CYRET\_TIMEOUT is returned.

Return Value: CYRET\_SUCCESS - Completed successfully. The ECO is oscillating and

amplitude reached 60% and it does not mean 24 MHz crystal is within 50 ppm.

CYRET\_TIMEOUT - Timeout occurred

void CySysClkEcoStop(void)

Description: Stops the megahertz crystal.

Parameters: None Return Value: None

uint32 CySysClkEcoReadStatus(void)

Description: Read status bit for the megahertz crystal.

Parameters: None

Return Value: Non-zero indicates that ECO output reached 50 ppm.

void CySysClkWriteEcoDiv(uint32 divider)

**Description:** Selects value for the ECO divider. **Parameters:** divider: Power of 2 divider selection.

| Define              | Divider         |
|---------------------|-----------------|
| CY_SYS_CLK_ECO_DIV1 | HFCLK = ECO / 1 |
| CY_SYS_CLK_ECO_DIV2 | HFCLK = ECO / 2 |
| CY_SYS_CLK_ECO_DIV4 | HFCLK = ECO / 4 |
| CY_SYS_CLK_ECO_DIV8 | HFCLK = ECO / 8 |

Return Value: If the SYSCLK clock frequency increases during the device operation, call

CySysFlashSetWaitCycles() with the appropriate parameter to adjust the number of clock cycles the cache will wait before sampling data comes back

from Flash. If the SYSCLK clock frequency decreases, you can call CySysFlashSetWaitCycles() to improve the CPU performance. See CySysFlashSetWaitCycles() description for more information.



# Watch Crystal Oscillator (WCO) APIs

void CySysClkWcoStart(void)

**Description:** Enables the Watch Crystal Oscillator (WCO). The WCO is used as a source for

LFCLK. Similar to ILO, WCO is also available in all modes except Hibernate

and Stop modes.

The WCO is always enabled in High Power Mode (HPM). Refer to the device datasheet for the WCO startup time. Once WCO becomes stable it can be switched to the Low Power Mode (LPM). Note that oscillator can be unstable during switch and hence its output should not be used at the moment.

The CySysClkWcoSetPowerMode() function configures WCO power mode.

Parameters: None Return Value: None

void CySysClkWcoStop(void)

Description: Disables the 32KHz Crystal Oscillator.

Parameters: None Return Value: None

uint32 CySysClkWcoSetPowerMode(uint32 mode)

**Description:** Sets the power mode for the 32 KHz WCO.

Parameters: uint32 mode:

| Define             | Description     |
|--------------------|-----------------|
| CY_SYS_CLK_WCO_HPM | High power mode |
| CY_SYS_CLK_WCO_LPM | Low power mode  |

Return Value: Previous power mode. The same as parameters.

# 4 Power Management



There is a full range of power modes supported by PSoC devices to control power consumption and the amount of available resources. See the following table for the supported power modes.

Table 1. Power modes

| Architecture     | PSoC 3 / PSoC 5LP | PSoC 4 |  |
|------------------|-------------------|--------|--|
| Family           | All               | 4000   | 4100 and 4200<br>4100 BLE and 4200 BLE |
| Active           | ✓                 | ✓      | ✓                                      |
| Alternate Active | ✓                 |        |  |
| Sleep            | ✓                 | ✓      | ✓                                      |
| Deep Sleep       |                   | ✓      | ✓                                      |
| Hibernate        | ✓                 |        | ✓                                      |
| Stop             |                   |        | ✓                                      |

PSoC 3/PSoC 5LP devices support the following power modes (in order of high to low power consumption): Active, Alternate Active, Sleep, and Hibernate.

PSoC 4 devices support the following power modes (in order of high to low power consumption): Active, Sleep, Deep Sleep, Hibernate, and Stop. Active, Sleep and Deep-Sleep are standard ARM defined power modes, supported by the ARM CPUs. Hibernate/Stop are even lower power modes that are entered from firmware just like Deep-Sleep, but on wakeup the CPU (and all peripherals) goes through a full reset.

For the ARM-based devices (PSoC 4/PSoC 5LP), an interrupt is required for the CPU to wake up. The Power Management implementation assumes that wakeup time is configured with a separate component (component-based wakeup time configuration) for an interrupt to be issued on terminal count. For more information, refer to the "Wakeup Time Configuration" section.

All pending interrupts should be cleared before the device is put into low power mode, even if they are masked.

# **PSoC 3/PSoC 5LP Implementation**

#### **Low Power Usage**

PSoC 5 devices will not go into low power modes while the debugger is running.

For PSoC 3/PSoC 5LP devices, the power manager will not put the device into a low power state if the system performance controller (SPC) is executing a command. The device will go into low power mode after the SPC completes command execution. The SPC is used by Flash API, EEPROM and DieTemp components. Please refer to the corresponding component datasheet for the more information.



# **Clock Configuration**

There are a few device configuration requirements for proper low power mode entry and wakeup.

- The clock system should be prepared before entering Sleep and Hibernate mode to ensure that it will switch between Active modes and low power modes as expected.
- The CyPmSaveClocks() and CyPmRestoreClocks() functions are responsible for preparing clock configuration before entering low power mode and after waking up to Active mode, respectively. In general, CyPmSaveClocks() saves the configuration and sets the requirements for low power mode entry. CyPmRestoreClocks() restores the clock configuration to its original state.
- The IMO is required to be the source for the Master clock. So, the IMO clock value is set corresponding to the "Enable Fast IMO During Startup" option on the Design-Wide Resources System Editor. If this option is enabled, the IMO clock frequency is set to 48 MHz; otherwise, is set to 12 MHz.

**Note** The IMO value must be 12 MHz just before entering Sleep and Hibernate modes. The IMO frequency is set to 12 MHz by CyPmSleep()/CyPmHibernate() just before entering the specified low power mode (without correcting the number of wait cycles for the flash). The IMO frequency is restored immediately on wakeup.

- The PLL and MHz ECO are turned off once the Master clock is sourced by IMO.
- The Bus and Master clock dividers are set to a divide-by-one value and the new value of flash wait cycles is set to match the new value of the CPU frequency. Refer to the description of the CyFlash\_SetWaitCycles() function for more information.

The 1 KHz ILO must be enabled (it is always enabled by default, regardless of the selection in the Clock Editor) for all devices for correct operation in Sleep and Hibernate low power modes. It is used to measure the Hibernate/Sleep regulator settling time after a reset. During this time, the system ignores requests to enter these modes. The hold-off delay is measured using rising edges of the 1 kHz ILO. The terminal count is set by the Sleep Regulator Trim Register (PWRSYS\_SLP\_TR). **Caution** Do not modify this register. Refer to the corresponding device Registers TRM for more information.

The 32.768-kHz external crystal oscillator (32kHzECO) provides precision timing with minimal power consumption using an external 32.768-kHz watch crystal. The oscillator's power mode during device's Sleep mode configured by the CyXTAL\_32KHZ\_SetPowerMode() function. By default, oscillator runs in the high power mode.

Calling the CyPmSaveClocks() function will modify device clocking configuration. As a result, any component that relies on clocking should not be used until calling the CyPmRestoreClocks() function, which will restore the original clocking configuration. For information on component clocking requirements, refer to the corresponding component datasheet.

#### **Wakeup Time Configuration**

There are three timers that can wake up a device from low power mode: CTW, FTW, and one pulse per second (One PPS). Refer to the device TRM and datasheet for more information on these timers.

There are two ways of configuring wakeup time:

- Parameter-based wakeup time configuration is done by calling the CyPmSleep() and CyPmAltAct() functions with desired parameters. This configuration method is available only for the PSoC 3 devices.
- Component-based wakeup time configuration. The CTW wakeup interval is configured with the Sleep Timer component. The one second interval is configured with the RTC component.



There is no wakeup time configuration available for the Hibernate mode.

It is important to keep in mind that it is only guaranteed that the first CTW and FTW intervals will be less than specified. To make subsequent intervals to have nominal values, the corresponding timer is enabled by the CyPmSleep() and CyPmAltAct() functions, and the timer left enabled. Note that some APIs can also use this timer. This can cause the timer to always be enabled (the timer interval can be changed only if the corresponding timer is disabled) before low power mode entry and hence the wakeup interval will always be less than expected.

The CyPmReadStatus() function must be called just after wakeup with a corresponding parameter (for example, with CY\_PM\_CTW\_INT if the device is configured to wake up on CTW) to clear interrupt status bits.

When CTW is used as a wakeup timer, the CyPmReadStatus() function must always be called (when wakeup is configured in a parameter or component based method) after wakeup to clear the CTW interrupt status bit. It is required for this function to be called within 1 ms (1 clock cycle of the ILO) after the CTW event occurred.

# **Wakeup Source Configuration**

You can configure which wakeup source may wake up the device from Alternate Active and Sleep low power modes. The source is not configured to wake up the device; it just allows doing that. The component associated with the wakeup source has to be properly configured to act as a wakeup source.

For PSoC 5LP devices, the interrupts associated with wakeup sources must also be enabled to also wake up the CPU.

# PSoC 3 Alternate Active Mode Specific Issues

- Any interrupt, whether it is enabled at the interrupt controller or not, will wake the device from Alternate Active power mode.
- The edge detector is also bypassed, so the wakeup source is always level triggered.
- Directly connected DMA interrupts will not wake from this mode. They must be routed through the DSI in order to generate a wakeup condition.

#### PSoC 5LP Specific Issues

For PSoC 5LP, the wakeup source is available for Sleep mode and is not available for Alternate Active mode. In the case of Alternate Active mode, the wakeup source argument is ignored and any of the available sources will wake the device.

For PSoC 5LP, the interrupt component connected to the wakeup source may not use the "RISING\_EDGE" detect option. Use the "LEVEL" option instead.



# **Power Management APIs**

# void CyPmSaveClocks()

**Description:** This function is called in preparation for entering sleep or hibernate low power

modes. Saves all state of the clocking system that doesn't persist during sleep/hibernate or that needs to be altered in preparation for sleep/hibernate. Shuts down all the digital and analog clock dividers for the active power mode

configuration.

Switches the master clock over to the IMO and shuts down the PLL and MHz Crystal. The IMO frequency is set to either 12 MHz or 48 MHz to match the Design-Wide Resources System Editor "Enable Fast IMO During Startup" setting. The ILO and 32 KHz oscillators are not impacted. The current Flash wait state setting is saved and the Flash wait state setting is set for the current IMO speed.

Note If the Master Clock source is routed through the DSI inputs, then it must be

set manually to another source before using the CyPmSaveClocks() /

CyPmRestoreClocks() functions.

Parameters: None Return Value: None

Side Effects and All peripheral clocks will be off after this API method call.

**Restrictions:** 

#### void CyPmRestoreClocks()

**Description:** Restores any state that was preserved by the last call to CyPmSaveClocks. The

Flash wait state setting is also restored.

Note If the Master Clock source is routed through the DSI inputs, then it must be

set manually to another source before using the CyPmSaveClocks() /

CyPmRestoreClocks() functions.

The merge region could be used to process state when the megahertz crystal is

not ready after the hold-off timeout.

Parameters: None Return Value: None



# void CyPmAltAct(uint16 wakeupTime, uint16 wakeupSource)

Description: Puts the part into the Alternate Active (Standby) state. The Alternate Active state can allow for any of the capabilities of the device to be active, but the operation of this function is dependent on the CPU being disabled during the Alternate Active state. The configuration code and the component APIs will configure the template for the Alternate Active state to be the same as the Active state with the exception that the CPU will be disabled during Alternate Active.

> Note Before calling this function, you must manually configure the power mode of the source clocks for the timer that is used as the wakeup timer.

> PSoC 3: Before switching to Alternate Active, if a wakeupTime other than NONE is specified, then the appropriate timer state is configured as specified with the interrupt for that timer disabled. The wakeup source will be the combination of the values specified in the wakeupSource and any timer specified in the wakeupTime argument. Once the wakeup condition is satisfied, then all saved state is restored and the function returns in the Active state.

> Note If the wakeupTime is made with a different value, the period before the wakeup occurs can be significantly shorter than the specified time. If the next call is made with the same wakeup Time value, then the wakeup will occur the specified period after the previous wakeup occurred.

If a wakeupTime other than NONE is specified, then upon exit the state of the specified timer will be left as specified by wakeupTime with the timer enabled and the interrupt disabled. If the CTW, FTW or One PPS is already configured for wakeup, for example with the Sleep Timer or RTC components, then specify NONE for the wakeupTime and include the appropriate source for wakeupSource.

PSoC 5LP: Neither parameter is used. That means NONE should be passed for the parameters. The device will go into Alternate Active mode until an enabled interrupt occurs.

Parameters: wakeupTime: Specifies a timer wakeup source and the frequency of that source. For PSoC 5LP this parameter is ignored.

| Define                     | Time                  |
|----------------------------|-----------------------|
| PM_ALT_ACT_TIME_NONE       | None                  |
| PM_ALT_ACT_TIME_ONE_PPS    | One PPS: 1 second     |
| PM_ALT_ACT_TIME_CTW_2MS    | CTW: 2 ms             |
| PM_ALT_ACT_TIME_CTW_4MS    | CTW: 4 ms             |
| PM_ALT_ACT_TIME_CTW_8MS    | CTW: 8 ms             |
| PM_ALT_ACT_TIME_CTW_16MS   | CTW: 16 ms            |
| PM_ALT_ACT_TIME_CTW_32MS   | CTW: 32 ms            |
| PM_ALT_ACT_TIME_CTW_64MS   | CTW: 64 ms            |
| PM_ALT_ACT_TIME_CTW_128MS  | CTW: 128 ms           |
| PM_ALT_ACT_TIME_CTW_256MS  | CTW: 256 ms           |
| PM_ALT_ACT_TIME_CTW_512MS  | CTW: 512 ms           |
| PM_ALT_ACT_TIME_CTW_1024MS | CTW: 1024 ms          |
| PM_ALT_ACT_TIME_CTW_2048MS | CTW: 2048 ms          |
| PM_ALT_ACT_TIME_CTW_4096MS | CTW: 4096 ms          |
| PM_ALT_ACT_TIME_FTW(1-256) | FTW: 10 µs to 2.56 ms |

The PM ALT ACT TIME FTW() macro takes an argument that specifies how many increments of 10 µs to delay. For PSoC 3 silicon the valid range of values is 1 to 256.



# CyPmAltAct (Continued)

Parameters: wakeupSource: Specifies a bitwise mask of wakeup sources. In addition, if a wakeupTime has been specified, the associated timer will be included as a wakeup source. The wakeup source configuration is restored before function exit. For PSoC 5LP this parameter is ignored.

| Define                        | Source                            |
|-------------------------------|-----------------------------------|
| PM_ALT_ACT_SRC_NONE           | None                              |
| PM_ALT_ACT_SRC_COMPARATOR0    | Comparator 0                      |
| PM_ALT_ACT_SRC_COMPARATOR1    | Comparator 1                      |
| PM_ALT_ACT_SRC_COMPARATOR2    | Comparator 2                      |
| PM_ALT_ACT_SRC_COMPARATOR3    | Comparator 3                      |
| PM_ALT_ACT_SRC_INTERRUPT      | Interrupt                         |
| PM_ALT_ACT_SRC_PICU           | PICU                              |
| PM_ALT_ACT_SRC_I2C            | I2C                               |
| PM_ALT_ACT_SRC_BOOSTCONVERTER | Boost Converter                   |
| PM_ALT_ACT_SRC_FTW            | Fast Time Wheel                   |
| PM_ALT_ACT_SRC_VD             | High and Low Voltage<br>Detection |
| PM_ALT_ACT_SRC_CTW            | Central Time Wheel                |
| PM_ALT_ACT_SRC_ONE_PPS        | One PPS                           |
| PM_ALT_ACT_SRC_LCD            | LCD                               |

Note CTW and One PPS wakeup signals are in the same mask bit. FTW and Low Voltage Interrupt (LVI)/High Voltage Interrupt (HVI) wakeup signals are in the same mask bit.

When specifying a Comparator as the wakeupSource, use an instance specific define that will track with the specific comparator for that instance. As an example. for a Comparator instance named "MyComp" the value to OR into the mask is: MyComp\_ctComp\_\_CMP\_MASK.

When CTW, FTW, or One PPS is used as a wakeup source, the CyPmReadStatus function must be called upon wakeup, with the corresponding parameter. Refer to the CyPmReadStatus API for more information.

Return Value: None

Side Effects and For PSoC 5LP, the wakeup source is not selectable. In this case the Restrictions: wakeupSource argument is ignored and any of the available wakeup sources will wake the device.

> If a wakeupTime other than NONE is specified, then upon exit the state of the specified timer will be left as specified by wakeupTime with the timer enabled and the interrupt disabled. Also, the ILO 1 KHz (if CTW timer is used as wakeup time) or ILO 100 KHz (if FTW timer is used as wakeup time) will be left started.



# void CyPmSleep(uint8 wakeupTime, uint16 wakeupSource)

**Description:** Puts the part into the Sleep state.

**Note** Before calling this function, you must manually configure the power mode of the source clocks for the timer that is used as wakeup timer.

**Note** Before calling this function, you must prepare clock tree configuration for the low power mode by calling CyPmSaveClocks(). And restore clock configuration after CyPmSleep() execution by calling CyPmRestoreClocks(). See Power Management section, Clock Configuration subsection of the System Reference Guide for more information.

PSoC 3: Before switching to Sleep, if a wakeupTime other than NONE is specified, then the appropriate timer state is configured as specified with the interrupt for that timer disabled. The wakeup source will be the combination of the values specified in the wakeupSource and any timer specified in the wakeupTime argument. Once the wakeup condition is satisfied, then all saved state is restored and the function returns in the Active state.

**Note** If the wakeupTime value is different from the previous value, the period before the wakeup occurs can be significantly shorter than the specified time. If the next call is made with the same wakeupTime value, then the wakeup will occur with the specified period after the previous wakeup occurred.

If a wakeupTime other than NONE is specified, then upon exit the state of the specified timer will be left as specified by wakeupTime with the timer enabled and the interrupt disabled. If the CTW or One PPS is already configured for wakeup, for example with the Sleep Timer or RTC components, then specify NONE for the wakeupTime and include the appropriate source for wakeupSource.

**PSoC 5LP:** The wakeupTime parameter is not used and the only NONE can be specified. The wakeup time must be configured with the component, Sleep Timer for CTW intervals and RTC for 1PPS interval. The component must be configured to generate an interrupt.

**Parameters:** wakeupTime: Specifies a timer wakeup source and the frequency of that source. For PSoC 5LP, this parameter is ignored.

| Define                   | Time              |
|--------------------------|-------------------|
| PM_SLEEP_TIME_NONE       | None              |
| PM_SLEEP_TIME_ONE_PPS    | One PPS: 1 second |
| PM_SLEEP_TIME_CTW_2MS    | CTW: 2 ms         |
| PM_SLEEP_TIME_CTW_4MS    | CTW: 4 ms         |
| PM_SLEEP_TIME_CTW_8MS    | CTW: 8 ms         |
| PM_SLEEP_TIME_CTW_16MS   | CTW: 16 ms        |
| PM_SLEEP_TIME_CTW_32MS   | CTW: 32 ms        |
| PM_SLEEP_TIME_CTW_64MS   | CTW: 64 ms        |
| PM_SLEEP_TIME_CTW_128MS  | CTW: 128 ms       |
| PM_SLEEP_TIME_CTW_256MS  | CTW: 256 ms       |
| PM_SLEEP_TIME_CTW_512MS  | CTW: 512 ms       |
| PM_SLEEP_TIME_CTW_1024MS | CTW: 1024 ms      |
| PM_SLEEP_TIME_CTW_2048MS | CTW: 2048 ms      |
| PM_SLEEP_TIME_CTW_4096MS | CTW: 4096 ms      |



# CyPmSleep (Continued)

Parameters: wakeupSource: Specifies a bitwise mask of wakeup sources. In addition, if a wakeupTime has been specified, the associated timer will be included as a wakeup source. The wakeup source configuration is restored before function exit.

| Define                      | Source                         |
|-----------------------------|--------------------------------|
| PM_SLEEP_SRC_NONE           | None                           |
| PM_SLEEP_SRC_COMPARATOR0    | Comparator 0                   |
| PM_SLEEP_SRC_COMPARATOR1    | Comparator 1                   |
| PM_SLEEP_SRC_COMPARATOR2    | Comparator 2                   |
| PM_SLEEP_SRC_COMPARATOR3    | Comparator 3                   |
| PM_SLEEP_SRC_PICU           | PICU                           |
| PM_SLEEP_SRC_I2C            | I2C                            |
| PM_SLEEP_SRC_BOOSTCONVERTER | Boost Converter                |
| PM_SLEEP_SRC_VD             | High and Low Voltage Detection |
| PM_SLEEP_SRC_CTW            | Central Time Wheel             |
| PM_SLEEP_SRC_ONE_PPS        | One PPS                        |
| PM_SLEEP_SRC_LCD            | LCD                            |

Note CTW and One PPS wakeup signals are in the same mask bit.

When specifying a Comparator as the wakeupSource, use an instance specific define that will track with the specific comparator for that instance. As an example for a Comparator instance named "MyComp" the value to OR into the mask is: MyComp\_ctComp\_\_CMP\_MASK.

When CTW or One PPS is used as a wakeup source, the CyPmReadStatus function must be called upon wakeup, with the corresponding parameter. Refer to the CyPmReadStatus API for more information.

Return Value: None

Side Effects and Restrictions:

If a wakeupTime other than NONE is specified, then upon exit the state of the specified timer will be left as specified by wakeupTime with the timer enabled and the interrupt disabled. Also, the ILO 1 KHz (if CTW timer is used as wake up time) will be left started.

The 1 kHz ILO clock is expected to be enabled to measure Hibernate/Sleep regulator settling time after a reset. The hold-off delay is measured using rising edges of the 1 kHz ILO.



#### void CyPmHibernate()

**Description:** Puts the part into the Hibernate state.

Before switching to Hibernate, the current status of the PICU wakeup source bit is

saved and then set. This configures the device to wake up from the PICU.

Make sure you have at least one pin configured to generate a PICU interrupt. For pin Px.y, the register "PICU\_INTTYPE\_PICUx\_INTTYPEy" controls the PICU behavior. In the TRM, this register is "PICU[0..15] INTTYPE[0..7]." In the Pins component datasheet, this register is referred to as the IRQ option. Once the wakeup occurs, the PICU wakeup source bit is restored and the PSoC returns to

the Active state.

Parameters: None Return Value: None

Side Effects and Restrictions:

Applications must wait 20 µs before re-entering hibernate or sleep after waking up from hibernate. The 20 µs allows the sleep regulator time to stabilize before the next hibernate / sleep event occurs. The 20 µs requirement begins when the device wakes up. There is no hardware check that this requirement is met. The

specified delay should be done on ISR entry.

After wakeup PICU interrupt occurs, the Pin ClearInterrupt() function (where "Pin" is the instance name of the Pins component) must be called to clear the latched pin events. This allows proper Hibernate mode entry and enables detection of future events.

The 1 kHz ILO clock is expected to be enabled to measure Hibernate/Sleep regulator settling time after a reset. The hold-off delay is measured using rising edges of the 1 kHz ILO.

#### uint8 CyPmReadStatus(uint8 mask)

Description: Manages the Power Manager Interrupt Status Register. This register has the interrupt status for the one pulse per second, CTW, and FTW timers. This hardware register clears on read. To allow for only clearing the bits of interest and preserving the other bits, this function uses a shadow register that retains the state. This function reads the status register and ORs that value with the shadow register. That is the value that is returned. Then the bits in the mask that are set are cleared from this value and written back to the shadow register.

> Note You must call this function within 1 ms (1 clock cycle of the ILO) after a CTW event has occurred.

Parameters: mask: Bits in the shadow register to clear

| Define           | Source               |
|------------------|----------------------|
| CY_PM_FTW_INT    | Fast Time Wheel      |
| CY_PM_CTW_INT    | Central Time Wheel   |
| CY_PM_ONEPPS_INT | One Pulse Per Second |

Return Value: Status. Same enumerated bit values as used for the mask parameter.



# **PSoC 4 Implementation**

For **PSoC 4100** and **PSoC 4200** devices, the software should set EXT\_VCCD bit in the PWR\_CONTROL register when Vccd is shorted to Vddd on the board. This impacts the chip internal state transitions where it is necessary to know whether Vccd is connected or floating to achieve minimum current in low power modes. **Note** Setting this bit turns off the active regulator and will lead to a system reset unless both Vddd and Vccd pins are supplied externally. Refer to the device TRM for more information.

It is safe to call PM APIs from the ISR. The wakeup conditions for Sleep and DeepSleep low power modes are illustrated in the table below:

| Interrupts State | Condition                    | Wakeup | ISR Execution |
|------------------|------------------------------|--------|---------------|
| Linmonkod        | IRQ priority > current level | Yes    | Yes           |
| Unmasked         | IRQ priority ≤ current level | No     | No            |
| Masked           | IRQ priority > current level | Yes    | No            |
|                  | IRQ priority ≤ current level | No     | No            |

# Clock Configuration (PSoC 4100 BLE and PSoC 4200 BLE)

For **PSoC 4100 BLE** and **PSoC 4200 BLE** devices, the HFCLK source should be set to IMO before switching the device into low power mode. The IMO should be enabled (by calling CySysClkImoStart(), if it is not) and HFCLK source should be changed to IMO by calling CySysClkWriteHfclkDirect(CY\_SYS\_CLK\_HFCLK\_IMO).

If the System clock frequency is increased by switching to the IMO, the CySysFlashSetWaitCycles() function with an appropriate parameter should be called beforehand. Also, it can optionally be called after lowering the System clock frequency in order to improve CPU performance. See CySysFlashSetWaitCycles() description for the details.

# **Power Management APIs**

#### void CySysPmSleep(void)

Description: Puts the part into the Sleep state. This is a CPU-centric power mode. It means that

the CPU has indicated that it is in "sleep" mode and its main clock can be removed. It is identical to Active from a peripheral point of view. Any enabled

interrupts can cause wakeup from a Sleep mode.

Parameters: None
Return Value: None
Side Effects and None
Restrictions:



#### void CySysPmDeepSleep(void)

**Description:** Puts the part into the Deep Sleep state.

If firmware attempts to enter this mode before the system is ready (that is, when PWR CONTROL.LPM READY = 0), then the device will go into Sleep mode instead and automatically enter the originally intended mode when the hold-off expires. The wakeup occurs when an interrupt is received from a DeepSleep or Hibernate peripheral. For more details, see corresponding peripheral's datasheet.

Parameters: None Return Value: None Side Effects and None Restrictions:

#### void CySysPmHibernate(void)

**Description:** It puts the part into the Hibernate state. Only SRAM and UDBs are retained: most

internal supplies are off. Wakeup is possible from a pin or a hibernate comparator

only.

Parameters: None Return Value: None

**Restrictions:** 

Side Effects and This function does not apply to the PSoC 4000 family.

It is expected that the firmware has already frozen the IO-Cells using CySysPmFreezelo() function before the call to this function. If this is omitted the IO-cells will be frozen in the same way as they are in the Active to Deep Sleep transition, but will lose their state on wake up (because of the reset occurring at that time).

Because all CPU state is lost, the CPU will start up at the reset vector. To save firmware state through Hibernate low power mode, corresponding variable should be defined with CY NOINIT attribute. It prevents data from being initialized to zero on startup. The interrupt cause of the hibernate peripheral is retained, such that it can be either read by the firmware or cause an interrupt after the firmware has booted and enabled the corresponding interrupt. To distinguish the wakeup from the Hibernate mode and the general Reset event, the CySysPmGetResetReason() function could be used.



#### void CySysPmStop(void)

**Description:** Puts the part into the Stop state. All internal supplies are off; no state is retained.

Wakeup from Stop is performed by toggling the wakeup pin (PSoC 4100/PSoC 4200 - P0.7, PSoC 4100 BLE/PSoC 4200 BLE - P2.2), causing a normal boot procedure to occur.

- To configure the wakeup pin, the Digital Input Pin component should be placed on the schematic, assigned to the appropriate wakeup pin, and resistively pulled up or down to the inverse state of the wakeup polarity.
- To distinguish the wakeup from the Stop mode and the general Reset event, CySysPmGetResetReason() function could be used. The wakeup pin is active low by default. The wakeup pin polarity could be changed with the CySysPmSetWakeupPolarity() function.

Parameters: None Return Value: None

Restrictions:

Side Effects and This function does not apply to the PSoC 4000 family.

This function freezes IO cells implicitly. It is not possible to enter STOP mode before freezing the IO cells. The IO cells remain frozen after awake from the Stop

mode until the firmware unfreezes them after booting explicitly with

CySysPmUnfreezelo() function call.

# void CySysPmSetWakeupPolarity(uint32 polarity)

**Description:** Wake up from stop mode is performed by toggling the wakeup pin (P0.7), causing

a normal boot procedure to occur. This function assigns the wakeup pin active level. Setting the wakeup pin to this level will cause the wakeup from stop mode.

The wakeup pin is active low by default.

Parameters: polarity: Wakeup pin active level

| Define                        | Description                        |
|-------------------------------|------------------------------------|
| CY_PM_STOP_WAKEUP_ACTIVE_LOW  | Logical zero will wake up the chip |
| CY_PM_STOP_WAKEUP_ACTIVE_HIGH | Logical one will wake up the chip  |

Return Value: None Side Effects and None **Restrictions:** 



# uint32 CySysPmGetResetReason(void)

**Description:** Retrieves last reset reason - transition from OFF/XRES/STOP/HIBERNATE to

RESET state. Note that waking up from STOP using XRES will be perceived as

general RESET.

Parameters: None

Return Value: Reset reason

| Define                         | Reset reason                              |
|--------------------------------|---|
| CY_PM_RESET_REASON_UNKN        | Unknown                                   |
| CY_PM_RESET_REASON_XRES        | Transition from OFF/XRES to RESET         |
| CY_PM_RESET_REASON_WAKEUP_HIB  | Transition/wakeup from HIBERNATE to RESET |
| CY_PM_RESET_REASON_WAKEUP_STOP | Transition/wakeup from STOP to RESET      |

Side Effects and None Restrictions:

### void CySysPmFreezelo(void)

Description: Freezes IO-Cells directly to save IO-Cell state on wake up from Hibernate or Stop

mode.

Parameters: None Return Value: None

Side Effects and It is not required to call this function before entering Stop mode, since

Restrictions: CySysPmStop() function freezes IO-Cells implicitly.

#### void CySysPmUnfreezelo(void)

Description: The IO-Cells remain frozen after awake from Hibernate or Stop mode until the

firmware unfreezes them after booting. The call of this function unfreezes IO-Cells

explicitly.

Parameters: None
Return Value: None
Side Effects and Restrictions:



# void CySysPmSetWakeupHoldoff(uint32 hfclkFrequencyMhz)

**Description:** Sets the Deep Sleep wakeup time by scaling the hold-off to the HFCLK frequency.

This function must be called before increasing HFCLK clock frequency. It can optionally be called after lowering HFCLK clock frequency in order to improve

Deep Sleep wakeup time.

It is functionally acceptable to leave the default hold-off setting, but Deep Sleep

wakeup time may exceed the specification.

This function is applicable only for the PSoC 4000 family.

Parameters: uint32 hfclkFrequencyMhz: The HFCLK frequency in MHz. For example, if IMO

frequency is 24 MHz, and HFCLK divider is 2, the function should be called with parameter 12 (the SYSCLK divider value should not be taken into account).

Return Value: None Side Effects and None

Restrictions:

# 5 Interrupts



The APIs in this chapter apply to all architectures except as noted. Refer also to the Interrupt component datasheet for more information about interrupts.

**Note** For PSoC 3, Keil C compiler run-time libraries do not disable interrupts. The only exception is found in the C51 run-time library when using large reentrant functions. Interrupts are disabled for 4 CPU instructions (8 CPU cycles) to adjust the large reentrant stack.

#### **APIs**

#### CyGlobalIntEnable

**Description:** Macro statement that enables interrupts using the global interrupt mask.

# CyGlobalIntDisable

**Description:** Macro statement that disables interrupts using the global interrupt mask.

#### uint32 CyDisableInts()

Description: Disables all interrupts.

Parameters: None

Return Value: 32-bit mask of interrupts previously enabled

#### void CyEnableInts(uint32 mask)

**Description:** Enables all interrupts specified in the 32-bit mask.

Parameters: mask: 32-bit mask of interrupts to enable

Return Value: None

**Note** Interrupt service routines must follow the policy that they restore the CYDEV\_INTC\_CSR\_EN register bits and interrupt enable state (EA) to the way they were found on entry. The ISR does not need to do anything special as long as it uses properly nested CyEnterCriticalSection() and CyExitCriticalSection() function calls.



# void CylntEnable(uint8 number)

**Description:** Enables the specified interrupt number.

Parameters: number: Interrupt number. Valid range: [0-31]

Return Value: None

**Note** Interrupt service routines must follow the policy that they restore the CYDEV\_INTC\_CSR\_EN register bits and interrupt enable state (EA) to the way they were found on entry. The ISR does not need to do anything special as long as it uses properly nested CyEnterCriticalSection() and CyExitCriticalSection() function calls.

# void CylntDisable(uint8 number)

**Description:** Disables the specified interrupt number.

Parameters: number: Interrupt number. Valid range: [0-31]

Return Value: None

**Note** Interrupt service routines must follow the policy that they restore the CYDEV\_INTC\_CSR\_EN register bits and interrupt enable state (EA) to the way they were found on entry. The ISR does not need to do anything special as long as it uses properly nested CyEnterCriticalSection() and CyExitCriticalSection() function calls.

# uint8 CyIntGetState(uint8 number)

**Description:** Gets the enable state of the specified interrupt number.

**Parameters:** number: Interrupt number. Valid range: [0-31] **Return Value:** Enable status: 1 if enabled, 0 if disabled

#### cyisraddress CylntSetVector(uint8 number, cyisraddress address)

**Description:** Sets the interrupt vector of the specified interrupt number.

Parameters: number: Interrupt number. Valid range: [0-31]

address: Pointer to an interrupt service routine

Return Value: Previous interrupt vector value

#### cyisraddress CyIntGetVector(uint8 number)

**Description:** Gets the interrupt vector of the specified interrupt number.

Parameters: number: Interrupt number. Valid range: [0-31]

Return Value: Interrupt vector value



# cyisraddress CylntSetSysVector(uint8 number, cyisraddress address)

**Description:** This function applies to ARM based processors only and therefore does not apply

to the PSoC 3 device. It sets the interrupt vector of the specified exception. These exceptions in the ARM architecture operate similar to user interrupts, but are specified by the system architecture of the processor. The number of each exception is fixed. Note that the numbering of these exceptions is separate from

the numbering used for user interrupts.

Parameters: number: Exception number. Valid range: [0-15].

| Define                    | Exception Number                                       |
|---------------------------|--|
| CY_INT_NMI_IRQN           | Non Maskable Interrupt.                                |
| CY_INT_HARD_FAULT_IRQN    | Hard Fault Interrupt.                                  |
| CY_INT_MEM_MANAGE_IRQN    | Memory Management Interrupt. Not available for PSoC 4. |
| CY_INT_BUS_FAULT_IRQN     | Bus Fault Interrupt.<br>Not available for PSoC 4.      |
| CY_INT_USAGE_FAULT_IRQN   | Usage Fault Interrupt,<br>Not available for PSoC 4.    |
| CY_INT_SVCALL_IRQN        | SV Call Interrupt.                                     |
| CY_INT_DEBUG_MONITOR_IRQN | Debug Monitor Interrupt. Not available for PSoC 4.     |
| CY_INT_PEND_SV_IRQN       | Pend SV Interrupt.                                     |
| CY_INT_SYSTICK_IRQN       | System Tick Interrupt.                                 |

address: Pointer to an interrupt service routine

Return Value: Previous interrupt vector value

# cyisraddress CylntGetSysVector(uint8 number)

**Description:** This function applies to ARM based processors only and therefore does not apply

to the PSoC 3 device. It gets the interrupt vector of the specified exception. These exceptions in the ARM architecture operate similar to user interrupts, but are specified by the system architecture of the processor. The number of each exception is fixed. Note that the numbering of these exceptions is separate from

the numbering used for user interrupts.

Parameters: number: Exception number. Valid range: [0-15].

Return Value: Interrupt vector value

# void CyIntSetPriority(uint8 number, uint8 priority)

**Description:** Sets the priority of the specified interrupt number. **Parameters:** number: Interrupt number. Valid range: [0-31]

priority: Interrupt priority. 0 is the highest priority. Valid range: [0-7]



# uint8 CyIntGetPriority(uint8 number)

**Description:** Gets the priority of the specified interrupt number. **Parameters:** number: Interrupt number. Valid range: [0-31]

Return Value: Interrupt priority

# void CyIntSetPending(uint8 number)

**Description:** Forces the specified interrupt number to be pending.

Parameters: number: Interrupt number. Valid range: [0-31]

Return Value: None

# void CyIntClearPending(uint8 number)

**Description:** Clears any pending interrupt for the specified interrupt number.

Parameters: number: Interrupt number. Valid range: [0-31]

# 6 Pins



In addition to the functionality provided for pins as part of the Pins component, a library of pin macros is provided in the *cypins.h* file for the PSoC 3/PSoC 5LP devices. There is no library of pin macros available for the PSoC 4 devices. These macros all make use of the port pin configuration register that is available for every pin on the PSoC 3/PSoC 5LP device. The address of that register is provided in the *cydevice trm.h* file. Each of these pin configuration registers is named:

```
CYREG_PRTx_PCy
```

where x is the port number and y is the pin number within the port.

For PSoC 4, there are status registers, data output registers, and port configuration registers only, so the macro takes two arguments: port register and pin number. Each port has these registers addresses defined:

```
CYREG_PRTx_DR
CYREG_PRTx_PS
CYREG_PRTx_PC
```

The x is the port number, and the second argument is the pin number.

#### **PSoC 3/PSoC 5LP APIs**

#### uint8 CyPins ReadPin(uint16/uint32 pinPC)

Description: Reads the current value on the pin (pin state, PS).

Parameters: pinPC: Port pin configuration register (uint16 PSoC 3, uint32 PSoC 5LP)

Return Value: Pin state

0: Logic low value Non-0: Logic high value

#### void CyPins\_SetPin(uint16/uint32 pinPC)

Description: Set the output value for the pin (data register, DR) to a logic high. Note that this

only has an effect for pins configured as software pins that are not driven by

hardware.

Parameters: pinPC: Port pin configuration register (uint16 PSoC 3, uint32 PSoC 5LP)



# void CyPins\_ClearPin(uint16/uint32 pinPC)

Description: Clear the output value for the pin (data register, DR) to a logic low. Note that this

only has an effect for pins configured as software pins that are not driven by

hardware.

Parameters: pinPC: Port pin configuration register (uint16 PSoC 3, uint32 PSoC 5)

Return Value: None

# void CyPins\_SetPinDriveMode(uint16/uint32 pinPC, uint8 mode)

Description: Sets the drive mode for the pin (DM).

Parameters: pinPC: Port pin configuration register (uint16 PSoC 3, uint32 PSoC 5LP)

mode: Desired drive mode

| Define               | Source                  |
|----------------------|-------------------------|
| CY_PINS_DM_ALG_HIZ   | Analog HiZ              |
| CY_PINS_DM_DIG_HIZ   | Digital HiZ             |
| CY_PINS_DM_RES_UP    | Resistive pull up       |
| CY_PINS_DM_RES_DWN   | Resistive pull down     |
| CY_PINS_DM_OD_LO     | Open drain - drive low  |
| CY_PINS_DM_OD_HI     | Open drain - drive high |
| CY_PINS_DM_STRONG    | Strong CMOS Output      |
| CY_PINS_DM_RES_UPDWN | Resistive pull up/down  |

Return Value: None

### uint8 CyPins\_ReadPinDriveMode(uint16/uint32 pinPC)

**Description:** Reads the drive mode for the pin (DM).

Parameters: pinPC: Port pin configuration register (uint16 PSoC 3, uint32 PSoC 5LP)

Return Value: Current drive mode for the pin

| Define               | Source                  |
|----------------------|-------------------------|
| CY_PINS_DM_ALG_HIZ   | Analog HiZ              |
| CY_PINS_DM_DIG_HIZ   | Digital HiZ             |
| CY_PINS_DM_RES_UP    | Resistive pull up       |
| CY_PINS_DM_RES_DWN   | Resistive pull down     |
| CY_PINS_DM_OD_LO     | Open drain - drive low  |
| CY_PINS_DM_OD_HI     | Open drain - drive high |
| CY_PINS_DM_STRONG    | Strong CMOS Output      |
| CY_PINS_DM_RES_UPDWN | Resistive pull up/down  |

# void CyPins\_FastSlew(uint16/uint32 pinPC)

Description: Set the slew rate for the pin to fast edge rate. Note that this only applies for pins in

strong output drive modes, not to resistive drive modes.

Parameters: pinPC: Port pin configuration register (uint16 PSoC 3, uint32 PSoC 5LP)



# void CyPins\_SlowSlew(uint16/uint32 pinPC)

Description: Set the slew rate for the pin to slow edge rate. Note that this only applies for pins

in strong output drive modes, not to resistive drive modes.

Parameters: pinPC: Port pin configuration register (uint16 PSoC 3, uint32 PSoC 5LP)

Return Value: None

# **PSoC 4 APIs**

# CY\_SYS\_PINS\_READ\_PIN(portPS, pin)

**Description:** Reads the current value on the pin (pin state, PS).

Parameters: portPS: Address of port pin status register (uint32). Definitions for each port are

provided in the cydevice\_trm.h file in the form: CYREG\_PRTx\_PS, where x is a

port number 0 - 4.

pin: pin number 0 - 7.

Return Value: Pin state:

0: Logic low value Non-0: Logic high value

# CY\_SYS\_PINS\_SET\_PIN(portDR, pin)

**Description:** Set the output value for the pin (data register, DR) to a logic high.

Note that this only has an effect for pins configured as software pins that are not

driven by hardware.

The macro operation is not atomic. It is not guaranteed that the shared register will remain uncorrupted during simultaneous read/modify/write operations performed by two threads (main and interrupt threads). To guarantee data integrity in such cases, the macro should be invoked while the specific interrupt is

disabled or within the critical section (all interrupts are disabled).

Parameters: portDR: Address of port output pin data register (uint32). Definitions for each port

are provided in the cydevice\_trm.h file in the form: CYREG\_PRTx\_DR, where x is

a port number 0 - 4. pin: pin number 0 - 7.



# CY\_SYS\_PINS\_CLEAR\_PIN(portDR, pin)

Description: This macro sets the state of the specified pin to zero.

The macro operation is not atomic. It is not guaranteed that the shared register will remain uncorrupted during simultaneous read/modify/write operations performed by two threads (main and interrupt threads). To guarantee data integrity in such cases, the macro should be invoked while the specific interrupt is

disabled or within the critical section (all interrupts are disabled).

Parameters: portDR: Address of port output pin data register (uint32). Definitions for each port

are provided in the cydevice\_trm.h file in the form: CYREG\_PRTx\_DR, where x is

a port number 0 - 4. pin: pin number 0 - 7.

Return Value: None

# CY\_SYS\_PINS\_SET\_DRIVE\_MODE(portPC, pin, mode)

**Description:** Sets the drive mode for the pin (DM).

The macro operation is not atomic. It is not guaranteed that the shared register will remain uncorrupted during simultaneous read/modify/write operations performed by two threads (main and interrupt threads). To guarantee data integrity in such cases, the macro should be invoked while the specific interrupt is

disabled or within the critical section (all interrupts are disabled).

Parameters: portPC: Address of port configuration register (uint32). Definitions for each port

are provided in the *cydevice\_trm.h* file in the form: CYREG\_PRTx\_PC, where x is

a port number 0 - 4. pin: pin number 0 - 7. mode: Desired drive mode

| Define                   | Source                  |
|--------------------------|-------------------------|
| CY_SYS_PINS_DM_ALG_HIZ   | Analog HiZ              |
| CY_SYS_PINS_DM_DIG_HIZ   | Digital HiZ             |
| CY_SYS_PINS_DM_RES_UP    | Resistive pull up       |
| CY_SYS_PINS_DM_RES_DWN   | Resistive pull down     |
| CY_SYS_PINS_DM_OD_LO     | Open drain - drive low  |
| CY_SYS_PINS_DM_OD_HI     | Open drain - drive high |
| CY_SYS_PINS_DM_STRONG    | Strong CMOS Output      |
| CY_SYS_PINS_DM_RES_UPDWN | Resistive pull up/down  |



# CY\_SYS\_PINS\_READ\_DRIVE\_MODE(portPC, pin)

Description: Reads the drive mode for the pin (DM).

Parameters: portPC: Address of port configuration register (uint32). Definitions for each port are

provided in the *cydevice\_trm.h* file in the form: CYREG\_PRTx\_PC, where x is a

port number 0 - 4. pin: pin number 0 - 7.

Return Value: Current drive mode for the pin

| Define                   | Source                  |
|--------------------------|-------------------------|
| CY_SYS_PINS_DM_ALG_HIZ   | Analog HiZ              |
| CY_SYS_PINS_DM_DIG_HIZ   | Digital HiZ             |
| CY_SYS_PINS_DM_RES_UP    | Resistive pull up       |
| CY_SYS_PINS_DM_RES_DWN   | Resistive pull down     |
| CY_SYS_PINS_DM_OD_LO     | Open drain - drive low  |
| CY_SYS_PINS_DM_OD_HI     | Open drain - drive high |
| CY_SYS_PINS_DM_STRONG    | Strong CMOS Output      |
| CY_SYS_PINS_DM_RES_UPDWN | Resistive pull up/down  |



This page intentionally left blank.

# 7 Register Access



A library of macros provides read and write access to the registers of the device. These macros are used with the defined values made available in the generated *cydevice\_trm.h* and *cyfitter.h* files. Access to registers should be made using these macros and not the functions that are used to implement the macros. This allows for device independent code generation.

PSoC 3 is an 8-bit architecture, so the processor does not have endianness. However, the compiler for an 8-bit architecture will implement endianness. For PSoC 3, the Keil compiler implements a big endian (MSB in lowest address) ordering. The PSoC 4/PSoC 5LP processor architectures use little endian ordering.

SRAM and Flash storage in all architectures is done using the endianness of the architecture and compilers. However, the registers in all these chips are laid out in little endian order. These macros allow register accesses to match this little endian ordering. If you perform operations on multi-byte registers without using these macros, you must consider the byte ordering of the specific architecture. Examples include usage of DMA to transfer between memory and registers, as well as function calls that are passed an array of bytes in memory.

The PSoC 3 is an 8-bit processor, so all accesses will be done a byte at a time. The PSoC 5LP will perform accesses using the appropriate 8-, 16- and 32-bit accesses. The PSoC 4 requires these accesses to be aligned to the width of the transaction.

The PSoC 4 requires peripheral register accesses to match the hardware register size. Otherwise, the peripheral might ignore the transfer and Hard Fault exception will be generated.

# **Register Access APIs**

# uint8 CY\_GET\_REG8(uint16/uint32 reg)

**Description:** Reads the 8-bit value from the specified register. For PSoC 3, the address must be

in the lower 64 K address range.

Parameters: reg: Register address (uint16 PSoC 3, uint32 PSoC 4/PSoC 5LP)

Return Value: Read value

### void CY SET REG8(uint16/uint32 reg, uint8 value)

Description: Writes the 8-bit value to the specified register. For PSoC 3 the address must be in

the lower 64 K address range.

Parameters: reg: Register address (uint16 PSoC 3, uint32 PSoC 4/PSoC 5LP)

value: Value to write

Return Value: None



# uint16 CY\_GET\_REG16(uint16/uint32 reg)

Description: Reads the 16-bit value from the specified register. This macro implements the byte

swapping required for proper operation. For PSoC 3 the address must be in the

lower 64 K address range.

Parameters: reg: Register address (uint16 PSoC 3, uint32 PSoC 4/PSoC 5LP)

Return Value: Read value

# void CY\_SET\_REG16(uint16/uint32 reg, uint16 value)

Description: Writes the 16-bit value to the specified register. This macro implements the byte

swapping required for proper operation. For PSoC 3 the address must be in the

lower 64 K address range.

Parameters: reg: Register address (uint16 PSoC 3, uint32 PSoC 4/PSoC 5LP)

value: Value to write

Return Value: None

# uint32 CY\_GET\_REG24(uint16/uint32 reg)

Description: Reads the 24-bit value from the specified register. This macro implements the byte

swapping required for proper operation. For PSoC 3 the address must be in the

lower 64 K address range.

Parameters: reg: Register address (uint16 PSoC 3, uint32 PSoC 4/PSoC 5LP)

Return Value: Read value

### void CY SET REG24(uint16/uint32 reg, uint32 value)

Description: Writes the 24-bit value to the specified register. This macro implements the byte

swapping required for proper operation. For PSoC 3 the address must be in the

lower 64 K address range.

Parameters: reg: Register address (uint16 PSoC 3, uint32 PSoC 4/PSoC 5LP)

value: Value to write

Return Value: None

# uint32 CY\_GET\_REG32(uint16/uint32 reg)

Description: Reads the 32-bit value from the specified register. This macro implements the byte

swapping required for proper operation. For PSoC 3 the address must be in the

lower 64 K address range.

Parameters: reg: Register address (uint16 PSoC 3, uint32 PSoC 4/PSoC 5LP)

Return Value: Read value



# void CY\_SET\_REG32(uint16/uint32 reg, uint32 value)

**Description:** Writes the 32-bit value to the specified register. This macro implements the byte

swapping required for proper operation. For PSoC 3 the address must be in the

lower 64 K address range.

Parameters: reg: Register address (uint16 PSoC 3, uint32 PSoC 4/PSoC 5LP)

value: Value to write

Return Value: None

# uint8 CY\_GET\_XTND\_REG8(uint32 reg)

Description: Reads the 8-bit value from the specified register. Supports the full address space

for PSoC 3, but requires more execution cycles than the standard register get

function. Identical to CY GET REG8 for PSoC 4/PSoC 5LP.

Parameters: reg: Register address

Return Value: Read value

# void CY\_SET\_XTND\_REG8(uint32 reg, uint8 value)

Description: Writes the 8-bit value to the specified register. Supports the full address space for

PSoC 3, but requires more execution cycles than the standard register set

function. Identical to CY\_SET\_REG8 for PSoC 4/PSoC 5LP.

Parameters: reg: Register address

value: Value to write

Return Value: None

# uint16 CY\_GET\_XTND\_REG16(uint32 reg)

Description: Reads the 16-bit value from the specified register. This macro implements the byte

swapping required for proper operation. Supports the full address space for PSoC 3, but requires more execution cycles than the standard register get function.

Identical to CY\_GET\_REG16 for PSoC 4/PSoC 5LP.

Parameters: reg: Register address

Return Value: Read value

# void CY\_SET\_XTND\_REG16(uint32 reg, uint16 value)

Description: Writes the 16-bit value to the specified register. This macro implements the byte

swapping required for proper operation. Supports the full address space for PSoC 3, but requires more execution cycles than the standard register set function.

Identical to CY\_SET\_REG16 for PSoC 4/PSoC 5LP.

Parameters: reg: Register address

value: Value to write

Return Value: None



# uint32 CY\_GET\_XTND\_REG24(uint32 reg)

Description: Reads the 24-bit value from the specified register. This macro implements the byte

swapping required for proper operation. Supports the full address space for PSoC 3, but requires more execution cycles than the standard register get function.

Identical to CY\_GET\_REG24 for PSoC 4/PSoC 5LP.

Parameters: reg: Register address

Return Value: Read value

# void CY\_SET\_XTND\_REG24(uint32 reg, uint32 value)

Description: Writes the 24-bit value to the specified register. This macro implements the byte

swapping required for proper operation. Supports the full address space for PSoC 3, but requires more execution cycles than the standard register set function.

Identical to CY SET REG24 for PSoC 4/PSoC 5LP.

Parameters: reg: Register address

Value to write

Return Value: None

# uint32 CY\_GET\_XTND\_REG32(uint32 reg)

Description: Reads the 32-bit value from the specified register. This macro implements the byte

swapping required for proper operation. Supports the full address space for PSoC 3, but requires more execution cycles than the standard register get function.

Identical to CY\_GET\_REG32 for PSoC 4/PSoC 5LP.

Parameters: reg: Register address

Return Value: Read value

# void CY\_SET\_XTND\_REG32(uint32 reg, uint32 value)

**Description:** Writes the 32-bit value to the specified register. This macro implements the byte

swapping required for proper operation. Supports the full address space for PSoC 3, but requires more execution cycles than the standard register set function.

Identical to CY SET REG32 for PSoC 4/PSoC 5LP.

Parameters: reg: Register address

value: Value to write

Return Value: None



# 8 DMA

The DMA files provide the API functions for the DMA controller, DMA channels and Transfer Descriptors. This API is the library version, not the code that is generated when the user places a DMA component on the schematic. The automatically generated code would use the APIs in this module.

Refer to the DMA component datasheet for more information.

**Note** The linked list of all the Transfer Descriptors to be allocated is created (by CyDmacConfigure() function call from the startup code) only if a DMA component is placed onto the schematic.

PSoC 4 devices have no DMA capability.



This page intentionally left blank.

# 9 Flash and EEPROM



# **PSoC 3/PSoC 5LP Implementation**

### **Flash Architecture**

Flash memory in PSoC devices provides nonvolatile storage for user firmware, user configuration data, bulk data storage, and optional error correcting code (ECC) data. The main flash memory area contains up to 256 KB of user program space, depending on the device type.

Flash is organized as a set of arrays. Each array consists of 64, 128, or 256 rows. Each row contains 256 data bytes plus 32 bytes of ECC area. If ECC is not used, this space can store device configuration data and bulk user data. User code may not be run out of the ECC flash memory section.

#### **Flash Memory Array Structure**

| Row 0 | Data (256 bytes) | ECC (32 bytes) |
|-------|------------------|----------------|
| NOW 0 | Data (230 bytes) | LCC (32 bytes) |
| Row 1 | Data             | ECC            |
|       | •                |                |
|       | •                |                |
|       | •                |                |
|       | •                |                |
|       | •                |                |
| Row N | Data             | ECC            |

PSoC 3 flash memory has the following features:

- organized as one array of 64, 128, or 256 rows;
- each row contains 256 data bytes plus 32 bytes for either ECC or data storage.

PSoC 5LP flash memory has the following features:

- organized as either one array of 128 or 256 rows, or as multiple arrays of 256 rows each;
- each row contains 256 data bytes plus 32 bytes for either ECC or data storage.

See the device datasheet and TRM for more information on Flash architecture.

The **System** tab of the PSoC Creator Design-Wide Resources (DWR) file contains configuration options that define ECC area utilization:

| DWR Option | ECC Function   |
|------------|--|
| •          | ECC corrects one bit error and detect multiple bit errors per 8 bytes. ECC area stores error correcting code data. |



| DWR Option                             | ECC Function  |
|--|---|
| Store Configuration Data in ECC Memory | The device configuration data will be stored in ECC area to reduce main FLASH memory usage. Error correction may not be used when this option is enabled.  Note This option is always disabled for bootloader projects, as ECC area is dedicated for bootloadable projects. |
| None                                   | ECC function is disabled. The user data can be stored in the ECC area.  |

For more information on using ECC, refer to the Flash Program Memory chapter of the TRM.

PSoC devices include a flexible flash-protection model that prevents access and visibility to on-chip flash memory. The device offers the ability to assign one of four protection levels to each row of flash:

- Unprotected
- Factory Upgrade
- Field Upgrade
- Full Protection

The required protection level can be selected using the **Flash Security** tab of the PSoC Creator DWR file. Flash protection levels can only be changed by performing a complete flash erase. The Flash programming APIs will fail to write a row with Full Protection level. For more information on protection model, refer to the *Flash Security Editor* section in the PSoC Creator Help.

#### **EEPROM Architecture**

PSoC EEPROM memory is byte-addressable nonvolatile memory. The EEPROM is also organized as a set of arrays. Both PSoC 3 and PSoC 5LP architectures have one EEPROM array, the size of which is 512 bytes, 1 KB, or 2 KB. The array consists of 32, 64, or 128 rows, depending on the device. Each row contains 16 bytes of data.

# **Working with Flash and EEPROM**

Flash and EEPROM are mapped into memory space and can be read directly. To get the address of the first Flash / EEPROM row in a specified array ID, the array ID should be multiplied by array size, and added to Flash / EEPROM base address. To access any row in the same array ID, the size of the row should be multiplied by the desired row number and added to the first row address of the specified array.

**Note** When writing Flash, data in the instruction cache can become stale. Therefore, the cache data does not correlate to the data just written to Flash. A call to CyFlushCache() is required to invalidate the data in cache and force fresh information to be loaded from Flash.

The following table provides definitions of the device-specific Flash parameters that can be used to operate with the Flash:

| Value                   | Description                           |
|-------------------------|---------------------------------------|
| CY_FLASH_BASE           | The base address of the Flash memory. |
| CY_FLASH_SIZE           | The size of the Flash memory.         |
| CY_FLASH_SIZEOF_ARRAY   | The size of Flash array.              |
| CY_FLASH_SIZEOF_ROW     | The size of the Flash row.            |
| CY_FLASH_SIZEOF_ECC_ROW | The size of the ECC row.              |
| CY_FLASH_NUMBER_ROWS    | The number of Flash row.              |
| CY_FLASH_NUMBER_ARRAYS  | The number of Flash arrays.           |



| The EEPROM A | PI provides | the following  | device-specific | definitions. |
|--------------|-------------|----------------|-----------------|--------------|
| THE EEPKOW A | ri biovides | trie rollowina | device-specific | aemmuons.    |

| Value                    | Description                            |
|--------------------------|--|
| CY_EEPROM_BASE           | The base address of the EEPROM memory. |
| CY_EEPROM_SIZE           | The size of the EEPROM memory.         |
| CY_EEPROM_SIZEOF_ARRAY   | The size of EEPROM array.              |
| CY_EEPROM_SIZEOF_ROW     | The size of the EEPROM row.            |
| CY_EEPROM_NUMBER_ROWS    | The number of EEPROM row.              |
| CY_EEPROM_NUMBER_ARRAYs  | The number of EEPROM arrays.           |
| CY_EEPROM_NUMBER_SECTORS | The number of EEPROM sectors.          |
| CY_EEPROM_SIZEOF_SECTOR  | The size of EEPROM sector.             |

Both Flash and EEPROM are programmed through the system performance controller (SPC). To interface with the SPC, information is pushed into, and pulled from, a single register. The Flash/EEPROM specific API provides unified approach to work with Flash as well as EEPROM and simplifies interacting with the SPC by abstracting the details away.

In PSoC 3/PSoC 5LP devices, flash can be read either by the cache controller or the SPC. Flash write can be performed only by SPC. Both SPC and cache cannot simultaneously access the flash memory. If the cache controller tries to access flash at the same time as the SPC, then it must wait until the SPC completes its flash access operation. The CPU, which accesses the flash memory through the cache controller, is therefore also stalled in this circumstance. If a CPU code fetch has to be done from the flash memory due to a cache miss condition, then the cache would have to wait till the SPC completes the flash write operation. Thus the CPU code execution will also be halted till the flash write is complete.

It can take as many as 20 milliseconds to write to EEPROM or Flash. During this time the device should not be reset, or unexpected changes may be made to portions of EEPROM or Flash. Reset sources include XRES pin, software reset, and watchdog; care should be taken to make sure that these are not inadvertently activated. Also, the low voltage detect circuits should be configured to generate an interrupt instead of a reset.

PSoC devices have an on-chip temperature sensor that is used to measure the internal die temperature. You must acquire the temperature at least once to use Flash and EEPROM write functions. If the application will be used in an environment where the die temperature changes 10 °C or more, the temperature should be refreshed to adjust the write times to the Flash for optimal performance. The die temperature is obtained by calling the CySetTemp() function. This function queries SPC for the die temperature and stores it in a global variable, which is used implicitly while performing Flash and EEPROM write operations.


When programming Flash with error detection/correction function disabled (ECC flash space is used for data storage), there are multiple methods for writing a row of data:

- Use CyWriteRowFull() to write the entire row including ECC;
- Use CyWriteRowData() to write the entire row without ECC;
- Use CyWriteRowConfig() to write just the ECC memory.


Flash or EEPROM can be written by one row at a time by calling the CyWriteRowData() function. The first parameter determines the Flash or EEPROM array. The number of arrays that are Flash and the number of arrays that are EEPROM are specific to the exact device selected. Refer to device TRM to determine which array IDs are valid. The row numbering starts from 0 for each array ID.



# **Flash Programming Diagram**

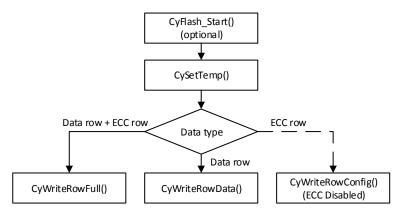

# **EEPROM Programming Diagram**

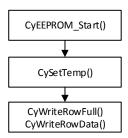

# **Power Modes**

For PSoC 3/PSoC 5LP devices, the power manager will not put the device into a low power state if the system performance controller (SPC) is executing a command. The device will go into low power mode after the SPC completes command execution.



# Flash and EEPROM APIS

# cystatus CySetTemp()

Description: Updates the static snapshot of current chip temperature value obtained from on-

chip temperature sensor. This function must be called once before executing a series of Flash / EEPROM writing functions. In case the application will be used in an environment where the die temperature changes significantly (10 °C or more), care should be taken to keep the temperature snapshot value up-to-date to adjust

the write times to the Flash for optimal performance.

Parameters: None Return Value: Status

| Value         | Description                           |
|---------------|---------------------------------------|
| CYRET_SUCCESS | Successful                            |
| CYRET_LOCKED  | Flash / EEPROM writing already in use |
| CYRET_UNKNOWN | Failure                               |

Side Effects and The function does not return until the SPC has returned to an idle state.

**Restrictions:** 



# cystatus CyWriteRowFull(uint8 arrayld, uint16 rowAddress, uint8 \*rowData, uint16 rowSize)

**Description:** Allows a row to be erased and programmed.

If the array is a Flash array:

| DWR Flash configuration  | Description  |
|--|--|
| Enable ECC – ON Store Configuration Data in ECC Memory – N/A       | Data are written to the flash row. The ECC for these data are calculated and written automatically.  The size of the data equals the size of the flash row.                                    |
| Enable ECC – OFF<br>Store Configuration Data in<br>ECC Memory – ON | Data are written to both flash and ECC rows.  To prevent overwriting of the configuration data stored in the ECC flash space, the size of the data must be equal to the size of the flash row. |
| Enable ECC – OFF Store Configuration Data in ECC Memory – OFF      | Data are written to both flash and ECC rows.  The size of the data equals the sum of flash row and ECC row sizes.  |

If the array is an EEPROM array, the size of data equals EEPROM row size.

Parameters: uint8 arrayld: ID of the array to write. The type of write, Flash or EEPROM, is

determined from the array ID. The arrays in the part are sequential starting at the first ID for the specific memory type. The array ID for the Flash memory lasts from

0x00 to 0x3F and for the EEPROM memory it lasts from 0x40 to 0x7F.

uint16 rowAddress: Row address within the specified arrayld.

uint8 \*rowData: Address of the data to be programmed.

uint16 rowSize: Number of bytes of row data

Return Value: Status

| Value          | Description                           |
|----------------|---------------------------------------|
| CYRET_SUCCESS  | Successful                            |
| CYRET_LOCKED   | Flash / EEPROM writing already in use |
| CYRET_CANCELED | Command not accepted                  |
| Other non-zero | Failure                               |



# cystatus CyWriteRowData(uint8 arrayld, uint16 rowAddress, uint8 \*rowData)

**Description:** Writes a row of Flash or EEPROM.

If the array is a Flash array:

| DWR Flash configuration  | Description   |
|--|---|
| Enable ECC – ON<br>Store Configuration Data in<br>ECC Memory – N/A | Data are written to the flash row. The ECC for these data are calculated and written automatically.  The size of the data that is passed to this function equals the size of the flash row. |
| Enable ECC – OFF Store Configuration Data in ECC Memory – ON/OFF   | Data are written to the flash memory. The data stored in ECC memory are preserved.  |

If the array is an EEPROM array, the size of data equals EEPROM row size.

Parameters: uint8 arrayld: ID of the array to write. The type of write, Flash or EEPROM, is

determined from the array ID. The arrays in the part are sequential starting at the first ID for the specific memory type. The array ID for the Flash memory lasts from

0x00 to 0x3F and for the EEPROM memory it lasts from 0x40 to 0x7F.

uint16 rowAddress: Row address within the specified arrayld.

uint8 \*rowData: Address of the data to be programmed.

Return Value: Status

| Value          | Description                           |
|----------------|---------------------------------------|
| CYRET_SUCCESS  | Successful                            |
| CYRET_LOCKED   | Flash / EEPROM writing already in use |
| CYRET_CANCELED | Command not accepted                  |
| Other non-zero | Failure                               |



# cystatus CyWriteRowConfig(uint8 arrayld, uint16 rowAddress, uint8 \*rowECC)

Description: Writes the ECC portion of a Flash. This function is only valid for Flash array IDs

(not for EEPROM).

| DWR Flash configuration  | Description   |
|--|---|
| Enable ECC – ON<br>Store Configuration Data in<br>ECC Memory – N/A | This function is not available for this configuration as the ECC is stored in the ECC memory.                 |
| Enable ECC – OFF<br>Store Configuration Data in<br>ECC Memory – ON | This function is not available for this configuration as the Configuration Data are stored in the ECC memory. |
| Enable ECC - OFF   | Data are written to the ECC row.  |
| Store Configuration Data in ECC Memory – OFF                       | The data stored in Flash row are preserved.   |

Parameters: uint8 arrayld: ID of the array to write. The arrays in the part are sequential starting

at the first ID for the specific memory type. The array ID for the Flash memory lasts

from 0x00 to 0x3F.

uint16 rowAddress: Row address within the specified arrayld.

uint8 \*rowECC: Address of the data to be programmed.

Return Value: Status

| Value          | Description                           |
|----------------|---------------------------------------|
| CYRET_SUCCESS  | Successful                            |
| CYRET_LOCKED   | Flash / EEPROM writing already in use |
| CYRET_CANCELED | Command not accepted                  |
| Other non-zero | Failure                               |

### void CyFlash Start()

**Description:** Enables the Flash. By default Flash is enabled.

Parameters: None Return Value: None

### void CyFlash\_Stop()

Description: Disables the Flash. This setting is ignored as long as the CPU is currently running.

This will only take effect when the CPU is later disabled.

Parameters: None Return Value: None

# void CyFlash\_SetWaitCycles(uint8 freq)

**Description:** Sets the number of clock cycles the cache will wait before it samples data coming

back from Flash. This function must be called before increasing CPU clock frequency. It can optionally be called after lowering CPU clock frequency in order

to improve CPU performance.

Parameters: freq: CPU operation frequency in Megahertz.

Return Value: None



# void CyEEPROM\_Start()

Description: Enables the EEPROM.

The EEPROM is controlled by a separate bit and must be started before it can be

used.

Parameters: None Return Value: None

# void CyEEPROM\_Stop()

Description: Disables the EEPROM.

The EEPROM is controlled by a separate bit and can be stopped independently.

Parameters: None Return Value: None

# void CyEEPROM\_ReadReserve()

Description: Request access to the EEPROM for reading and waits until that access is

available. The access to EEPROM is arbitrated between the controller that writes to the EEPROM and the normal access to read from EEPROM. It is not required to reserve access to the EEPROM for reading, but if a write is still active and a read

is attempted a fault is generated and the wrong data is returned.

Parameters: None Return Value: None

# void CyEEPROM\_ReadRelease()

Description: Releases the read reservation of the EEPROM. If the EEPROM has been

reserved for reading, then it must be released before further writes to the

EEPROM can be performed.

Parameters: None Return Value: None

# **PSoC 4 Implementation**

# **Memory Architecture**

PSoC 4 does not support the ECC feature. Also, PSoC 4 does not contain EEPROM memory, so the EEPROM component is not available for PSoC 4.

The Flash and API provide following device-specific definitions:

| Value                 | Description                           |
|-----------------------|---------------------------------------|
| CY_FLASH_BASE         | The base pointer of the Flash memory. |
| CY_FLASH_SIZE         | The size of the Flash memory.         |
| CY_FLASH_SIZEOF_ARRAY | The size of Flash array.              |



| Value                  | Description                 |
|------------------------|-----------------------------|
| CY_FLASH_SIZEOF_ROW    | The size of the Flash row.  |
| CY_FLASH_NUMBER_ROWS   | The number of Flash row.    |
| CY_FLASH_NUMBER_ARRAYS | The number of Flash arrays. |

# **Working with Flash**

Flash programming operations are implemented as system calls. System calls are executed out of SROM in the privileged mode of operation. Users have no access to read or modify the SROM code. The CPU requests the system call by writing the function opcode and parameters to the System Performance Controller (SPC) input registers, and then requesting the SROM to execute the function. Based on the function opcode, the SPC executes the corresponding system call from SROM and updates the SPC status register. The CPU should read this status register for the pass/fail result of the function execution. As part of function execution, the code in SROM interacts with the SPC interface to do the actual flash programming operations.

It can take as many as 20 milliseconds to write to flash. During this time, the device should not be reset, or unexpected changes may be made to portions of the flash. Reset sources include XRES pin, software reset, and watchdog. Make sure that these are not inadvertently activated. Also, the low voltage detect circuits should be configured to generate an interrupt instead of a reset.

The flash can be read either by the cache controller or the SPC. Flash write can be performed only by the SPC. Both the SPC and cache cannot simultaneously access flash memory. If the cache controller tries to access flash at the same time as the SPC, then it must wait until the SPC completes its flash access operation. The CPU, which accesses the flash memory through the cache controller, is therefore also stalled in this circumstance. If a CPU code fetch has to be done from flash memory due to a cache miss condition, then the cache would have to wait until the SPC completes the flash write operation. Thus the CPU code execution will also be halted till the flash write is complete.

Flash is directly mapped into memory space and can be read directly.

**Note** Flash write operations on PSoC 4000 devices modify the clock settings of the device during the period of the write operation. Refer to the CySysFlashWriteRow() API documentation for details.



### Flash APIs

# uint32 CySysFlashWriteRow(uint32 rowNum, const uint8 rowData[])

**Description:** Erases a row of Flash and programs it with the new data

Parameters: uint32 rowNum: The flash row number. The number of the flash rows is defined

by the CY FLASH NUMBER ROWS macro for the selected device. Refer to the

device datasheet for the details.

uint8\* rowData: Array of bytes to write. The size of the array must be equal to the flash row size. The flash row size for the selected device is defined by the CY FLASH SIZEOF ROW macro. Refer to the device datasheet for the details.

Return Value: Status:

| Value                     | Description                            |
|---------------------------|--|
| CY_SYS_FLASH_SUCCESS      | Successful                             |
| CY_SYS_FLASH_INVALID_ADDR | Specified flash row address is invalid |
| CY_SYS_FLASH_PROTECTED    | Specified flash row is protected       |
| Other non-zero            | Failure                                |

Side Effects and The IMO must be enabled before calling this function. The operation of the flash Restrictions: writing hardware is dependent on the IMO.

> For PSoC 4000, PSoC 4100 BLE and PSoC 4200 BLE devices, this API will automatically modify the clock settings for the device. Writing to flash requires that changes be made to the IMO and HFCLK settings. The configuration is restored before returning. This will impact the operation of most of the hardware in the device.

> For PSoC 4000 devices, the HFCLK will have several frequency changes during the operation of this API between a minimum frequency of the current IMO frequency divided by 4 and a maximum frequency of 12 MHz.

For PSoC 4100 BLE and PSoC 4200 BLE, the IMO frequency is set to 48 MHz.

### void CySysFlashSetWaitCycles(uint32 freg)

Description: Sets the number of clock cycles the cache will wait before it samples data coming

back from Flash. This function must be called before increasing SYSCLK clock frequency. It can optionally be called after lowering SYSCLK clock frequency in

order to improve CPU performance.

Parameters: freq: Valid range [3-48]. Frequency for operation of the SYSCLK

Note: Invalid frequency will be ignored.

Return Value: None Side Effects and None

**Restrictions:** 



This page intentionally left blank.

# 10 Bootloader Migration



This chapter covers information about the bootloader architecture introduced with PSoC Creator 2.1, as well as various known issues that you may encounter when migrating designs with the bootloader system from PSoC Creator 2.0 or earlier.

### Introduction

Beginning with PSoC Creator 2.1, the bootloader system has been reorganized to provide more configuration options. In previous releases, the bootloader system was part of the cy\_boot component (a required component that is automatically and invisibly instantiated in all designs). The bootloader system now includes two independent Bootloader and Bootloadable components. You can find the components in the PSoC Creator Component Catalog, and they include component datasheets like all other components.

Also, the bootloader system configuration options have been moved from the PSoC Creator Design-Wide Resources (DWR) file into the corresponding Bootloader and Bootloadable component configuration dialogs. See Migrating Bootloader Designs and Migrating Bootloadable Designs sections in this chapter for more details.

The switch to the new bootloader system is performed automatically by updating the cy\_boot component to version 3.0 or above. However, some changes may impact your existing bootloader and bootloadable designs. This will require maintenance when moving to the new bootloader system architecture. The bootloader system configuration settings must be moved manually.

The three key migration alternatives include:

- Complete Migration to PSoC Creator 2.1 or later
- Migrating to PSoC Creator 2.1 or later without cy\_boot Component Update
- Migrating to PSoC Creator 2.1 or later for Bootloadable Designs

# **Complete Migration to PSoC Creator 2.1 or later**

In this scenario, PSoC Creator 2.1 or later is used to work with the latest version of the cy\_boot component and new bootloader architecture.

When you open a project that was last saved in a previous PSoC Creator release, you will be prompted to update components to the latest version.

- Use the Component Update Tool and choose the latest version of the cy\_boot component. It is recommended that all components be updated together. Use the "Update All to Latest" button to ensure the newest versions are selected for update.
- Open the bootloader system design and place a Bootloader component onto the schematic for a Bootloader or Multi-application bootloader application type. Place a Bootloadable component



onto the schematic for a **Bootloadable** application type. See Project Application Type Property Changes for more information.

 Transfer the bootloader system settings from the DWR file to the component configuration dialogs. See Migrating Bootloader Designs and Migrating Bootloadable Designs for details.

# Migrating to PSoC Creator 2.1 or later without cy\_boot Component Update

In this scenario, PSoC Creator 2.1 or later is used to work with the bootloader system design that was created in previous PSoC Creator releases. No any additional care is required in order to continue working with the bootloader system.

All the components present on the design schematic can be updated to the latest available versions, except the cy\_boot component. The cy\_boot component cannot be updated to the version 3.0 or above without switching to the new bootloader architecture at the same time.

**Note** Some of the latest component versions shipped with PSoC Creator 2.1 or later require cy\_boot version 3.0 or above, so you cannot update them without updating cy\_boot.

# Migrating to PSoC Creator 2.1 or later for Bootloadable Designs Only

In this scenario, only the bootloadable project is migrated to PSoC Creator 2.1 or later and cy\_boot 3.0 or above. Existing bootloader designs are completely compatible with the newly created or migrated bootloadable designs. PSoC Creator 2.1 or later without an updated cy\_boot component or previous PSoC Creator releases can be used for making changes to the bootloader design.

# **Migrating Bootloader Designs**

The following table shows the correlation between the bootloader system in previous PSoC Creator releases and the bootloader system introduced in PSoC Creator 2.1.

| PSoC Creator releases before 2.1 (Bootloader section in the System tab of the DWR)   | PSoC Creator 2.1 or later with cy_boot 3.0 or above (Bootloader component) |
|--|--|
| IO Component   | Communication component  |
| Set by <b>Application Type</b> property of the design.<br>Refer to the Project Application Type Property<br>Changes section. | Multi-application bootloader   |
| Wait for Command   | Wait for command   |
| Wait for Command Time (ms)   | Wait for command time (ms)   |
| Version  | Bootloader application version   |
| Packet Checksum Type   | Packet checksum type   |
| Fast Application Verification  | Fast bootloadable application validation                                   |
| N/A  | Bootloader application validation  |
| N/A  | Optional commands  |

For more details about the PSoC Creator bootloader system features, refer to the Bootloader component datasheet.



# **Migrating Bootloadable Designs**

The following table shows the correlation between the bootloadable system introduced with PSoC Creator 2.1 versus releases before PSoC Creator 2.1.

| PSoC Creator releases before 2.1 (Bootloadable section in the System tab of the DWR)   | PSoC Creator 2.1 or later with cy_boot 3.0 or above (Bootloadable component)                   |
|--|--|
| Version  | Application version  |
| Application ID   | Application ID   |
| Custom ID  | Application custom ID  |
| N/A  | Manual application image placement   |
| N/A  | Placement address  |
| Set in the <b>Bootloader</b> tab of the project's Dependencies window. Refer to the Project Application Type Property Changes section. | Bootloader hex file ( <b>Dependencies</b> tab of the bootloader component's Configure dialog). |

The CyBtldr\_Load() function previously declared in the Bootloadable project was removed. Use the Bootloadable\_1\_Load() function instead, where Bootloadable\_1 is the instance name of the Bootloadable component.

For more details about the PSoC Creator bootloader system features, refer to the Bootloadable component datasheet.

# **Project Application Type Property Changes**

In PSoC Creator releases prior to version 2.1, the **Application Type** option was used to choose the type of the application that will be produced by a build of a project. Beginning with PSoC Creator 2.1, the **Application Type** project property provides a way to verify that the design is created as intended.

The following table correlates the **Application Type** option value with the placed component configuration:

| Application Type     | Expected Component  |
|----------------------|---|
| Bootloader           | Bootloader component with Multi-application bootloader option disabled. |
| Multi App Bootloader | Bootloader component with Multi-application bootloader option enabled.  |
| Bootloadable         | Bootloadable component.   |

The **Application Type** option is set in the advanced section of the **New Project** dialog and can be modified later in the project's **Build Settings** window, under the **Code Generation** section.



# Migrating Bootloadable Dependency to Bootloader Design

In PSoC Creator releases prior to version 2.1, the **Bootloader** tab of the project's Dependencies window was used to link the bootloadable project to the bootloader project. With the introduction of the Bootloadable component in PSoC Creator 2.1 with cy\_boot version 3.0 or above, this option was moved to the **Dependencies** tab of the Bootloadable component Configure dialog. Refer to the component datasheet for more information.

# 11 System Functions



These functions apply to all architectures.

### **General APIs**

# uint8 CyEnterCriticalSection(void)

Description: CyEnterCriticalSection disables interrupts and returns a value indicating whether

interrupts were previously enabled (the actual value depends on the device

architecture).

**Note** Implementation of CyEnterCriticalSection manipulates the IRQ enable bit with interrupts still enabled. The test and set of the interrupt bits is not atomic; this is true for all architectures. Therefore, to avoid corrupting the processor state, it must be the policy that all interrupt routines restore the interrupt enable bits as they were found

on entry.

Parameters: None Return Value: uint8

PSoC 3 – Returns a value containing two bits:

bit 0: 1 if interrupts were enabled before CyEnterCriticalSection was called. bit 1: 1 if IRQ generation was disabled before CyEnterCriticalSection was called.

 ${\sf PSoC\ 4/PSoC\ 5LP-Returns\ 0\ if\ interrupts\ were\ previously\ enabled\ or\ 1\ if\ interrupts}$ 

were previously disabled.

# void CyExitCriticalSection(uint8 savedIntrStatus)

Description: CyExitCriticalSection re-enables interrupts if they were enabled before

CyEnterCriticalSection was called. The argument should be the value returned from

CyEnterCriticalSection.

Parameters: uint8 savedIntrStatus: Saved interrupt status returned by the CyEnterCriticalSection

function.

Return Value: None



# void CYASSERT(uint32 expr)

Description: Macro that evaluates the expression and if it is false (evaluates to 0) then the

processor is halted. This macro is evaluated unless NDEBUG is defined. If NDEBUG is defined, then no code is generated for this macro. NDEBUG is defined by default

for a Release build setting and not defined for a Debug build setting.

Parameters: expr: Logical expression. Asserts if false.

Return Value: None

# void CyHalt(uint8 reason)

Description: Halts the CPU.

Parameters: reason: Value to be passed for debugging. This value may be useful to know the

reason why CyHalt() was invoked.

Return Value: None

# void CySoftwareReset(void)

**Description:** Forces a software reset of the device.

Parameters: None Return Value: None

# CyDelay APIs

There are four CyDelay APIs that implement simple software-based delay loops. The loops compensate for bus clock frequency.

The CyDelay functions provide a minimum delay. If the processor is interrupted, the length of the loop will be extended by as long as it takes to implement the interrupt. Other overhead factors, including function entry and exit, may also affect the total length of time spent executing the function. This will be especially apparent when the nominal delay time is small.

# void CyDelay(uint32 milliseconds)

Description: Delay by the specified number of milliseconds. By default the number of cycles to

delay is calculated based on the clock configuration entered in PSoC Creator. If the clock configuration is changed at run-time, then the function CyDelayFreq is used to indicate the new Bus Clock frequency. CyDelay is used by several components, so changing the clock frequency without updating the frequency

setting for the delay can cause those components to fail.

Parameters: milliseconds: Number of milliseconds to delay.

Return Value: None

Side Effects and CyDelay has been implemented with the instruction cache assumed enabled.

Restrictions: When instruction cache is disabled on PSoC 5LP, CyDelay will be two times

larger. For example, with instruction cache disabled CyDelay(100) would result in

about 200 ms delay instead of 100 ms.



# void CyDelayUs(uint16 microseconds)

Description: Delay by the specified number of microseconds. By default the number of cycles

to delay is calculated based on the clock configuration entered in PSoC Creator. If the clock configuration is changed at run-time, then the function CyDelayFreq is used to indicate the new Bus Clock frequency. CyDelayUs is used by several components, so changing the clock frequency without updating the frequency

setting for the delay can cause those components to fail.

Parameters: microseconds: Number of microseconds to delay.

Return Value: Void

Side Effects and CyDelayUS has been implemented with the instruction cache assumed enabled. Restrictions: When instruction cache is disabled on PSoC 5LP, CyDelayUs will be two times

larger. For example, with instruction cache disabled CyDelayUs(100) would result

in about 200 us delay instead of 100 us.

If the bus clock frequency is a small non-integer number, the actual delay can be up to twice as long as the nominal value. The actual delay cannot be shorter than

the nominal one.

# void CyDelayFreq(uint32 freq)

Description: Sets the Bus Clock frequency used to calculate the number of cycles needed to

implement a delay with CyDelay. By default the frequency used is based on the

value determined by PSoC Creator at build time.

Parameters: freq: Bus clock frequency in Hz.

0: Use the default value non-0: Set frequency value

Return Value: None

# void CyDelayCycles(uint32 cycles)

Description: Delay by the specified number of cycles using a software delay loop.

Parameters: cycles: Number of cycles to delay.

Return Value: None

# **PSoC 3/PSoC 5LP Voltage Detect APIs**

Voltage monitoring circuits in these devices can be configured to generate an interrupt when Vdda or Vddd is outside a defined range. Low-voltage interrupts are available for both the analog and digital supplies, and a high-voltage interrupt is available for the analog supply. The trip levels for the low-voltage detectors are independently configurable. The trip level for the high-voltage detector is fixed at 5.75 V. The analog and digital low-voltage monitoring circuits can also be configured to reset the device instead of generating an interrupt.

Bits [2:0] in the RESET CR1 register control whether or not the voltage monitoring circuits generate an interrupt if the supply is outside the trip level. If the LVI interrupts are enabled, then bits [7:6] in RESET CR3 control whether or not the device is reset when a low-voltage event occurs. The LVI resets are part of the precision reset circuit and generate a momentary hardware POR reset.



The status of the voltage monitor circuits is stored in two different registers. Bits [2:0] of the RESET\_SR0 register are set to 1 if a low-voltage or high-voltage event has occurred. This register is cleared when read or upon POR reset. Bits [2:0] of the RESET SR2 register hold the real-time status of the voltage monitor circuits' outputs, which means they will only be set to '1' for the duration that the event is occurring.

The GlobalSignalRef component can be used to connect the LVI and HVI interrupt signals to other components in the project schematic, or an interrupt component if you wish to execute an interrupt on an LVI/HVI event. If "Low/High Voltage Detect (LVI/HVI)" is selected in the component, the output of GlobalSignalRef is set to 1 whenever any of the enabled LVI or HVI circuits detect an event. The output will remain at 1 as long as an LVI or HVI event is occurring. Refer to the GlobalSignalRef component datasheet for more information.

The following API functions configure and manage the voltage monitoring circuits and associated interrupt status registers. For more information on the voltage monitoring circuits, refer to the Voltage Monitoring section of the device TRM and the Power Voltage Level Monitors section of the device datasheet.

# void CyVdLvDigitEnable(uint8 reset, uint8 threshold)

**Description:** Enables the output of the digital low-voltage monitor when Vddd is at or below the

trip point, selects whether or not the device generates an interrupt or resets the

part upon the low voltage event, and sets the voltage trip level.

Parameters: reset: Enables device reset on digital LVI interrupt:

· Interrupt on digital LVI event

Non-zero - Reset on digital LVI event

threshold: Sets the trip point of the digital low-voltage monitoring circuit in steps

of approximately 250 mV in range from 1.70 V (0x00) to 5.45 V (0x0F).

Return Value: None

Side Effects and The LVI resets are momentary. When an LVI reset occurs, the RESET\_CR1 and Restrictions RESET\_CR3 registers are restored to their default values. This means that the LVI circuit is no longer enabled and the device exits reset. If the supply is below the trip level and firmware enables the LVI reset functionality, the device will reset again. This will continue as long as the supply is below the trip level or as long as

the user enables the reset functionality of the LVI.

When any LVI reset occurs, the RESET SR0 and RESET SR2 status registers are cleared. This means that the Analog LVI, Digital LVI, and Analog HVI status

bits are not persistent across any LVI reset.



# void CyVdLvAnalogEnable(uint8 reset, uint8 threshold)

Description: Enables the output of the analog low-voltage monitor when Vdda is at or below the

trip point, selects whether or not the device generates an interrupt or resets the

part upon the low voltage event, and sets the voltage trip level.

Parameters: reset: Enables device reset on analog LVI interrupt:

0 - Interrupt on analog LVI event

Non-zero - Reset on analog LVI event.

threshold: Sets the trip point of the analog low-voltage monitoring circuit in steps

of approximately 250 mV in range from 1.70 V (0x00) to 5.45 V (0x0F).

Return Value: None

Side Effects and The LVI resets are momentary. When an LVI reset occurs, the RESET\_CR1 and Restrictions RESET CR3 registers are restored to their default values. This means that the

LVI circuit is no longer enabled and the device exits reset. If the supply is below the trip level and firmware enables the LVI reset functionality, the device will reset again. This will continue as long as the supply is below the trip level or as long as

the user enables the reset functionality of the LVI.

When any LVI reset occurs, the RESET SR0 and RESET SR2 status registers are cleared. This means that the Analog LVI, Digital LVI, and Analog HVI status

bits are not persistent across any LVI reset.

# void CyVdLvDigitDisable(void)

Description: Disables the digital low voltage monitor (interrupt and device resets are

disabled).

Parameters: None Return Value: None

Side Effects and Interrupt and LVI resets are disabled, but pending interrupts and status bits are

Restrictions not cleared.

# void CyVdLvAnalogDisable(void)

Description: Disables the analog low voltage monitor (interrupt and device resets are

disabled).

Parameters: None Return Value: None

Side Effects and Interrupt and LVI resets are disabled, but pending interrupts and status bits are

Restrictions not cleared.

# void CyVdHvAnalogEnable(void)

Description: Enables the analog high voltage monitor to generate an interrupt on 5.75 V

threshold detection for Vdda.

Parameters: None Return Value: None



# void CyVdHvAnalogDisable(void)

Description: Disables the analog high voltage monitor (interrupt is disabled).

Parameters: None Return Value: None

Side Effects and Interrupt and HVI resets are disabled, but pending interrupts and status bits are

Restrictions not cleared.

# uint8 CyVdStickyStatus(uint8 mask)

**Description:** Reads and clears the voltage detection status bits in the RESET\_SR0 register.

The bits are set to 1 by the voltage monitor circuit when the supply is outside the detector's trip point. They stay set to 1 until they are read or a POR / LVI / PRES reset occurs. This function uses a shadow register, so only the bits passed in the

parameter will be cleared in the shadow register.

**Parameters:** mask: Bits in the RESET\_SR0 shadow register to clear and return.

| Value      | Definition                        | Register [bits] |
|------------|-----------------------------------|-----------------|
| CY_VD_LVID | Persistent status of digital LVI. | RESET_SR0 [0]   |
| CY_VD_LVIA | Persistent status of analog LVI.  | RESET_SR0 [1]   |
| CY_VD_HVIA | Persistent status of analog HVI.  | RESET_SR0 [2]   |

Return Value: Status. Same enumerated bit values as used for the mask parameter. A zero is

returned for bits not used in the mask parameter.

Side Effects and When an LVI reset occurs, the RESET\_SR0 status registers are cleared. This Restrictions means that the voltage detection status bits are not persistent across an LVI

reset and cannot be used to determine a reset source.

# uint8 CyVdRealTimeStatus(void)

**Description:** Reads the real-time voltage detection status bits in the RESET\_SR2 register.

The bits are set to 1 by the voltage monitor circuit when the supply is outside the

detector's trip point, and set to 0 when the supply is inside the trip point.

Parameters: None

Return Value: Status of the LVID, LVIA, and HVIA bits in the RESET\_SR2 register.

| Value      | Definition                       | Register [bits] |
|------------|----------------------------------|-----------------|
| CY_VD_LVID | Real-time status of digital LVI. | RESET_SR0 [0]   |
| CY_VD_LVIA | Real-time status of analog LVI.  | RESET_SR0 [1]   |
| CY VD HVIA | Real-time status of analog HVI.  | RESET SR0 [2]   |

Side Effects and When an LVI reset occurs, the RESET\_SR2 status registers are cleared. This Restrictions means that the voltage detection status bits are not persistent across an LVI

reset and cannot be used to determine a reset source.



# Voltage Detect APIs (PSoC 4100 / PSoC 4200 / PSoC 4100 BLE / PSoC 4200 BLE)

# void CySysLvdEnable(uint32 threshold)

**Description:** Enables the output of the low-voltage monitor when Vddd is at or below the trip

point, configures device to generate an interrupt, and sets the voltage trip level.

Parameters: threshold: Threshold selection for Low Voltage Detect circuit. Threshold variation

is +/- 2.5% from these typical voltage choices.

| Define                  | Voltage threshold |
|-------------------------|-------------------|
| CY_LVD_THRESHOLD_1_75_V | 1.75 V            |
| CY_LVD_THRESHOLD_1_80_V | 1.80 V            |
| CY_LVD_THRESHOLD_1_90_V | 1.90 V            |
| CY_LVD_THRESHOLD_2_00_V | 2.00 V            |
| CY_LVD_THRESHOLD_2_10_V | 2.10 V            |
| CY_LVD_THRESHOLD_2_20_V | 2.20 V            |
| CY_LVD_THRESHOLD_2_30_V | 2.30 V            |
| CY_LVD_THRESHOLD_2_40_V | 2.40 V            |
| CY_LVD_THRESHOLD_2_50_V | 2.50 V            |
| CY_LVD_THRESHOLD_2_60_V | 2.60 V            |
| CY_LVD_THRESHOLD_2_70_V | 2.70 V            |
| CY_LVD_THRESHOLD_2_80_V | 2.80 V            |
| CY_LVD_THRESHOLD_2_90_V | 2.90 V            |
| CY_LVD_THRESHOLD_3_00_V | 3.00 V            |
| CY_LVD_THRESHOLD_3_20_V | 3.20 V            |
| CY_LVD_THRESHOLD_4_50_V | 4.50 V            |

Return Value: None

# void CySysLvdDisable(void)

**Description:** Disables the low voltage detection. Low voltage interrupt is disabled.

Parameters: None Return Value: None

# uint32 CySysLvdGetInterruptSource(void)

**Description:** Gets the low voltage detection interrupt status (without clearing).

Parameters: None

Return Value: Interrupt request value:

CY SYS LVD INT - Indicates an Low Voltage Detect interrupt



# void CySysLvdClearInterrupt(void)

**Description:** Clears the low voltage detection interrupt status.

Parameters: None Return Value: None

# **Cache Functionality**

# PSoC<sub>3</sub>

The PSoC 3 cache is enabled by default. It can be disabled using the PSoC Creator Design-Wide Resources System Editor. There are no defines, functions or macros for cache handling for PSoC 3.

### **PSoC 5LP**

# void CyFlushCache()

**Description:** Flushes the PSoC 5/PSoC 5LP cache by invalidating all entries.

Parameters: None Return Value: None

Side Effects and When writing Flash, data in the instruction cache can become stale. Therefore, the

Restrictions: cache data does not correlate to the data just written to Flash. A call to

CyFlushCache() is required to invalidate the data in cache and force fresh

information to be loaded from Flash.

### PSoC 4

PSoC 4 devices have no cache capability.

# 12 Startup and Linking



The cy\_boot component is responsible for the startup of the system. The following functionality has been implemented:

- Provide the reset vector
- Setup processor for execution
- Setup interrupts
- Setup the stack including the reentrant stack for the 8051
- Configure the device
- Initialize static and global variables with initialization values
- Clear all remaining static and global variables
- Integrate with the bootloader functionality
- Preserve the reset status
- Call main() C entry point

See application note AN60616 for more details on PSoC 3 and PSoC 5LP startup.

The device startup procedure configures the device to meet datasheet and PSoC Creator project specifications. Startup begins after the release of a reset source, or after the end of a power supply ramp. There are two main portions of startup: hardware startup and firmware startup. During hardware startup, the CPU is halted, and other resources configure the device. During firmware startup, the CPU runs code generated by PSoC Creator to configure the device. When startup ends, the device is fully configured, and its CPU begins execution of user-authored main() code.

The hardware startup configures the device to meet the general performance specifications given in the datasheet. The hardware startup phase begins after a power supply ramp or reset event. There are two phases of hardware startup: reset and boot. After hardware startup ends, code execution from Flash begins.

Firmware startup configures the PSoC device to behave as described in the PSoC Creator project. It begins at the end of hardware startup. The PSoC device's CPU begins executing user-authored main() code after the completion of firmware startup. The main task of firmware startup is to populate configuration registers such that the PSoC device behaves as designed in the PSoC Creator project. This includes configuring analog and digital peripherals, as well as system resources such as clocks and routing.

The startup procedure may be altered to better fit a specific application's needs. There are two ways to modify device startup: using the PSoC Creator design-wide resources (DWR) interface, and modifying the device startup code.



# PSoC<sub>3</sub>

Startup is all handled by a single assembly file (*KeilStart.a51*), which is based on a template provided by Keil. There isn't a file specifically associated with linking. The linker directives are used instead. For more information on the 8051 architecture, refer to the <u>Language Extensions section on www.keil.com</u>.

For the more information on the PSoC 3's architecture refer to the AN54181.

# **PSoC 4/PSoC 5LP**

The startup and linker scripts have been custom developed by Cypress, but both of the toolchain vendors that we currently support provide example linker implementations and complete libraries that solve many of the issues that have been created by our custom implementations.

The memory layout of the final binary and hex images, as well as the placement in PSoC 5LP memory is described in the linker descriptor (.scat) file generated as part of the PSoC Creator build. The custom linker descriptor file can be used when building the project instead of the default one by going to **Build Settings** window and specifying path to the file in the **Custom Linker Script** field of the **Linker** category.

For the more information on the PSoC 5LP's CPU architecture, refer to the <u>Cortex™-M3 Technical</u> <u>Reference Manual on infocenter.arm.com</u>. There is also <u>Application Note 179 - Cortex™ -M3 Embedded</u> Software Development on infocenter.arm.com.

For the more information on the PSoC 4's CPU architecture, refer to the Cortex™-M0 Technical Reference Manual on infocenter.arm.com.

# **Unaligned Transfers (PSoC 5LP)**

The PSoC 5LP supports unaligned transfers on single accesses with a number of limitations common for Cortex-M3 platform. When unaligned transfers are used, they are actually converted into multiple aligned transfers. This conversion is transparent from the software point of view. When an unaligned transfer takes place, it is broken into separate transfers. So, it takes more clock cycles for a single data access. To get the best performance and to ensure code compatibility through PSoC processors family, the unaligned transfers should be avoided.

In PSoC 5LP, SRAM is located at Cortex-M3 Code/SRAM regions boundary. The unaligned accesses that cross memory map boundaries are architecturally unpredictable. The linker configuration files used for PSoC 5LP do not protect against unaligned accesses that cross this boundary.

When unaligned accesses must be used, use a function that checks for the possible boundary problem and do byte accesses at the boundary or modify the linker script to force the memory that needs to be accessed in an unaligned fashion to not span this border.

# **GCC** Implementation

PSoC Creator integrates the GCC ARM Embedded compiler including making the Newlib-nano and newlib libraries. Refer to the Red Hat newlib C Library for the C library reference manual.

The newlib-nano is configured by default. To choose newlib library, open the Build Settings dialog > ARM GCC 4.8.4 > Linker > General, and set the "Use newlib-nano" option to False.

By default, with the GNU ARM compiler, the string formatting functions in the C run-time library return empty strings for floating-point conversions. The newlib-nano library is a stripped-down version of the full C newlib. It does not include support for floating point formatting and other memory-intensive features.



There are two solutions to this problem: enable floating-point formatting support in newlib-nano, or change the library to the full newlib.

To enable floating-point formatting, open the Build Settings dialog, go to the Linker page, and add the string -u \_printf\_float to the command line options. This change will result in an increase in Flash and RAM usage in your application.

Note If you also wish to use the scanf functions with floating-point numbers you should add the string -u scanf float as well, with another increase in Flash and RAM usage.

# Realview Implementation (applicable for MDK and RVDS)

Use all the standard libraries (C standardlib, C microlib, fplib, mathlib). All of these libraries are linked in by default.

- Support for RTOS and user replacement of routines. This is possible because the library routines are denoted as "weak" allowing their replacement if another implementation is provided.
- A mechanism is provided that allows for the replacement of the provided linker/scatter file with a user version. This is implemented by allowing the user to create the file local to their project and having a build setting that allows the specification of this file as the linker/scatter file instead of the file provided automatically.
- Currently the heap and stack size are specified as a fixed quantity (4 K Stack, 1 K Heap). If possible the requirement to specify Heap and Stack sizes should be removed entirely. If that is not possible, then these values should be the defaults with the option to choose other values in the Design-Wide Resources GUI.
- All the code in the Generated Source tree is compiled into a single library as part of the build process. Then that compiled library is linked in with the user code in the final link.


# **CMSIS Support**

Cortex Microcontroller Software Interface Standard (CMSIS) is a standard from ARM for interacting with Cortex M-series processors. There are multiple levels of support. The Core Peripheral Access Layer (CMSIS Core) support is provided. For the more information refer to <a href="CMSIS - Cortex Microcontroller">CMSIS - Cortex Microcontroller</a> Software Interface Standard on www.arm.com.

PSoC Creator 3.0 provides support for CMSIS Core version 3.20. Also, PSoC Creator 3.0 provides the ability to use a custom version of the CMSIS Core.

The following diagram shows how CMSIS Core version 3.20 files are integrated into the cy\_boot component and how custom version of CMSIS Core files can be integrated.



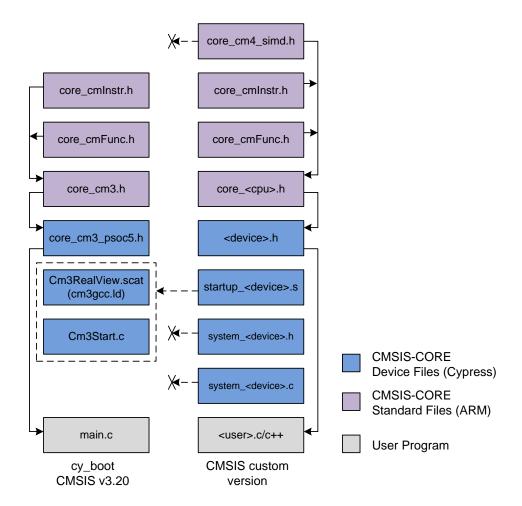

The following describe each file from the diagram:

- The Cm3Start.c and cm3gcc.ld files (part of the cy\_boot component) contain Cortex-M3 device startup code and interrupt vector tables and completely substitute CMSIS startup\_<device>.s template file.
- Vendor-specific device file <device>.h that includes CMSIS Core standard files is represented in cy boot component by *core cm3 psoc5.h*.
- The core\_cmInstr.h file defines intrinsic functions to access special Cortex-M instructions and core\_cmFunc.h file provides functions to access the Cortex-M core peripherals. These files were added since CMSIS Core version 2.0.
- The *core\_cm4\_simd.h* file added to the CMSIS SIMD Instruction Access is relevant for Cortex-M4 only.
- system\_<device>.h, system\_<device>.c Generic files for system configuration (i.e. processor clock and memory bus system), are partially covered by Cm3Start.c.



### Manual addition of the CMSIS Core files

Beginning with PSoC Creator 2.2, the "Include CMSIS Core Peripheral Library Files" option is added to the System tab of the DWR file. By default, this option is enabled and CMSIS Core version 3.20 files are added to the project. This option should be disabled if you wish to manually add CMSIS Core files.

Un-check "Include CMSIS Core Peripheral Library Files" option on the System tab of the DWR file to detach CMSIS 3.20 files from the cy boot component.

Add the following CMSIS Core files to the project:

- core cmInstr.h
- core\_cmFunc.h
- core cm3.h

Based on the CMSIS vendor-specific template file (<device>.h), create device header file, copy device specific definitions from core\_cm3\_psoc5.h file and add following definitions at the top of the file:

Include the previously created vendor-specific device header file to the application.

# **High-Level I/O Functions**

To use high-level input/output functions, like printf() or scanf(), the application must implement the base I/O functions. The base I/O API depends on compiler and used C library:

- Keil Library Reference on keil.com
- GCC Red Hat newlib C Library on sourceware.org/newlib.
- MDK/RVDS The ARM C and C++ Libraries on infocenter.arm.com.
- MDK/RVDS The ARM C Micro-library on infocenter.arm.com.

# The printf() Usage Model

The printf() function formats a series of strings and numeric values and builds a string to write to the output stream. Its implementation relies on the following low-level library functions:

- Keil compiler use the <u>putchar()</u>
- GCC use write()
- MDK/RVDS use sys write() or fputc(). The micro-library use fputc().

The application should implement these functions and call the communication component API to send data via selected interface.



# **Preservation of Reset Status**

### PSoC 3/PSoC 5LP

The value of the reset status register (RESET\_SR0) is read and cleared any time the device is booted. That value is saved to a global SRAM variable.

**Note** The imprecise power-on-reset (IPOR), precision power-on-reset (PRES), external reset (XRES), and low-voltage interrupt (LVI) reset sources clear the RESET\_SR0 register. The watchdog reset (WRES) and software initiated reset (SRES) sources preserve the RESET\_SR0 register. For more information, refer to the device datasheet and TRM.

Some PSoC 3 devices perform an additional software reset. If any other than a software device reset previously occurred, it will reload the NVLs and apply the correct settings. This operation is transparent to the normal boot process and will not interfere with bootloading, debugging, or normal device functionality. See the device errata for more information.

To retain user-defined status that persists through many resets, use the CY\_RESET\_GP0 and CY\_RESET\_GP1 bits in the RESET\_SR0 register. The CyResetStatus variable is used to obtain value of these bits after a device reset. These bits are used by Bootloader and Bootloadable projects and cannot be used by user.

### uint8 CyResetStatus

| Name         | Description           |
|--------------|-----------------------|
| CY_RESET_WD  | Watchdog reset        |
| CY_RESET_SW  | Software reset        |
| CY_RESET_GP0 | General purpose bit 0 |
| CY_RESET_GP1 | General purpose bit 1 |

### PSoC 4

# uint32 CySysGetResetReason(uint32 reason)

**Description:** The function returns the cause for the latest reset(s) that occurred in the system

and clears those that are defined with the parameter.

All bits in the RES\_CAUSE register assert when the corresponding reset cause occurs and must be cleared by firmware. These bits are cleared by hardware only

during XRES, POR, or a detected brown-out.

Parameters: reason: bits in the RES CAUSE register to clear.

| Define                 | Source           |
|------------------------|------------------|
| CY_SYS_RESET_WDT       | WDT              |
| CY_SYS_RESET_PROTFAULT | Protection Fault |
| CY_SYS_RESET_SW        | Software reset   |

Return Value: Status. Same enumerated bit values as used for the reason parameter.

Side Effects and None

Restrictions:



# **API Memory Usage**

API memory usage varies significantly depending on the compiler, device, design-wide resource configuration, and component configuration used in the design. The following tables provide the memory usage for the entire empty project with the default design-wide resource configuration options.

The measurements have been done with an associated compiler configured in Release mode with optimization set for Size. For a specific design, the map file generated by the compiler can be analyzed to determine the memory usage.

The following data is provided for a blank design with default settings. Resource usage may increase if any of unused by default cy boot APIs are used in some particular project.

#### PSoC 3 (Keil PK51)

| Configuration | Flash<br>Bytes | SRAM<br>Bytes | Stack |
|---------------|----------------|---------------|-------|
| Default       | 1574           | 95            | 2     |

#### **PSoC 5LP (GCC)**

| Configuration | Flash<br>Bytes | SRAM<br>Bytes | Stack |
|---------------|----------------|---------------|-------|
| Default       | 904            | 2477          | 10    |

### PSoC 4 (GCC)

| Configur | PSoC 4000      |               | PSoC 4100/<br>PSoC 4200 |                |               | PSoC 4100 BLE/<br>PSoC 4200 BLE |                |               |       |
|----------|----------------|---------------|-------------------------|----------------|---------------|---------------------------------|----------------|---------------|-------|
| ation    | Flash<br>Bytes | SRAM<br>Bytes | Stack                   | Flash<br>Bytes | SRAM<br>Bytes | Stack                           | Flash<br>Bytes | SRAM<br>Bytes | Stack |
| Default  | 1112           | 1296          | 30                      | 1166           | 1404          | 48                              | 1302           | 2428          | 30    |



# **Performance**

#### **Functions Execution Time**

The API execution time varies depending on the compiler, device, and design-wide resource configuration.

The measurements have been done with the default compiler (PK51 for PSoC 3 device and GCC for all other devices) configured in Release mode with optimization set for Size. The project uses default design-wide resource configuration for the measurements.

The following table provides the numbers for the functions whose execution time is considered to have significant impact.

#### PSoC 3

| Description   |   | Тур   | Max | Units |
|---|---|-------|-----|-------|
| Device initialization time (from reset to the main() entry) | - | 5.84  | -   | ms    |
| The CyPmSaveClocks() function execution time                | - | 398.0 | -   | μs    |
| The CyPmRestoreClocks() function execution time             | - | 1.036 | -   | ms    |
| The CyPmSleep() function execution before Sleep mode entry  | - | 57.90 | -   | μs    |
| The CyPmSleep() function execution after Sleep mode exit    |   | 30.48 | -   | μs    |
| The CyWriteRowFull() function execution time                | - | 10.74 | -   | ms    |

#### PSoC 4

| Description                                      | Min | Тур  | Max | Units |
|--|-----|------|-----|-------|
| The CySysFlashWriteRow() function execution time | -   | 9.09 | -   | ms    |

#### PSoC 5LP

| Description   |   | Тур  | Max | Units  |
|---|---|------|-----|--------|
| Device initialization time (from reset to the main() entry) | - | 4.44 | -   | ms     |
| The CyPmSaveClocks() function execution time                | - | 1085 | -   | cycles |
| The CyPmRestoreClocks() function execution time             | - | 2939 | -   | cycles |
| The CyPmSleep() function execution before Sleep mode entry  | - | 619  | -   | cycles |
| The CyPmSleep() function execution after Sleep mode exit    | - | 311  | 1   | cycles |
| The CyWriteRowFull() function execution time                | - | 12.1 | -   | ms     |



#### **Critical Sections Duration**

The duration of critical sections (code sections with disabled interrupts) varies depending on the compiler, device and, design-wide resource configuration.

The measurements have been done with the default compiler (PK51 for PSoC 3 device and GCC for all other devices) configured in Release mode with optimization set for Size. The project used default design-wide resource configuration for the measurements.

The following table provides the numbers for the functions whose critical section duration might have meaningful impact.

#### PSoC 3

| Description  | Conditions | Min | Тур   | Max | Units |
|--|------------|-----|-------|-----|-------|
| The CyBusClk_SetDivider() function critical section time | Default    | -   | 34.16 | -   | μs    |
| The CyDisableInts() function critical section time       | Default    | -   | 62.5  | -   | μs    |
| The CyEnableInts() function critical section time        | Default    | -   | 48.8  | -   | μs    |
| The CyPmSleep() function critical section time           | Default    | -   | 82.32 | -   | μs    |
| The CyPmHibernate() function critical section time       | Default    | -   | 103.7 | -   | μs    |

#### PSoC 4

| Description   | Conditions | Min | Тур | Max | Units  |
|---|------------|-----|-----|-----|--------|
| The CySysClkWriteImoFreq() function critical section time   | Default    | -   | 302 | -   | cycles |
| The CySysWdtClearInterrupt() function critical section time | Default    | -   | 78  | -   | cycles |

#### PSoC 5LP

| Description  | Conditions | Min | Тур  | Max | Units  |
|--|------------|-----|------|-----|--------|
| The CyBusClk_SetDivider() function critical section time | Default    | -   | 144  | -   | cycles |
| The CyDisableInts() function critical section time       | Default    | -   | 56   | -   | cycles |
| The CyEnableInts() function critical section time        | Default    | -   | 47   | -   | cycles |
| The CyFlushCache() function critical section time        | Default    | -   | 93   | -   | cycles |
| The CyPmSleep() function critical section time           | Default    | -   | 932  | -   | cycles |
| The CyPmHibernate() function critical section time       | Default    | -   | 1718 | -   | cycles |



This page intentionally left blank.

# 13 Watchdog Timer (WDT)



### **PSoC 3/PSoC 5LP**

#### void CyWdtStart(uint8 ticks, uint8 lpMode)

**Description:** Enables the watchdog timer. The timer is configured for the specified count interval, the CTW is cleared, the setting for low power mode is configured, and the

watchdog timer is enabled.

The hardware implementation of the watchdog timer prevents any modification of the timer once it has been enabled. It also prevents the timer from being disabled once it has been enabled. This protects the watchdog timer from changes caused by errant code. As a result, only the first call to CyWdtStart() after reset will have any effect.

The watchdog counts each time the CTW reaches the period specified. The watchdog must be cleared using the CyWdtClear() function before the watchdog counts to three. The CTW is free running, so this will occur after between 2 and 3 timer periods elapse.

**arameters:** ticks: One of the four available timer periods. Once WDT enabled, the interval cannot be changed.

| Define           | Time            |
|------------------|-----------------|
| CYWDT_2_TICKS    | 4 – 6 ms        |
| CYWDT_16_TICKS   | 32 – 48 ms      |
| CYWDT_128_TICKS  | 256 – 384 ms    |
| CYWDT_1024_TICKS | 2.048 – 3.072 s |

#### void CyWdtStart(uint8 ticks, uint8 lpMode) (continued)

Parameters IpMode: Low power mode configuration.

| Define                | Effect  |
|-----------------------|---|
| CYWDT_LPMODE_NOCHANGE | No Change   |
| CYWDT_LPMODE_MAXINTER | Switch to longest timer mode during sleep / hibernate |
| CYWDT_LPMODE_DISABLED | Disable WDT during sleep / hibernate                  |

Return Value: None

#### void CyWdtClear()

**Description:** Clears (feeds) the watchdog timer.




#### PSoC 4100 / PSoC 4200 / PSoC 4100 BLE / PSoC 4200 BLE

#### **Functional Description**

The WDT asserts an interrupt or a hardware reset to the device after a preprogrammed interval, unless it is periodically serviced in firmware. The WDT has two 16- bit counters (Counter-0 and Counter-1) and one 32-bit counter (Counter-2).

These counters can be configured to work independently or in cascade. The cascade configuration provides an option to increase the reset or interrupt interval.

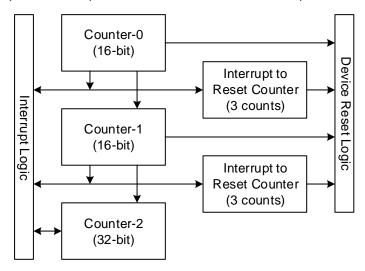

The Counter-0 and Counter-1 generate an interrupt or a reset on reaching the specified terminal count for the first time, or generate a reset after three continuous unhandled interrupt, whereas Counter-2 only generates an interrupt. The interrupt must be cleared after entering the Interrupt Service Routine (ISR) in firmware by calling CySysWdtClearInterrupt() with the corresponding parameter.

The Counter-0 and Counter-1 perform action when the corresponding counter value equals corresponding match value configured by call to CySysWdtWriteMode(). The Counter-2 perform action when the bit defined by call to CySysWdtWriteToggleBit() is toggled in Counter-2. For example, if toggle bit is bit number 7 (configured by call to the CySysWdtWriteToggleBit(7) function), the Counter-2 will generate one interrupt per 2^7=128 WDT clocks.

#### **Power Modes**

In the Active mode, the interrupt request from the WDT is sent to the CPU via IRQ 9. In the Sleep or Deep Sleep power mode the CPU subsystem is powered-down, so the interrupt request from the WDT is directly sent to the WakeUp Interrupt Controller (WIC), which will then wake up the CPU. Then, the CPU acknowledges the interrupt request and executes the Interrupt Service Routine (ISR).

After waking from Deep Sleep, an internal timer value is set to zero until the ILO loads the register with the correct value. This led to an increase in low-power mode current consumption. The work around is to wait for the first positive edge of the ILO clock before allowing the WDT\_CTR\_\* registers to be read by CySysWdtReadCount() function.

#### **Clock Source**

The WDT is clocked by LFCLK. The LFCLK can be sourced by 32 kHz ILO or WCO. The WCO is available only for the PSoC 4100 BLE and PSoC4200 BLE devices. According to the device datasheet,



the ILO accuracy is +/-60% over voltage and temperature. This means that the timeout period may vary by 60% from the configured. Appropriate margins should be added while configuring WDT intervals to make sure that unwanted device resets does not occur on some devices.

Please refer to the device datasheet for the more information on oscillator accuracy.

#### Register Locking

Accidental corruption of the WDT configuration can be prevented by setting the bit-field WDT\_LOCK of the CLK\_SELECT register by calling the CySysWdtLock() function. When WDT is locked, any writing to the WDT \* and CLK ILO\* registers is ignored.

The CySysWdtUnlock() function should be called in order to allow WDT registers modification.

#### Clearing WDT

The LFCLK clock is asynchronous to the SYSCLK. So, generally, it takes 3 LFCLK cycles for the WDT registers changes to come into effect. This is important to remember that WDT should be cleared at least 4 cycles (3 + 1 for sure) before timeout occurs, especially when small match values / low toggle bit numbers are used.

The WDT counters should be cleared by calling the CySysWdtResetCounters() function with the parameter corresponding to the counters whose values are going to be cleared.

It is recommended to clear WDT counters from the portion of the code that is not directly associated with the WDT interrupt. It is possible that the main function of the firmware has crashed or is in an endless loop, but that the WDT interrupt vector is still intact and the WDT is getting serviced properly.

#### Reset Detection

The CySysGetResetReason() function can be used to detect if the watchdog has triggered device reset.

#### Interrupt Configuration

The Global Signal Reference and Interrupt components can be used for the ISR configuration. If the WDT is configured to generate interrupt, the pending interrupts must be cleared within ISR (otherwise, the interrupt will be generated continuously):

- Pending interrupt to the interrupt controller must be cleared by the call to the WDTISR\_ClearPending() function, where WDTISR is the instance name of the interrupt component.
- Pending interrupt to the WDT block must be cleared by the call to the CySysWdtClearInterrupt() function. The call to the function will clear the unhandled WDT interrupt counter, if WDT is configured to be in "generate interrupts and reset on 3rd unhandled interrupt" mode.

It is recommended to use WDT ISR as timer to trigger certain actions and to change the next WDT match value.



#### **APIs**

#### void CySysWdtLock(void)

Description: Locks out configuration changes to the Watchdog timer registers and ILO

configuration register.

Parameters: None Return Value: None

Side Effects and After this API is called, the ILO can't be disabled until calling of CySysWdtUnlock().

**Restrictions:** 

#### void CySysWdtUnlock(void)

**Description:** Unlocks the Watchdog Timer configuration register.

Parameters: None Return Value: None

Side Effects and This API enables the ILO, if it was disabled.

Restrictions:

#### void CySysWdtWriteMode(uint32 counterNum, uint32 mode)

Description: Writes the mode of one of the three WDT counters. If WDT mode is not

configured, WDT timers are in a free running mode.

Parameters: counterNum: Valid range [0-2]. Number of the WDT counter.

mode: Mode of operation for the counter:

| Define                    | Mode  |
|---------------------------|---|
| CY_SYS_WDT_MODE_NONE      | Free running  |
| CY_SYS_WDT_MODE_INT       | Interrupt generated on match for counter 0 and 1, and on bit toggle for counter 2                                       |
| CY_SYS_WDT_MODE_RESET     | Reset on match (valid for counter 0 and 1 only)   |
| CY_SYS_WDT_MODE_INT_RESET | Generate an interrupt and generate a reset on the 3 <sup>rd</sup> unhandled interrupt. (valid for counter 0 and 1 only) |

Return Value: None

Side Effects and WDT counter counterNum should be disabled to set mode. Otherwise this function

Restrictions: call will have no effect. If the specified counter is enabled, call CySysWdtDisable() function with the corresponding parameter to disable specified counter and wait for

it to stop.

#### uint32 CySysWdtReadMode(uint32 counterNum)

Description: Reads the mode of one of the three WDT counters.

Parameters: counterNum: Valid range [0-2]. Number of the WDT counter.

Return Value: Mode of the counter. Same enumerated values as mode parameter used in

CySysWdtWriteMode().



#### void CySysWdtWriteClearOnMatch(uint32 counterNum, uint32 enable)

Description: Configures the WDT counter clear on a match setting. If configured to clear on

match the counter will count from 0 to the MatchValue giving it a period of

(MatchValue + 1).

Parameters: counterNum: Valid range [0-1]. Number of the WDT counter. Match values are not

supported by counter 2.

enable: 0 to disable, 1 to enable

Return Value: None

Side Effects and WDT counter counterNum should be disabled. Otherwise this function call will

Restrictions: have no effect. If the specified counter is enabled, call CySysWdtDisable() function

with the corresponding parameter to disable specified counter and wait for it to

stop. This may take up to three LFCLK cycles.

#### uint32 CySysWdtReadClearOnMatch(uint32 counterNum)

**Description:** Reads the clear on match setting for the specified counter.

Parameters: counterNum: Valid range [0-1]. Number of the WDT counter. Match values are not

supported by counter 2.

Return Value: Clear on Match status: 1 if enabled, 0 if disabled.

#### void CySysWdtEnable(uint32 counterMask)

**Description:** Enables the specified WDT counters. All counters specified in the mask are

enabled.

Parameters: counterMask: Mask of all counters to enable:

| Define                   | Counter |
|--------------------------|---------|
| CY_SYS_WDT_COUNTER0_MASK | 0       |
| CY_SYS_WDT_COUNTER1_MASK | 1       |
| CY_SYS_WDT_COUNTER2_MASK | 2       |

Return Value: None

Side Effects and Enabling or disabling a WDT requires 3 LFCLK cycles to come into effect. Restrictions: Therefore, the WDT enable state must not be changed more than once in that

period.

After WDT is enabled, it is illegal to write WDT configuration (WDT CONFIG) and control (WDT CONTROL) registers. That means that all WDT functions that contain 'write' in the name (with the exception of CySysWdtWriteMatch() function) are illegal to call once WDT enabled.

- PSoC 4100 / PSoC 4200: This function enables the ILO.
- PSoC 4100 BLE / PSoC 4200 BLE: The LFLCK should be configured before calling this function. The desired source should be enabled and configured to be the source for the LFCLK.



#### void CySysWdtDisable(uint32 counterMask)

Description: Disables the specified WDT counters. All counters specified in the mask are

disabled. The function waits for the changes to come into effect.

Parameters: counterMask: Mask of all counters to disable:

| Define                   | Counter |
|--------------------------|---------|
| CY_SYS_WDT_COUNTER0_MASK | 0       |
| CY_SYS_WDT_COUNTER1_MASK | 1       |
| CY_SYS_WDT_COUNTER2_MASK | 2       |

Return Value: None

#### uint32 CySysWdtReadEnabledStatus (uint32 counterNum)

**Description:** Reads the enabled status of one of the three WDT counters. Parameters: counterNum: Valid range [0-2]. Number of the WDT counter.

Return Value: Status of WDT counter:

0 - counter is disabled, 1 - counter is enabled

Side Effects and This function returns actual WDT counter status from status register. It may take Restrictions: up to 3 LFCLK cycles since WDT counter was enabled for WDT status register to

contain actual data.

#### void CySysWdtWriteCascade(uint32 cascadeMask)

Description: Writes the two WDT cascade values based on the combination of mask values

specified.

Parameters: cascadeMask: Mask value used to set or clear both of the cascade values:

| Define                  | Counter    |
|-------------------------|------------|
| CY_SYS_WDT_CASCADE_NONE | Neither    |
| CY_SYS_WDT_CASCADE_01   | Cascade 01 |
| CY_SYS_WDT_CASCADE_12   | Cascade 12 |

To set both cascade modes, two defines should be ORed:

(CY SYS WDT CASCADE 01 | CY SYS WDT CASCADE 12)

Return Value: None

Side Effects and If only one cascade mask is specified, the second cascade is disabled. To set both

Restrictions: cascade modes, two defines should be ORed:

(CY\_SYS\_WDT\_CASCADE\_01 | CY\_SYS\_WDT\_CASCADE\_12).

WDT counters that are part of the specified cascade should be disabled. Otherwise this function call will have no effect. If the specified counter is enabled, call CySysWdtDisable() function with the corresponding parameter to disable specified counter and wait for it to stop. This may take up to 3 LFCLK cycles.



#### uint32 CySysWdtReadCascade(void)

**Description:** Reads the two WDT cascade values returning a mask of the bits set.

Parameters: None

Return Value: Mask of cascade values set:

| Define                  | Cascade    |
|-------------------------|------------|
| CY_SYS_WDT_CASCADE_NONE | Neither    |
| CY_SYS_WDT_CASCADE_01   | Cascade 01 |
| CY_SYS_WDT_CASCADE_12   | Cascade 12 |

#### void CySysWdtWriteMatch(uint32 counterNum, uint32 match)

**Description:** Configures the WDT counter match comparison value.

Parameters: counterNum: Valid range [0-1]. Number of the WDT counter. Match values are not

supported by counter 2.

match: Valid range [0-65535]. Value to be used to match against the counter.

Return Value: None

#### void CySysWdtWriteToggleBit(uint32 bits)

Description: Configures which bit in the WDT Counter 2 to monitor for a toggle. When that bit

toggles, an interrupt is generated if the mode for Counter 2 has interrupts enabled.

Parameters: bit: Valid range [0-31]. Counter 2 bit to monitor for a toggle.

Return Value: None

Side Effects and WDT Counter 2 should be disabled. Otherwise this function call will have no effect.

Restrictions: If the specified counter is enabled, call CySysWdtDisable() function with the

corresponding parameter to disable specified counter and wait for it to stop. This

may take up to 3 LFCLK cycles.

#### uint32 CySysWdtReadToggleBit(void)

**Description:** Reads which bit in the WDT counter 2 is monitored for a toggle.

Parameters: None

Return Value: Bit that is monitored (range of 0 to 31).

#### uint32 CySysWdtReadMatch(uint32 counterNum)

**Description:** Reads the WDT counter match comparison value.

Parameters: counterNum: Valid range [0-1]. Number of the WDT counter. Match values are not

supported by counter 2.

Return Value: 16-bit match value.



#### uint32 CySysWdtReadCount(uint32 counterNum)

Description: Reads the current WDT counter value.

Parameters: counterNum: Valid range [0-2]. Number of the WDT counter.

Return Value: Live counter value. Counter 0 and 1 are 16 bit counters and counter 2 is a 32 bit

counter.

#### uint32 CySysWdtGetInterruptSource(void)

**Description:** Reads a mask containing all the WDT interrupts that are currently set.

Parameters: None

Return Value: Mask of interrupts set:

| Define                  | Counter |
|-------------------------|---------|
| CY_SYS_WDT_COUNTER0_INT | 0       |
| CY_SYS_WDT_COUNTER1_INT | 1       |
| CY_SYS_WDT_COUNTER2_INT | 2       |

#### void CySysWdtClearInterrupt(uint32 counterMask)

Description: Clears all WDT counter interrupts set in the mask. Calling this API also prevents

Reset from happening when counter mode is set to generate 3 interrupts and then reset device. All WDT interrupts are to be cleared by firmware, otherwise interrupts

will be generated continuously.

Parameters: counterMask: Mask of all counters to enable:

| Define                  | Counter |
|-------------------------|---------|
| CY_SYS_WDT_COUNTER0_INT | 0       |
| CY_SYS_WDT_COUNTER1_INT | 1       |
| CY_SYS_WDT_COUNTER2_INT | 2       |

Return Value: None

Side Effects and This function temporary removes the watchdog lock, if it was set, and restores the

Restrictions: lock state, after cleaning the WDT interrupts, that are set in a mask.

#### void CySysWdtResetCounters(uint32 counterMask)

**Description:** Resets all WDT counters set in the mask. **Parameters:** counterMask: Mask of all counters to reset:

| Define                    | Counter |
|---------------------------|---------|
| CY_SYS_WDT_COUNTER0_RESET | 0       |
| CY_SYS_WDT_COUNTER1_RESET | 1       |
| CY_SYS_WDT_COUNTER2_RESET | 2       |

Return Value: None

Side Effects and This function will not reset counter values if the Watchdog is locked.




#### **PSoC 4000**

**Note** It is highly recommended to enable WDT if the power supply can produce sudden brownout events that may compromise the CPU functionality. This ensures that, after a brown-out compromises the CPU functionality, the system will always recover.


#### **PSoC 4000 Functional Description**

The WDT asserts an interrupt or a hardware reset to the device after a preprogrammed interval, unless it is periodically serviced in firmware. The WDT is a 16- bit free-running up-counter.

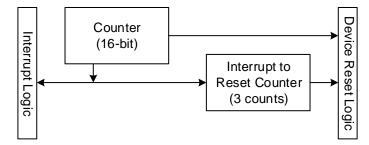

The WDT generates an interrupt when the count value in the counter equals the configured match value.

It is important to take into considerations that the counter is not reset on match. When the counter reaches match value, it generates an interrupt and then keeps counting up till it overflows and rolls back to zero and reaches the match value again at which point another interrupt is generated.

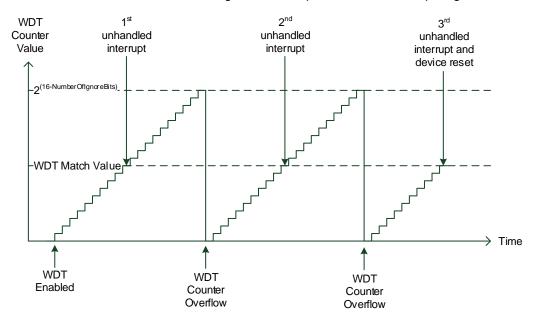

In case of the intention to use WDT for a periodic interrupt generation, the match value should be incremented in the ISR. As a result, the next WDT interrupt will be generated when the counter reaches the new match value.

Also some functionality is added to reduce entire WDT counter period, by specifying the number of most significant bits that are cut-off in the WDT counter. For example, if the CySysWdtWriteIgnoreBits() function called with parameter 3, the WDT counter becomes a 13-bit free-running up-counter.



The WDT reset period can be calculated using following equation:

$$WDT_{\mbox{Re}\mbox{\it set}Time} = 2*(\mbox{LFCLK}_{\mbox{\it Period}}*(2^{(16-NumberOfIgnoreBits)})) + (\mbox{\it LFCLK}_{\mbox{\it Period}}*WDT_{\mbox{\it MatchValue}})$$

#### **Power Modes**

In the Active mode, the interrupt request from the WDT is sent to the CPU via IRQ 4. In the Sleep or Deep Sleep power mode the CPU subsystem is powered-down, so the interrupt request from the WDT is directly sent to the WakeUp Interrupt Controller (WIC), which will then wake up the CPU. Then, the CPU acknowledges the interrupt request and executes the Interrupt Service Routine (ISR).

Enabling or disabling a WDT requires three LFCLK cycles to come into effect. During that period the SYSCLK clock should be available. That means that the device should not be put into Deep Sleep mode during that period.

After waking from Deep Sleep, an internal timer value is set to zero until the ILO loads the register with the correct value. This led to an increase in low-power mode current consumption. The work around is to wait for the first positive edge of the ILO clock before allowing the WDT\_CTR\_\* registers to be read by CySysWdtReadCount() function.

#### **Clock Source**

The WDT is clocked by the LFCLK sourced by the 32 kHz ILO. The WDT reset must be disabled before disabling the ILO. Otherwise, any register write to disable the ILO will be ignored. Enabling the WDT reset will automatically enable the ILO.

According to the device datasheet, the ILO accuracy is +/-60% over voltage and temperature. This means that the timeout period may vary by 60% from the configured. An appropriate margin should be added while configuring WDT intervals to make sure that unwanted device resets do not occur on some devices.

Please refer to the device datasheet for the more information on oscillator accuracy.

#### Register Locking

This feature is not available for the device.

#### Clearing WDT

The LFCLK clock is asynchronous to the SYSCLK. So, generally, it takes three LFCLK cycles for the WDT registers changes to come into effect. This is important to remember that WDT should be cleared at least four cycles (3 LFCLK cycles + 1 to be sure) before timeout occurs, especially when small match values / low toggle bit number are used.

It is recommended to clear WDT counters from the portion of the code that is not directly associated with the WDT interrupt. It is possible that the main function of the firmware has crashed or is in an endless loop, but that the WDT interrupt vector is still intact and the WDT is getting serviced properly.

#### Reset Detection

The CySysGetResetReason() function can be used to detect if the watchdog has triggered device reset.



#### Interrupt Configuration

The Global Signal Reference and Interrupt components can be used for the ISR configuration. If the WDT is configured to generate interrupt, the pending interrupts must be cleared within ISR (otherwise, the interrupt will be generated continuously):

- Pending interrupt to the interrupt controller must be cleared by the call to the WDTISR\_ClearPending() function, where WDTISR is the instance name of the interrupt component.
- Pending interrupt to the WDT block must be cleared by the call to the CySysWdtClearInterrupt() function. The call to the function will clear the unhandled WDT interrupt counter, if WDT is configured to be in "generate interrupts and reset on 3rd unhandled interrupt" mode.

It is recommended to use WDT ISR as timer to trigger certain actions and to change the next WDT match value.

#### PSoC 4000 APIs

#### uint32 CySysWdtReadEnabledStatus(void)

**Description:** Reads the enabled status WDT counter.

Parameters: None

Return Value: Status of WDT counter:

0 - counter is disabled1 - counter is enabled

#### void CySysWdtEnable(void)

Description: Enables the watchdog timer reset generation. The CySysWdtClearInterrupt() feeds

the watch dog. Two unserviced interrupts will lead to a system reset (i.e. at the

third match).

Parameters: None Return Value: None

Side Effects and The ILO is enabled by hardware once WDT is started.

**Restrictions:** 

# void CySysWdtDisable(void)

**Description:** Disables the WDT reset generation.



#### void CySysWdtWriteMatch(uint32 match)

**Description:** Configures the WDT counter match comparison value.

Parameters: match:

Valid range [0-65535]. Value to be used to match against the counter.

Return Value: None

#### uint32 CySysWdtReadMatch(void)

Description: Reads the WDT counter match comparison value.

Parameters: None

Return Value: Counter match value.

#### uint32 CySysWdtReadCount(void)

**Description:** Reads the current WDT counter value.

Parameters: None

Return Value: Live counter value.

#### void CySysWdtWriteIgnoreBits(uint32 bitsNum)

Description: Configures the number of MSB bits of the watchdog timer that are not checked

against match.

Parameters: bitsNum: Valid range [0-15]. Number of MSB bits.

Return Value: None

Side Effects and The value of bitsNum provides control over the time-to-reset of the watchdog

**Restrictions**: (which happens after 3 successive matches).

#### uint32 CySysWdtReadIgnoreBits(void)

Description: Reads the number of MSB bits of the watchdog timer that are not checked against

match.

Parameters: None

Return Value: Number of MSB bits.

#### void CySysWdtClearInterrupt(void)

**Description:** Feeds the watch dog. Cleans the WDT match flag, which is set every time the

WDT counter reaches a WDT match value. Two unserviced interrupts will lead to

a system reset (i.e. at the third match).



#### void CySysWdtMaskInterrupt(void)

Description: After masking interrupts from WDT, they are not passed to CPU. This function

does not disable the WDT reset generation on 2 missed interrupts.

Parameters: None Return Value: None

# void CySysWdtUnmaskInterrupt(void)

**Description:** Unmasks WDT interrupts.



This page intentionally left blank.

# 14 MISRA Compliance



This chapter describes the MISRA-C:2004 compliance and deviations for the PSoC Creator cy\_boot component and code generated by PSoC Creator.

MISRA stands for Motor Industry Software Reliability Association. The MISRA specification covers a set of 122 mandatory rules and 20 advisory rules that apply to firmware design and has been put together by the Automotive Industry to enhance the quality and robustness of the firmware code embedded in automotive devices.

There are two types of deviations defined:

- project deviations deviations that are applicable for all PSoC Creator components
- specific deviations deviations that are applicable for the specific component

This section provides information on the following items:

- Verification Environment
- Project Deviations
- Documentation Related Rules
- PSoC Creator Generated Sources Deviations
- cy\_boot Component-Specific Deviations

# **Verification Environment**

This section provides MISRA compliance analysis environment description.

| Component          | Name   | Version      |
|--------------------|--|--------------|
| Test Specification | MISRA-C:2004 Guidelines for the use of the C language in critical systems. | October 2004 |
| Target Device      | PSoC 3   | Production   |
|                    | PSoC 4   | Production   |
|                    | PSoC 5LP   | Production   |
| Target Compiler    | PK51   | 9.51         |
|                    | GCC  | 4.8.4        |
|                    | RVDS   | 4.1          |
|                    | MDK  | 4.1          |
| Generation Tool    | PSoC Creator   | 3.1          |



| Component           | Name  | Version |
|---------------------|---|---------|
| MISRA Checking Tool | Programming Research QA C source code analyzer for Windows      | 8.1-R   |
|                     | Programming Research QA C MISRA-C:2004 Compliance Module (M2CM) | 3.2     |

The MISRA rules 1.5, 2.4, 3.3, and 5.7 are not enforced by Programming Research QA C. The compliance with these rules was verified manually by code review.

# **Project Deviations**

A Project Deviations are defined as a permitted relaxation of the MISRA rules requirements that are applied for source code that is shipped with PSoC Creator. The list of deviated rules is provided in the table below.

| MISRA-C:<br>2004 Rule | Rule Class<br>(R/A) <sup>[1]</sup> | Rule Description  | Description of Deviation(s)  |
|-----------------------|------------------------------------|---|--|
| 1.1                   | R                                  | This rule states that code shall conform to C ISO/IEC 9899:1990 standard.   | Some C language extensions (like interrupt keyword) relate to device hardware functionality and cannot be practically avoided.  In the main.c file that is generate by PSoC Creator the non-standard main() declaration is used: "void main()". The standard declaration is "int main()"  The number of macro definitions exceeds 1024 - program does not conform strictly to ISO:C90. |
| 5.1                   | R                                  | This rule says that both internal and external identifiers shall not rely on the significance of more than 31 characters.               | The length of names based on user-defined names depends on the length of the user-define names.  |
| 5.7                   | A                                  | Verify that no identifier name should is reused.  | Local variables with the same name may appear in different functions. Aside from commonly used names such as 'i', generated API functions for multiple instances of the same component will have identical local variable names.   |
| 8.7                   | R                                  | Objects shall be defined at block scope if they are only accessed from within a single function.  | The object 'InstanceName_initVar' is only referenced by function 'InstanceName_Start', in the translation unit where it is defined. The intention of this publicly available global variable is to be used by user application.  |
| 8.10                  | R                                  | All declarations and definitions of objects or functions at file scope shall have internal linkage unless external linkage is required. | Components API are designed to be used in user application and might not be used in component API.   |
| 11.3                  | A                                  | This rule states that cast should not be performed between a pointer type and an integral type.   | The cast from unsigned int to pointer does not have any unintended effect, as it is a consequence of the definition of a structure based on hardware registers.  |

\_

<sup>&</sup>lt;sup>1</sup> Required / Advisory



| MISRA-C:<br>2004 Rule | Rule Class<br>(R/A) <sup>[1]</sup> | Rule Description  | Description of Deviation(s)   |
|-----------------------|------------------------------------|---|---|
| 14.1                  | R                                  | There shall be no unreachable code.   | Some functions that are part of the component API are not used within component API. Components API are designed to be used in user application and might not be used in component API. |
| 21.1                  | R                                  | Minimization of run-time failures shall be ensured by the use of at least one of:  a) static analysis tools/techniques; b) dynamic analysis tools/techniques; c) explicit coding of checks to handle run-time faults. | Some components in some specific configurations can contain redundant operations introduced because of generalized implementation approach.   |

# **Documentation Related Rules**

This section provides information on implementation-defined behavior of the toolchains supported by PSoC Creator. The list of deviated rules is provided in the table below.

| MISRA-C:<br>2004 Rule | Rule Class<br>(R/A) <sup>[1]</sup> | Rule Description  | Description   |
|-----------------------|------------------------------------|---|---|
| 1.3                   | R                                  | Multiple compilers and/or languages shall only be used if there is a common defined interface standard for object code to which the languages/compilers/assemblers conform. | No multiple compilers and languages can be used at a time for PSoC Creator projects. The PK51 linker produces OMF-51 object module format. The GCC linker produces EABI format files. The RVDS and MDK linkers produce files of ARM ELF format. |
| 1.4                   | R                                  | The compiler/linker shall be checked to ensure that 31 character significance and case sensitivity are supported for external identifiers.                                  | PK51 and GCC treat more than 31 characters of internal and external identifier length, and are case sensitive (e.g., Id and ID are not equal).  |
| 1.5                   | A                                  | Rule states that floating-point implementation should comply with a defined floating-point standard.  | Floating-point arithmetic implementation conforms to IEEE-754 standard.   |
| 3.1                   | R                                  | All usage of implementation-defined behavior shall be documented.   | For the documentation on PK51 and GCC compilers, refer to the Help menu, Documentation sub-menu, Keil and GCC commands respectively.  |
| 3.2                   | R                                  | The character set and the corresponding encoding shall be documented.   | The Windows-1252 (CP-1252) character set encoding is used.  Some characters that are used for source code generation in PSoC Creator are not included in character set, defined by ISO-IEC 9899-1900 "Programming languages — C".               |
| 3.3                   | А                                  | This rule states that implementation of integer division should be documented.  | When dividing two signed integers, one of which is positive and one negative compiler rounds up with a negative remainder.  |
| 3.5                   | R                                  | This rules requires implementation defined behavior and packing of bit fields be documented.  | The use of bit-fields is avoided.   |
| 3.6                   | R                                  | All libraries used in production code shall be written to comply with the provisions of this document, and shall have been subject to appropriate validation.               | The C standard libraries provided with C51, GCC, and RVCT have not been reviewed for compliance. Some code uses memset and memcpy. The compiler may also insert calls to its vendor-specific compiler support library.                          |



# **PSoC Creator Generated Sources Deviations**

This section provides the list of deviations that are applicable for the code that is generated by PSoC Creator. The list of deviated rules is provided in the table below.

| MISRA-C:<br>2004 Rule | Rule Class<br>(R/A) <sup>[1]</sup> | Rule Description  | Description of Deviation(s)  |
|-----------------------|------------------------------------|---|--|
| 3.4                   | R                                  | All uses of the #pragma directive shall be documented.  | The #pragma directive is required to ensure that the C51 compiler produces efficient code for generated functions related to the AMuxSeq component.  |
| 11.4                  | A                                  | This rule states that cast should not be performed between a pointer to object type and a different pointer to object type. | CYMEMZERO8 and CYCONFIGCPY8 use void * arguments for compatibility with memset/memcpy but must use a pointer to an actual type internally.   |
| 14.1                  | R                                  | Rule requires that there shall be no unreachable code.  | The CYMEMZERO, CYMEMZERO8, CYCONFIGCPY, CYCONFIGCPY8, CYCONFIGCPYCODE, and CYCONFIGCPYCODE8 are often but not always used.   |
| 15.2                  | R                                  | Switch cases must end with <i>break</i> statements.   | The code structure is required to ensure that the C51 compiler produces efficient code for generated functions related to the AMuxSeq component.   |
| 15.3                  | R                                  | default must be the last clause in a switch statement.  | The code structure is required to ensure that the C51 compiler produces efficient code for generated functions related to the AMuxSeq component.   |
| 17.4                  | R                                  | Array indexing shall be only allowed form of pointer arithmetic.  | The CYMEMZERO8 and CYCONFIGCPY8 have void * arguments for compatibility with memset/memcpy.  |
| 19.7                  | A                                  | The rule says that function shall be used instead of function-like macro.   | The CYMEMZERO, CYMEMZERO8, CYCONFIGCPY, CYCONFIGCPY8, CYCONFIGCPYCODE, and CYCONFIGCPYCODE8 macros are used to call cymemzero, cyconfigcpy, and cyconfigcpycode in a device-independent way. The macros cannot be converted to functions without significantly increasing the time and memory required for each function call (this is a limitation of C51). The macros have been converted to functions for GCC/RVCT. |



# cy\_boot Component-Specific Deviations

This section provides the list of cy\_boot component specific-deviations. The list of deviated rules is provided in the table below.

| MISRA-C:<br>2004 Rule | Rule Class<br>(R/A) <sup>[1]</sup> | Rule Description  | Description of Deviation(s)   |
|-----------------------|------------------------------------|---|---|
| 6.3                   | A                                  | typedefs that indicate size and signedness should be used in place of the basic types.  | For PSoC 4/PSoC 5LP, the RealView C Library initialization functionmain(void) in startup file (Cm0Start.c/Cm3Start.c) file returns value of basic type 'int'.   |
| 8.7                   | R                                  | Objects shall be defined at block scope if they are only accessed from within a single function.  | For PSoC 4/PSoC 5LP, the cySysNoInitDataValid variable is intentionally declared as global in Cm0Start.c/Cm3Start.c files to prevent linker from CY_NOINIT section removal.   |
| 8.12                  | R                                  | When an array is declared with external linkage, its size shall be stated explicitly or defined implicitly by initialization.   | For PSoC 4/PSoC 5LP (Cm0Start.c/Cm3Start.c), thecy_regions array of structures is declared with unknown size.   |
| 8.8                   | R                                  | An external object or function shall be declared in one and only one file.  | For the PSoC 4/PSoC 5LP, some objects is being declared with external linkage in Cm3Start.c/Cm3Start.c file and this declaration is not in a header file.   |
| 10.1                  | R                                  | The value of an expression of integer type shall not be implicitly converted to a different underlying type under some circumstances.   | PSoC 4/ PSoC 5LP: CMSIS Core: An integer constant of 'essentially unsigned' type is being converted to signed type on assignment in CMSIS Core hardware abstraction layer.  |
| 10.3                  | R                                  | The value of a complex expression of integer type may only be cast to a type that is narrower and of the same signedness as the underlying type of the expression.                                      | The DMA API has a composite expression of 'essentially unsigned' type (unsigned char) is being cast to a wider unsigned type, 'unsigned long'. This deviation is not present for PSoC 4 cy_boot code.   |
| 14.3                  | R                                  | Before preprocessing, a null statement shall only occur on a line by itself; it may be followed by a comment provided that the first character following the null statement is a white-space character. | The CYASSERT() macro has null statement is located close to other code.   |
| 11.4                  | A                                  | A cast should not be performed between a pointer to object type and a different pointer to object type.   | The DMA and Interrupt API use casts between a pointer to object type and a different pointer to object type.  |
| 11.5                  |                                    | A cast shall not be performed that removes any const or volatile qualification from the type addressed by a pointer.  | The volatile qualification is lost during pointer cast to pointer to void before passing to the memcpy() function.  |
| 14.7                  | R                                  | A function shall have a single point of exit at the end of the function.  | The CyPmSleep() and CyPmHibernate() functions has complex conditional structure and one more `return` path is added for PSoC 3/PSoC 5LP to return immediately if device is not ready for low power mode entry. This deviation is not present for PSoC 4 cy_boot code. |
| 17.4                  | R                                  | Array indexing shall be the only allowed form of pointer arithmetic.  | The DMA, Flash and Interrupt APIs use array indexing that are applied to an object of pointer type to access hardware registers, buffer allocated by user and vector tables correspondingly.  |



| MISRA-C:<br>2004 Rule | Rule Class<br>(R/A) <sup>[1]</sup> | Rule Description   | Description of Deviation(s)  |
|-----------------------|------------------------------------|--|--|
| 19.4                  | R                                  | C macros shall only expand to a braced initializer, a constant, a parenthesized expression, a type qualifier, a storage class specifier, or a do-while-zero construct. | The CYASSERT(), INTERRUPT_DISABLE_IRQ, INTERRUPT_ENABLE_IRQ, CyGlobalIntEnable, and CyGlobalIntDisable macro defines a braced code statement block.          |
| 19.7                  | А                                  | A function should be used in preference to a function-like macro.  | Deviated since function-like macros are used to allow more efficient code.   |
| 19.12                 | A                                  | There shall be at most one occurrence of the # or ## preprocessor operator in a single macro definition.   | PSoC 4: Pins API: Two preprocessor concatenation operations are required as PSoC 4 APIs have two arguments.  |
| 19.13                 | A                                  | The # and ## pre-processor operators should not be used.   | PSoC 4: Pins API: The preprocessor concatenation method is used to allow existing PSoC 3 and PSoC 5LP per-pin APIs to be used in PSoC 4 designs.             |
| 20.5                  | R                                  | The error indicator errno shall not be used.   | Caused by use of the error indicator errno used by the sbrk() function. It is used to report errors to the malloc() function if no heap memory is available. |

# 15 System Timer (SysTick)



# **Functional Description**

The SysTick timer is part of the Cortex M0 (PSoC 4) and Cortex M3 (PSoC 5LP) devices. The timer is a down counter with a 24-bit reload/tick value that is clocked by the System clock (or LF clock for the PSoC 4100 BLE and PSoC 4200 BLE devices). The timer has the capability to generate an interrupt when the set number of ticks expires and the counter is reloaded. This interrupt is available as part of the Nested Vectored Interrupt Controller (NVIC) for service by the CPU and can be used for general purpose timing control in user code.

Since the timer is independent of the CPU (except for the clock), this can be handy in applications requiring precise timing that don't have a dedicated timer/counter available for the job.

Refer to the SysTick section (Section 4.4) of the ARM reference guide for complete details on the registers and their usage.

#### **APIs**

#### **Functions**

| Function                    | Description   |
|-----------------------------|---|
| CySysTickStart()            | Configures and starts the SysTick timer.  |
| CySysTickInit()             | Configures the SysTick timer.   |
| CySysTickEnable()           | Enables the SysTick timer and its interrupt.  |
| CySysTickStop()             | Stops the SysTick timer.  |
| CySysTickEnableInterrupt()  | Enables the SysTick interrupt.  |
| CySysTickDisableInterrupt() | Disables the SysTick interrupt.   |
| CySysTickSetReload()        | Sets value the counter is set to on startup and after it reaches zero.              |
| CySysTickGetReload()        | Returns SysTick reload value.   |
| CySysTickGetValue()         | Gets current SysTick counter value.   |
| CySysTickSetClockSource()   | Sets the clock source for the SysTick counter.                                      |
| CySysTickGetCountFlag()     | Returns the SysTick count flag value.   |
| CySysTickClear()            | Clears the SysTick counter for well-defined startup.                                |
| CySysTickSetCallback()      | Sets the address(es) to the function(s) that will be called on a SysTick interrupt. |
| CySysTickGetCallback()      | Gets the specified callback pointer.  |



#### void CySysTickStart(void)

Description: Configures the SysTick timer to generate an interrupt every 1 ms by calling the

CySysTickInit() function and starts the timer by calling the CySysTickEnable()

function.

Refer to the corresponding function description for the details.

Parameters: None Return Value: None

Side Effects and Clears SysTick count flag if it was set.

**Restrictions:** 

#### void CySysTickInit(void)

Description: Initializes the callback addresses with pointers to NULL, associates the SysTick

system vector with the function that is responsible for calling registered callback

functions, configures SysTick timer to generate interrupt every 1 ms.

Parameters: None Return Value: None

Side Effects and Clears SysTick count flag if it was set.

**Restrictions:** 

The 1 ms interrupt interval is configured based on the frequency determined by PSoC Creator at build time. If System clock frequency is changed in runtime, the CyDelayFreq() with the appropriate parameter should be called to ensure that

actual frequency used for SysTick reload value calculation.

#### void CySysTickEnable(void)

**Description:** Enables the SysTick timer and its interrupt.

Parameters: None Return Value: None

Side Effects and Clears SysTick count flag if it was set.

**Restrictions:** 

#### void CySysTickStop(void)

**Description:** Stops the system timer (SysTick).

Parameters: None Return Value: None

Side Effects and Clears SysTick count flag if it was set.



#### void CySysTickEnableInterrupt(void)

**Description:** Enables the SysTick interrupt.

Parameters: None Return Value: None

Side Effects and Clears SysTick count flag if it was set.

Restrictions:

#### void CySysTickDisableInterrupt(void)

**Description:** Disables the SysTick interrupt.

Parameters: None Return Value: None

Side Effects and Clears SysTick count flag if it was set.

Restrictions:

#### void CySysTickSetReload(uint32 value)

**Description:** Sets value the counter is set to on startup and after it reaches zero.

Parameters: value: Counter reset value. Valid range [0x0-0x00FFFFFF].

For example, if the SysTick timer is configured to be clocked off the 48 MHz System Clock and interrupt every 100 us is desired, the function parameter should

be 4,800 (48,000,000 Hz multiplied by 100/1,000,000 seconds).

Return Value: None Side Effects and None

Restrictions:

#### uint32 CySysTickGetReload(void)

Description: Returns SysTick reload value.

Parameters: None Return Value: None

Side Effects and Returns SysTick reload value.

**Restrictions:** 

#### uint32 CySysTickGetValue(void)

**Description:** Gets current SysTick counter value.

Parameters: None

Return Value: Returns SysTick counter value.

Side Effects and None



#### void CySysTickSetClockSource(uint32 clockSource)

**Description:** Sets the clock source for the SysTick counter.

Parameters: uint32 clockSource:

| Constant                  | Description  |
|---------------------------|--|
| CY_SYSTICK_CLK_SRC_SYSCLK | SysTick is clocked by the System clock.  |
|                           | SysTick is clocked by the low frequency clock. (ILO 100 KHz for PSoC 5LP, LFCLK for PSoC 4). |

Return Value: None

Side Effects and Clears SysTick count flag if it was set.

**Restrictions:** 

#### uint32 CySysTickGetCountFlag(void)

Description: The count flag is set once SysTick counter reaches zero. The flag is cleared on

read.

Parameters: None

Return Value: Returns non-zero value if the counter is set, otherwise zero is returned.

Side Effects and Clears SysTick count flag if it was set.

**Restrictions:** 

#### void CySysTickClear(void)

Description: Clears the SysTick counter for well-defined startup. This function should be called

if SysTick configuration (reload value or timer clock source) is changed. The

function is called as part of the CySysTickStart() execution.

Parameters: None
Return Value: None
Side Effects and None
Restrictions:

#### (void \*) CySysTickSetCallback(uint32 number, void(\*CallbackFunction)(void))

**Description:** This function allows up to five user -defined interrupt service routine functions to

be associated with the SysTick interrupt. These are specified through the use of

pointers to the function.

Parameters: uint32 number: The number of the callback function addresses to be set. The valid

range is from 0 to 4.

void(\*CallbackFunction(void): A pointer to the function that will be associated with

the SysTick ISR for the specified number.

**Return Value:** Returns the address of the previous callback function.

NULL is returned if the specified function address in not initialized.

Side Effects and The registered callback functions will be executed in the interrupt.



# (void \*) CySysTickGetCallback(uint32 number)

**Description:** The function get the specified callback pointer.

Parameters: uint32 number: The number of callback function address to get. The valid range is

from 0 to 4.

Return Value: Returns the address of the specified callback function.

The NULL is returned if the specified address in not initialized.

Side Effects and None

Restrictions:

#### **Global Variables**

| Function                | Description  |
|-------------------------|--|
| uint32 cySysTickInitVar | Indicates whether or not the SysTick has been initialized. The variable is initialized to 0 and set to 1 the first time CySysTickStart() is called. This allows the component to restart without reinitialization after the first call to the CySysTickStart() routine.  If reinitialization of the SysTick is required, call CySysTickInit() before calling CySysTickStart(). Alternatively, the SysTick can be reinitialized by calling the CySysTickInit() and CySysTickEnable() functions. |



This page intentionally left blank.

# 16 cy\_boot Component Changes



# Version 4.20

This section lists and describes the major changes in the cy\_boot component version 4.20:

| Description of Version 4.20 Changes   | Reason for Changes / Impact   |
|---|---|
| Added support for the PSoC 4100 BLE and PSoC 4200 BLE families.   | New device support.   |
| Added CySysClkSetLfclkSource() function for the LFCLK clock source selection.   |   |
| PSoC 3/PSoC5LP: Updated CyWriteRowFull() function implementation to return CYRET_BAD_PARAM if invalid parameters values are passed.   |   |
| PSoC 3: Fixed a defect that caused the CyResetStatus global variable to lose its value on bootloadable application entry.   |   |
| PSoC 4: The implementation of the CY_SYS_PINS_READ_PIN macro was optimized in order to increase performance.  |   |
| PSoC 4100/PSoC 4200/PSoC 4100 BLE/ PSoC 4200 BLE: Updated implementation of the CySysClklloStop() to ensure proper pulse length on LFCLK.   |   |
| PSoC 4100/PSoC 4200: WDT API: Fixed the defect in CySysWdtWriteClearOnMatch() that caused clear on match feature fails to be disabled.  |   |
| PSoC 4100/PSoC 4200/PSoC 4100 BLE/ PSoC 4200 BLE: Updated CySysPmStop() function implementation to match hardware requirements: the software delay was replaced with 2 register read-backs and corrected the procedure of the low power mode entry. |   |
| PSoC 4100/PSoC 4200/PSoC 4100 BLE/ PSoC 4200 BLE: Fixed the order of the Stop mode entry in the CySysPmStop() function to ensure that Stop mode token is set at the beginning of the low power mode entry.  | Omit the situation when GPIO pins remain frozen after the reset if reset occurred after IO pin freeze but before Stop mode entry. |
| Added following attribute macros: CY_PACKED, CY_PACKED_ATTR and CY_INLINE.  |   |



| Description of Version 4.20 Changes  | Reason for Changes / Impact   |
|--|---|
| The declaration of the IntDefaultHandler created in CyLib.h.   | Previously, the IntDefaultHandler was declared in both interrupt source file and Cm0Start.c files.  |
| PSoC 4000: Corrected the lower bound of the HFCLK frequency change from the current IMO frequency divided by 8 to divided by 4 in the wside effects section of the CySysFlashWriteRow() function.  |   |
| PSoC 3/ PSoC 5LP: Updated implementation of the CySetTemp() function in order to improve execution time of the first call after Power-On-Reset (POR).  | Significantly improved the first Flash write after POR.   |
| PSoC 4/PSoC 5LP: Added sbrk() function, which is used by malloc() and other heap-utilizing functions to check for available memory.  | The fix ensures that malloc(), et al, now correctly handle heap overflow.  Note that some projects will now fail to execute due to a lack of available heap. The resolution is to increase the heap size in the Design-Wide Resources System Editor ( <pre>project&gt;.cydwr</pre> file), and re-build the project. |
| PSoC 4/ PSoC 5LP: Added the following MISRA rule deviations: 20.5.   | Caused by use of the error indicator errno used by sbrk() function. It is used to report error to the malloc() function if no heap memory available.  |
| PSoC 4100/PSoC 4200/PSoC 4100 BLE/ PSoC 4200 BLE:  • Updated CySysWdtEnable() function implementation to ensure that WDT is enabled upon function exit;  • Updated CySysWdtWriteMatch() function implementation to ensure that match value is updated properly: add delay before (ensures that last update applied properly) and after value change (ensures that match update synchronization started).  • Updated CySysWdtDisable() function implementation to ensure that WDT is disabled upon function exit.  PSoC 4/PSoC 5LP: Updated IAR linker script file to eliminate warning generated by the IAR EW-ARM |   |
| v7.10.  PSoC 4: The CySysFlashWriteRow() function return type changed from cystatus to uint32.   | To follow hardware-defined error codes. The basic behavior remains the same: zero for success and non-zero for any type of failure.   |
| PSoC 5LP: The CyFlash_SetWaitCycles() function is updated with 80 MHz parts support.   | categora and their zone for any type of failure.  |
| PSoC 4/PSoC 5LP: Added System Timer (SysTick) API.   |   |
| PSoC 3/PSoC 5LP: Flash/EEPROM API: updated implementation to eliminate requirement to call CySetFlashEEBuffer() function, if the Flash ECC feature is disabled.  | No need to allocate buffer and pass it to CySetFlashEEBuffer() for both Flash and EEPROM programming.   |



| Description of Version 4.20 Changes   | Reason for Changes / Impact   |
|---|---|
| PSoC 3/PSoC 5LP: Flash API: added CY_EEPROM_NUMBER_SECTORS and CY_EEPROM_SIZEOF_SECTOR.   | Defined macros for the number of EEPROM sectors and size of EEPROM sector.  |
| PSoC 4/PSoC 5LP: Interrupt API: added macros for the CylntSetSysVector() and CylntGetSysVector() functions exception type numbers.                                      |   |
| PSoC 3: The CyPmSleep() and CyPmHibernate() functions disable clock to the interrupt controller before Sleep and Hibernate mode entry and reenable on wakeup.           | Satisfy interrupt controller usage model.   |
| PSoC 3/PSoC 5LP: Updated CyFlash_Start() and CyEEPROM_Start() functions implementation.   | To ensure that EEPROM and Flash are ready for operation on corresponding function exit.   |
| PSoC 5LP: Changed CyFlushCache() implementation.  | To use Instruction Synchronization Barrier (ISB) instruction instead of multiple no operation instructions.   |
| PSoC 4: The CY_SYS_PINS_READ_PIN macro was optimized for the better performance.  |   |
| PSoC 4200/PSoC 4100: updated CySysClkWriteImoFreq() function for better performance.  |   |
| PSoC 4: Added the following MISRA rule deviations: 19.12 and 19.13.   | Added the possibility for existing PSoC 3 and PSoC 5LP per-pin APIs to be used in PSoC 4 designs.   |
| Updated the following MISRA rule deviations: 12.10, 12.13, 13.2, and 13.5.  |   |
| PSoC 4000: Update WDT API description to clarify that CySysWdtEnable() and CySysWdtDisable() correspondingly enables and disables the watchdog timer reset generation.  |   |
| PSoC 4000: Fixed the implementation of the CySysWdtReadIgnoreBits() to return correct number of the ignored bits in the WDT counter.                                    |   |
| PSoC 3/PSoC 5LP: removed LVI/HVI reset constants for the CyResetStatus global variable in section "Preservation of Reset Status".                                       | The LVI and HVI resets are not reported by CyResetStatus variable.  |
| PSoC 4100/PSoC 4200: Power Management API: Updated CySysPmDeepSleep() function to bypass the flash accelerator before Deep Sleep mode entry and restore it upon wakeup. | Cypress identified a defect with the Flash write functionality upon wakeup from deep-sleep in PSoC 4100 and PSoC 4200 devices. The corrupted data has the potential to be sent to the CPU on device wakeup. |



# Version 4.11

This section lists and describes the major changes in the cy\_boot component version 4.11:

| Description of Version 4.11 Changes   | Reason for Changes / Impact  |
|---|--|
| The CySysFlashWriteRow() function now checks the data to be written and, if necessary, modifies it to have a non-zero checksum. After writing to Flash, the modified data is replaced (Flash program) with the correct (original) data. | Cypress identified a defect with the Flash write functionality of the PSoC 4000, PSoC 4100, and PSoC 4200 devices. The CySysFlashWriteRow() function in the cy_boot [v4.0 and v4.10] component fails to write a row of flash memory if the data to be written has a zero in the lower 32-bits of the checksum. |

# Version 4.10

This section lists and describes the major changes in the cy\_boot component version 4.10:

| Description of Version 4.10 Changes  | Reason for Changes / Impact   |
|--|---|
| PSoC 4: Added CySysGetResetReason() function.  | Reports the cause for the latest reset(s) that occurred in the system.  |
| Added support for the PSoC 4000 family.  | New device support.   |
| PSoC 3: Added reentrancy support for the CySpcLock() and CySpcUnlock() functions.  |   |
| PSoC 3/ PSoC 5LP: Fixed the defect in CyPmRestoreClocks() function, that can might to the device halt during the function execution, in some clock system configurations, when PLL is not sourced by IMO and IMO is manually stopped by user code. |   |
| PSoC 4: Added note that enabling or disabling a WDT requires three LFCLK cycles to come into effect, during that period the SYSCLK should be available.  | The device should not put into Deep Sleep mode during that period.  |
| PSoC 4: Added note that, after waking from Deep Sleep, the WDT internal timer value is set to zero until the ILO loads the register with the correct   | This led to an increase in low-power mode current consumption.  |
| value.   | The work around is to wait for the first positive edge of the ILO clock before allowing the WDT_CTR_* registers to be read by CySysWdtReadCount() function. |
| Added note to the Working with Flash and EEPROM section with the information that CPU code execution can be halted till the flash write is complete.   |   |
| Added note to the Working with Flash and EEPROM section with the information that power manager will not put the device into a low power state if the system performance controller (SPC) is executing a command.                                  |   |



| Description of Version 4.10 Changes  | Reason for Changes / Impact |
|--|-----------------------------|
| PSoC 3 / PSoC 5LP: The CyPmRestoreClocks() implementation was enhanced by polling status and proceed as soon as PLL is locked. Added merge section to add ability of handling cases when predefined timeout is not enough. |                             |
| PSoC 4: Fixed a defect in CySysWdtClearInterrupt() that caused unintentional clearing of the WDT interrupt status bit.   |                             |

# Version 4.0

This section lists and describes the major changes in the cy\_boot component version 4.0:

| Description of Version 4.0 Changes  | Reason for Changes / Impact   |
|---|---|
| Added note to the Flash and EEPROM section about unavailability of the Store Configuration Data in ECC Memory DWR option for the bootloader project type. |   |
| Added note to the Working with Flash and EEPROM section that when writing Flash, data in the instruction cache can become stale.                          | Call CyFlushCache() to invalidate the data in cache and force fresh information to be loaded from Flash.  |
| Fixed issue in the CyDmaChEnable() and CyDmaChDisable() functions.  | If DMA request occurred during these functions, the DMA channels configuration could be corrupted. The APIs were changed to address this problem.   |
| Removed references to PSoC 5 device.  | PSoC 5 has been replaced by PSoC 5LP.   |
| PSoC Creator Generated Sources Deviations section was updated with the MISRA deviations related to the AMuxSeq component.                                 |   |
| The CY_IMO_FREQ_74MHZ parameter was added to the CyIMO_SetFreq() function.  | Support of the 80 MHZ PSoC 5LP devices.   |
| PSoC 4: Added CyExitCriticalSection() function call after WFI instruction in the CySysPmHibernate() function.   | If any interrupt occurred between CyEnterCriticalSection() and WFI instruction execution, the device could skip low power mode entry request and continue code execution with global interrupts disabled. |



# Version 3.40 and Older

#### Version 3.40

This section lists and describes the major changes in the cy\_boot component version 3.40:

| Description of Version 3.40 Changes   | Reason for Changes / Impact  |
|---|--|
| Added PSoC 4 device support.  | New device support.  |
| PSoC 3: Updated CyPmSleep() function description with the information that hardware buzz must be disabled before sleep mode entry.  | Using hardware buzz in conjunction with other device wakeup sources can cause the device to lockup, halting further code execution. Refer to the device errata for more information. |
| As hardware buzz is required for LVI, HVI, and Brown Out detect operations – they must be disabled before sleep mode entry and restored on wakeup. If LVI or HVI is enabled, CyPmSleep() will halt device if project is compiled in debug mode. |  |

#### Version 3.30

This section lists and describes the major changes in the cy\_boot component version 3.30:

| Description of Version 3.30 Changes  | Reason for Changes / Impact  |
|--|--|
| Updates to support PSoC Creator 2.2.   |  |
| Added MISRA Compliance section.  |  |
| Added Low Voltage Analog Boost Clocks section.   | New feature for the SC-based (TIA, Mixer, PGA and PGA_Inv) components.   |
| Added requirement about interrupt configuration, when interrupt is sources from PICU and used as a wakeup event.   | For PSoC 5LP, the interrupt component connected to the wakeup source may not use the "RISING_EDGE" detect option. Use the "LEVEL" option instead.  |
| The delay between Bus clock and analog clocks configuration save/restore moved from CyPmSleep() and CyPmHibernate() functions to CyPmSaveClocks() / CyPmRestoreClocks(). | This modification decrease CyPmSleep() and CyPmHibernate() functions execution time. The components that use analog clock must not be used after CyPmSaveClocks() execution till the clocks configuration will be restored by CyPmRestoreClocks(). |
| Added float32 and float64 data types. The type float64 is not available for PSoC 3 devices.  |  |

#### Version 3.20

This section lists and describes the major changes in the cy\_boot component version 3.20:

| Description of Version 3.20 Changes  | Reason for Changes / Impact  |
|--|--|
| Many minor edits throughout the document to distinguish features of PSoC 5 and PSoC 5LP devices. | Improve PSoC 5 and PSoC 5LP documentation.   |
| The PSoC 5LP Alternate Active usage model was changed to be same as for PSoC 5.                  | No parameters are used for CyPmAltAct(). That means NONE should be passed for the parameters. The device will go into Alternate Active mode until an enabled interrupt occurs. |



| Description of Version 3.20 Changes  | Reason for Changes / Impact                                    |
|--|--|
| The interface of the CyIMO_SetFreq() function was updated for PSoC 5LP to support 62 and 72 MHz frequencies. | Added interface to configure IMO to 62 and 72 MHz on PSoC 5LP. |

#### Version 3.10

This section lists and describes the major changes in the cy\_boot component version 3.10:

| Description of Version 3.10 Changes   | Reason for Changes / Impact                               |
|---|---|
| The Bootloader system was redesigned in cy_boot version 3.0 to separate the Bootloader and Bootloadable components. The change is listed here as well for migrating from older versions.  | See Bootloader Migration on page 91 for more information. |
| A few edits were applied to the Voltage Detect APIs: fixed a typo in the register definition, added CyVdLvDigitEnable() function threshold parameter mask to protect from invalid parameter values, updated CyVdLvDigitEnable() and CyVdLvAnalogEnable() functions to use delay instead of while loop during hardware initialization. | To improve the overall implementation of these APIs.      |
| Minor updates to the CyPmSleep() function.  | Better support of latest PSoC 3 devices.                  |

#### Version 3.0

This section lists and describes the major changes in the cy\_boot component version 3.0:

| Description of Version 3.0 Changes   | Reason for Changes / Impact   |
|--|---|
| The Bootloader system was redesigned to separate the Bootloader and Bootloadable components.   | See Bootloader Migration on page 91 for more information.                         |
| The CyPmSleep() function implementation was updated to preserve/restore PRES state before/after Sleep mode. The support of the HVI/LVI functionality added.  | New functionality support.  |
| Added following Voltage Detect APIs: CyVdLvDigitEnable(),CyVdLvAnalogEnable(),CyVdLvDigitDisable(),CyVdLvAnalogDisable(),CyVdHvAnalogEnable(),CyVdHvAnalogDisable(),CyVdStickyStatus() and CyVdRealTimeStatus(). | Added voltage monitoring APIs.  |
| The implementation of the Flash API was slightly modified as the SPC API used in Flash APIs was refactored.  | The implementation quality improvements.  |
| The implementation of the CyXTAL_32KHZ_Start(), CyXTAL_32KHZ_Stop(), CyXTAL_32KHZ_ReadStatus() and CyXTAL_32KHZ_SetPowerMode() APIs was updated.   | Added additional timeouts to ensure proper block start-up.                        |
| The implementation of the CyXTAL_Start() function for PSoC 5 parts was changed. For more information on function see Clocking section.   | Changes were made to make sure that MHZ XTAL starts successfully on PSoC 5 parts. |



| Description of Version 3.0 Changes  | Reason for Changes / Impact   |
|---|---|
| The following APIs were removed for PSoC 5 parts:  CyXTAL_ReadStatus(),  CyXTAL_EnableErrStatus(),  CyXTAL_DisableErrStatus(),  CyXTAL_EnableFaultRecovery(),  CyXTAL_DisableFaultRecovery(). | The functionality provided within these APIs is not supported by the PSoC 5 part.   |
| The CyDmacConfigure() function is now called by the startup code only if DMA component is placed onto design schematic.   | Increase device startup time in case if DMA is not used within design. The CyDmacConfigure() function should be called manually if DMA functionality is used without DMA component. |
| The CyXTAL_32KHZ_ReadStatus() function implementation was changed by removing digital measurement status return.  | The analog status measurement is the only reliable source.  |
| Updated description of following APIs: CyFlash_SetWaitCycles().   | Changes were made to improve power mode configuration.  |
| The address of the top of reentrant stack was decremented from CYDEV_SRAM_SIZE to (CYDEV_SRAM_SIZE - 3) for PSoC 3.   | Prevent rewriting CyResetStatus variable with the parameters and/or local variables of the reentrant function during its execution.   |
| The CyIMO_SetFreq() function implementation was updated by removing support of 74 and 62 MHz parameters for PSoC 5 parts.   | Removal of the functionality that is not supported by device.   |
| The minimal P divider value for the CyPLL_OUT_SetPQ() was risen from 4 up to 8.   | To meet hardware requirements   |
| The CyXTAL_SetFbVoltage()/SetWdVoltage() were added for PSoC 5LP devices.   | The functionality provided by these APIs is available in PSoC 5LP.  |
| The description of the CyWdtStart() was updated.  | Added notes on WDT operation during low power modes for PSoC 5.   |
| The implementation of the CyPmSleep() for PSoC 5 was changed not to hold CTW in reset on wakeup.  | Not putting CTW in reset state on wakeup allows to combine CTW usage in both Active and low power modes for PSoC 5.   |
| The Preservation of Reset Status section was updated with more detailed information.  | The software reset behavior of other resets is explained. Explained how the reset status variable can be used.  |
| Updated description of following APIs: CyMasterClk_SetDivider(),CyWdtStart(),CyWdtStart ().   | To reflect implementation better.   |
| The Startup and Linking section was updated. The information on using custom linker script was added.   | To provide more information on device operation.  |
| Following macros were removed: CYWDT_TICKS CYWDT_CLEAR, CYWDT_ENABLE CYWDT_DISABLE_AUTO_FEED.   | The CyWdtStart() and CyWdtClear() should be used instead.   |
| The CyCpuClk_SetDivider() was removed for PSoC 5 devices.   | The hardware does not support this functionality.   |
| The cystrcpy(), cystrlen(), CyGetSwapReg16() and CySetSwapReg16() APIs were removed.  | The library functions should be used.   |
| The return value description for CyEnterCriticalSection() function was updated for PSoC 5.  | Function returns 0 if interrupts were previously enabled or 1 if interrupts were previously disabled.   |



| Description of Version 3.0 Changes  | Reason for Changes / Impact   |
|---|---|
| Added all APIs with the CYREENTRANT keyword when they are included in the .cyre file. | Not all APIs are truly reentrant. Comments in the component API source files indicate which functions are candidates.  This change is required to eliminate compiler warnings for functions that are not reentrant used in a safe way: protected from concurrent calls by flags or Critical Sections. |
| Added PSoC 5LP support  |   |

# Version 2.40 and Older

#### Version 2.40

This section lists and describes the major changes in the cy\_boot component version 2.40:

| Description of Version 2.40 Changes         | Reason for Changes / Impact             |
|---|---|
| Updated the CyPmSleep() and CyPmHibernate() | Changes were made to improve power mode |
| APIs.                                       | configuration.                          |

#### Version 2.30

This section lists and describes the major changes in the cy\_boot component version 2.30:

| Description of Version 2.30 Changes  | Reason for Changes / Impact   |
|--|---|
| CyIntEnable and CyIntDisable functions have been changed to be CYREENTRANT by default.   | Many components require CyIntEnable and CyIntDisable to be reentrant and these components have no way to cause that to happen. This means you no longer need to populate a cyre file for these functions that you do not call.  |
| The implementation of CyPmSleep() and CyPmAltActive() functions were modified by removing 32 KHz ECO,100 KHz and 1 KHz ILO power mode configuration before device low power mode entry.  | User was made responsible for clock power modes configuration during Sleep and Alternate Active mode.  The CylLO_SetPowerMode() and CyXTAL_32KHZ_SetPowerMode() can be used to configure clock power modes.  The information regarding user responsibility of clock power mode configuration was added at the PM API section. |
| The implementation of the CyPmSaveClocks() was updated to set IMO clock frequency to 48 MHz when "Enable Fast IMO during startup" is enabled, and to 12 MHz otherwise. The IMO frequency is always set to 12 MHz just before the low power mode entry and restored immediately after wakeup. The CyPmRestoreClocks() restores original value of the IMO clock. | The IMO value should match FIMO and FIMO is always 12 MHz.  |



| Description of Version 2.30 Changes   | Reason for Changes / Impact  |
|---|--|
| The implementation of the CyPmRestoreClocks() function was updated by removing restoring MHz ECO and PLL disabled state.  | The CyPmRestoreClocks() function is expected to be called only after CyPmSaveClocks(), while the last one always disables MHz ECO and PLL.   |
| Global interrupts are disabled on CyPmSleep()/CyPmHibernate() entry and restored before return from the function.   | Interrupts are disabled to prevent their occurrence before the state of the device has been restored.  |
| The CyPmSleep() and CyPmAltAct() function implementations for PSoC 5 devices were updated to ignore all parameters. The PSoC 5 device will go into Sleep mode until it is woken by an interrupt from one of three wakeup sources: CTW, Once per second, or Port Interrupt Controller (PICU). These wakeup sources must already be configured to generate an interrupt. The CTW is configured using the Sleep Timer component and the Once per second interrupt using the Real Time Clock component. | The CyPmSleep() and CyPmAltAct() functions have to be used only with the following parameters: CyPmSleep(PM_SLEEP_TIME_NONE, PM_SLEEP_SRC_NONE) and CyPmAltAct(PM_ALT_ACT_TIME_NONE, PM_ALT_ACT_SRC_NONE). |
| Updated architecture- and silicon-specific #defines to be used across the content.  |  |
| Improved performance of non-DMA configuration on 8051 devices.  | These modifications decrease the startup time and slightly reduce consumption of code memory and internal data memory.   |
| The implementation of the CyPmRestoreClocks() was updated for PSoC 5 silicon. The megahertz crystal is given 130 ms to stabilize. Its readiness is not verified after the hold-off timeout.   | These modifications increase crystal startup time, but ensure that crystal is ready to be used.  |
| The power mode of the source clocks for the timer used as the wakeup timer was removed from PM API functions.   | Before calling PM API function, you must manually configure the power mode of the source clocks for the timer that will be used as the wakeup timer.   |
| PSoC Creator Power Management section was updated.  | More detailed information on Power Management API usage was added.   |

### Version 2.21

Version 2.21 and older are obsolete.