
NEXUS carrier tray - hand-made - 1:1 template (MEC-17)

4 mm sheet, at least 189 x 116 mm. Top view, front of the vehicle to the LEFT, vehicle right at the TOP. Print at 100 %, no fit-to-page: the bar below must measure 100 mm.

Centre-punch every cross, drill, then saw along the heavy line (12 straight cuts), file the edges, tap or countersink as the table says.

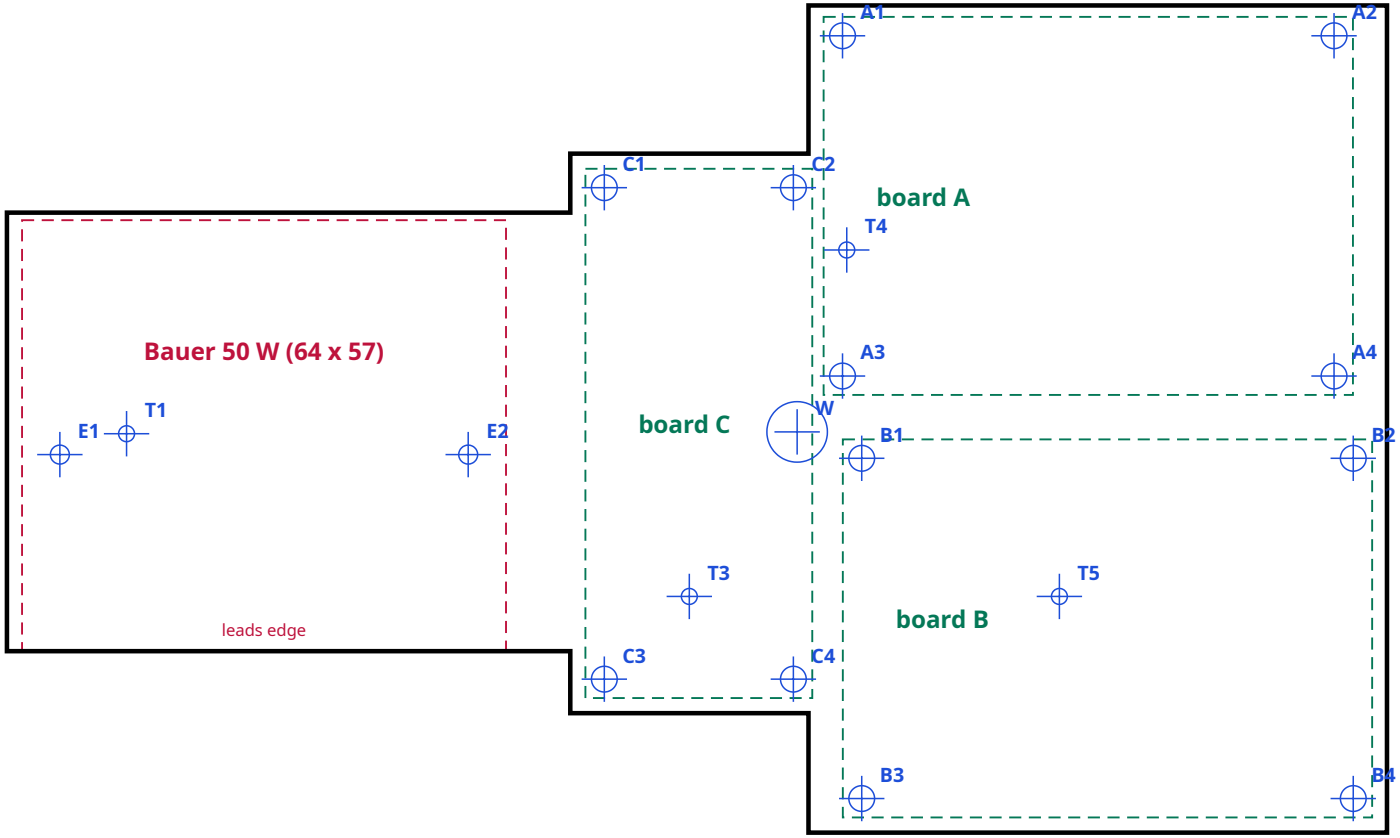

Holes (centre from the top left corner of the tray)

A1	110.50	4.01	drill 3.4	board A standoff screw, countersink from below	C3	79.00	89.10	drill 3.4	board C standoff screw, countersink from below
A2	175.50	4.01	drill 3.4	board A standoff screw, countersink from below	C4	104.00	89.10	drill 3.4	board C standoff screw, countersink from below
A3	110.50	49.01	drill 3.4	board A standoff screw, countersink from below	T1	15.82	56.64	drill 2.1	to plate 2, tap M2.5 (under the Bauer)
A4	175.50	49.01	drill 3.4	board A standoff screw, countersink from below	T3	90.24	78.16	drill 2.1	to plate 2, tap M2.5 (under board C)
B1	113.04	59.89	drill 3.4	board B standoff screw, countersink from below	T4	111.06	32.34	drill 2.1	to plate 2, tap M2.5 (under board A)
B2	178.04	59.89	drill 3.4	board B standoff screw, countersink from below	T5	139.18	78.16	drill 2.1	to plate 2, tap M2.5 (under board B)
B3	113.04	104.89	drill 3.4	board B standoff screw, countersink from below	E1	7.00	59.40	drill 2.5	Bauer, tap M3
B4	178.04	104.89	drill 3.4	board B standoff screw, countersink from below	E2	61.00	59.40	drill 2.5	Bauer, tap M3
C1	79.00	24.10	drill 3.4	board C standoff screw, countersink from below	W	104.50	56.40	drill 8.0	window for the 6 V pair and the I2C lead
C2	104.00	24.10	drill 3.4	board C standoff screw, countersink from below					

Outline corners, in the same measure (saw straight between them)

`(0.0, 27.4)` `(74.5, 27.4)` `(74.5, 19.6)` `(106.0, 19.6)` `(106.0, 0.0)` `(182.5, 0.0)` `(182.5, 109.4)` `(106.0, 109.4)` `(106.0, 93.6)` `(74.5, 93.6)` `(74.5, 85.4)` `(0.0, 85.4)`

Tray 182.5 x 109.4 mm. Tap M2.5 / M3 into the 4 mm sheet (or open to 2.8 / 3.2 and glue a nut on top). Board holes: 3.4 mm, countersunk 90 degrees from below for flat-head M2.5 x 8.

Better for the board holes: set the real boards, with their standoffs fitted, on the sheet in their dashed outlines and mark through the standoffs - the 2.5 mm corner inset here is an estimate.

100 mm

dimensions in the tables are from the tray's top left corner, x to the rear, y toward the vehicle's left