
# NEXUS carrier tray - hand-made - 1:1 template (MEC-17)

3 or 4 mm sheet, at least 189 x 116 mm. Top view, front of the vehicle to the LEFT, vehicle right at the TOP. Print at 100 %, no fit-to-page: the bar below must measure 100 mm.

Centre-punch every cross, drill, then saw along the heavy line (12 straight cuts), file the edges, tap or countersink as the table says.

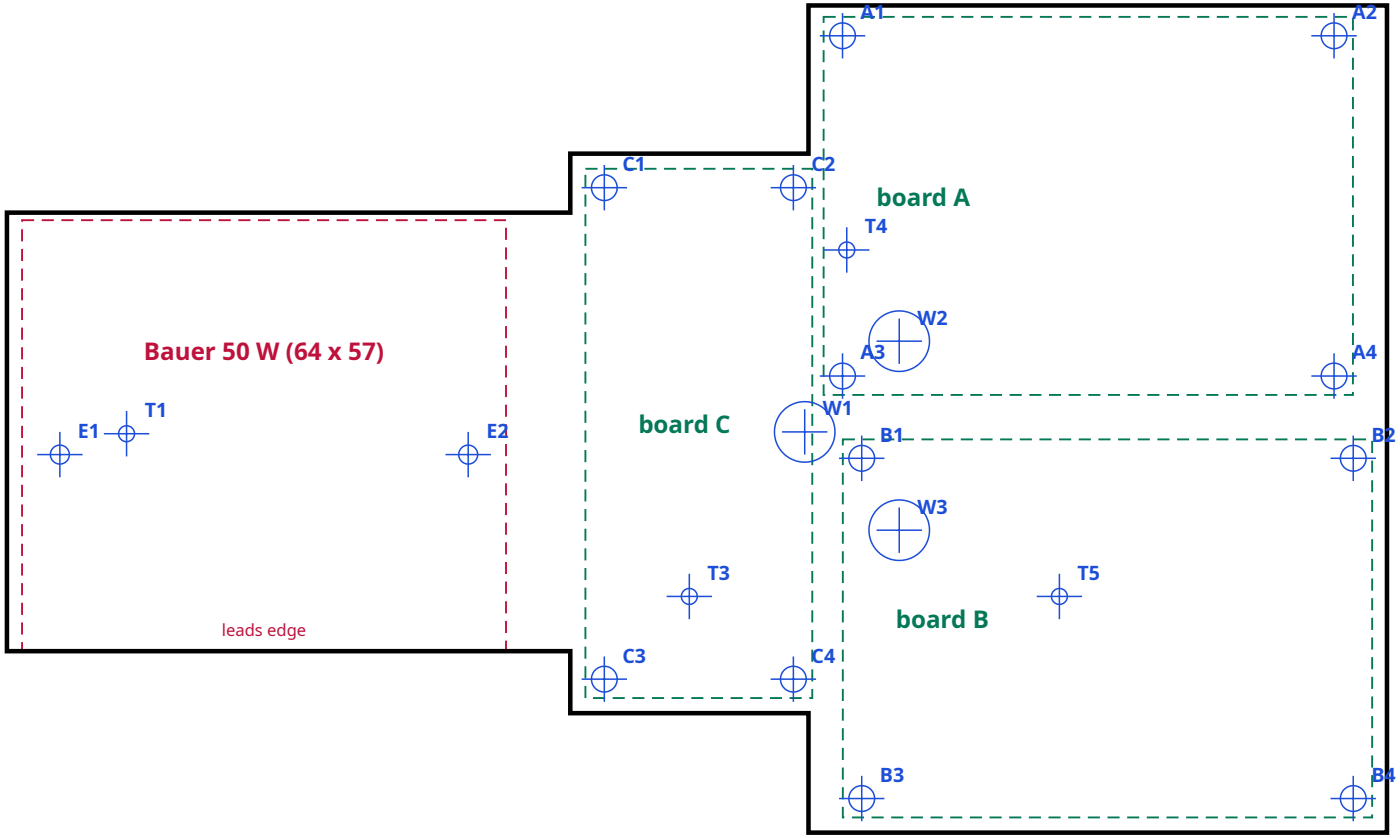


## Holes (centre from the top left corner of the tray)

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| A1 | 110.50 | 4.01 | drill 3.4 | board A standoff screw, countersink from below | C4 | 104.00 | 89.10 | drill 3.4 | board C standoff screw, countersink from below |
| A2 | 175.50 | 4.01 | drill 3.4 | board A standoff screw, countersink from below | T1 | 15.82 | 56.64 | drill 2.1 | to plate 2, tap M2.5 (under the Bauer) |
| A3 | 110.50 | 49.01 | drill 3.4 | board A standoff screw, countersink from below | T3 | 90.24 | 78.16 | drill 2.1 | to plate 2, tap M2.5 (under board C) |
| A4 | 175.50 | 49.01 | drill 3.4 | board A standoff screw, countersink from below | T4 | 111.06 | 32.34 | drill 2.1 | to plate 2, tap M2.5 (under board A) |
| B1 | 113.04 | 59.89 | drill 3.4 | board B standoff screw, countersink from below | T5 | 139.18 | 78.16 | drill 2.1 | to plate 2, tap M2.5 (under board B) |
| B2 | 178.04 | 59.89 | drill 3.4 | board B standoff screw, countersink from below | E1 | 7.00 | 59.40 | drill 2.5 | Bauer, tap M3 |
| B3 | 113.04 | 104.89 | drill 3.4 | board B standoff screw, countersink from below | E2 | 61.00 | 59.40 | drill 2.5 | Bauer, tap M3 |
| B4 | 178.04 | 104.89 | drill 3.4 | board B standoff screw, countersink from below | W1 | 105.50 | 56.40 | drill 8.0 | cable window beside C (6 V pair) |
| C1 | 79.00 | 24.10 | drill 3.4 | board C standoff screw, countersink from below | W2 | 118.00 | 44.40 | drill 8.0 | cable window under board A (6 V pair, I2C lead) |
| C2 | 104.00 | 24.10 | drill 3.4 | board C standoff screw, countersink from below | W3 | 118.00 | 69.40 | drill 8.0 | cable window under board B |
| C3 | 79.00 | 89.10 | drill 3.4 | board C standoff screw, countersink from below | | | | | |

## Outline corners, in the same measure (saw straight between them)

(0.0, 27.4) (74.5, 27.4) (74.5, 19.6) (106.0, 19.6) (106.0, 0.0) (182.5, 0.0) (182.5, 109.4) (106.0, 109.4) (106.0, 93.6) (74.5, 93.6) (74.5, 85.4) (0.0, 85.4)

Tray 182.5 x 109.4 mm. Tap M2.5 / M3 into the sheet (or open to 2.8 / 3.2 and glue a nut on top). Board holes: 3.4 mm, countersunk 90 degrees from below for flat-head M2.5 x 8.

Better for the board holes: set the real boards, with their standoffs fitted, on the sheet in their dashed outlines and mark through the standoffs - the 2.5 mm corner inset here is an estimate.

100 mm

dimensions in the tables are from the tray's top left corner, x to the rear, y toward the vehicle's left