COIT11240 - Dashboard Design

Lecture Notes

Authored by
Lachlan J. W. Wyer

Document Start Date: 24th of September 2026
Latest Update: October 27, 2026

Contents

1 Signals and Times Systems **3**

1.1 Signals: . . . 3
1.2 Continuous vs. Discrete: . . . 3
1.3 Sampling: . . . 4
1.4 Nyquist Theorem: . . . 4
1.5 System: . . . 4
1.6 Signal Transformation: . . . 4
1.6.1 Amplitued Transform . . . 4
1.6.2 Amplitude Shift . . . 5
1.6.3 Time Reversal . . . 5
1.6.4 Time Scaling . . . 5
1.6.5 Time Shifting . . . 5
1.7 Even and Odd Signals: . . . 5
1.8 Periodic Signals: . . . 6
1.8.1 Complex Form . . . 6
1.8.2 Fundamental Period . . . 6
1.9 General Complex Exponential: . . . 7
1.10 Step Function: . . . 7
1.11 Impulse Function: . . . 7
1.12 Signal Energy and Power: . . . 7
1.12.1 Continuous . . . 7
1.12.2 Discrete . . . 8
1.12.3 Fundamentals . . . 8
1.13 System Representation: . . . 8
1.14 Causality: . . . 8
1.15 Invertability: . . . 8
1.15.1 Invertable . . . 9
1.15.2 Non-Invertable . . . 9

2 Linear Time Invariant Systems **9**

2.1 What are They?: . . . 9
2.2 Time Invarience: . . . 9
2.3 Discrete Signals as Impulse Functions: . . . 10
2.4 Convolution of Discrete Signals: . . . 10
2.5 Convolution Sum-Table Method: . . . 11
2.6 Convolution Sums Graphical Representation: . . . 12
2.7 Continuous Time Signals: . . . 12
2.8 Pulse Function: . . . 12
2.9 Continuous Time Series Approximation: . . . 12

2.10 Pulse Response: 13

3 Laplace Transformation **13**
3.1 Why Laplace?: 13
3.2 Laplace Transform: 13
3.3 Conventions: 14
3.4 Integration by Parts: 14
3.5 Operational Transforms: 16
3.5.1 Multiplication by a Constant 16
3.5.2 Addition and Subtraction 16
3.5.3 Differentiation 16
3.5.4 Integration 17
3.5.5 Translation in Time Domain 17
3.5.6 Translation in Frequency Domain 17
3.5.7 Scale Change 17
3.5.8 Frequency Differentiation 18
3.6 Inverse Transform: 18
3.7 Partial Fraction Expansion: 18

4 s-Domain Analysis **18**
4.1 Circuit Elements in s-Domain: 18
4.1.1 Resistor 19
4.1.2 Inductor 20
4.1.3 Capacitor 20
4.2 Circuit Analysis: 20

5 Transfer Functions **21**
5.1 Complex Frequency: 21
5.2 Pole Zero Diagram: 21
5.3 LTI Systems in Differentials: 22
5.4 Linear Constand Coefficient Differential Equations: 22
5.5 Transfer Function: 23
5.6 Poles and Zeros of Transfer Function: 23
5.7 Impulse Response: 24
5.8 Use of Convolution Integral: 24
5.9 Initial and Final Value Theorem: 25
5.9.1 Initial Value 25
5.9.2 Final Value 25
5.10 L'Hopital's Rule: 25
5.11 Complete System Response: 26

1 Signals and Times Systems


1.1 Signals:

A signal is a physical quantity that varies by something. The most common ones are time, space, and angle. Basically if it ca be measured or its effects measured, it can be though of as a signal. For example:


- Radio waves
- AC waveform
- Temperature
- Tide height
- Digital bit streams

1.2 Continuous vs. Discrete:

A continuous signal has a value for all time points. A waveform with considered infinite precision.

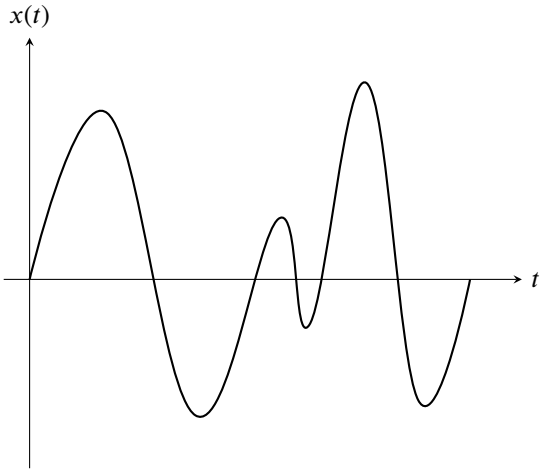

Discrete signalling on the other hand, only has values at set time points.

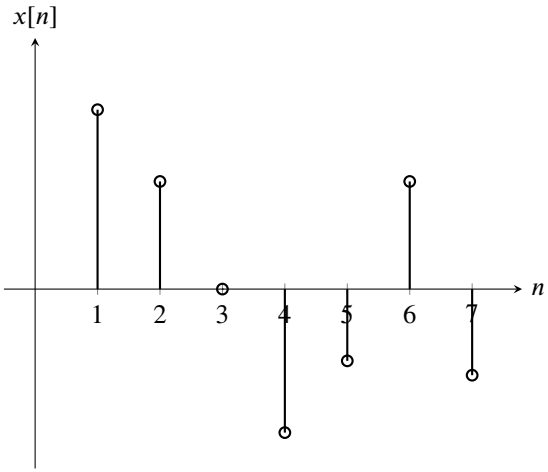

1.3 Sampling:

A discrete signal can be made by sampling a continuous signal of set time intervals. The sampled frequency must be twice the continuous frequency, as a minimum. The high the sampled frequency, the more accurate the output waveform.

1.4 Nyquist Theorem:

If a function $x(t)$ contains a highest frequency of BHz. For it too be completely determined sampling must be done at $\frac{1}{2B}$s.

1.5 System:

A group of regular items interacting to form a while. Such as, power amp, transformer, or laptop.

1.6 Signal Transformation:

1.6.1 Amplitued Transform

Scaling the signal

$$x(t) \rightarrow ax(t)$$

1.6.2 Amplitude Shift

Vertical shift

$$x(t) \rightarrow x(t) + b$$

1.6.3 Time Reversal

A flip across the y-axis

$$x(t) \rightarrow x(-t)$$

1.6.4 Time Scaling

Changing the frequency

$$x(t) \rightarrow x(bt)$$

- If $b > 1$: Compressing the signal
- Else $0 < b < 1$: Expanded the signal

1.6.5 Time Shifting

Horizontal movement

$$x(t) \rightarrow x(t - t_0)$$

- If $t_0 > 0$: Shifts signal right
- Else $t_0 < 0$: Shifts signal left

1.7 Even and Odd Signals:

Even signals are symmetric around the origin.

$$x(t) = x(-t)$$

Odd signals are asymmetric.

$$x(t) = -x(-t)$$

Any signal can be decomponsed into even and odd components.

$$x_e(t) = \frac{1}{2}[x(t) + x(-t)]$$

$$x_o(t) = \frac{1}{2}[x(t) - x(-t)]$$

Sub $t = -t$, into even components.

$$\begin{aligned} x_e(-t) &= \frac{1}{2}[x(-t) + x(-(-t))] \\ &= \frac{1}{2}[x(t) + x(-t)] \\ &= x_e(t) \\ &\therefore \text{Even} \end{aligned}$$

Sub $t = -t$, into odd components.

$$\begin{aligned} x_o(-t) &= \frac{1}{2}[x(-t) - x(-(-t))] \\ &= \frac{1}{2}[-x(t) + x(-t)] \\ &= -\frac{1}{2}[x(t) - x(-t)] \\ &= -x_o(t) \\ &\therefore \text{Odd} \end{aligned}$$

$$x(t) = x_e(t) + x_o(t)$$

1.8 Periodic Signals:

$$x(t) = x(t + T_0),\ T_0 > 0$$

This is where T_0 is the period.

1.8.1 Complex Form

$$\begin{aligned} x(t) &= e^{j\omega_0(t+T_0)} \\ &= e^{j\omega_0 t} e^{j\omega_0 T_0} \end{aligned}$$

1.8.2 Fundamental Period

$$T_0 = \frac{2\pi}{\omega_0}$$

1.9 General Complex Exponential:

$$C = |C|e^{j\phi}, \quad a = r + j\omega$$

$$\begin{aligned} x(t) &= |C|e^{j\phi(r+j\omega_0)t} \\ &= |C|e^{rt}e^{j\phi}e^{j\omega_0 t} \qquad = |C|e^{rt}\cos(\omega_0 t + \phi) + j|C|e^{rt}\sin(\omega_0 t + \phi) \end{aligned}$$

1.10 Step Function:

Switching operations require abrupt changes in $v(t)$ and t. At the switching point, it is undefined.

$$Ku(t) = 0,\ t < 0$$
$$Ku(t) = K,\ t > 0$$
$$Ku(t) = und\,f,\ t = 0$$

1.11 Impulse Function:

This function has infinite magnitude and zero duration. No practical application contains this, as nothing last with zero time. It is used to define derivative at discontinuity point. Discrete signals can be saved to be made up of multiple impulse functions.

$$x[n] = \sum_{k=-\inf}^{k=\inf} x[k]\delta[n-k]$$

1.12 Signal Energy and Power:

1.12.1 Continuous

$$E = \int_{t_1}^{t_2} |x(t)|^2 dt$$

$$P = \frac{1}{t_2 - t_1}\int_{t_1}^{t_2} |x(t)|^2 dt$$

$$E_\infty = \lim_{T\to\infty}\int_{-T}^{T} |x(t)|^2 dt$$

$$P_\infty = \lim_{T\to\infty}\frac{1}{2T}\int_{-T}^{T} |x(t)|^2 dt$$

1.12.2 Discrete

$$E = \sum_{n_1}^{n_2} |x[n]|^2$$

$$P = \frac{1}{n_2 - n_1} \sum_{n_1}^{n_2} |x[n]|^2$$

$$E_\infty = \lim_{N \to \infty} \sum_{-N}^{N} |x[n]|^2$$


$$P_\infty = \lim_{N \to \infty} \frac{1}{2N+1} \sum_{-N}^{N} |x[n]|^2$$

1.12.3 Fundamentals

If energy over an infinite interval is finite, $E_\infty < \infty$, then P_{av} is 0, $P_\infty = 0$. Else $P_\infty > 0 \quad \rightarrow \quad E_\infty = \infty$. A few cases can have $E_\infty = \infty$ and $P_\infty = \infty$. One such one is $x(t) = t$.

1.13 System Representation:

A system is usually represented by a black box.

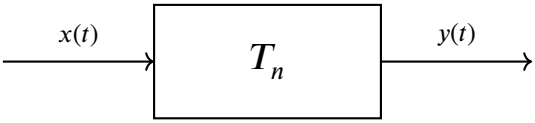

$$y(t) = T_n[x(t)]$$

The T_n is not a function but a transformation happening to the function.

1.14 Causality:

A system is casual if it only depends on present and past values.

$$y(t) = 5x(t) = 6x^2(t-1) + y(t-1)$$

1.15 Invertability:

A system is said to be invertible if the operations placed on it can be revered, giving a unique answer.

1.15.1 Invertable

$$y[n] = 2x[n]$$
$$x[n] = \frac{1}{2}y[n]$$

$$y(t) = \int_{-\infty}^{t} x(\tau)d\tau$$
$$x(t) = \frac{dy(t)}{dt}$$

1.15.2 Non-Invertable

$$y(t) = x^2(t)$$
$$x(t) = \pm\sqrt{y(t)}$$

Produces 2 possible results

$$y[n] = nx[n]$$
$$x[n] = \frac{1}{n}y[n]$$

Non result if $n \neq 0$

2 Linear Time Invariant Systems

2.1 What are They?:

A linear system is one which obeys the laws of linearity and superposition:

- If x is multiplied by k making kx, $f(x)$ is also now $kf(x)$.
- When more than one factor is applied it is the sum of individual responses to each input.

2.2 Time Invarience:

Behaviour and characteristic of the system is fixed over time. An example of this is an RC circuit characteristics will not change if the experiment is conducted today, tomorrow or yesterday. Mathematically, if the input is shifted by

T, the output is also shifted by T.

$$x(t) \Rightarrow y(t)$$

$$x(t-T) \Rightarrow y(t-T)$$

2.3 Discrete Signals as Impulse Functions:

$$x[n] = \sum_{k=-\infty}^{\infty} x[k]\delta[n-k]$$

For any given value of n, only 1 impulse in non-zero, and the rest are zero. Assume the response of an LTI system to unit impulse $\delta[n]$ is $h[n]$. Thus $\delta[n-k]$ is $h[n-k]$.


2.4 Convolution of Discrete Signals:


The response of that system to signal $n[n]$ is superposition of a scaled and time shifted $h[n]$.

$$y[n] = \sum_{k=-\infty}^{\infty} x[k]h[n-k]$$

This is often called the convoluetion sum.

$$\begin{aligned} y[n] &= x[n] \otimes h[n] \\ &= \sum_{k=-\infty}^{\infty} x[k]h[n-k] \end{aligned}$$






2.5 Convolution Sum-Table Method:

Let:

$$x[n] = 2, 1, -1, -2, -3$$


$$h[n] = 1, 2, 0, -3$$

$$x[0] = -1, \text{ and } h[0] = 2$$

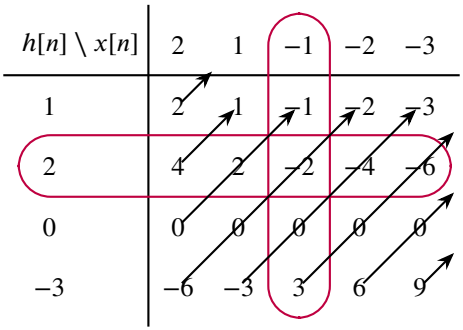

$$y[n] = 2, 4, 1, -10, -10, -3, 6, 9$$

$$y[0] = -10$$

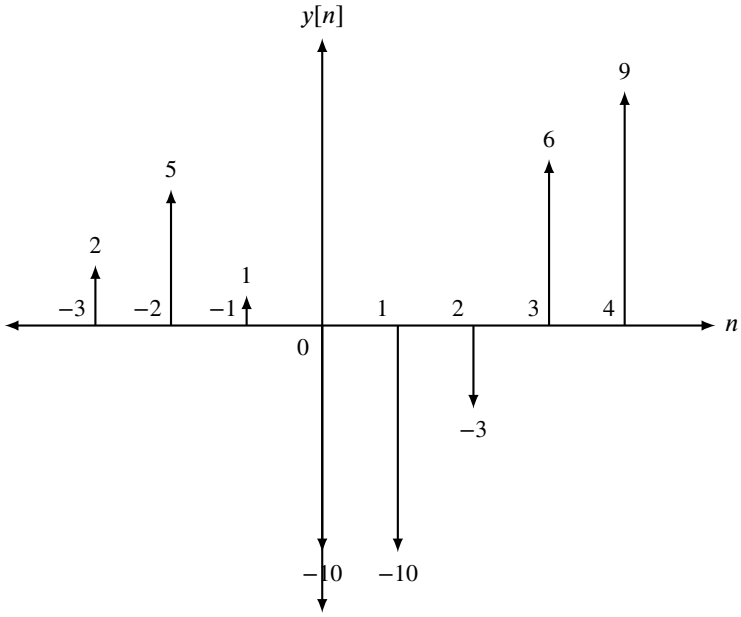

2.6 Convolution Sums Graphical Representation:


- Draw input signal as a function of k
- Draw impulse responses as function of k
- Time reverse the impulse response
- Shift impulse along t-axis
- For each n take the sum of product between input and shifted overlaps

2.7 Continuous Time Signals:

Any continuous time signal can be approximated by a thin set of strips, known as staircase approximations. The height of the strip, $\hat{x}(t)$, is the value of $x(t)$ at the start of the strip.

2.8 Pulse Function:

$$p(t) = \left\{ \begin{array}{l} \frac{1}{\Delta t},\ 0 < t < \Delta t \\ 0,\ \text{Elsewhere} \end{array} \right\}$$

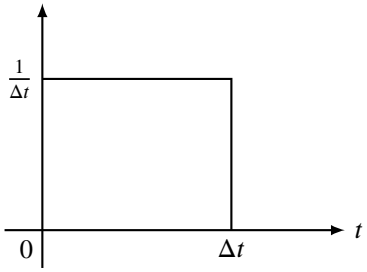

$$\int_{-\infty}^{\infty} p(t)dt = t$$

2.9 Continuous Time Series Approximation:

This can be approximated as a series of pulse functions.

- Pulse located at integral multiples of pulse width (Δt)
- Pulse height is $x(\Delta t)$

Pulse of $t = \Delta t$.

$$x(k\Delta t)[p(t - k\Delta t) \cdot \Delta t] = x(\Delta t)$$

The signal can then be approximated as the sum of these signals.

$$\hat{x}(t) = \sum_{k=-\infty}^{\infty} x(k\Delta t)[p(t - k\Delta t) \cdot \Delta t]$$

As $\Delta t \to 0$, $p(t)$ approaches an impulse function.

$$x(t) = \int_{\infty}^{\infty} x(\tau)\delta(t - \tau)d\tau$$

As $\Delta t \to 0$, $k\Delta t \to \tau$, $\Delta t \to d\tau$ and $p(t - k\Delta t) \to \delta(t - \tau)$.

2.10 Pulse Response:

If $h(t)$ is the response to the LTI system, $h_p(t)$ can be defined to be the response of a pulse system.

3 Laplace Transformation

3.1 Why Laplace?:

- Solving linear circuits frequently involves solving linear differential equations. These include transient analysis, AC analysis and transient or steady state system response.
- Finding time domain convolution
- Signals with many freqency components may be more apparent in a different domain

3.2 Laplace Transform:

$$\mathcal{L}\{f(t)\} = F(s) = \int_{0}^{\infty} f(t)e^{-st}dt$$

- Convert a time domain function to frequency domain. $t \Rightarrow s,$ where $s = \sigma + j\omega$
- Important Notes
  - If intergrand does not converge there is no Laplace transform
  - Only currently $t > 0^{-}$

3.3 Conventions:

Time domain		Frequency Domain
$f(t)$	$\Rightarrow$	$F(s)$
$g(t)$	$\Rightarrow$	$G(s)$

Functional transform is only specific functions. Operation transofmr is the description of how mathematical operations are done using Laplace.

3.4 Integration by Parts:

$$\int_0^\infty uv'dt = [uv]_0^\infty - \int_0^\infty u'vdt$$

Make sure that u simplifies when derived and v' simplifies when integrated. Laplace transform of 1:

$$\begin{aligned}
\mathcal{L}\{f(t)\} = F(s) &= \int_0^\infty f(t)e^{-st}dt \\
\mathcal{L}\{1\} &= \int_0^\infty e^{-st}dt \\
&= [-\frac{1}{s}e^{-st}]_0^\infty \\
&= [0] - [-\frac{1}{s}] \\
&= \frac{1}{s}
\end{aligned}$$

$$\begin{aligned}
f(t) &\Leftrightarrow F(s) \\
1 &\Leftrightarrow \frac{1}{s}
\end{aligned}$$

Laplace transform of t:

$$\mathcal{L}\{t\} = F(s) = \int_0^\infty te^{-st}dt$$

$$\text{Let } u = t, \quad v' = e^{-st}$$

$$u' = 1, \quad v = [-\frac{1}{s}e^{-st}]_0^\infty$$

$$\begin{aligned} F(s) &= uv - \int u'vdt \\ &= [t(-\frac{1}{s})]_0^\infty - \int_0^\infty -\frac{1}{s}e^{-st}dt \\ &= 0 + \frac{1}{s}\int_0^\infty e^{-st}dt \\ &= \frac{1}{s}[-\frac{1}{s}e^{-st}]_0^\infty \\ &= -\frac{1}{s^2}[0-1] \\ &= \frac{1}{s^2} \end{aligned}$$

$$t^n \Leftrightarrow \frac{n!}{s^{n+1}}$$

Laplace transform of $\delta(t)$:

$$\begin{aligned} \mathcal{L}\{(\delta(t)\} = F(s) &= \int_{0^-}^\infty \delta(t-0^-)e^{-st}dt \\ &= e^{-s\cdot 0} \\ &= 1 \end{aligned}$$

$$\delta(t) \Leftrightarrow 1$$

In general

$$\mathcal{L}\{\frac{d^n[\delta(t)]}{dt^n}\} = s^n$$

3.5 Operational Transforms:

3.5.1 Multiplication by a Constant

$$\begin{aligned}\mathcal{L}\{f(t)\} &= F(s) = \int_0^\infty f(t)e^{-st}dt \\ \mathcal{L}\{Kf(t)\} &= \int_0^\infty Kf(t)e^{-st}dt \\ &= K\int_0^\infty f(t)e^{-st}dt \\ &= KF(s)\end{aligned}$$

3.5.2 Addition and Subtraction

$$\begin{aligned}\mathcal{L}_1\{f_1(t)\} &= F_1(s) \\ \mathcal{L}_2\{f_2(t)\} &= F_2(s)\end{aligned}$$

$$\begin{aligned}\mathcal{L}\{f_1(t) \pm f_2(t)\} &= \int_0^\infty (f_1(t) \pm f_2(t))e^{-st}dt \\ &= \int_0^\infty f_1(t)e^{-st}dt \pm \int_0^\infty f_2(t)e^{-st}dt \\ &= F_1(s) \pm F_2(s)\end{aligned}$$

3.5.3 Differentiation

$$\mathcal{L}\{\frac{df(t)}{dt}\} = \int_{0^-}^\infty \frac{df(t)}{dt}e^{-st}dt$$

Let: $u' = \frac{df(t)}{dt}$ $\quad v = e^{-st}$

$u = f(t)$ $\quad v' = -se^{-st}$

$$\begin{aligned}\mathcal{L}\{\frac{df(t)}{dt}\} &= uv - \int uv' \\ &= [f(t)e^{-st}]_{0^-}^\infty - \int -sf(t)e^{-st}dt \\ &= \int_{0^-}^\infty f(t)se^{-st}dt - f(0^-) \\ &= sF(s) - f(0^-)\end{aligned}$$

In General:

$$\mathcal{L}\{\frac{d^n f(t)}{dt^n}\} = s^n F(s) - s^{n-1} f(0^-) - s^{n-2}\frac{df(0^-}{dt} - s^{n-3}\frac{d^2 f(0^-)}{dt^2}$$
$$- \ldots - \frac{d^{n-1} f(0^-)}{dt^{n-1}}$$

3.5.4 Integration

$$\mathcal{L}\{\int_{0^-}^{t} f(x)dx\} = \int_{0^-}^{\infty}[\int_{0^-}^{t} f(x)dx]e^{-st}dt$$
$$\text{Let: } u' = e^{-st} \quad v = \int_{0^-}^{t} f(x)dx$$
$$u = -\frac{1}{s}e^{-st} \quad v' = f(t)$$
$$\mathcal{L}\{\int_{0^-}^{t} f(x)dx\} = [-\frac{e^{-st}}{s}\int_{0^-}^{t} f(x)dx]_{0^-}^{\infty} - \int_{0^-}^{\infty} -f(t)\frac{e^{-st}}{s}dt$$
$$\lim_{t\to\infty} -\frac{e^{-st}}{s} \to 0$$
$$\lim_{t\to 0^-} \int_{0^-}^{t} f(x)dt \to 0$$
$$\therefore \mathcal{L}\{\int_{0^-}^{t}\} = \int_{0^-}^{\infty} f(t)\frac{e^{-st}}{s}dt$$
$$= \frac{1}{s}\int_{0^-}^{\infty} f(t)e^{-st}dt$$
$$= \frac{F(s)}{s}$$

3.5.5 Translation in Time Domain

$$\mathcal{L}\{f(t-a)u(t-a)\} = e^{-as}F(s)$$

3.5.6 Translation in Frequency Domain

$$\mathcal{L}\{e^{-at}f(t)\} = F(s+a)$$

3.5.7 Scale Change

$$\mathcal{L}\{f(at)\} = \frac{1}{a}F(\frac{s}{a})$$

3.5.8 Frequency Differentiation

$$\mathcal{L}\{tf(t)\} = -\frac{dF(s)}{ds}$$

$$\mathcal{L}\{t^n f(t)\} = (-1)^n \frac{d^n F(s)}{ds^n}$$

3.6 Inverse Transform:

Once the time domain problem is solved using Laplace transformation, it needs to be converted back to time domain to understand what has happenend.

$$F(s) = \frac{N(s)}{D(s)} = \frac{a_n s^n + a_{n-1}s^{n-1} + \ldots + a_1 s^1 + a_0 s^0}{b_m s^m + b_{m-1}s^{m-1} + \ldots + b_1 s^1 + b_0 s^0}$$

As such, $F(s)$ is needed to be converted back into a format which contains Laplace transformations of known functions.

3.7 Partial Fraction Expansion:

If $m > n$, a proper rational function expansion. Else $m \leq n$, is improper rational functions.

$$\begin{aligned} F(s) = \frac{N(s)}{D(s)} &= \frac{s+6}{s^4 + 5s^3 + 7s^2 + 3s} \\ &= \frac{s+6}{s(s+3)(s+1)^2} \\ &= \frac{K_1}{s} + \frac{K_2}{s+3} + \frac{K_3}{s+1} + \frac{K_4}{(s+1)^2} \end{aligned}$$


$$Ke^{-at}u(t) \Leftrightarrow \frac{K}{s+a}$$

$$f(t) = K_1 u(t) + K_2 e^{-3t}u(t) + K_3 e^{-t}u(t) + K_4 te^{-t}u(t)$$

4 s-Domain Analysis

4.1 Circuit Elements in s-Domain:

Similar to analysis done on AC circuits in time domain. Using Laplace transforms, the time domain formulas can be converted to s-Domain. They key difference is that the initial conditions are taken into during the conversion.

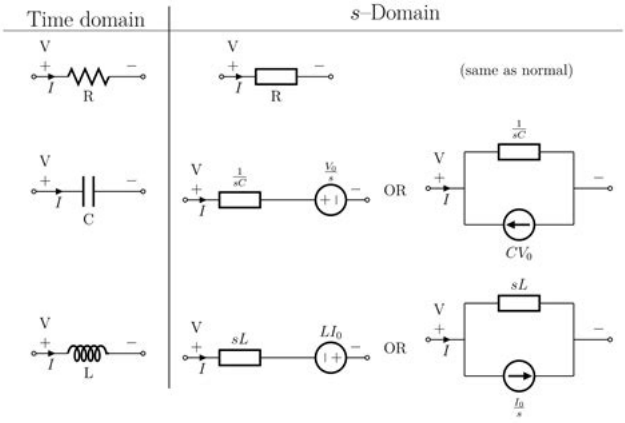

4.1.1 Resistor

$$
\begin{aligned}
v(t) &= Ri(t) \\
\mathcal{L}\{v(t)\} = V(s) &= \int_0^\infty v(t)e^{-st}dt \\
&= \int_0^\infty Ri(t)e^{-st}dt \\
&= R\int_0^\infty i(t)e^{-st}dt \\
\therefore V(s) &= RI(s) \\
I(s) &= \frac{V(s)}{R}
\end{aligned}
$$

The units change in s-Domain to volt-seconds and amp-seconds.

4.1.2 Inductor

$$
\begin{aligned}
v(t) &= L\frac{di(t)}{dt} \\
\mathcal{L}\{v(t)\} &= V(s) = \int_0^\infty L\frac{di(t)}{dt}e^{-st}dt \\
&= L\int_0^\infty \frac{di(t)}{dt}e^{-st}dt \\
&= L(sI(s) - i(0^-)) \\
\therefore V(s) &= sLI(s) - LI_0 \\
I(s) &= \frac{V(s)}{sL} + \frac{I_0}{s}
\end{aligned}
$$

The LI_0 is the initial conditions of the inductor at $t = 0^-$. LI_0 is a voltage sourse in series when finding voltage in s-Domain. $\frac{I_0}{s}$ is a current source in parrallel.

4.1.3 Capacitor

$$
\begin{aligned}
i(t) &= C\frac{dv(t)}{dt} \\
\mathcal{L}\{i(t)\} &= I(s) = \int_0^\infty C\frac{dv(t)}{dt}e^{-st}dt \\
&= C\int_0^\infty \frac{dv(t)}{dt}e^{-st}dt \\
&= C(sV(s) - v(0^-)) \\
\therefore I(s) &= sCV(s) - CV_0 \\
V(s) &= \frac{I(s)}{sC} + \frac{V_0}{s}
\end{aligned}
$$

V_0 is the voltage at $t = 0^-$.

4.2 Circuit Analysis:

All of Kirchoff's Laws (KCL and KVL) that applied in time domain, apply in s-Domain. The only important part is to have everything in one domain before analysis. The R, sL, and $\frac{1}{sC}$ are the s-Domain impedances for resistors, inductors and capacitors respectively.

5 Transfer Functions


5.1 Complex Frequency:

In Laplace, it is taken in s-domain analysis, or complex frequency.

$$s = \sigma + j\omega$$

$$e^s = e^{\sigma + j\omega} = e^{\sigma} e^{j\omega}$$

This expansion produces a sinusoidal damped function. Using this, the s-plane can be identified.

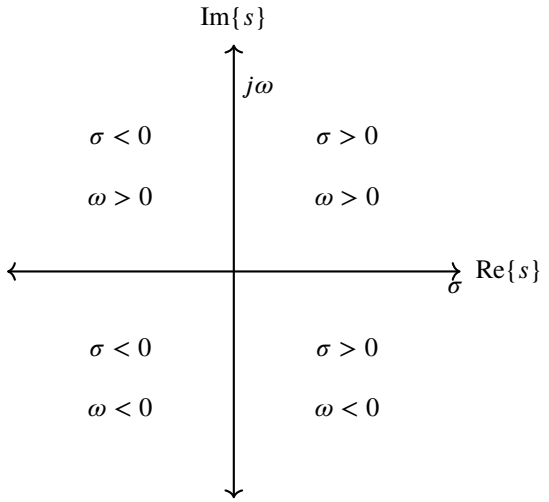

5.2 Pole Zero Diagram:


When analysis on 3D functions they are calculation intensive and often hard to visualize. Instead shown the extreme ends of functions mangnitude:

- Where Function is 0 - Zeros (Numerator is 0)
- Where Function is ∞ - Poles (Denominator is 0)

$$F(s) = \frac{10(s+5)(s+3-j4)(s+3+j4)}{s(s+10)(s+6-j8)(s+6+j8)}$$

$$0 \text{ at: } -5,\ -3+j4,\ -3-j4$$

$$\infty \text{ at: } 0,\ 10,\ -6+j8,\ -6-j8$$

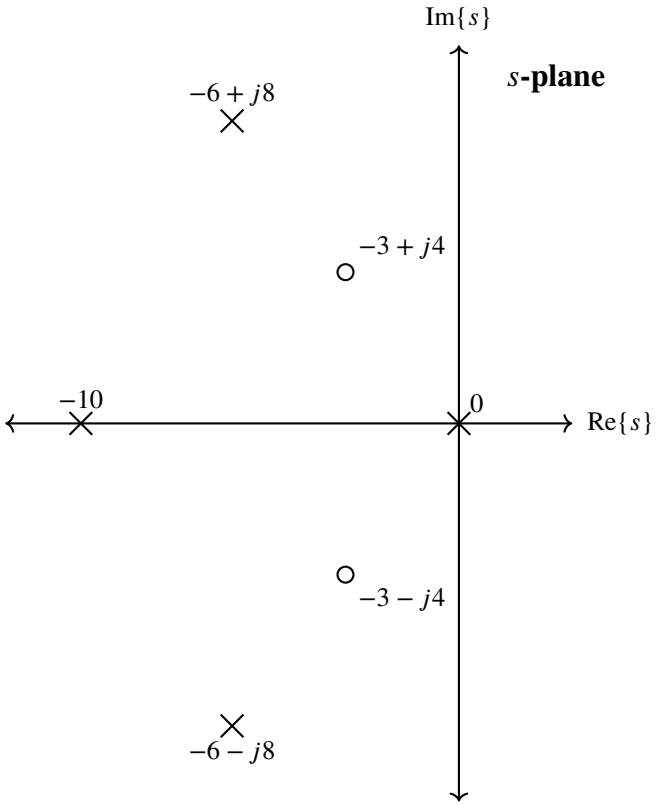

5.3 LTI Systems in Differentials:

For example RLC circuits are discribed with differential equations, such as charging a capacitor:

$$C\frac{dv}{dt} + \frac{V}{R} = I_s$$

Parallel RLC Circuit:

$$\frac{d^2v}{dt^2} + \frac{1}{RC}\frac{dv}{dt} + \frac{1}{LC}v = 0$$

5.4 Linear Constand Coefficient Differential Equations:

$$\sum_{k=0}^{N} a_k \frac{d^k y(t)}{dt^k} = \sum_{k=0}^{M} b_k \frac{d^k x(t)}{dt^k}$$

- $k = 0$, results in $x(t)$ and $y(t)$
- Order of the system is given by the highest derivative of $y(t)$
- This equation does not give an explicit expression of system output
- For $N = 0$, an explicit relationship of $y(t)$

$$y(t) = \frac{1}{a_0} \sum_{k=0}^{M} b_k \frac{d^k x(t)}{dt^k}$$

5.5 Transfer Function:

Taking Laplace of generic formula.

$$\mathcal{L}\{\frac{d^k y(t)}{dt^k}\} = s^k Y(s) - s^{k-1} y(0) - s^{k-2} \frac{dy(0)}{dt} - s^{k-3} \frac{d^2 y(0)}{dt^2} - \ldots - \frac{d^{k-1} y(0)}{dt^{-1}}$$

If $y(0) = 0$, then:

$$\mathcal{L}\{\frac{d^k y(t)}{dt^k}\} = s^k Y(s)$$

Take Laplace of both sides:

$$\mathcal{L}\{\sum_{k=0}^{N} a_k \frac{d^k y(t)}{dt^k}\} = \mathcal{L}\{\sum_{k=0}^{M} b_k \frac{d^k y(t)}{dt^k}\}$$

Assuming initial conditions are 0:

$$\sum_{k=0}^{N} a_k s^k Y(s) = \sum_{k=0}^{M} b_k s^k Y(s)$$

$$H(s) = \frac{Y(s)}{X(s)} = \frac{b_m s^m + b_{m-1} s^{m-1} + \ldots + b_1 s + b_0}{a_n s^n + a_{n-1} s^{n-1} + \ldots + a_1 s + a_0}$$

In general for any system the transfer function is the ratio of output to input.

5.6 Poles and Zeros of Transfer Function:

Any rational function, $H(s)$, can be expressed as the ratio of 2 polynomials.

$$H(s) = \frac{K(s + z_1)(s + z_2) + \ldots + (s + z_m)}{(s + p_1)(s + p_2) + \ldots + (s + p_n)}$$

From thos form, the poles and zeros can be found.


5.7 Impulse Response:

Recall that $\mathcal{L}\{\delta(t)\} = \Delta(s) = 1$. As such $Y(s) = H(s)$.

5.8 Use of Convolution Integral:

$$\begin{aligned} y(t) &= x(t) \otimes h(t) \\ &= \int_{\infty}^{\infty} h(t)x(t-\tau)d\tau \\ &= \int_{\infty}^{\infty} x(t)h(t-\tau)d\tau \end{aligned}$$

If $x(t)$ and $h(t)$ are known and Laplace transformable, the transfer function can be utilized.

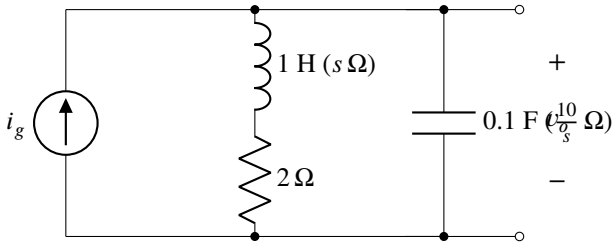

Find transfer function $\frac{V_o}{i_g}$, Assume no stored energy in circuit.

$$\begin{aligned} Z_{eq} &= \frac{1}{\frac{1}{s+2} + \frac{1}{\frac{10}{s}}} \\ &= \frac{10(s+2)}{s^2 2s + 10} \end{aligned}$$

$$\begin{aligned} V_0(s) &= i_g(s) \cdot Z_{eq}(s) \\ H(s) &= \frac{V_0(s)}{i_g(s)} = Z_{eq}(s) \end{aligned}$$

Zeros at: -2.
Poles at: $-1 + j3,\ -1 - j3$

5.9 Initial and Final Value Theorem:

Laplace can be use to find values of $f(t)$ at 0 and ∞. This is useful as there values can be had to determine dineetly.

5.9.1 Initial Value

$$\lim_{t\to 0^+} f(t) = \lim_{s\to\infty} sF(s)$$

Where:

- $f(t)$ does not contain an impulse function
- $f(0^+)$ exists
- $F(s)$ can be found

5.9.2 Final Value

$$\lim_{t\to\infty} f(t) = \lim_{t\to 0} sF(s)$$

Final value does not exist if:

- $sF(s)$ has poles on right side of plane - growing exponentially
- $sF(s)$ has conjugate pole on $j\omega$ axis - sinusodial function
- $sF(s)$ has poles on origin - t^n function

5.10 L'Hopital's Rule:

If $f(t)$ is not defined when $t \to a$ then:

$$f(a) = \lim_{t\to a} f(t) = \frac{n'(a)}{d'(a)}$$

If the first derivative of function cannot be evaluated, then the second derivative is taken. Repeat until resolved. Find initial and final values:


$$
\begin{aligned}
F(s) &= \frac{s^2 - 5s + 6}{s^3 + 4s^2 + 3s} \\
\lim_{t\to\infty} f(t) &= \lim_{s\to 0} sF(s) \\
&= \lim_{s\to 0} \frac{s(s^2 - 5s + 6)}{s^3 + 4s^2 + 3s} \\
&= \lim_{s\to 0} \frac{s^2 - 5s + 6}{s^2 + 4s^2 + 3} \\
&= \frac{6}{3} \\
&= 2
\end{aligned}
$$

$$
\begin{aligned}
\lim_{t\to 0^+} f(t) &= \lim_{s\to\infty} sF(s) \\
&= \lim_{s\to\infty} \frac{s^2 - 5s + 6}{s^2 + 4s + 3} \\
&\text{Using L'Hopital} \\
&= \lim_{s\to\infty} \frac{2s - 5}{2s + 4} \\
&\text{Using L'Hopital} \\
&= \lim_{s\to\infty} \frac{2}{2} \\
&= 1
\end{aligned}
$$

5.11 Complete System Response:

$$
\begin{aligned}
H(s) &= \frac{Y(s)}{X(s)} \\
\therefore Y(s) &= H(s)X(s)
\end{aligned}
$$

- Partial fraction expansion of $Y(s)$ includes terms from partial fractions (poles) of $H(s)$ and $Y(s)$
- Poles of $H(s)$ result in transient response of the system
- Poles of $X(s)$ results in steady-state response

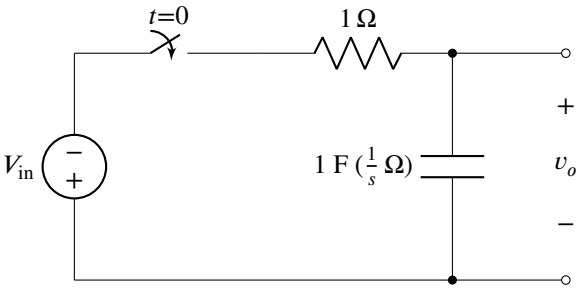

$$\frac{V_0(s)}{V_{in}(s)} = H(s)$$

$$V_0(s) = \frac{\frac{1}{sC} \times V_{in}}{R + \frac{1}{sC}}$$

$$\frac{V_0(s)}{V_{in}(s)} = \frac{\frac{1}{s}}{1 + \frac{1}{s}}$$

$$= \frac{1}{1+s}$$

Response for V_{in}

$$V_0(s) = \frac{1}{s+1} V_{in}(s)$$

$$= \frac{1}{s+1} \cdot \frac{1}{s}$$

$$= \frac{1}{s(s+1)}$$

$$= \frac{K_1}{s} + \frac{K_2}{s+1}$$

$$K_1 = [\frac{1}{s+1}]_{s=0} = 1$$
$$K_2 = [\frac{1}{s}]_{s=1} = -1$$

$$\therefore V_0(s) = \frac{1}{s} + \frac{-1}{s+1}$$
$$\therefore v_0(t) = \mathcal{L}^{-1}\{V_0(s)\}$$
$$= (1 - e^{-t})u(t)$$

Response of $V_{in}(t) = \sin(t)$

$$\mathcal{L}\{V_{in}(t)\} = \frac{1}{s^2+1}$$
$$V_0(s) = \frac{1}{s+1} \times \frac{1}{s^2+1}$$
$$= \frac{1}{(s+1)(s-j)(s+j)}$$
$$= \frac{0.5}{s+1} + \frac{-0.25\sqrt{2}e^{j45^\circ}}{s-j} + \frac{-0.25\sqrt{2}e^{-j45^\circ}}{s+j}$$
$$\therefore v_0(t) = \mathcal{L}^{-1}\{V_0(s)\}$$
$$= (0.5e^{-t} - 0.5\sqrt{2}\cos(t - 45^\circ))u(t)$$

Transient Response: $0.5e^{-t}$
Steady-state Response: $0.5\sqrt{2}\cos(t - 45^\circ)$