ENEX12002

LECTURE NOTES

Authored by
Lachlan J. W. Wyer

Document Start Date: 2nd of July 2026
Latest Update: July 3, 2026

Contents

1 Analog Circuits **3**

1.1 Characteristic Curves: . . . 3
1.2 Analog vs Digital Signals: . . . 3
1.3 Analog & Digital Circuits: . . . 4
1.4 Sampling: . . . 4
1.5 Vectors: . . . 4
1.6 Frequency and Period: . . . 4
1.7 Instantaneous Values: . . . 5
1.8 Waveform Values: . . . 5
1.9 RMS Values: . . . 5
1.10 Domain Signals: . . . 6
1.11 Transducers: . . . 6
1.12 Amplification: . . . 6
1.13 Transfer Curves: . . . 6
1.14 Power Gain: . . . 6
1.15 dB Power Ratios: . . . 7
1.16 dB Voltage Ratio: . . . 7

2 Basic Circuit Theory **7**

2.1 Electrical Charge: . . . 7
2.2 Voltage and Current: . . . 7
2.3 Ideal Basic Circuits: . . . 7
2.4 Power and Energy: . . . 8
2.5 Voltage and Current Sources: . . . 9
2.5.1 Source Types . . . 9
2.6 Kirchoffs Laws: . . . 9
2.7 Resistance: . . . 9
2.7.1 Series . . . 10
2.7.2 Parllel . . . 10
2.8 Voltage Division: . . . 10
2.9 Current Division: . . . 11
2.10 Source Transformations: . . . 11
2.10.1 Thévenin Equivalent . . . 11
2.10.2 Norton Equivalent . . . 12
2.11 Maximum Power: . . . 12
2.12 Superposition Principle: . . . 13
2.13 Inductors: . . . 13
2.13.1 Series . . . 13
2.13.2 Parallel . . . 13

2.14 Capacitor: 14
2.14.1 Series 14
2.14.2 Parallel 14
2.15 Mutual Inductance: 14


3 Diodes **15**
3.1 Chemistry Revision: 15
3.2 Energy Gaps: 15
3.3 Electrons and Holes: 16
3.4 Silicon: 16
3.4.1 Doping Silicon 16
3.4.2 PN Junction 16
3.5 Diodes: 17
3.5.1 Forward Bias 17
3.5.2 Reverse Bias 17
3.6 Ideal Diode Models: 18
3.6.1 Forward Bias 18
3.6.2 Reverse Bias 18
3.7 Practical Diode Models: 19
3.7.1 Forward Bias 19
3.7.2 Reverse Bias 19

4 Diode Applications **20**
4.1 Wave Rectifiers: 20
4.1.1 Half-wave operation 20
4.1.2 Full-wave Rectifier 21
4.1.3 Bridge Rectifier 21

1 Analog Circuits


1.1 Characteristic Curves:

A characteristic curve is a type of linear plot that demonstates a relationship between two variable properties of a device. Most electronic devices CC refers too a plot of current as a function of coltage. Mostly known as an I-V curve.

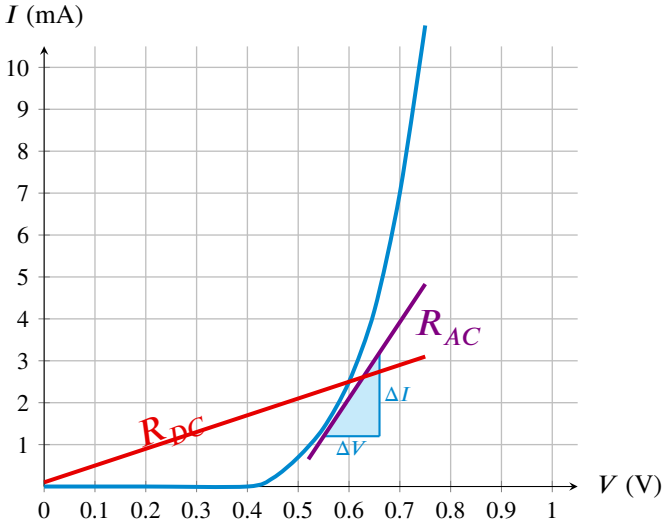

1.2 Analog vs Digital Signals:

Signalling within a circuit is generally classified as either continuous or discrete. Continuous (Analog signalling) varies after a range of values within limits. Discrete (Digital signals) change between two discreet voltage levels.

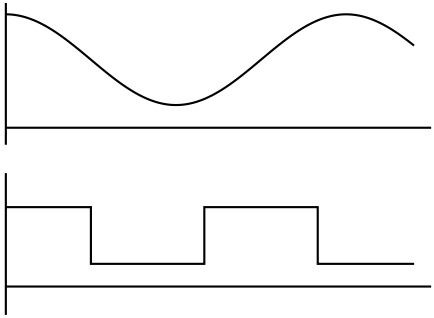


1.3 Analog & Digital Circuits:

Analog circuits are used in situations implementing linear functions, wave shaping and transformation between current and voltage. Digital circuit however ase used to process data rapidly and in calculations. Most systems utilize a mix of both systems (e.g AV systems).

1.4 Sampling:

When converting between signal types sampling must take place. Sampling is the approximation of analog's original waveform into time slices. The disadvantage of sampling is that is loses some precision, however the advantages of a digital system out weight this. The physical process of sampling is called quantizing. This produces numbers that can be processed by digital systems.

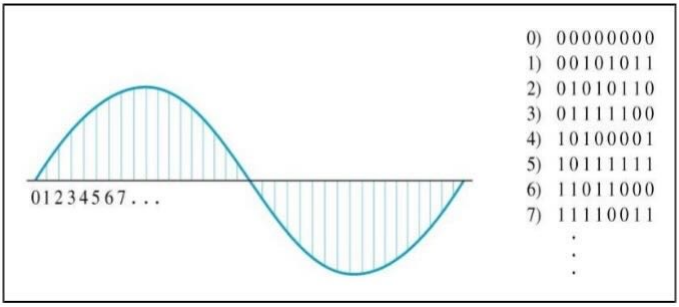

1.5 Vectors:

A vector is a line that contains both direction and magnitude. An AC circuits sinusodial waveform can be generated by plotting the project of a rotating vector in circular motion.

1.6 Frequency and Period:

The frequency of a periodic wave is the number of cycles that occur every second. The SI unit for this is Hz. The period is how long it takes a waveform to complete one cycle.


$$f = \frac{1}{T}$$

$$T = \frac{1}{f}$$

1.7 Instantaneous Values:

$$v(t) = V_p \sin(\omega t \pm \phi)$$

The instantaneous values are always against time (t).

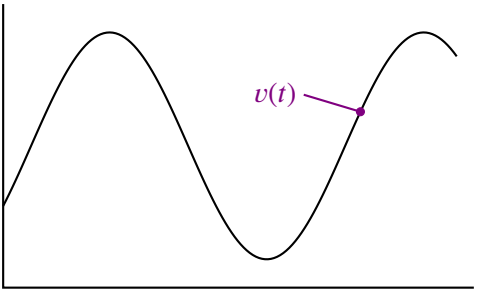

1.8 Waveform Values:

The amplitude is the maximum distance of the values from the line of equilibrium. The average value of a sine wave is the found in $|v(t)|$, then averaging the curve.

$$V_{ave} = \frac{2V_p}{\pi} \approx 0.637V_p$$

1.9 RMS Values:


In order to compare AC and DC currents and voltages, AC is converted into its DC equivalent DC heating value. RMS current and voltage are their peak values.

$$\begin{aligned} V_{RMS} &= \frac{V_p}{\sqrt{2}} \\ &\approx 0.707V_p \end{aligned}$$

$$\begin{aligned} I_{RMS} &= \frac{I_p}{\sqrt{2}} \\ &\approx 0.707I_p \end{aligned}$$

1.10 Domain Signals:

Time domain is the funcation against time. An example is a osccilisope which shows values over a period of time. The frequency domain - A sine-wave against time can be represented against its frequency. This representations shows the waveforms amplitude and frequency but not it's phase angle.

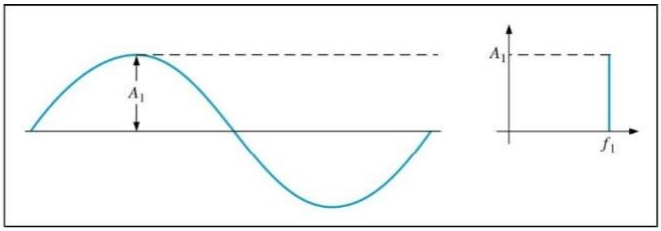

1.11 Transducers:

These are a device that converts a physical quantity (e.g pressure, position or temp) from one form to another. Their outupts are quite small and require amplification. Passice transducers require external power to functions, this is called excitation. Active transducers are self-generating that convert a portion being measured into electrical signal.

1.12 Amplification:

Amps are designde to amplify either voltage or power. Linear amplifiers produce a magnified replica of the inputted signal, producing a useful output.

$$A_v = \frac{V_{out}}{V_{in}}$$

1.13 Transfer Curves:

All amplifiers, when ideal, produce a linear transfer curves. Beyond this limit they no longer act idealy, this is called saturation.

1.14 Power Gain:

$$A_p = \frac{P_{out}}{P_{in}} = \frac{V_{out}I_{out}}{V_{in}I_{in}}$$

1.15 dB Power Ratios:

The decibal of a power ratio is:

$$\begin{aligned} A_p &= 10\log_{10}(\frac{P_1}{P_2}) \\ &= 10\log_{10}(A_p) \end{aligned}$$

1.16 dB Voltage Ratio:

$$\begin{aligned} A_v &= 20\log_{10}(\frac{V_1}{V_2}) \\ &= 20\log_{10}(A_v) \end{aligned}$$

2 Basic Circuit Theory

2.1 Electrical Charge:

Electrical effects are attributed to the seperation of charges and their movements. Electrical forces are that opposites attract and similar repels. A charge is considered continuous if $q = 1.6022E\text{-}19e^{-}$.

2.2 Voltage and Current:

Rather than working purely in charge, it is easier to work with it in voltage and current.


$$V = \frac{dw}{dq}$$

$$I = \frac{dq}{dt}$$

2.3 Ideal Basic Circuits:

These are made up of 5 main points:

1. Two Terminals
2. Can be described mathmatically in terms of voltage and current
3. Cannot be subdivided into further elements
4. Utilizes the passive sign convention

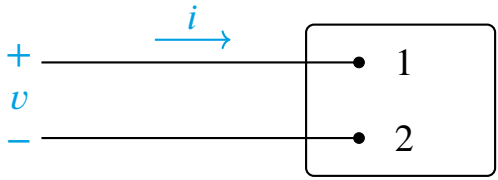


2.4 Power and Energy:


The useful output of a system is often non-electrical. Practical applications also have limitations in the amount of power it can handle.

$$p = \frac{dw}{dt} = (\frac{dw}{dq})(\frac{dq}{dt}) = VI$$

The polarity describes where current flows in the relationship to voltage. If $p > 0$, power is being delivered to the circuit inside the box. For instance a motor.

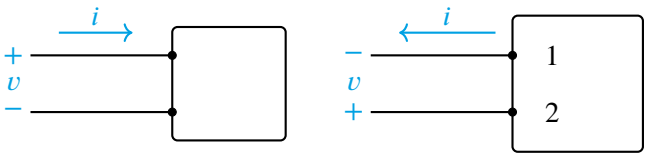

Else if $p < 0$, power is being extracted from a circuit. For example a battery.

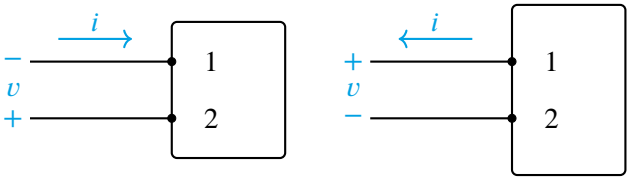


Elements that make up a basic circui include:


- Voltage source/s
- Current source/s
- Passive Circuit elements, As they do not produce electricity
  - Resistors
  - Inductors
  - Capacitors

2.5 Voltage and Current Sources:


An electrical source that can convert between electrical and non-electrical energy. An ideal voltage source provides a consistant voltage regardless of current. This is similar for current sources. In real-world applications, ideal power sources do not exist.


2.5.1 Source Types

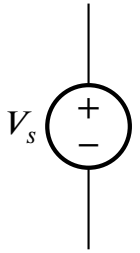

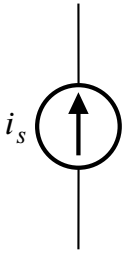

Independent Sources

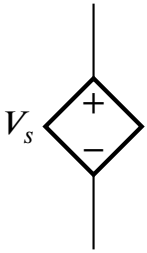

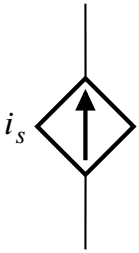

Dependent Sources

2.6 Kirchoffs Laws:

A circuit is said to be solved once a voltage and current is found across every circuit element.

$$\text{KCL} \Rightarrow \sum I_{out} = \sum I_{in}$$

$$\text{KVL} \Rightarrow \sum V_{loop} = 0$$

To apply these laws, polarity must be applied throughout the circuit.

2.7 Resistance:


Resistors resist the flow of current within a circuit. Conductance is also the inverse of resistance, $G = \frac{1}{R}$.



$$V = IR$$


2.7.1 Series

$$R_{eq} = \sum_{n=1}^{k} R_n$$

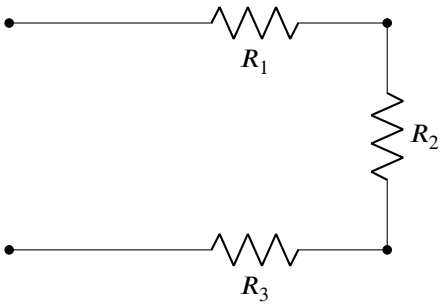


2.7.2 Parllel

$$R_{eq} = \frac{1}{\sum^{k} n = 1 \frac{1}{R_n}}$$

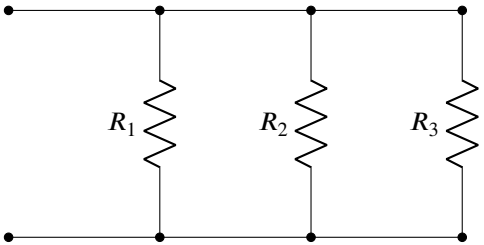


2.8 Voltage Division:

$$V_j = iR_j = \frac{R_j}{R_{eq}} V$$

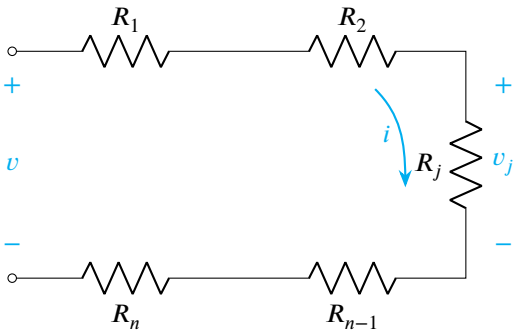

2.9 Current Division:

$$i_j = \frac{V}{R_j} = \frac{R_{eq}}{R_j} i$$

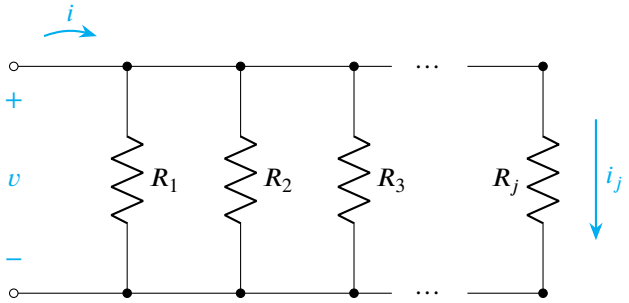

2.10 Source Transformations:


Current and voltage sources can be interchanged. This is because equivalent sources produce the same electrical effects, regardless of load.

2.10.1 Thévenin Equivalent

A way to simplify a circuit that focuses on the behaviour at the terminals.

$$V_{TH} = V_{O/C} = V_{ab}$$


$$R_{TH} = \frac{V_{TH}}{I_{SC}}$$

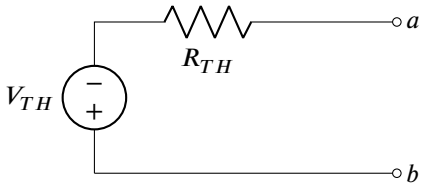

2.10.2 Norton Equivalent


$$I_N = I_{S/C}$$

$$R_N = R_{TH}$$

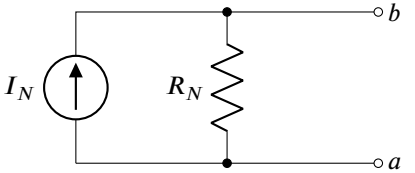

2.11 Maximum Power:

To find a circuits maximum power, replace its resistive network within its Thévenin equivalent.

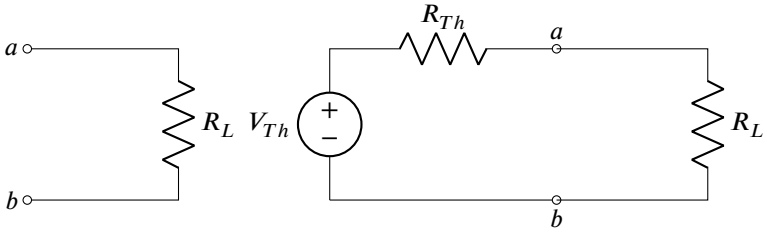

Power delivery to R_L:

$$p = I^2 R_L = (\frac{V_{TH}}{R_{TH} + R_L})^2 R_L$$

Max power is when $R_L = R_{TH}$:

$$p_{max} = \frac{V_{TH}^2 R_L}{(2R_L)^2} = \frac{V_{TH}^2}{4R_L}$$

2.12 Superposition Principle:


A linear system obeys this principle. Which is when two or more independent energy sources are connected in a circuit, the total response is the sum of each individual.

2.13 Inductors:

The behaviour of inductors are based around the properties of electro--magnetism. The SI unit for an inductor is Henry.

$$V = L\frac{di}{dt}$$

$$W = \frac{1}{2}LI^2$$

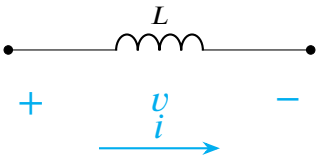

$$i(t) = \frac{1}{L}\int_{t_0}^{t} v\, d\tau + i(t_0)$$

$$p = Li\frac{di}{dt} = \frac{dw}{dt} = vi(t)$$

2.13.1 Series

$$L_{eq} = \sum_{n=1}^{k} L_n$$

2.13.2 Parallel

$$L_{eq} = \frac{1}{\sum_{n=1}^{k} \frac{1}{L_n}}$$

2.14 Capacitor:

Made-up of two conductors seperated by an insulator. It acts as an O/C to DC current and S/C to AC. An important note to remember that electrical charge is not directly transported through the capacitor.



$$V = IR$$

$$i = C\frac{dv}{dt}$$

$$v(t) = \frac{1}{C}\int_{t_0}^{t} i\, d\tau + v(t_0)$$

$$p = vi = Cv\frac{dv}{dt}$$

$$w = \frac{1}{2}Cv^2$$

2.14.1 Series


$$C_{eq} = \frac{1}{\sum_{n=1}^{k}\frac{1}{C_n}}$$

2.14.2 Parallel

$$C_{eq} = \sum_{n=1}^{k} C_n$$

2.15 Mutual Inductance:

The magnetic fields between the two circuits create a mutual and self--inductance voltages. Polarity of M depends on the way the coils are wound. L_1 and L_2 must be wound is opposing directions.

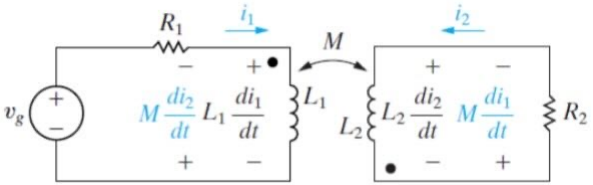


3 Diodes

3.1 Chemistry Revision:

Electrons form themselves into shells, with the outer shell containing the most energy due to their great mobility. These electrons in the outer shell are called valence electrons. Ions are formed through either an element donating or recieving electrons (e.g. Cations and Anions)


3.2 Energy Gaps:

Valence bonds within inter-elemental bonds are in the valence band. A conduction band is the energy band beyond the valence band.

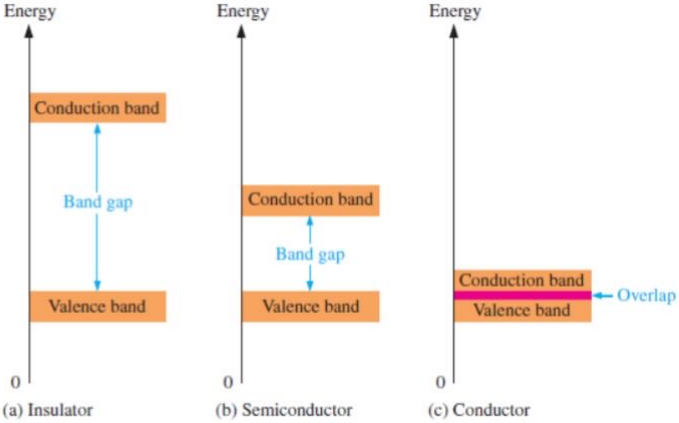

Material	$\rho(\Omega \cdot cm)$
Insulator	$\rho > 10^5$
Semiconductor	$10^{-5} < \rho < 10^5$
Conductor	$\rho < 10^{-5}$

3.3 Electrons and Holes:

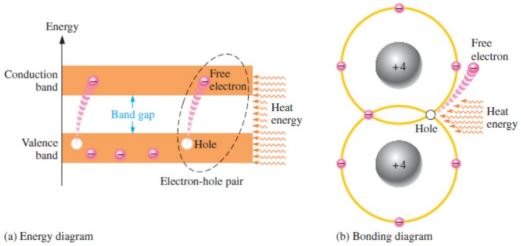

In instrinsic silicon it's current is produced by the movement of free electrons toward the end. The effective movement of the hole is opposite direction of electron movement.

3.4 Silicon:

3.4.1 Doping Silicon

3.4.1.1 Donor Atoms


These atoms are pentavalent imparity, with 5 electrons in the valence shell. They are doped into the silicon crystal structure that donates the extra electron. This then becomes a conduction electron.

3.4.1.2 Acceptor Atoms

Place a trivalent imparity into the silicon crystal structure. Creating a hole within the silicon molecule.

3.4.2 PN Junction

In the image below, the acceptor is the *p*-region and donor is *n*-region. Within the PN-junction, the *p*-region is negatively charged, and the *n*-region is slightly positively charge.

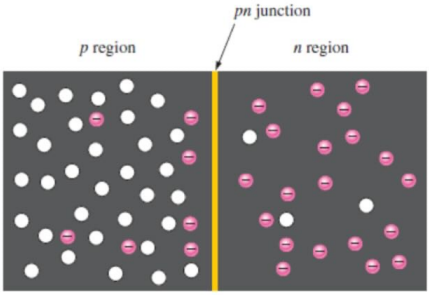

The PN-junction forms a basic diode. This is something that only allows current flow in one direction. A voltage drop is formed across the reigon as depletion of *n*-type silicon and equillibrium occurs when it repel electron migration.

3.5 Diodes:

3.5.1 Forward Bias

An external voltage assist electrons in moving through the PN-junction, allowing higher current flow. This reduces the width of the PN-junction.


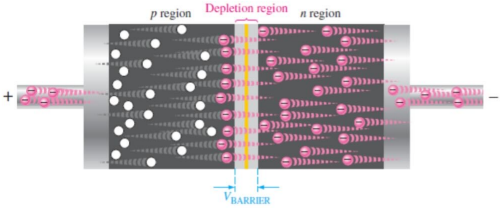


FIGURE 2–4
A forward-biased diode showing the flow of majority carriers and the voltage due to the barrier potential across the depletion region.


3.5.2 Reverse Bias

An extremely small reverse current pushes electrons back towards the PN--junction.

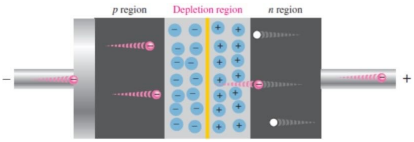

3.6 Ideal Diode Models:


3.6.1 Forward Bias

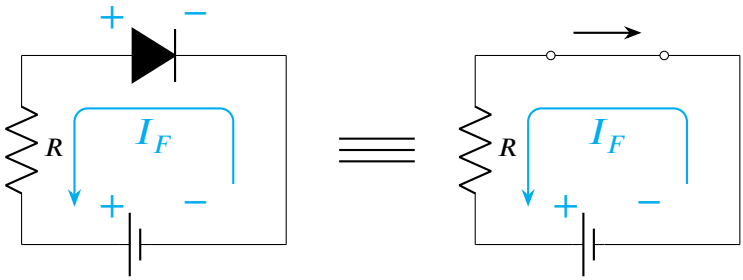

$$I_F = \frac{V_{BIAS}}{R_{LIMIT}}$$

$V_F = 0V$, acts as S/C

3.6.2 Reverse Bias

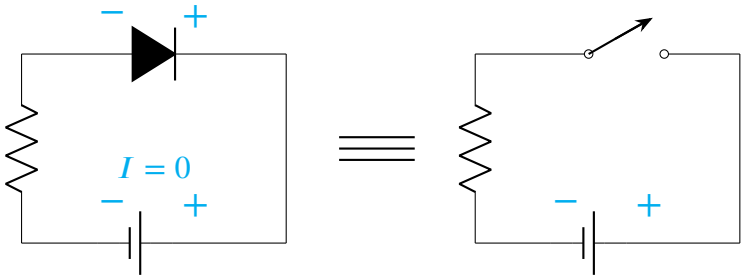


$$I_R = 0$$

$V_R = V_{BIAS}$, acts as O/C

3.7 Practical Diode Models:


3.7.1 Forward Bias

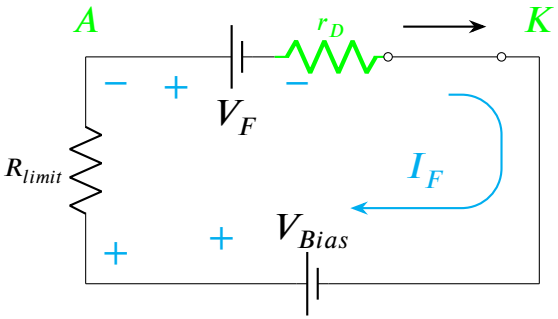

$$V_F = 0.7 + I_F r'_d$$

$$I_F = \frac{V_{BIAS} - 0.7}{R_{LIMIT} + r'_d}$$

3.7.2 Reverse Bias

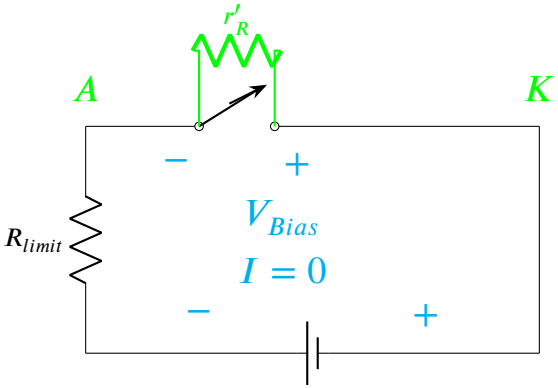


The cathode side of the diode is connected to positive end of the power supply. Whereas, the anode is connected to the negative side.

4 Diode Applications


4.1 Wave Rectifiers:

A rectifieris a type of circuit configurations that converts AC to its pulsating DC equivalent. A half-wave rectifier only converts half of the AC sine wave (e.g. positive or negative). A full wave rectifier converts the entirety of the sine wave.

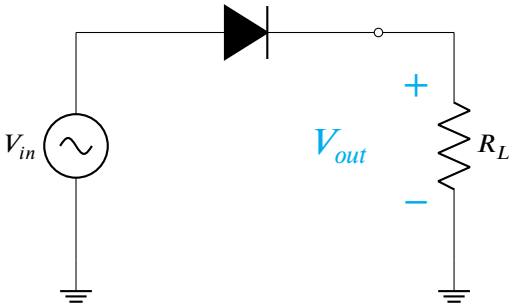


For the circuit above, if V_{in} is negative or smaller than the voltage barries in the diode, the diode should be reversed bias.

4.1.1 Half-wave operation

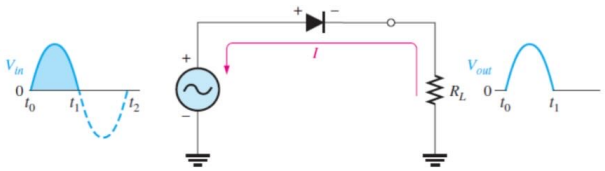

(a) During the positive alternation of the 60 Hz input voltage, the output voltage looks like the positive half of the input voltage. The current path is through ground back to the source.

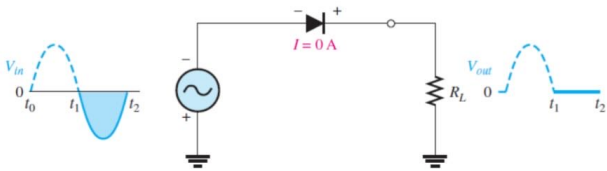


(b) During the negative alternation of the input voltage, the current is 0, so the output voltage is also 0.




(c) 60 Hz half-wave output voltage for three input cycles

4.1.2 Full-wave Rectifier

This circuit controls the direction of the load currents so that only the positive or negative outputs are recieved.

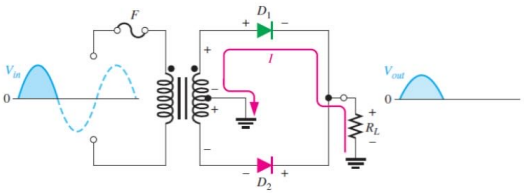


(a) During positive half-cycles, D_1 is forward-biased and D_2 is reverse-biased.

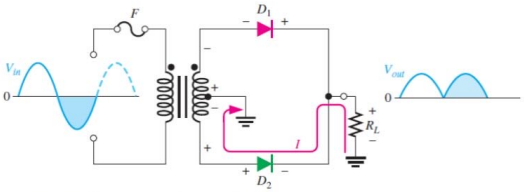


(b) During negative half-cycles, D_2 is forward-biased and D_1 is reverse-biased.

4.1.3 Bridge Rectifier

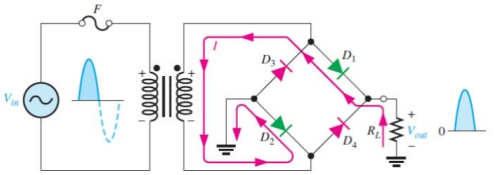

(a) During the positive half-cycle of the input, D_1 and D_2 are forward-biased and conduct current. D_3 and D_4 are reverse-biased.

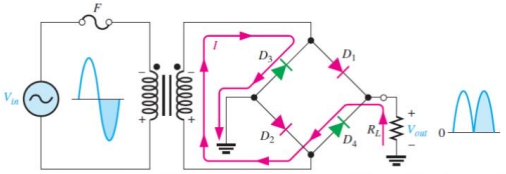

(b) During the negative half-cycle of the input, D_3 and D_4 are forward-biased and conduct current. D_1 and D_2 are reverse-biased.