COIT12209

LECTURE NOTES

Authored by
Lachlan J. W. Wyer

Document Start Date: 19th of June 2026
Latest Update: June 19, 2026

Contents

1 Introduction **3**
- 1.1 Electricity: . . . 3
- 1.2 SI Units: . . . 3
- 1.3 Electrical Potential Energy: . . . 3
- 1.4 Voltage: . . . 3
- 1.5 Elctro Motive Force: . . . 3
- 1.6 Grounding: . . . 3
- 1.7 Passive Circuit Element: . . . 4
- 1.8 Resistance: . . . 4
- 1.9 Circuit Symbols: . . . 5

2 Circuit Simplification **6**
- 2.1 Ideal Power Sources: . . . 6
- 2.2 Polarity and Power: . . . 6
- 2.3 Voltage Divider Rule: . . . 7
- 2.4 Current Divider Rule: . . . 7
- 2.5 Delta-Wye Resistor Configurations: . . . 8

3 Nodal Analysis **8**
- 3.1 Planar Circuit: . . . 8
- 3.2 Essential Points: . . . 9
- 3.3 Nodal Analysis: . . . 9
  - 3.3.1 Procedure . . . 9
  - 3.3.2 NA Example . . . 10
- 3.4 Super Node: . . . 11

4 Mesh Analysis **12**
- 4.1 Branch Current Analysis: . . . 12
- 4.2 Mesh Analysis: . . . 12
  - 4.2.1 Procedure . . . 12
  - 4.2.2 Example . . . 13
- 4.3 Super Mesh: . . . 13

5 Equivalent Circuits **14**
- 5.1 Source Conversion: . . . 14
  - 5.1.1 Thévenin Circuits . . . 15
  - 5.1.2 Norton Circuits . . . 15
- 5.2 Thévenin Equivalent Resistance: . . . 15
- 5.3 Maximum Power Transfer: . . . 15

5.4 Superposition Theorem: 16

1 Introduction

1.1 Electricity:

Through this is a steady of moving charges and their interaction until magnetic and electric fields change this. Charges move because a net force have been applied. The force comes from a difference in charge between two points on a circuit.

1.2 SI Units:

$$1\ Coulomb = 6.25 \times 10^{18} e^{-}$$

$$1A = \frac{1Q(Coulomb)}{1t(Seconds)}$$

1.3 Electrical Potential Energy:

The potential energy is closely associated with an object's position. E_{PE} is what all electrical circuits have. To move charges within an electric field it requires an amount of work.

1.4 Voltage:

$$1V = \frac{1J}{C}$$

Defines the potential difference between two points in a conductor.


1.5 Elctro Motive Force:

emf is the energy provided by an eneyr source to enable the flow of charges.

1.6 Grounding:

When grounding a circuit we are basically joining it a giant resvior of both positive and negative charge. This is large enough that it can both recieve and donate charge. As such when an object comes into contact with group all net charge is removed becoming something with OV.

Ground Circuit Examples

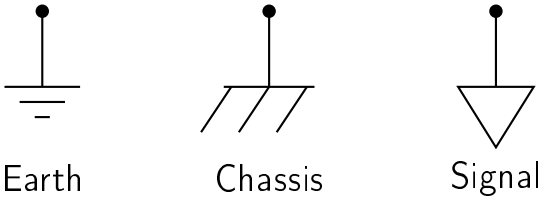

1.7 Passive Circuit Element:

Conductors are circuit elements that allow the free movement of charge. Super conductors do this with no resistance. Insulators are the opposite of conductors. They prevent the free movement of charge. A semi-conductor has properties of conductors and insulators.

1.8 Resistance:

Resistivity (ρ) is how strongly it resists electrical current.


$$R = \frac{\rho L}{A}$$

Where:


- R: Resistance (Ω)
- ρ: Resistivity ($(\Omega \cdot m)^{-1}$)
- L: Lenght of wire (m)
- A: CSA (m^2)

1.9 Circuit Symbols:

DC Power Supply

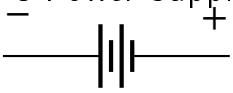

Variable Power Supply

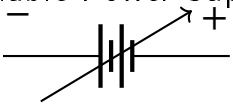

AC Power Supply



Inductor



Wire

Junction



Ampmeter




Volt meter



Resistor



Capacitor

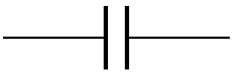

Voltage rises across from the negative to positive terminals of the components. In addition to the opposite flow to the amps. Current divider rule:

$$I_1 = I_S \cdot \frac{R_2}{R_1 + R_2}$$


$$I_2 = I_S \cdot \frac{R_1}{R_1 + R_2}$$


2 Circuit Simplification

2.1 Ideal Power Sources:


For ideal voltage and current sources, there are independent and dependent sources. The independent source are illustrated by a circle around the indicator and its numerical value is just defined. The dependent source usually rely on a contast multiplied by a either a current or voltage value within the circuit. They are also illustrated through a diamond shape.

2.2 Polarity and Power:

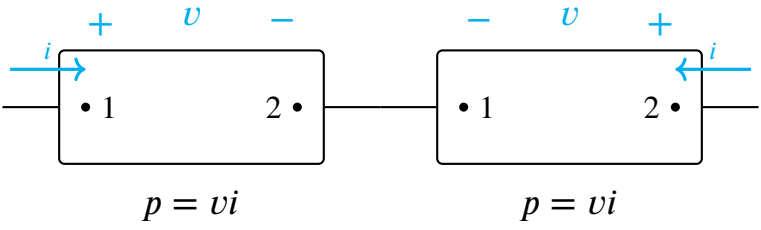

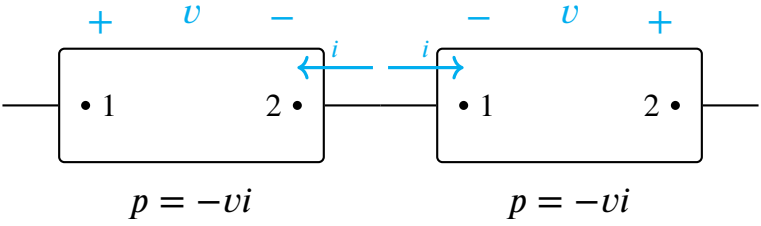


2.3 Voltage Divider Rule:

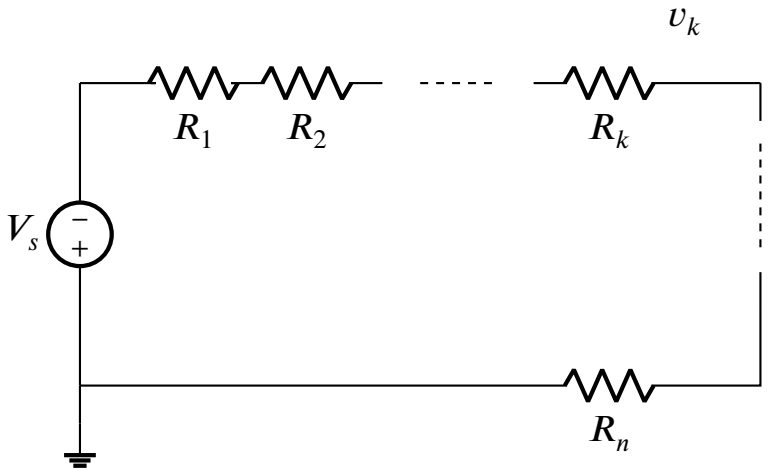

For this to work the current through all resistors must be equal. The highest voltage drop occurs over the largest resistor.

$$V_k = \frac{R_k}{R_{eq}} \cdot V_S$$


2.4 Current Divider Rule:

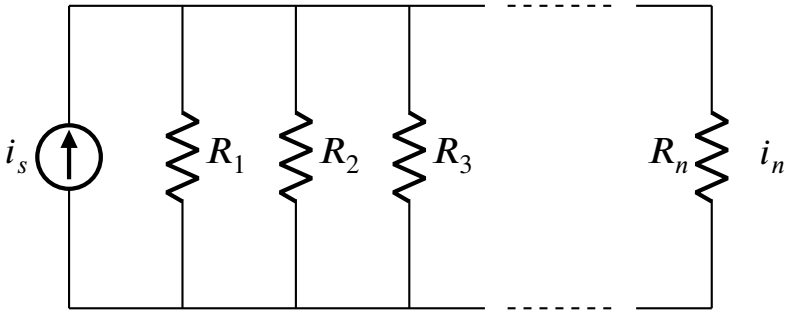


The highest current goes through the smallest resistor.

$$I_k = \frac{I_S}{R_k R_{eq}}$$

2.5 Delta-Wye Resistor Configurations:

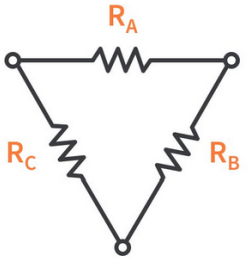

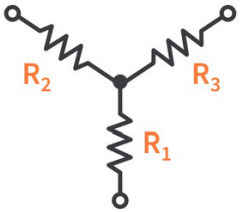

$$R_a = \frac{R_1R_2 + R_2R_3 + R_3R_1}{R_1} \qquad R_1 = \frac{R_bR_c}{R_a + R_b + R_c}$$


$$R_b = \frac{R_1R_2 + R_2R_3 + R_3R_1}{R_2} \qquad R_2 = \frac{R_cR_a}{R_a + R_b + R_c}$$

$$R_c = \frac{R_1R_2 + R_2R_3 + R_3R_1}{R_3} \qquad R_3 = \frac{R_aR_b}{R_a + R_b + R_c}$$

3 Nodal Analysis

3.1 Planar Circuit:

A circuit in which there are no crossing branches that can be drawn on plane. In the image shown below, the top circuit can be redrawn to the bottom one. Turning it into a planar circuit.

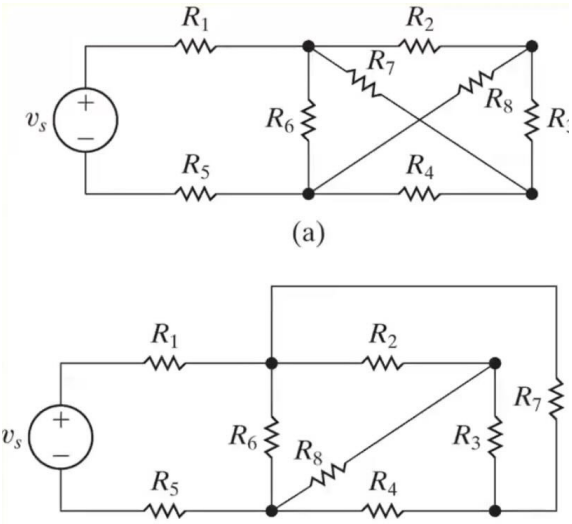

3.2 Essential Points:

Node: A point in a circuit which two or more elements join.
Essential Node: Where three or more elements join.
Path: A trace of adjoining basic elements with no repition.
Branch: A path connecting two nodes.
Essential Branch: A path connecting two essential nodes.
Loop: First and last node are the same node.
Mesh: A loop that does not enclose another loop.

3.3 Nodal Analysis:


Nodal analysis is known as the node-voltage method. This is a method calculating node voltages in a planar circuit. It utilizes the fundamentals of KCL and Ohm's Law.

3.3.1 Procedure

1. Identify each essential node.
2. Pick and label a reference node (usually ground), then label the node voltages at the remaining essential nodes.
3. Write KCL equations for each non-reference essential node.

4. Solve equations.
5. Find voltages, power and current at each node.

3.3.2 NA Example

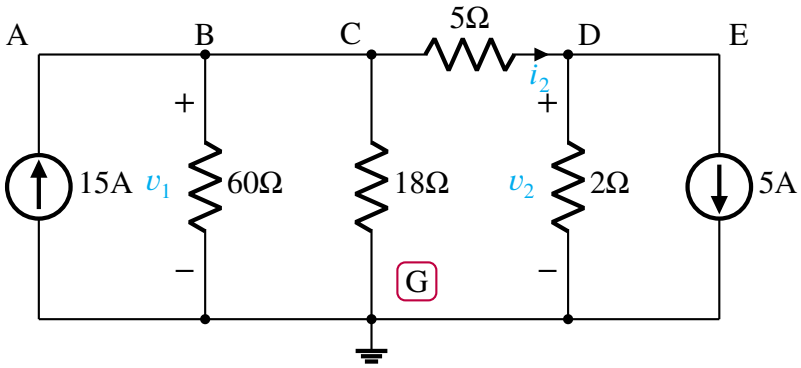

Voltage at Node C:

$$\begin{aligned} 15 &= \frac{V_C - 0}{60} + \frac{V_C - 0}{15} + \frac{V_C - V_D}{5} \\ &= \frac{V_C}{60} + \frac{V_C}{15} + \frac{V_C - V_D}{5} \\ 15 &= V_C(\frac{17}{60}) + V_D(-\frac{1}{5}) \end{aligned}$$

Voltage at Node D:

$$\begin{aligned} \frac{V_C - V_D}{5} &= \frac{V_D - 0}{2} + 5 \\ -5 &= \frac{V_D - V_C}{5} + \frac{V_D}{2} \\ -5 &= V_C(-\frac{1}{5}) + V_D(\frac{7}{10}) \end{aligned}$$

Solving with GC:


$$V_C = 60V$$

$$V_D = 10V$$

3.4 Super Node:

A circuit with a voltage source that does not have a series resistance that would permit a conversion to a current source. In this situtation there are two options that can be done:

1. Pace a comparitavely small resistor in series to the voltage source.
2. Use the supernode approach; That is to assume a virtual S/C across the voltage source.

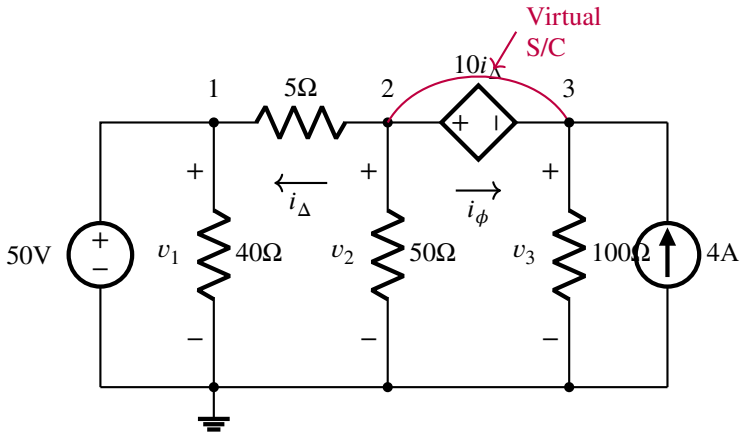

At Node 2:

$$\frac{V_3-0}{100}+\frac{V_2-0}{50}+\frac{V_2-V_1}{5}=4$$
$$V_3(\frac{1}{100})+V_2(\frac{11}{50})+V_1(-\frac{1}{5})=4$$

Using KVL:

$$\begin{aligned}V_3 &= V_2+10i_\phi\\ V_1 &= 50V\\ i_\phi &= \frac{V_2-V_1}{5}\\ &= \frac{V_2-50}{5}\\ V_3 &= V_2+10(\frac{V_2-50}{5})\\ &= 3V_2-100\end{aligned}$$

Solving for Node voltages:

$$V_1 = 50V$$
$$V_2 = 60V$$
$$V_3 = 80V$$
$$i_\phi = 2A$$

4 Mesh Analysis

4.1 Branch Current Analysis:

1. Assign a distinct current of arbitrary direction to each direction.
2. Polarities of circuit elements are determined by assumed current direction.
3. Apply KVL around each loop.
4. Apply KCL at each essential node.
5. Solve for current values.

4.2 Mesh Analysis:


Extension of the above method. It defines currents in such a way that there is no need to apply KCL.

- Define currents for each mush of the networks.
- Branch current is now expressed in terms of unique mesh currents.

4.2.1 Procedure

1. Assign distinct current to each mesh. The easiest way is have them all going in the same direction.
2. Indictate polarities through the loop with respect to current direction.
3. Apply KVL on each mesh.
4. Solve for currents.

4.2.2 Example

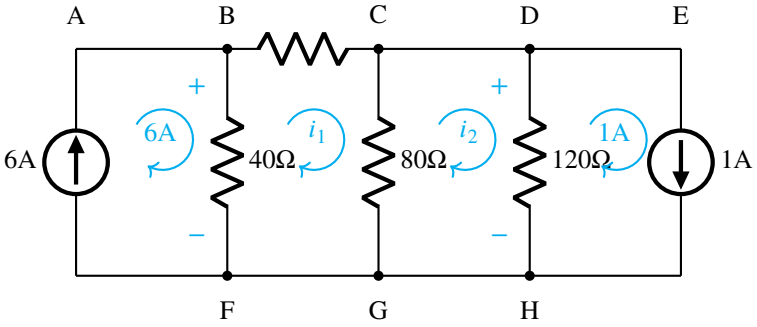

Mesh GFBCG:

$$\begin{aligned} 0 &= 40(i_1 - 6) + 8i_1 + 80(i_1 - i_2) \\ 240 &= 128i_1 - 80i_2 \end{aligned}$$

Mesh GCDHG:

$$\begin{aligned} 0 &= 80(i_2 - i_1) + 120(i_2 - 1) \\ 120 &= -80i_1 + 120i_2 \end{aligned}$$


Solving with GC gives:

$$i_1 = 3A$$

$$i_2 = 1.8A$$


4.3 Super Mesh:

Where an independent current has no parrallel resistor to convert to a voltage source. Assume a virtual O/C and apply the mesh analysis method. Add constraint for KCL at its node.

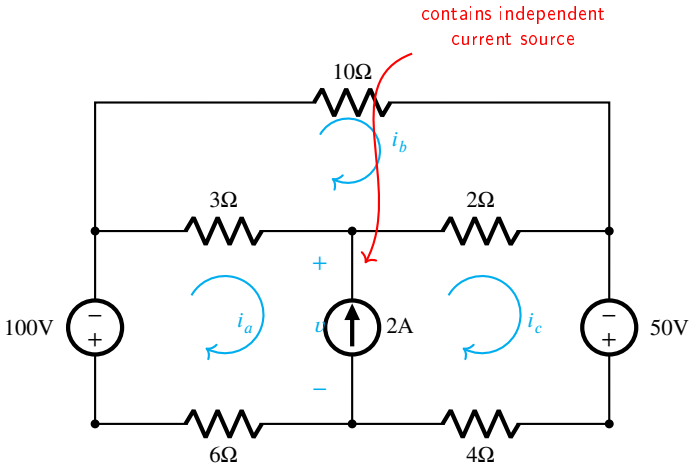


5 Equivalent Circuits

5.1 Source Conversion:

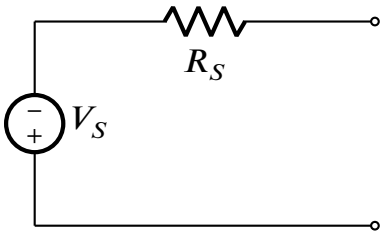

$$V_S = I_S R_S$$

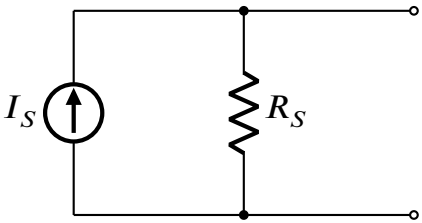


$$I_S = \frac{V_S}{R_S}$$

A voltage source in series with a resistor has an equivalent current in parrallel. There are two main types of equivalent circuits. Thévenin equivalent is with

voltage, where as the Norton equivalent deals with current. Using the rules in the image above, they can be converted between.

5.1.1 Thévenin Circuits

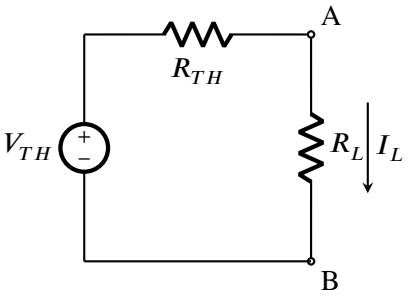

If R_L is infinitely large, causing an O/C $V_{TH} = V_{AB}$. Else if R_L is 0, it causes a S/C, making $R_{TH} = \frac{V_{TH}}{I_L}$.

5.1.2 Norton Circuits

Usualy a Norton equivalent circuit is easier too calculate the S/C current then O/C voltage. However most of the time it is easier to convert from the Thévenin circuit.

5.2 Thévenin Equivalent Resistance:

Only works with independent sources. The short cut method:


- Deactivate all power sources
  - Ideal voltage sources become S/C
  - Ideal current sources become O/C
  - Internal resistance sources are included in circuit
- Resistance is calculated from the reference terminals

5.3 Maximum Power Transfer:

Important parameters describing the power transfer from source too load. It tells us 2 main things:

1. Amount of power transferred

2. Efficiency

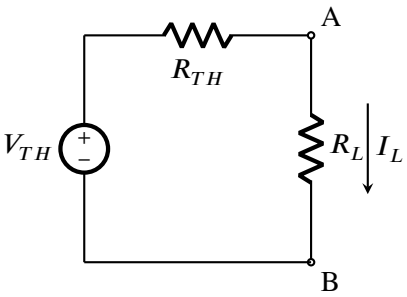

$$P_L = (\frac{V_{TH}}{R_{TH} + R_L})^2 \times R_L$$

Max Power are $R_{TH} = R_L$

$$\therefore \ P_{L_{max}} = \frac{V_{TH}^2}{4R_{TH}}$$

$$\text{Eff} = \frac{P_L}{P_S} = \frac{R_L}{R_{TH}R_L}$$

5.4 Superposition Theorem:

Linear circuit systems observe the principal of superposition. That is the total system response is the sum of all individual responses.

Voltage sources are S/C
Current sources are O/C

Utilized to analyse circuits with both DC & AC components.