Objectives

- How Computer Work
- Number Systems
- Arithmetic Operations in Binary

How Computer Works

Introduction

We all have computers, and we use them for a variety of purposes, including watching videos, playing games, performing mathematical calculations, communicating with friends, and many other applications. But the fundamental question is: how do these devices actually work?

The answer lies in their electrical nature. Computers are essentially electrical devices that perform all calculations using electrical signals. The central processing unit (CPU), often referred to as the "brain" of the computer, executes these calculations. To temporarily store data while the computer is in operation, it relies on memory, specifically Random Access Memory (RAM).


Crucially, all information within a computer is represented by electrical signals. This includes data stored in memory and the instructions that the CPU executes. These electrical signals can have only two distinct states: presence, typically represented by the digit "1," and absence, represented by "0."

With this binary representation in mind, we can understand that CPU instructions are essentially sequences of 1s and 0s. This sequence of binary digits is known as machine code, which is the most fundamental level of programming language that the CPU can directly understand

CPU

A Central Processing Unit (CPU) is the brains of a computer system, it's essentially what tells the computer what to do and how to do it. A CPU is composed of circuitry, which consists of three main components: a control unit, an arithmetic/logic unit (ALU), and a register set. The control unit fetches instructions from memory, decodes them, determines the address of data stored in memory (if necessary), and then passes the data and instruction information along to the ALU for processing. The ALU performs the computation or logic required by each instruction, stores intermediate results in registers if necessary, and then sends the result back to memory where it can be accessed by other programs or written to disk. The registers are used

to hold short-term data while it is being processed by the CPU.

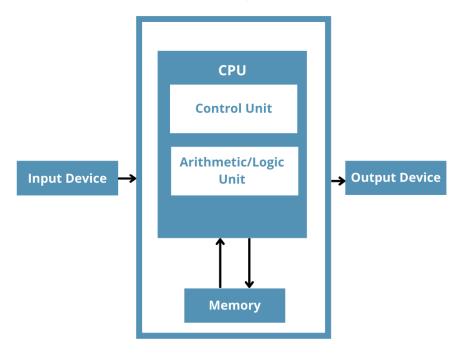

Memory

Memory is the hardware component in a computer that stores data, instructions, and calculation results for the CPU to process. There are two main types of memory:


Primary Memory

There are two main types of primary memory in a computer.RAM (Random Access Memory) stores data temporarily while the CPU is executing tasks. It operates at very high speeds to enable quick access for active programs and processing, but it's volatile - all stored data gets cleared when the computer loses power. The other type is ROM (Read-Only Memory), which contains permanent, unchangeable data like the computer's firmware and startup instructions. Unlike RAM, ROM retains its data even when the power is off, making it essential for the system's basic operations.

Secondary Memory

Secondary memory provides permanent storage for data and programs when the computer is powered off. Unlike primary memory, these storage devices retain information indefinitely until deliberately erased or overwritten. The most common types include hard disk drives (HDDs) which use magnetic platters for high-capacity storage at lower costs, and solid-state drives (SSDs) that employ flash memory for significantly faster access times without moving parts. Additional forms include optical media like CDs/DVDs for portable storage, and USB flash drives for convenient data transfer. While slower than RAM, secondary memory offers much larger storage capacities at more affordable prices, making it ideal for long-term file preservation,

software installation, and system backups.

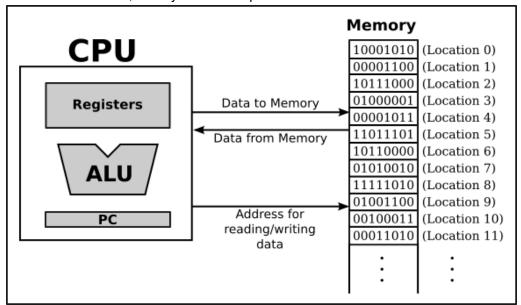

Number Systems

Number systems are methods used to represent numbers. In everyday life, we use the decimal system, which employs 10 digits to represent numbers. However, it is not the only system available. Mathematically, there are infinitely many number systems, but the most common ones are the following:

Common Number Systems

Decimal Number System

The most widely used system is the decimal system. It is a base-10 system and uses the digits: {0, 1, 2, 3, 4, 5, 6, 7, 8, 9}. Any number can be represented using only these digits, which we use daily in counting, measuring, and performing arithmetic.

Binary Number System

The binary system is used by computers. It is a base-2 system and uses only two digits: $\{0, 1\}$. To indicate that a number is in binary, we write it as $(N)_2$.

Octal Number System

The octal system is a base-8 system and uses the digits: {0, 1, 2, 3, 4, 5, 6, 7}. It is mostly used in computing and digital electronics. Octal numbers are represented with the notation (N)₈.

Hexadecimal (Hex) Number System

The hexadecimal system is a base-16 system. It uses the digits: $\{0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F\}$, where A = 10, B = 11, C = 12, D = 13, E = 14, and F = 15. This system is commonly used in computing to represent color codes, memory addresses, and machine-level data. Hex numbers are written as $(N)_{16}$.

Number System Rules

To represent numbers in a base-x system, we need x distinct digits. For example, binary (base 2) uses $\{0, 1\}$, octal (base 8) uses $\{0-7\}$, and decimal (base 10) uses $\{0-9\}$. In general, the digits used range from 0 to x-1.

Example:

In base 7, we use only these digits: {0, 1, 2, 3, 4, 5, 6}. We cannot use the digit 7 or any number greater than or equal to the base itself.

Converting Between Bases

Converting to Decimal

To convert a number from base x to decimal, multiply each digit by the base raised to the power of its position index, starting from right to left (index 0 on the right). Then sum all the results.

Formula:

If a number is represented as $(d_nd_{n-1}\dots d_1d_0)_x$, then: $(d_nd_{n-1}\dots d_0)_x=d_0\cdot x^0+d_1\cdot x^1+\dots+d_n\cdot x^n$

Examples:

• $(1011)_2 = 1 \cdot 2^0 + 1 \cdot 2^1 + 0 \cdot 2^2 + 1 \cdot 2^3 = 1 + 2 + 0 + 8 = (11)_{10}$ • $(37)_8 = 7 \cdot 8^0 + 3 \cdot 8^1 = 7 + 24 = (31)_{10}$ • $(5E)_{16} = 14 \cdot 16^0 + 5 \cdot 16^1 = 14 + 80 = (94)_{10}$

Converting from Decimal to Base X

Converting a decimal number to another base is done using repeated division by the target base. At each step, divide the number by the base, record the remainder, and then use the quotient for the next division. Continue until the quotient is zero. The converted number is the sequence of remainders read from bottom to top.

Steps:

- 1. Divide the decimal number by the base.
- 2. Record the remainder.
- 3. Replace the number with the quotient and repeat step 1.
- 4. Stop when the quotient becomes 0.
- 5. The converted number is the remainders in reverse order.

Example: Convert $(78)_{10}$ to base 8 (octal)

```
78 \div 8 = 9 remainder 6
9 \div 8 = 1 remainder 1
1 \div 8 = 0 remainder 1
```

Reading the remainders from bottom to top: 1 1 6

So,
$$(78)_{10} = (116)_8$$

Converting between Binary Octal and Hexadecimal

Conversion between binary, octal, and hexadecimal is convenient because all of them are based on powers of 2:

- $8 = 2^3$
- $16 = 2^4$

The highest digit in the octal system is 7, which is represented in binary as **111**. In hexadecimal, the highest digit is F, which equals 15 in decimal and is represented in binary as **1111**. means:

- Each digit in octal corresponds to exactly 3 binary digits.
- Each digit in hexadecimal** corresponds to exactly 4 binary digits.

To convert from octal or hexadecimal to binary:

- 1. Convert each digit to its binary equivalent.
- 2. Ensure each binary group has the correct number of digits (3 for octal, 4 for hexadecimal).
- 3. If a binary group has fewer digits, pad it with zeros on the left.

For example:

- Converting (64)₈ to binary
 - $6 = (110)_2$
 - $4 = (100)_2$

The result will be then $(64)_8 = (110100)_2$

- Converting $(EC)_{16}$ to binary
 - $E->14=(1110)_2$
 - $C->12=(1100)_2$

The result will be then $(EC)_{16} = (11101100)_2$

To convert from binary to octal or hexadecimal, we simply reverse the process:

- Group the binary number into sets of 3 bits (for octal) or 4 bits (for hexadecimal), starting from the right.
- If the leftmost group has fewer than 3 or 4 bits, pad it with zeros on the left.
- Convert each group to its corresponding octal or hexadecimal digit.
- Combine the digits to get the final number.

For example:

- Convert (101110)₂ to octal
 - $(110)_2 = (6)_8$
 - $(101)_2 = (5)_8$

The result will be then $(101110)_2 = (56)_8$

- Convert (11010111)₂ to hexadecimal
 - $(0111)_2 = (7)_{16}$

```
• 1101 = 11 - > (D)_{16}
```

The result will be then $(11010111)_2 = (D7)_8$

To convert between hexadecimal and octal, we can use the binary system as an intermediate step, First, convert the number to binary, then convert the binary number to the target system (octal or hexadecimal).

Converting Between Random Systems

There are infinitely many number systems, and sometimes we need to convert between two systems that don't have a direct relationship, like base-5 and base-7.

In such cases, we use the decimal system as an intermediate:

- Convert the number from the original base to decimal.
- Convert the decimal number to the target base.

For example

Convert $(132)_5$ to base 7

- Convert to decimal $1.5^2 + 3.5^1 + 2.5^0 = 25 + 15 + 2 = 42$
- Convert $(42)_{10}$ to base-7

```
42 \div 7 = 6 remainder 0
6 \div 7 = 0 remainder 6
```

The result will be then $(132)_5 = (60)_7$

Arithmetic Operations in Binary

Introduction

We saw difference number systems and how to work with them and how we can convert from a system to another one, now we will focus on the binary system and how to do the arithmetic operation on the binary system

Storage

Storage refers to the amount of memory space used to represent data. The smallest unit of storage is a bit, which can hold a value of either 0 or 1. However, working with single bits is generally not practical, so we commonly group them. A group of 8 bits is called an octet, or more commonly a byte.

Larger units of storage include:

- Kilobyte (KB) = 1,024 bytes
- Megabyte (MB) = 1,024 KB
- Gigabyte (GB) = 1,024 MB
- Terabyte (TB) = 1,024 GB

When performing operations on a fixed-size storage type, if the result exceeds the maximum value that can be stored, we encounter a situation called overflow. This means the result "wraps around," leading to incorrect or unintended results.

Addition

Binary addition works similarly to decimal addition, but follows specific rules based on base-2 arithmetic:

```
• (0)_2 + (0)_2 = (0)_2

• (0)_2 + (1)_2 = (1)_2

• (1)_2 + (0)_2 = (1)_2

• (1)_2 + (1)_2 = (10)_2 (which is 0 with a carry of 1)

• (1)_2 + (1)_2 + (1)_2 = (11)_2 (which is 1 with a carry of 1)
```

This is similar to decimal addition: for example, 5 + 5 = 10, where the result exceeds the base (10), so we write 0 and carry over 1. In binary, when the sum exceeds base-2, we also carry the extra value to the next position.

Example

```
110
+ 10
-----
1000
```

Multiplication

Binary multiplication is a straightforward operation and works similarly to multiplication in the decimal system. However, since binary has only two digits (@ and 1), the multiplication rules are much simpler:

```
• (0)_2 \times (0)_2 = (0)_2

• (0)_2 \times (1)_2 = (0)_2

• (1)_2 \times (0)_2 = (0)_2

• (1)_2 \times (1)_2 = (1)_2
```

Example

```
1101
x 110
-----
0000
1101*
+ 1101*
-----
1001110
```

Division

Binary division is similar to long division in the decimal system. The process involves determining how many times the divisor can fit into parts of the dividend, then subtracting and bringing down the next bit. It uses

basic subtraction and shifting.

The key binary division rules are:

```
• (1)_2 \div (1)_2 = (1)_2
```

•
$$(0)_2 \div (1)_2 = (0)_2$$

Division by 0 is undefined (just like in decimal)

Example

Let's divide $(110)_2$ by $(11)_2$, which is $6 \div 3$ in decimal:

```
110 | 11
11 | -----
---- | 10
00 |
0 |
0 |
----- |
000 |
```

We get a result of $(10)_2$, which represents 2 in decimal. The result is correct.

Subtraction

Binary subtraction can be a bit tricky. Although the rules are simple, difficulties can arise especially when subtracting a larger number from a smaller one or when borrowing is required.

Here are the basic rules for binary subtraction:

```
• (0)_2 - (0)_2 = (0)_2
• (0)_2 - (1)_2 = (1)_2 requires borrowing (just like in decimal subtraction)
• (1)_2 - (0)_2 = (1)_2
• (1)_2 - (1)_2 = (0)_2
```

Example

Doing the following soubstraction $(1101)_2 - (1011)_2$ which is $_{13}$ - $_{11}$ in decimal

```
1101
- 1011
-----
= 0010
```

We get a result of $(10)_2$ which represents 2 in decimal. The result is correct. Now lets try the following soubstraction $(11)_2 - (100)_2$ which is $_{3}$ - $_{4}$ in decimal


```
11
- 100
```

1111111101

We find our self doing infinite borrowing and getting incorrect results, To solve these issues, scientists introduced new representations for negative numbers in binary, such as sign-and-magnitude, 1's complement, and 2's complement.

Sign-and-Magnitude Representation

This representation focuses on storing numbers using a fixed number of bits, where the leftmost bit (the most significant bit) is used as the sign bit. It is 0 if the number is positive and 1 if the number is negative.

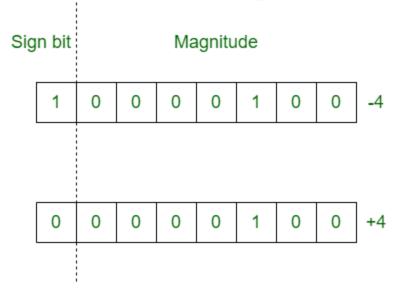

Before representing a number using this method, we must first decide how many bits will be used for storage. The range of values that can be represented is determined by the following inequality:

$$-2^{n-1}+1 < m < 2^{n-1}-1$$

Where n is the total number of bits, and m is the number to represent. Once the bit size is chosen:

- 1. Set the sign bit to 1 if the number is negative, or 0 if it is positive.
- 2. Convert the absolute value of the number to binary and place it in the remaining bits.

However, sign-and-magnitude representation is not ideal for performing arithmetic operations. It introduces complexity, especially when adding or subtracting signed numbers

1's Complement Representation

The 1's complement representation is similar to sign-and-magnitude, as it also reserves the most significant bit (MSB) as the sign bit:

- ø indicates a positive number
- indicates a negative number
 Before representing a number using this method, we must first decide how many bits will be used for storage using the same previous equation:

$$-2^{n-1} + 1 < m < 2^{n-1} - 1$$

Once the bit size is chosen:

- 1. Set the sign bit to 1 if the number is negative, or 0 if it is positive.
- 2. If the number is positive we write it in binary without any change
- 3. If the number is negative we first start by writing it absolute value on binary then we invert the bits we turn 0 to 1 and 1 to 0.

Example

+5 → 0101
 -5 → invert 0101 → 1010

The limitation of this representation is that it has two forms of zero: 0000 (+0) and 1111 (-0). Additionally, arithmetic operations are slightly more complex due to carry handling.

However, 1's complement can help simplify subtraction. For example, instead of performing

$$(0100)_2 - (0111)_2$$

we can convert the subtraction into an addition by using the 1's complement of the second number:

$$(0100)_{C1} + (1000)_{C1}$$

This way, subtraction becomes an addition of the number and the 1's complement of the subtrahend. After performing the addition, if the sign bit (the most significant bit) is 1, it means the result is negative. In 1's complement, to get the actual value, we apply the 1's complement again to the result. If the sign bit is 0, the result is positive, and we keep it as it is.

Example

Doing the following soubstraction $(11)_2-(100)_2$ which is $_3$ - $_4$ in decimal it become $(0011)_{C1}+(1011)_{C1}$

```
0011
+ 1011
------
1110
```

The sign bit is $_1$, so the result is negative. To get the actual value, we apply the 1's complement: we invert each bit and then add the negative sign. This gives us $_{-(0001)}$, which represents $_{-1}$ in decimal the correct result.

2's Complement Representation

The 2's complement representation is the most commonly used method for representing signed binary numbers, especially in modern computers. Like 1's complement, it also uses the most significant bit (MSB) as the sign bit:

- ø indicates a positive number
- 1 indicates a negative number

Before representing a number using this method, we must first decide how many bits will be used for storage, using the following equation:

$$-2^{n-1} < m < 2^{n-1} - 1$$

Once the bit size is chosen:

- 1. If the number is positive, we write its binary representation directly.
- 2. If the number is negative, we:
 - Convert the absolute value of the number to binary
 - Invert each bit (1's complement)
 - Add 1 to the result

This final binary value represents the negative number in 2's complement.

Example

- +5 → 0101
- -5:
 - Start with 0101
 - Invert: 1010
 - Add 1: 1011 \rightarrow -5 is 1011 in 2's complement

Unlike 1's complement, 2's complement has only one representation for zero: 0000. This eliminates ambiguity and simplifies arithmetic operations.

In 2's complement, subtraction becomes addition by using the 2's complement of the subtrahend. For example, instead of doing:

$$(0011)_2 - (0100)_2$$

We compute:

$$(0011)_{C2} + (1100)_{C2}$$

Here, 1100 is the 2's complement of 0100 (which represents -4).

Example:

Doing the following soubstraction $(11)_2-(100)_2$ which is 3 - 4 in decimal it become $(0011)_{C2}+(1100)_{C2}$

```
0011
+ 1100
-----
1111
```

The result is 1111, the sign bit is 1, so the result is negative. To find the actual value we apply 2's complement: we invert each bit we get 0000 then we add 1 we get 0001 finally we put the negative sign. This gives us -(0001), which represents -1 in decimal the correct result.

Floating Point Numbers

So far, we've learned how to represent and convert integers between binary and decimal. However, it's also possible to work with floating point numbers that is, numbers with a fractional part.

Binary to Decimal

Floating point numbers are written in binary the same way as in decimal, with a binary point.

For example: 1.001 in binary.

To convert a binary floating point number to decimal:

- 1. Convert the part before the binary point as usual.
- 2. Convert the part after the binary point by multiplying each digit by 2^{-n} , where n is the position of the digit after the point (starting from 1).

Example:

Convert binary 1.101 to decimal:

- Part before the point: $1 \times 2^0 = 1$
- Part after the point:
 - 1 at position 1: $1 \times 2^{-1} = 0.5$
 - 0 at position 2: $0 \times 2^{-2} = 0$
 - 1 at position 3: $1 \times 2^{-3} = 0.125$

Total is 1 + 0.5 + 0 + 0.125 = 1.6251

Decimal to Binary

To convert a floating point number from decimal to binary:

- 1. Convert the part before the decimal point as usual, using successive division by 2.
- 2. Convert the fractional part, using repeated multiplication by 2.

For the fractional part:

- Multiply the decimal fraction by 2.
- The integer part of the result becomes the next binary digit.
- Take the fractional part of the result, and repeat the multiplication.
- Continue this process until the fraction becomes 0, or until you reach the desired number of bits.

Example:

Convert 10.625 to binary:

1. Integer part:

```
10 \div 2 = 5 remainder 0

5 \div 2 = 2 remainder 1

2 \div 2 = 1 remainder 0

1 \div 2 = 0 remainder 1
```

The result is 1010

2. Fractional part (0.625):

```
0.625×2=1.25 keep 1, continue with 0.25
0.25×2=0.5 keep 0, continue with 0.5
0.5×2=1.0 keep 1, stop (fraction is now 0)
```

The result is 101 we read from top to bottom We get as final result $(10.625)_{10} = (1010.101)_2$

Remark

Some decimal fractions (like 0.1) cannot be exactly represented in binary, they result in infinite binary fractions, to handle this, we typically limit the number of bits used after the binary point to a fixed size (e.g., 4 or 8 bits), depending on the precision needed.