

INSTRUCTIONS


KG

NO. K-311

DATE 12/18/81

K-311 OMNI II MOUNTING SPACER
FOR OR-6 SPORT CARRIER, OR-15 TOURING CARRIER
OS-50 SISSY BAR

YAMAHA XJ-650 RH SECA "82"

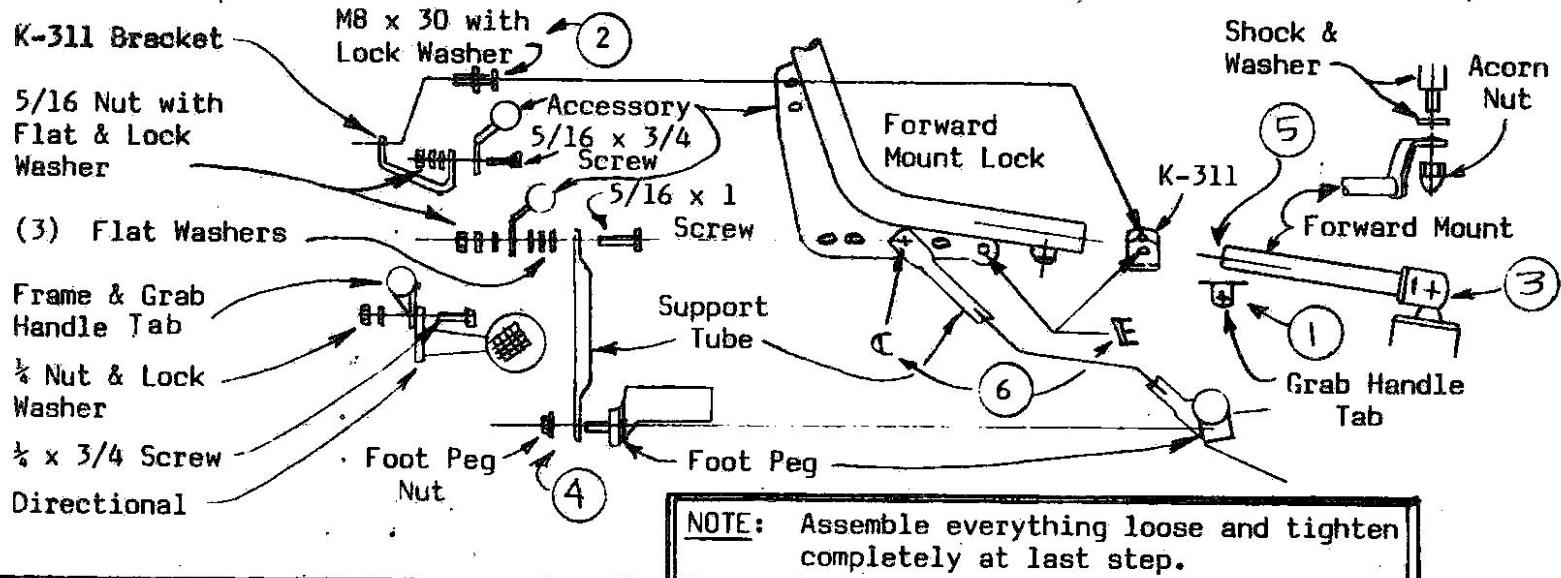

- ① Open seat, remove both grab handles and discard. Remove directionals from rear and locate at grab handle tabs, using hardware shown.
- ② Attach K-311 bracket at original directional mounting holes using hardware shown.
- ③ Attach forward mounts as shown with washer behind mount.
- ④ Attach support tube to foot peg stud.
- ⑤ Spread or narrow accessory to match width at forward mounts and slide onto mounts.
- ⑥ Assemble hole "E" in accessory to K-311 bracket and assemble support tube at Slot "C" in accessory using hardware shown.
- ⑦ Tighten all hardware completely including OR-15 cross rail screws or OS-50 pad mounting screw.


USE CAUTION WHEN OPENING SEAT TO AVOID DAMAGING TAIL FAIRING.

NOTE: MAXIMUM LOAD FOR CARRIERS IS 30 LBS - 13.6 KG. MAXIMUM OVERHANG OF LOAD OFF REAR OF CARRIER NOT TO EXCEED 3 INCHES - 76.2 MM.

IT IS RECOMMENDED THAT THESE PRODUCTS BE CLEANED AND WAXED REGULARLY TO PRESERVE FINISH.

PARTS LIST

(2) K-311 Brackets	(2) $\frac{1}{4}$ x 3/4 Screws	(2) 5/16 x 1" Screws
(2) Tube Supports	(2) $\frac{1}{4}$ Lock Washers	(10) 5/16 Flat Washers
(2) 10" Forward Mounts	(2) $\frac{1}{4}$ Nuts	(6) 5/16 Lock Washers
(4) 5/16 Nuts	(2) 5/16 x 3/4 Screws	(2) M8 x 30 MM Screws

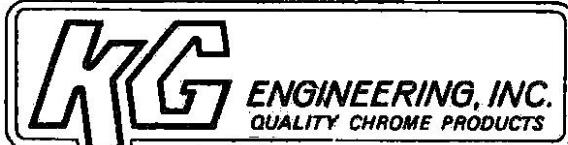

CAUTION

The motorcycle operator should be aware that upon installation of case guard there may occur limitations in cornering ability and change in handling characteristics of the motorcycle when making a deep turn.