


# Attach the thermoformable palm mesh

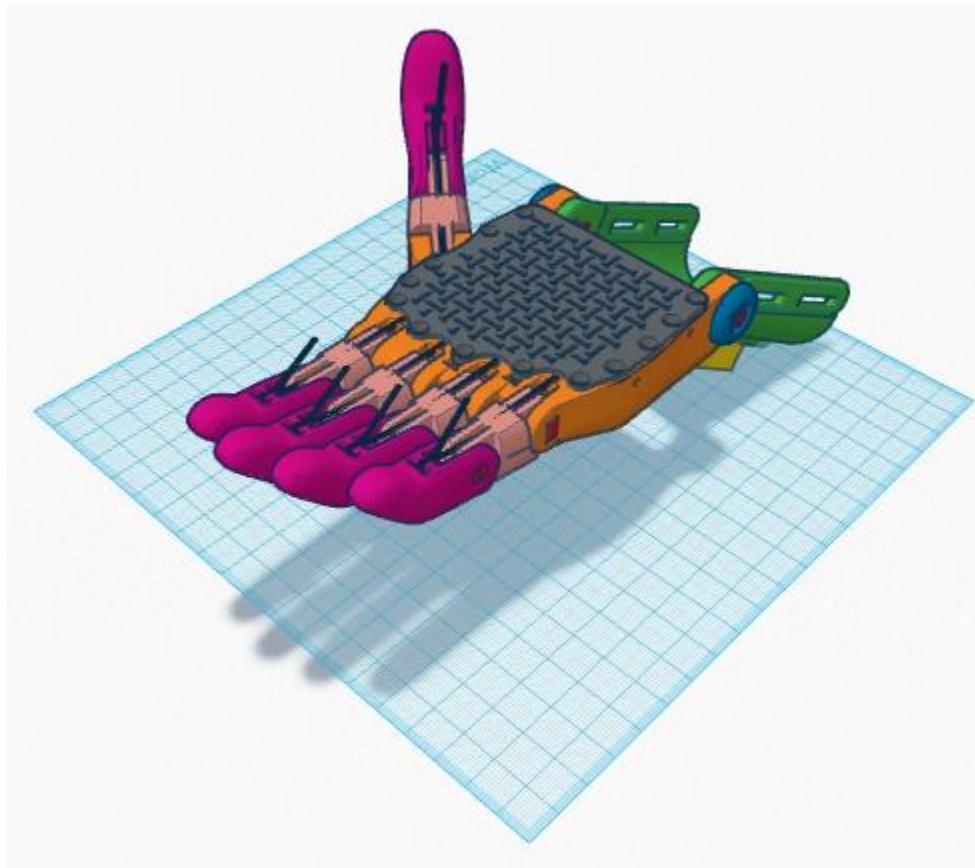

Screw the palm mesh to the palm using 13 countersunk wood screws.