


Attach index finger

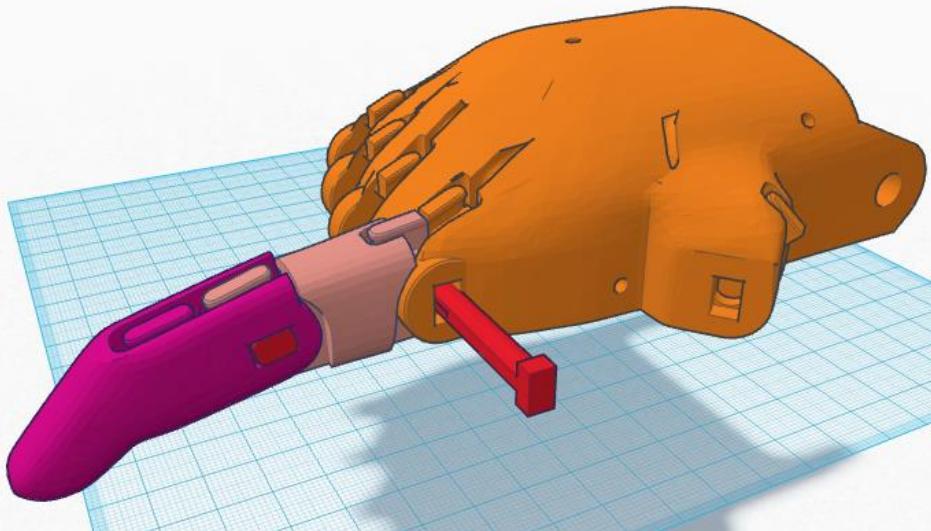

If you can't insert the pin try filing a 45° chamfer on the tip of the pin then try again.

Attach index (short) finger using long knuckle pin.

Before inserting the pin ensure that its rectangular head will fit in the rectangular hole in the palm. If necessary file or sand the pin head to fit.

Using pliers firmly grip the rectangular end of the long knuckle pin. Push pin through till it almost appears in the joint slot for the middle finger. Alternatively, hold the pin with long nose pliers and gently tap the head of the pin using a hammer.