


Attach the wrist pins to the gauntlet

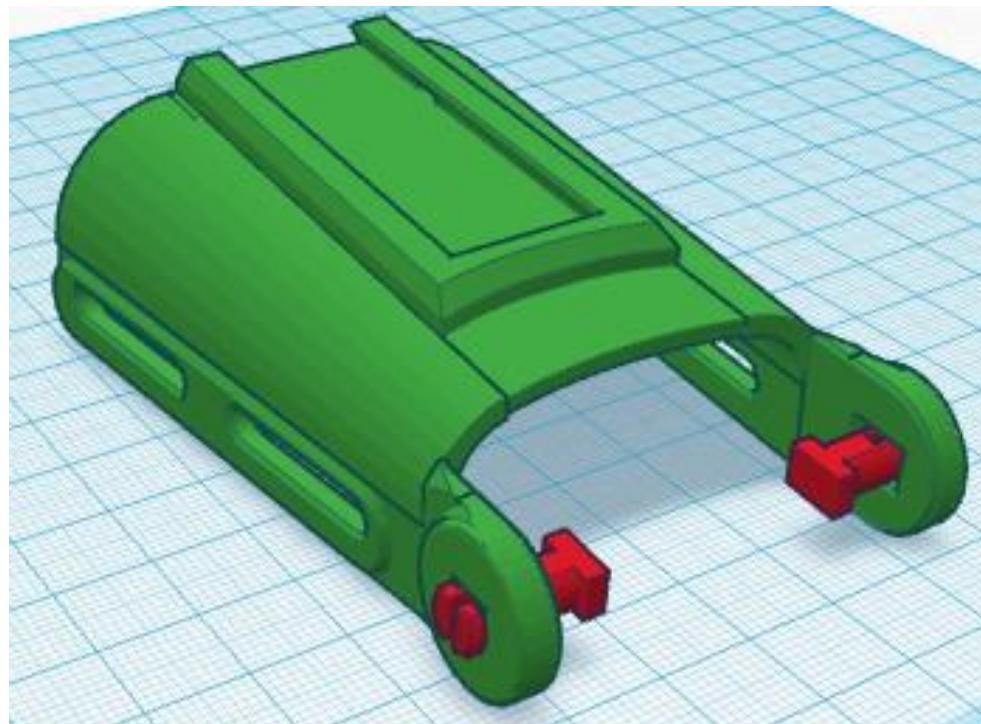

Press the wrist pins into the rectangular holes in the gauntlet hinge. The pins need only protrude a short distance ... don't push them all the way in.

Note that the actual gauntlet used will look slightly different to the picture as it is printed flat then thermoformed (bent under heat) using hot water.