


Attach the pinkie finger

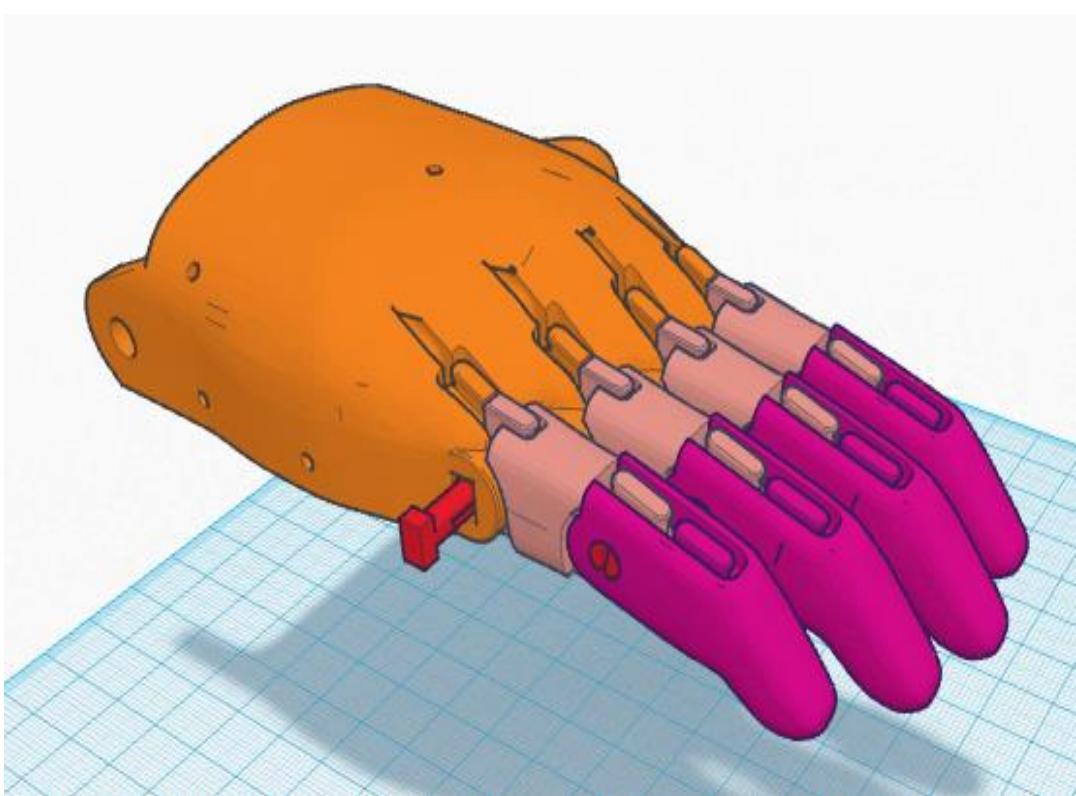

Before inserting the other short knuckle pin ensure that its rectangular head will fit in the rectangular pinkie finger hole in the palm. If necessary file or sand the pin head to fit.

Press the pin into the rectangular hole for the pinkie finger using the pliers. Once the tip of the pin is in place insert the pinkie finger (short) into its joint slot then push the pin in fully. You may need to use a hammer to finish this step.