


ZYN ZONE 2.1 - SLATWALL

SPECIFICATION AND INSTRUCTIONS

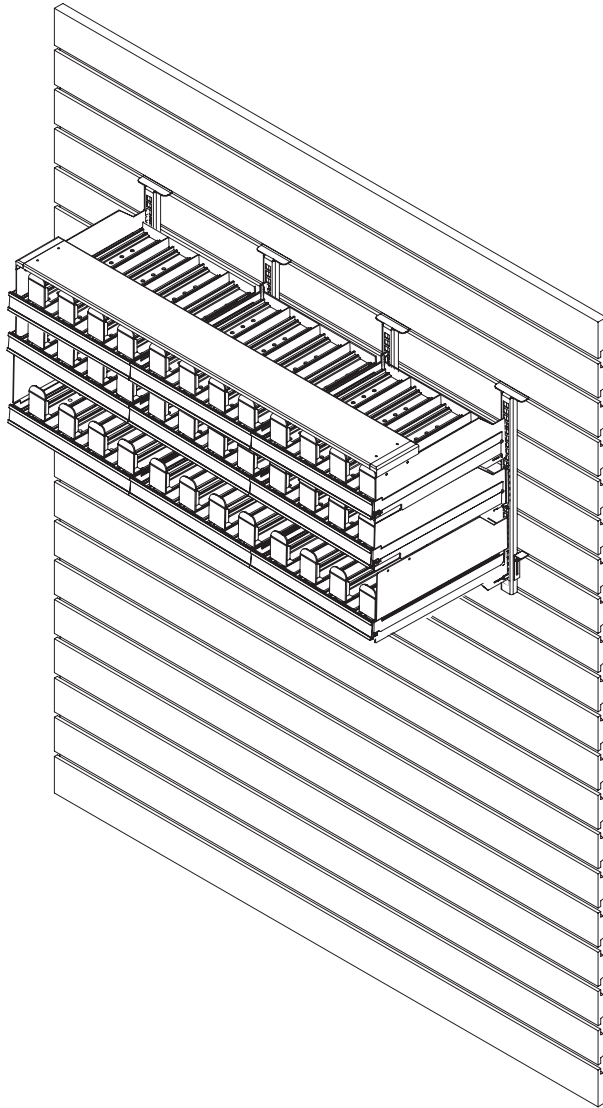


For Video Instructions Visit:

<https://www.benchmarc.com/swedishinstructions/>




We Invent Displays


4 SKU Shelves

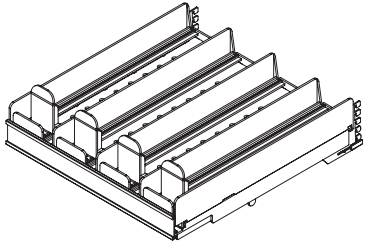


5 SKU Shelves

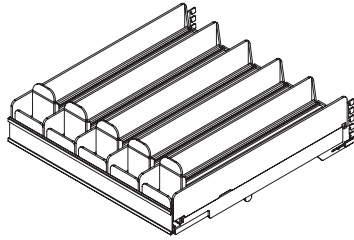


Roll Shelf Encasing

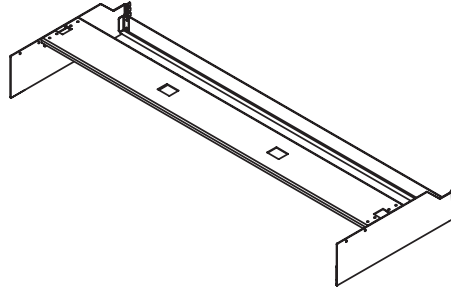


Shroud

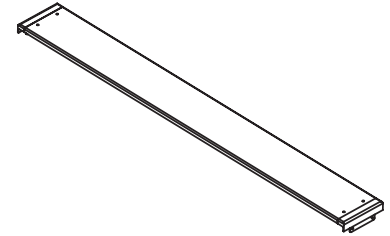


Roll/Can Shelves

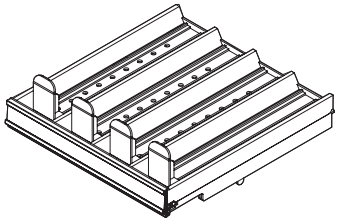


Jumper Cables

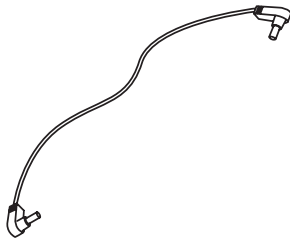


Power Supply

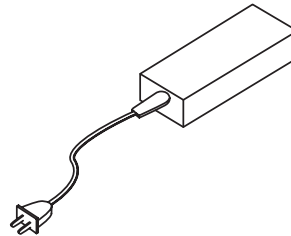


Slatwall Upright




Screws

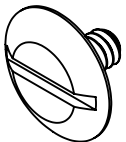


Left Slatwall Bracket

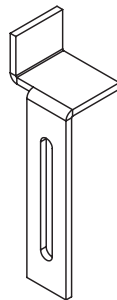

Step 1: Attach slatwall uprights in desired position spacing each other 10.5in apart.

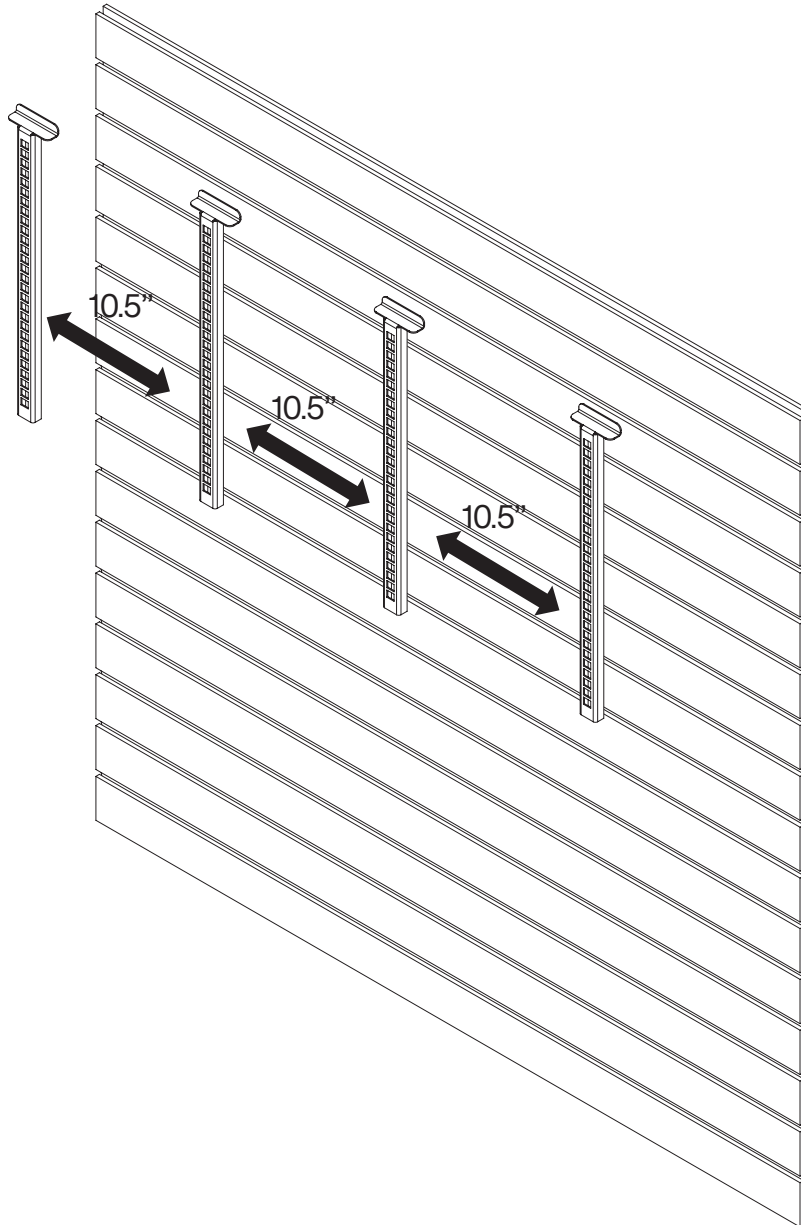



Step 2: Attach the slatwall bracket into the lowest threaded hole.

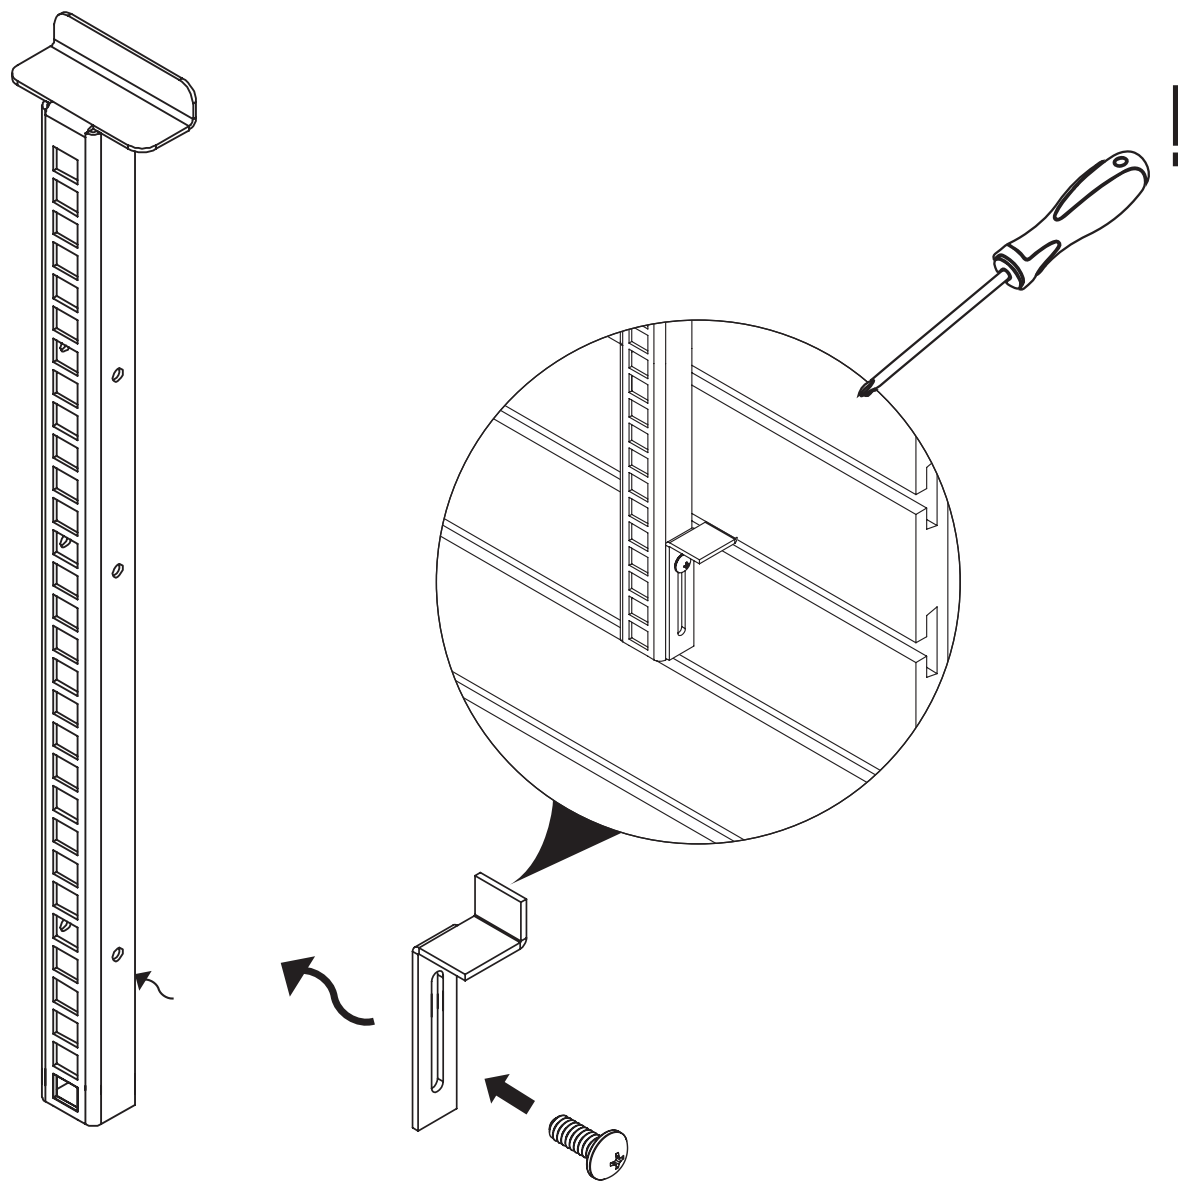


Step 3: Start by placing the shelves from the bottom to top. Install Roll Shelves onto the slotted uprights, engage the locks, and connect the jumper cables to the bottom of each shelf.

INSTALLATION NOTES:


- Install Roll Shelves onto the slotted uprights making sure that the lock is lined up to engage in the bottom most slot portion in the bracket. See example picture below. Once shelves are placed, engage the locks and connect the jumper cables to the bottom of each shelf.

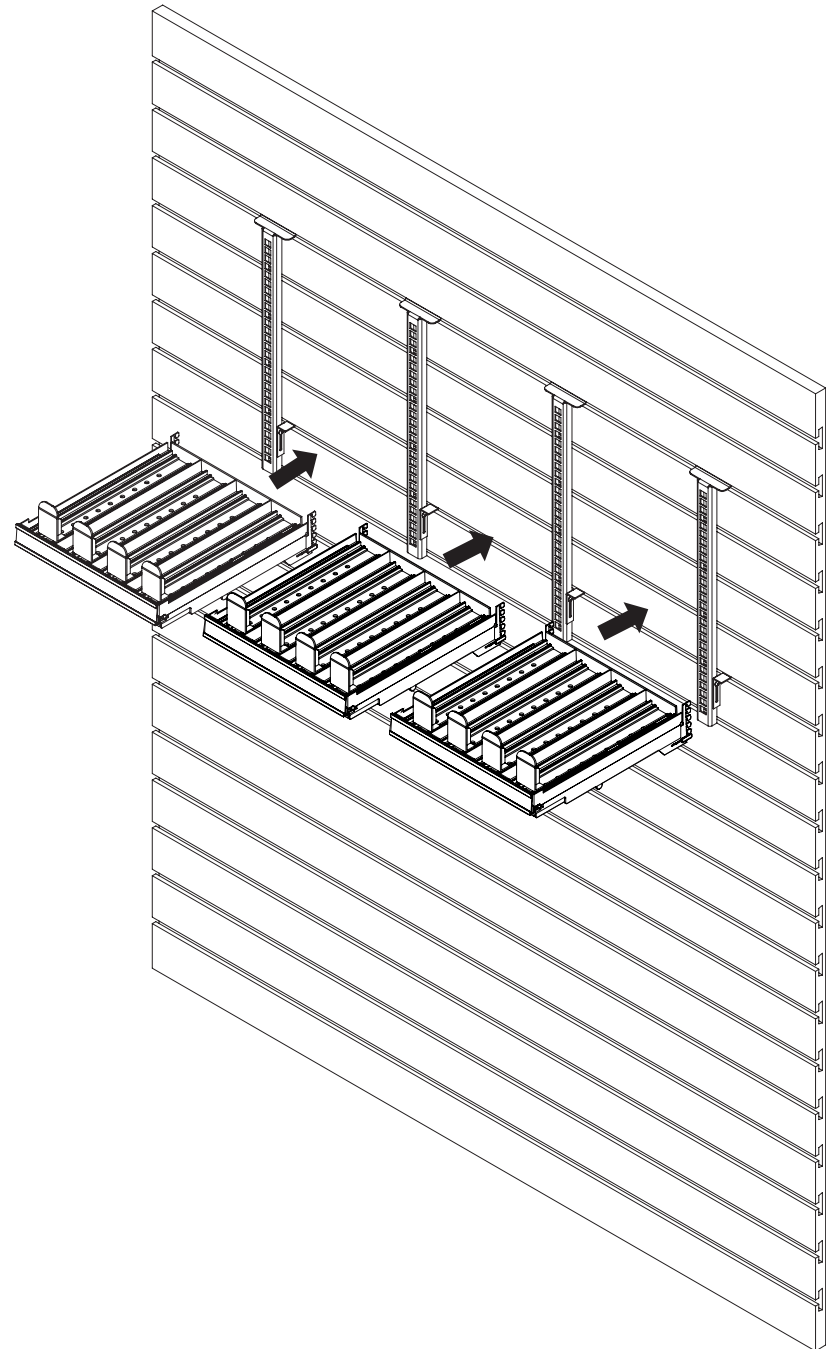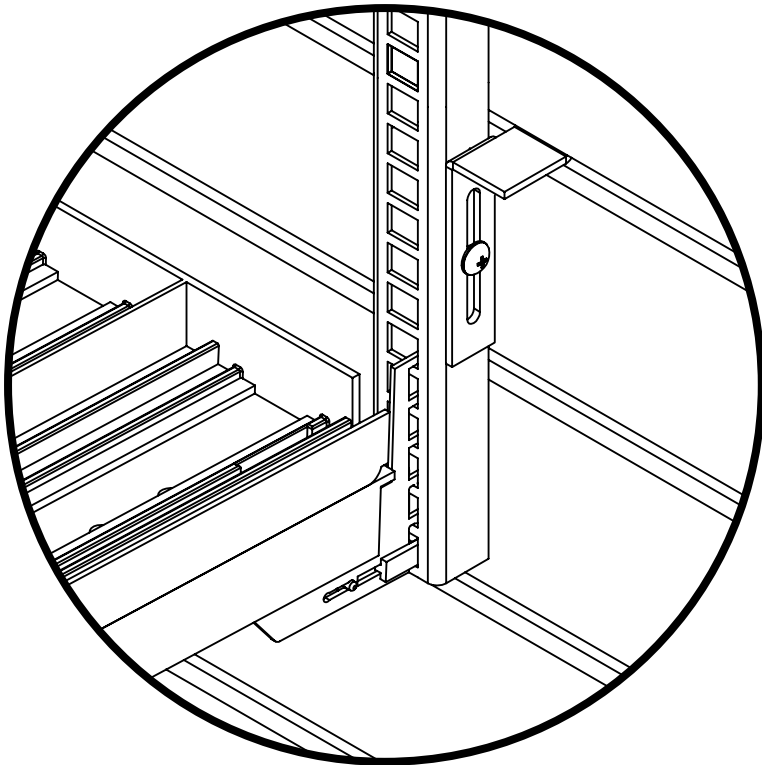



Engage the locks to secure the shelf into place on both the left and the right side of the shelf.

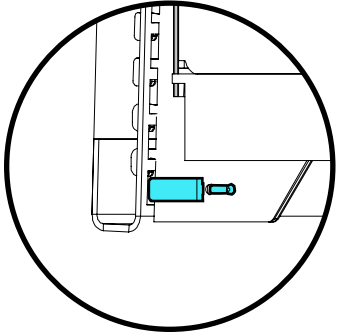


Unlocked

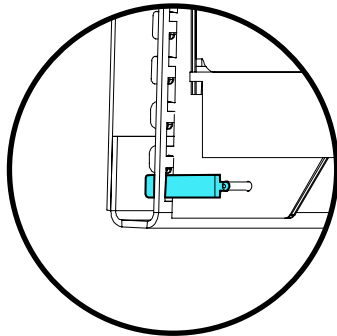


Locked

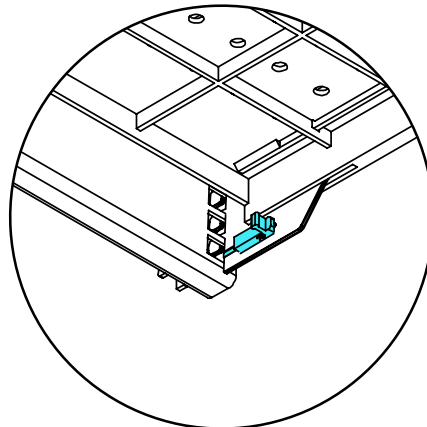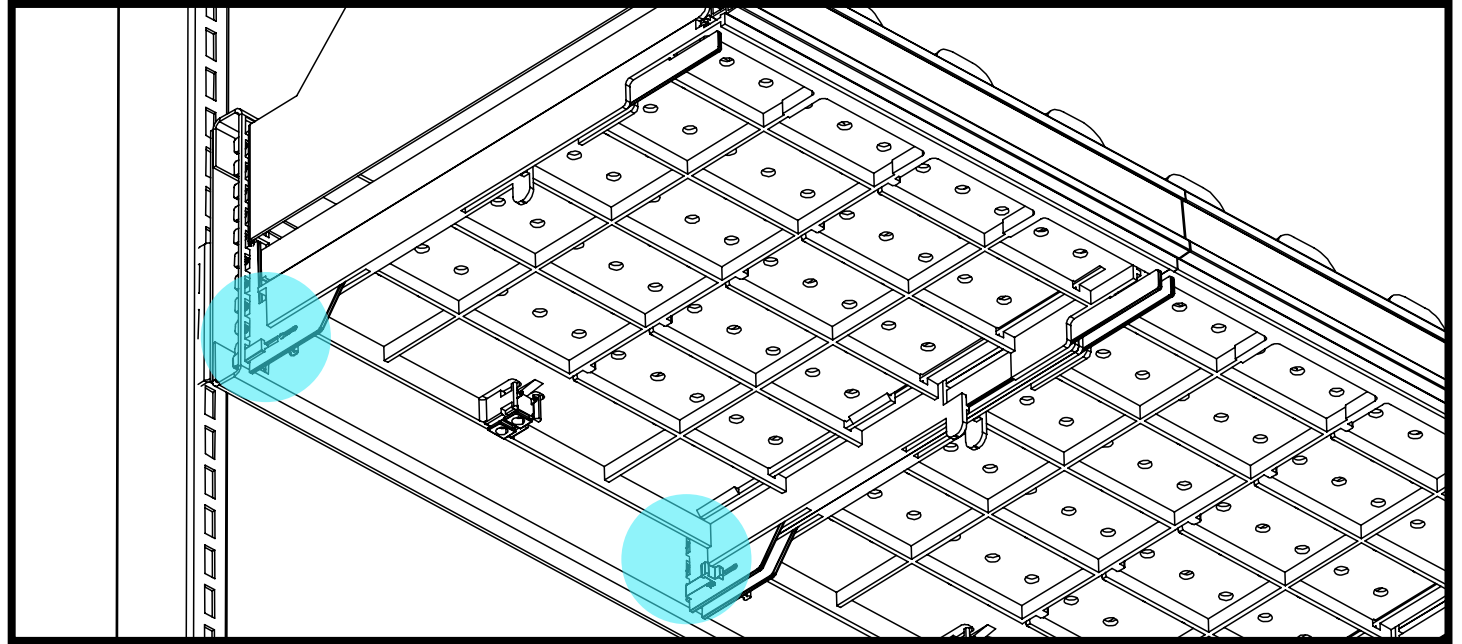

Unengaged

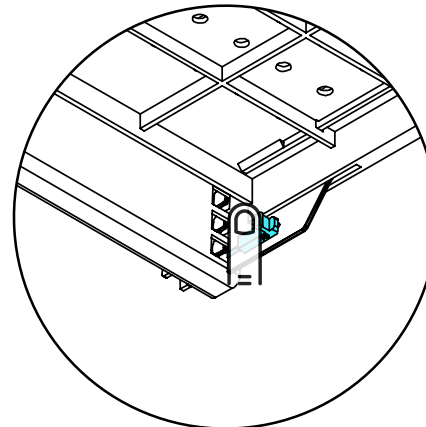


Push


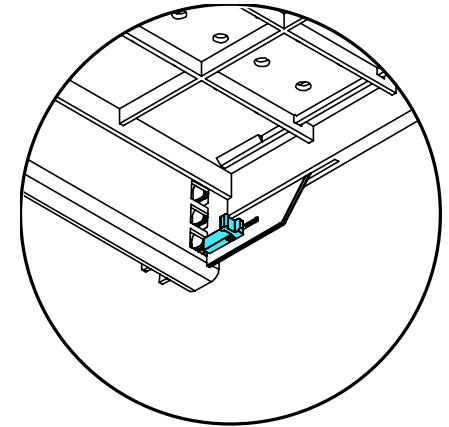


Engaged



Insert jumper cables on each shelf and connect to each shelf layer as you build up.

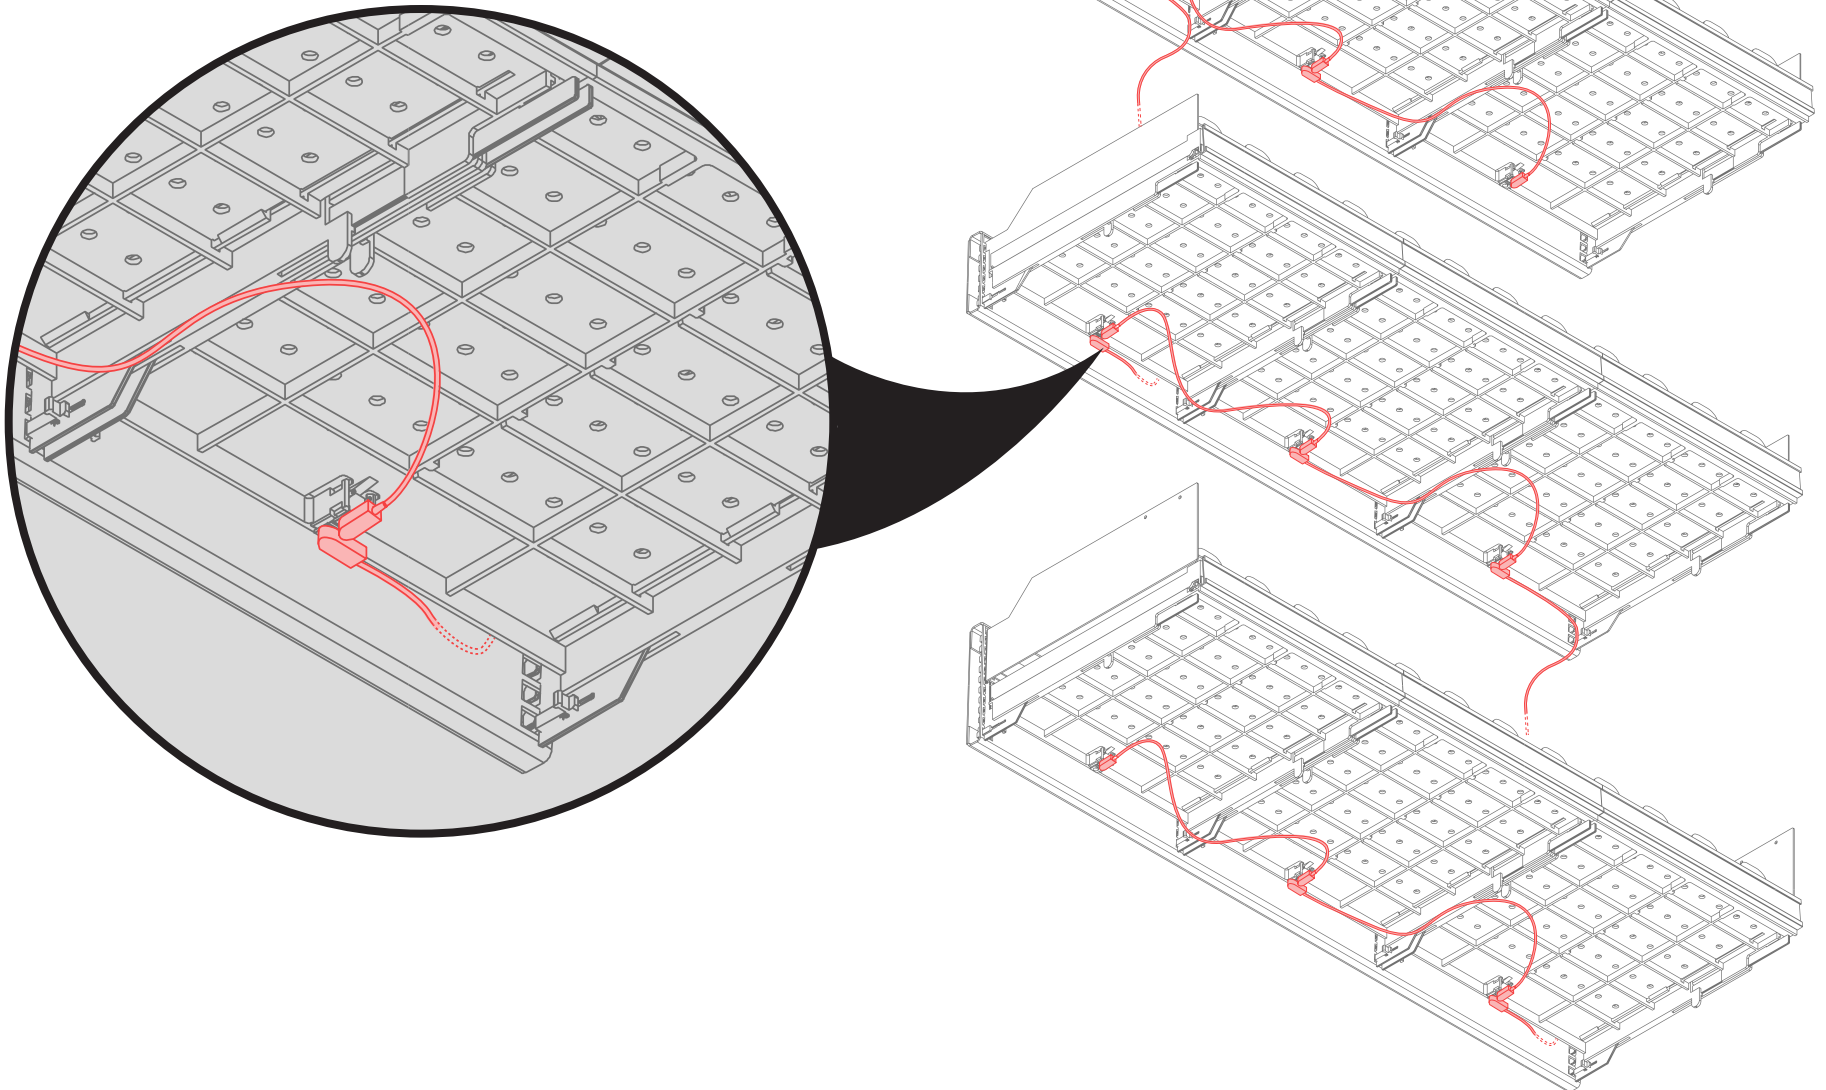



Step 4: Place the Roll Shelf encasing into the slotted uprights.

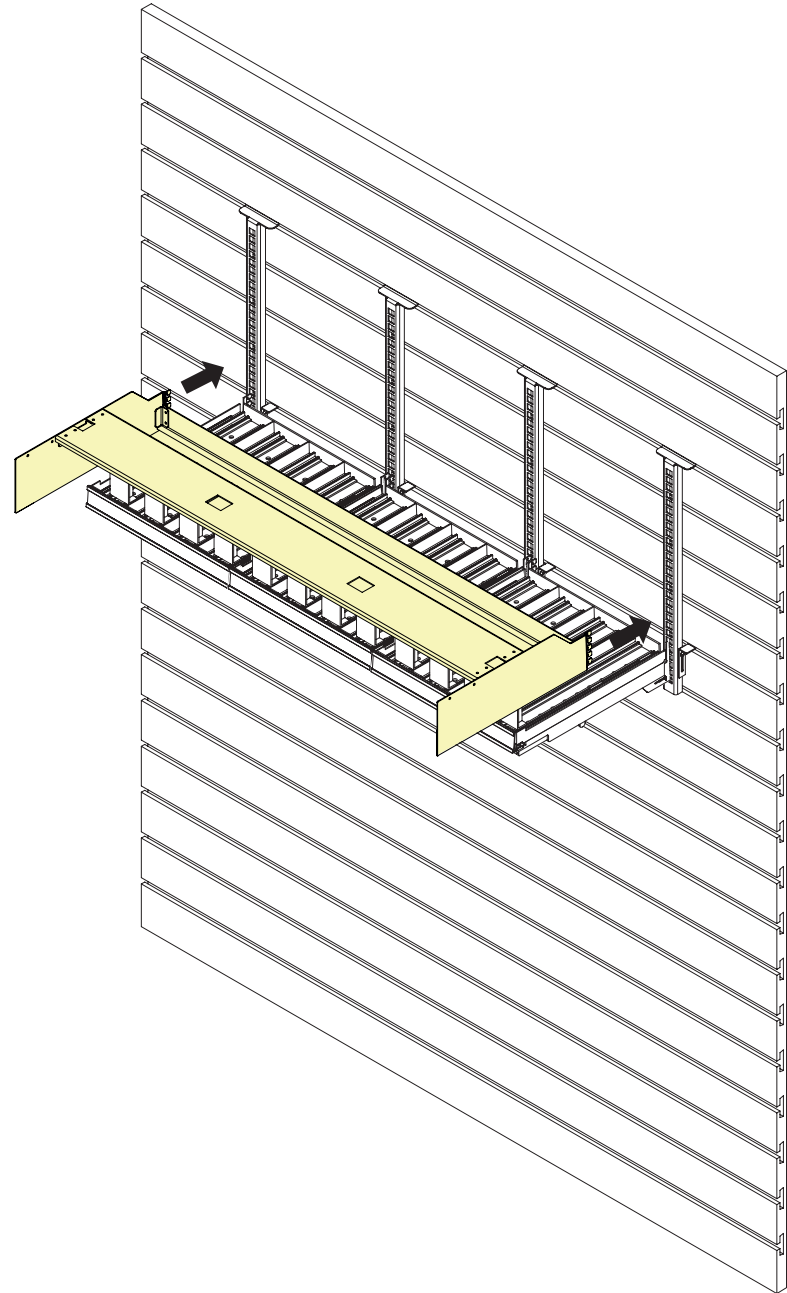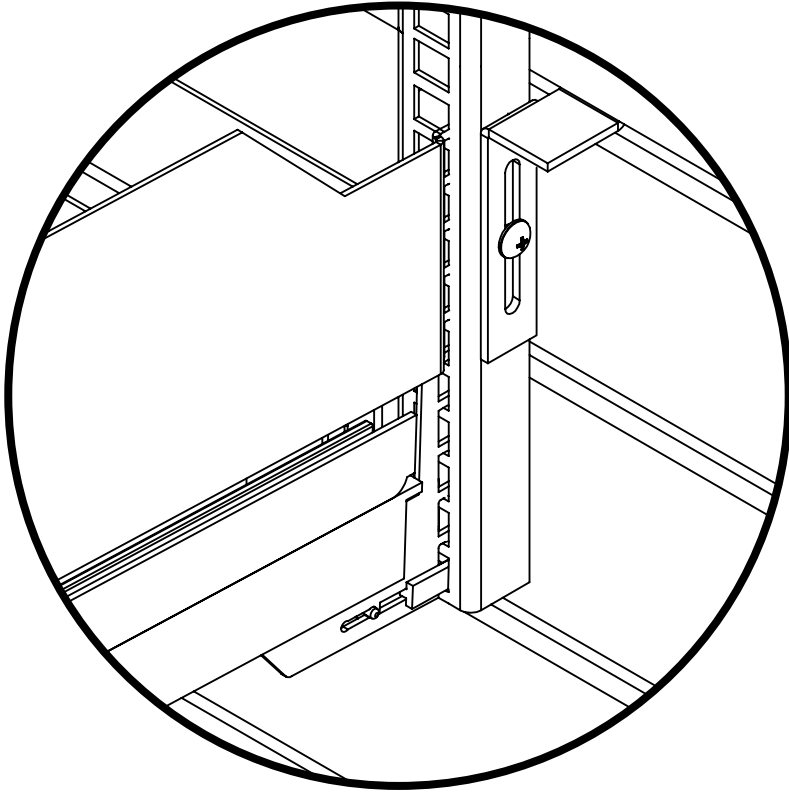


Step 5: Install second row Can Shelves onto the slotted uprights and engage the locks, and connect the jumper cables to the bottom of each shelf.

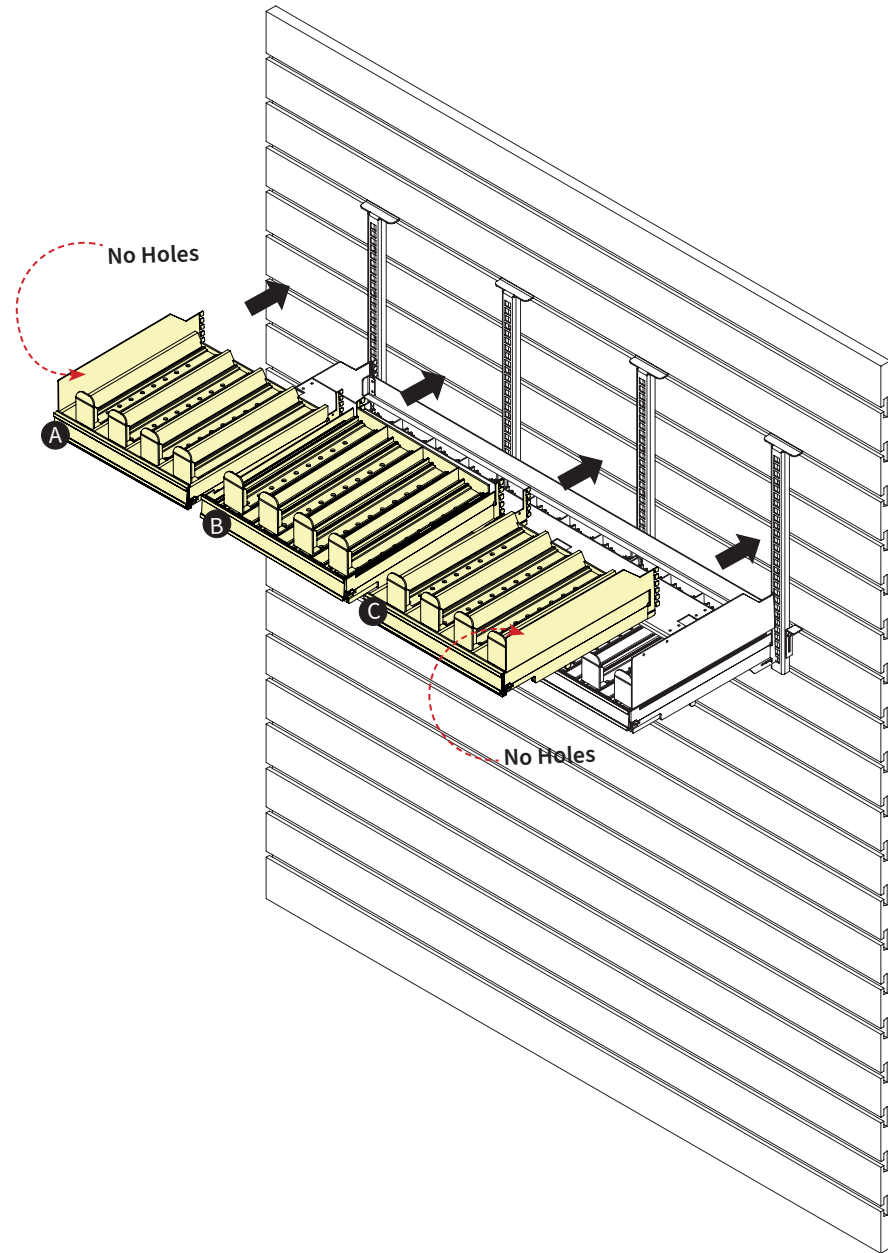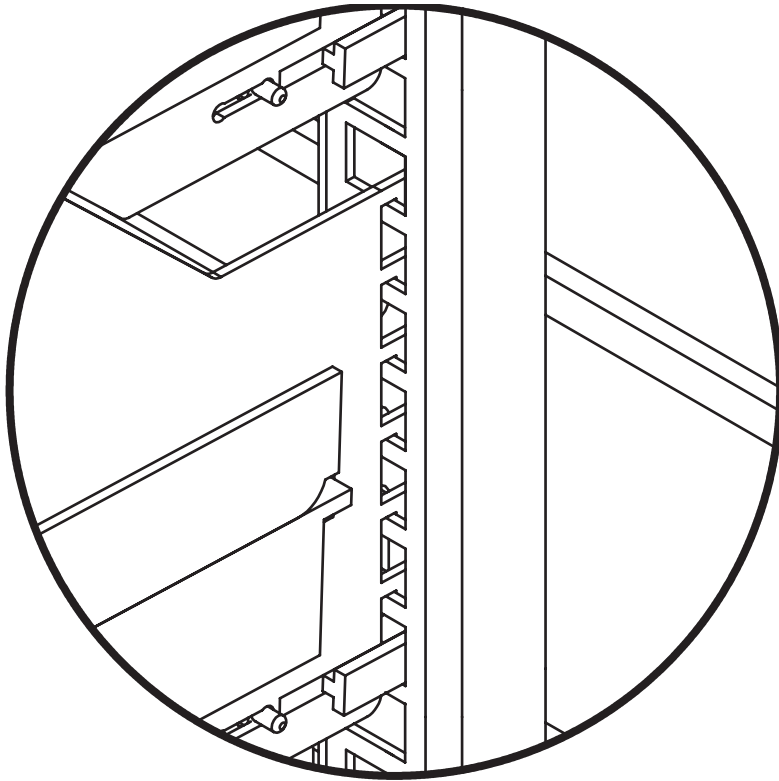

Step 6: Install top row Can Shelves onto the slotted uprights and engage the locks, and connect the jumper cables to the bottom of each shelf.

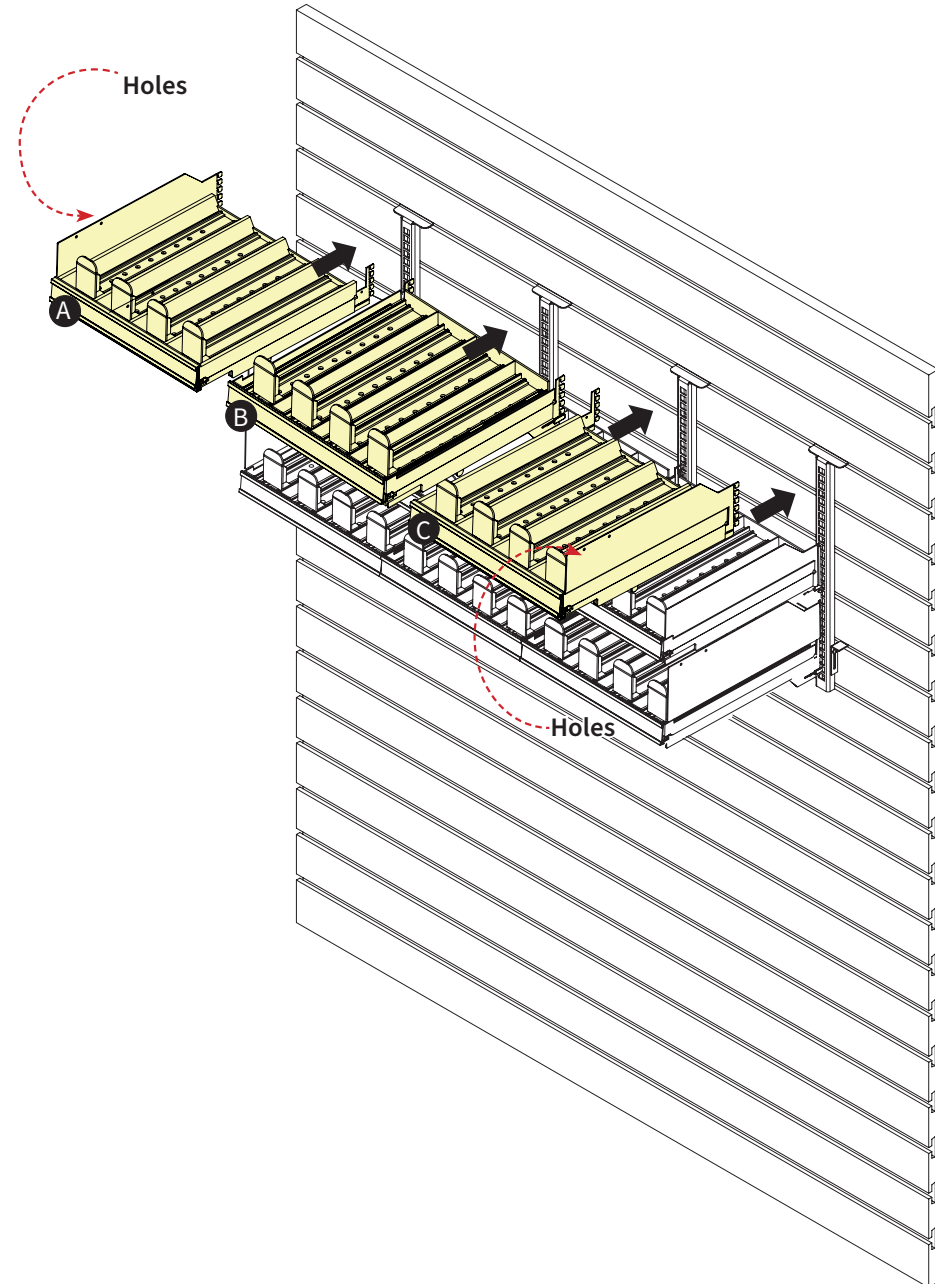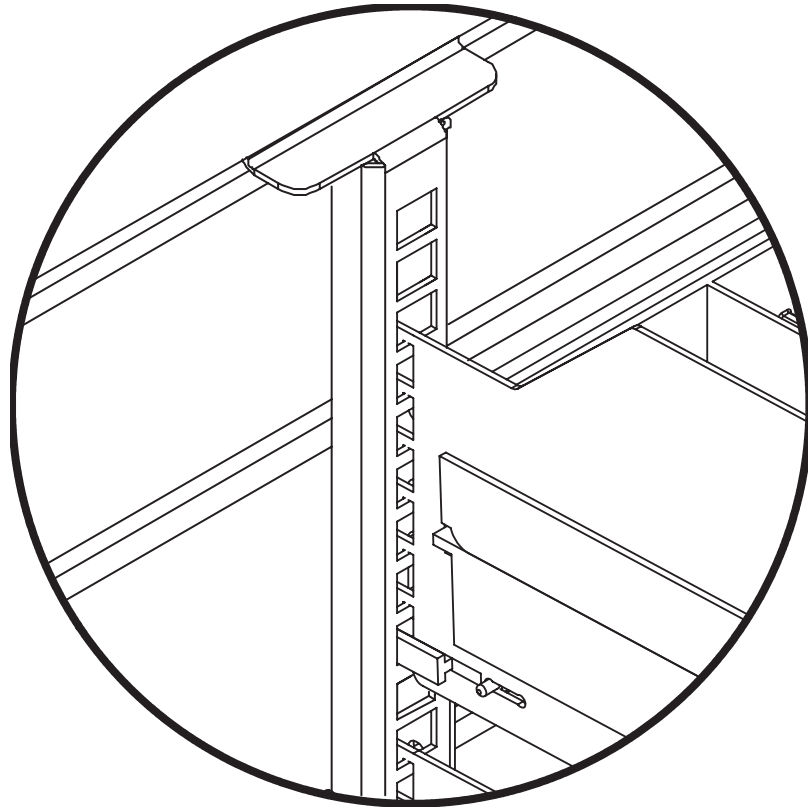

Step 7: Attach the shroud using the screws provided.

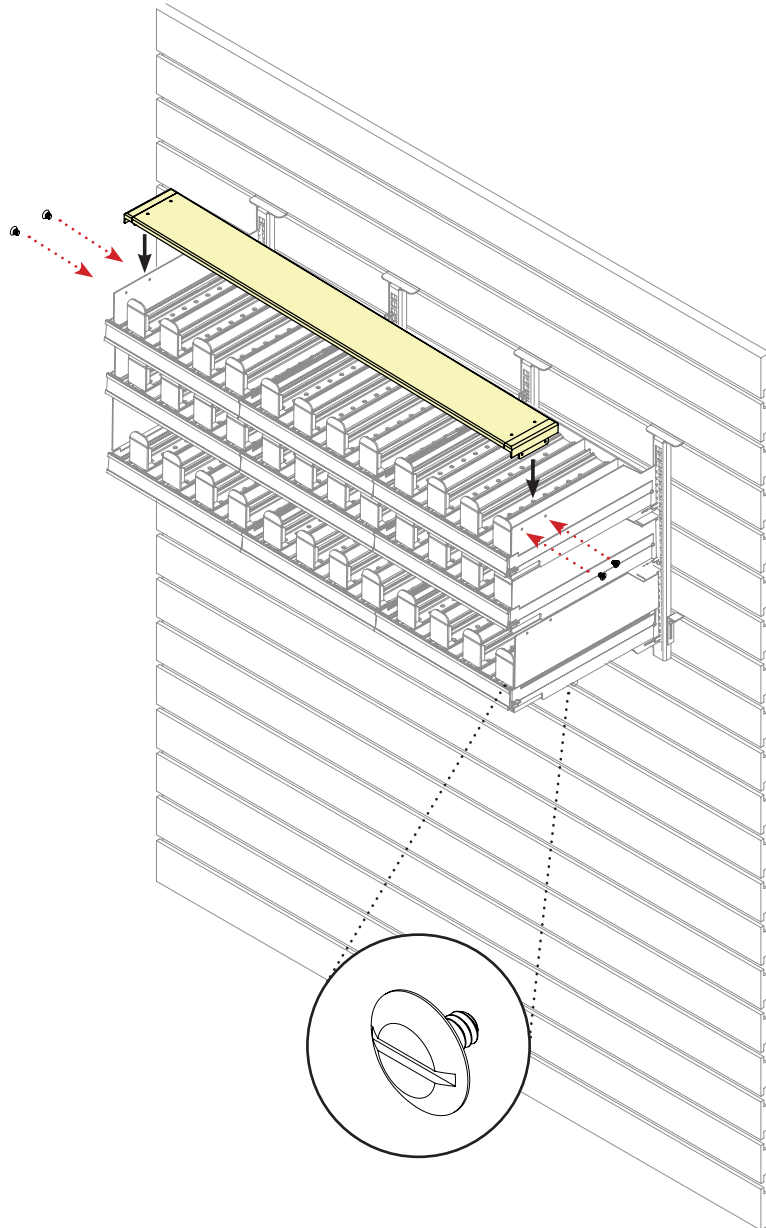

Step 8: Adjust as needed.

