



# ZYN ZONE 2.1 - SLATWALL HEADER

## INSTRUCTIONS

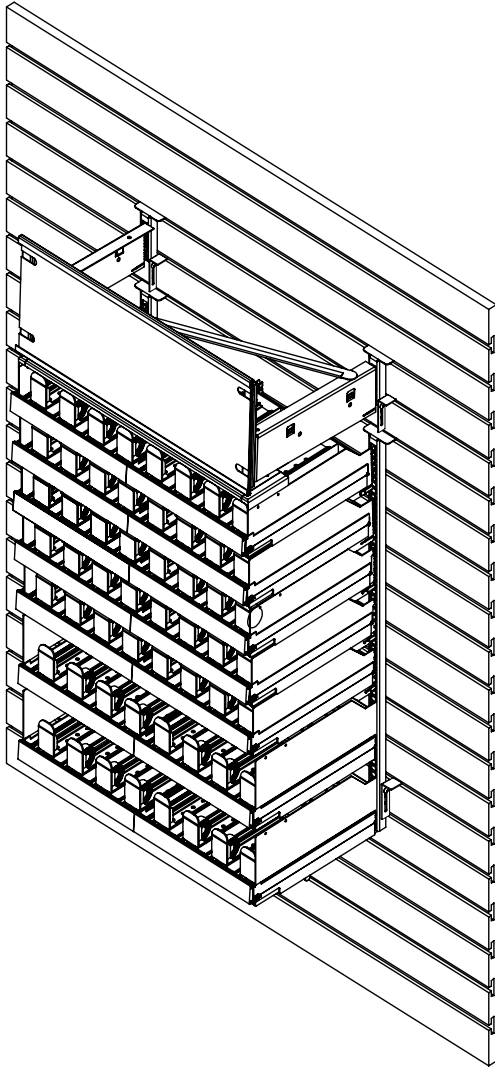


### PARTS INCLUDED


Slatwall Brackets

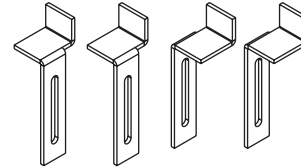


Mini Slatwall uprights

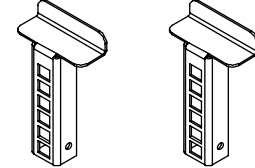

Header Face

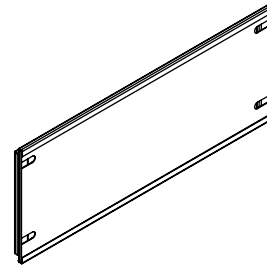


Foldable Header Bracket

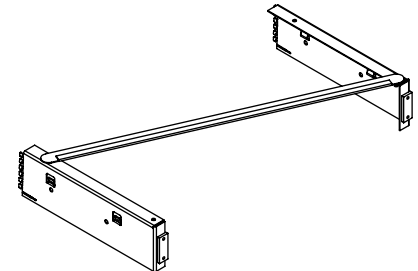


1/4 - 20 Screws




**1** Attach header bracket to front header face.

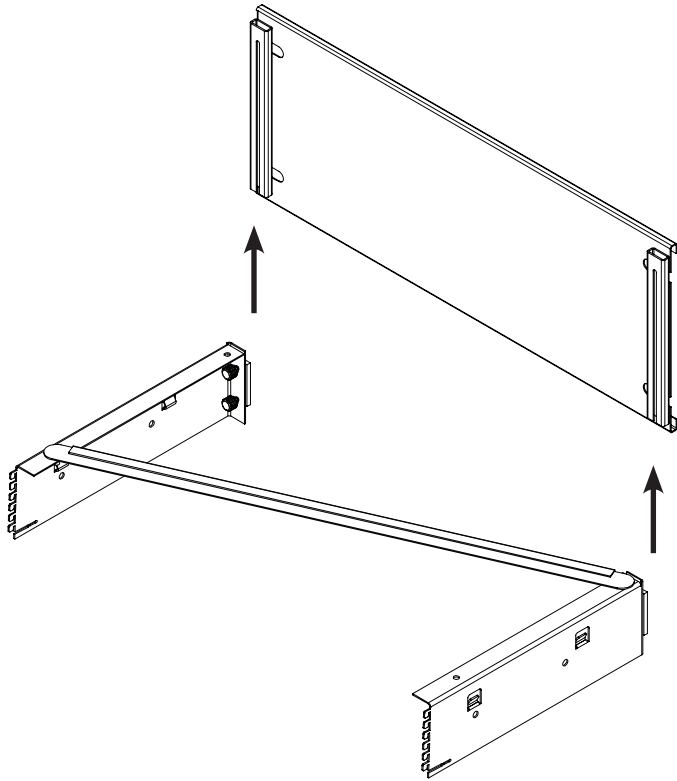


**2** Position as needed. Tighten thumb screws to secure position.

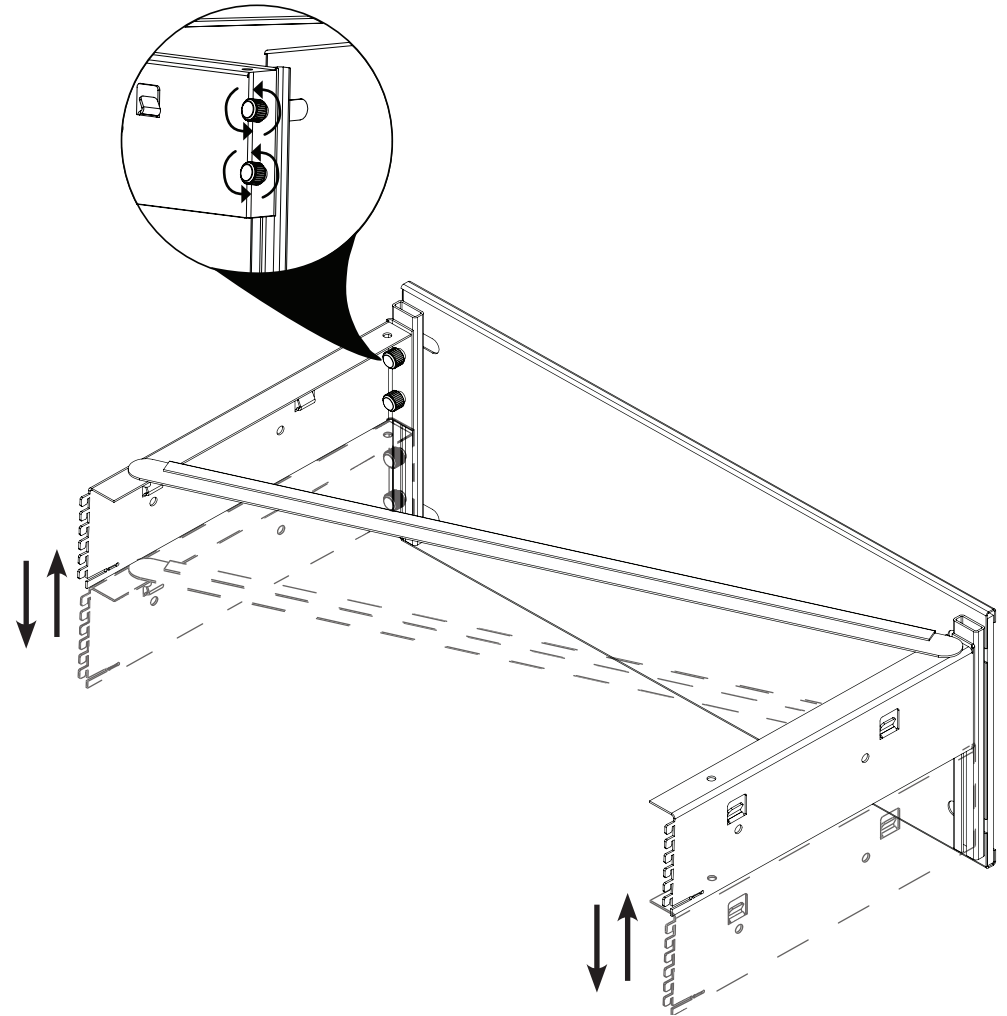


- 3** Place uprights one slot above the current Zyn Zone.  
Place brackets the slot below it.

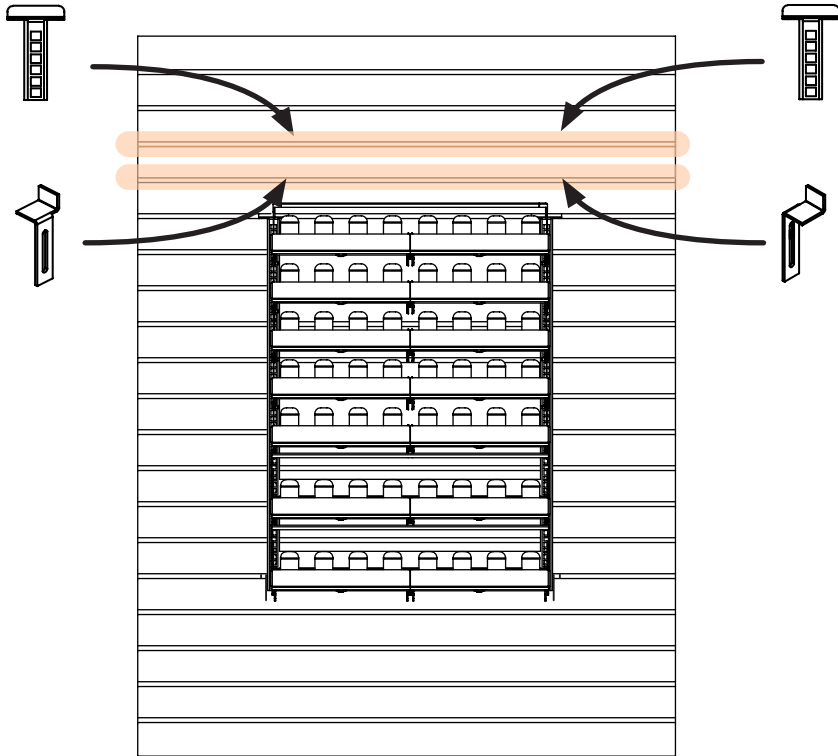

- 4** Attach slatwall brackets to the left and right side of the mini upright bracket.

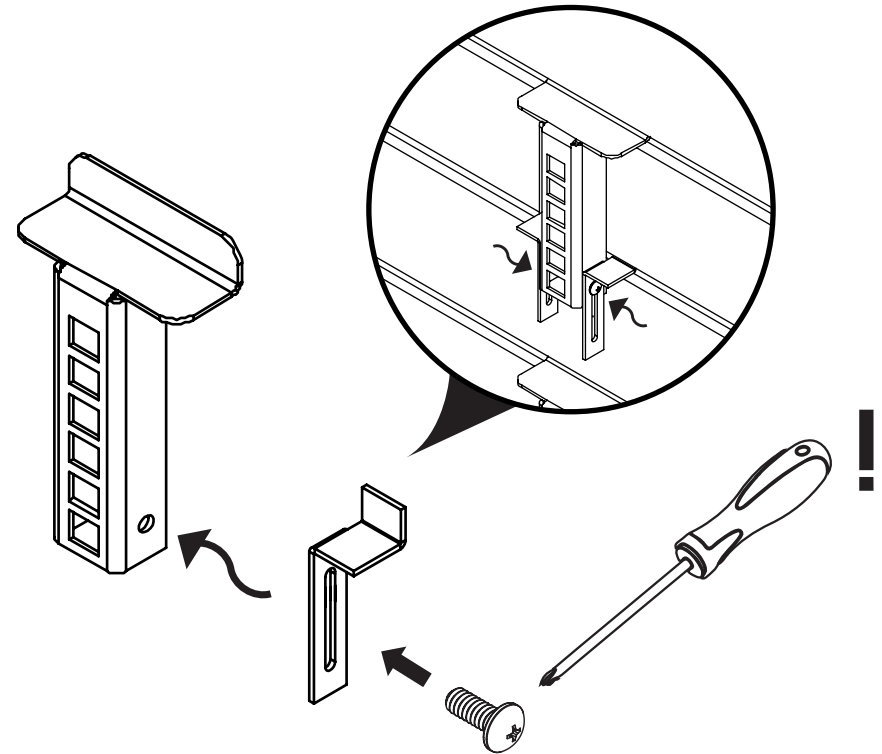

**5** Attach header. Adjust header position as needed.

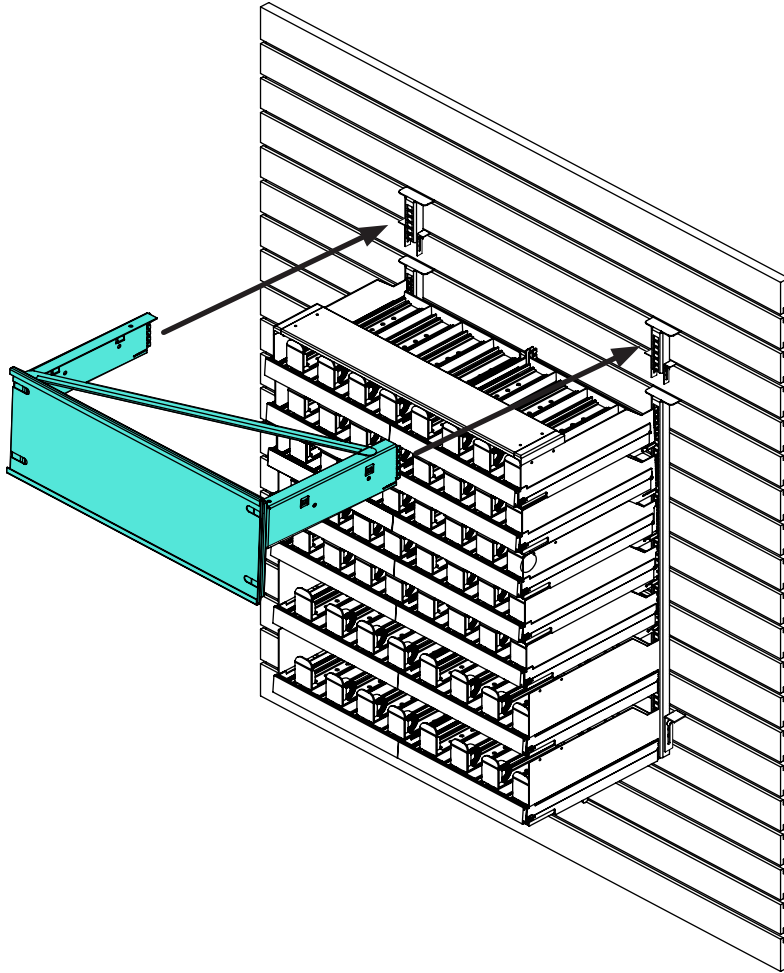

**6** Engage the locks.

