



ZYN ZONE 2.1 | USST TMF

SPECIFICATION AND INSTRUCTIONS

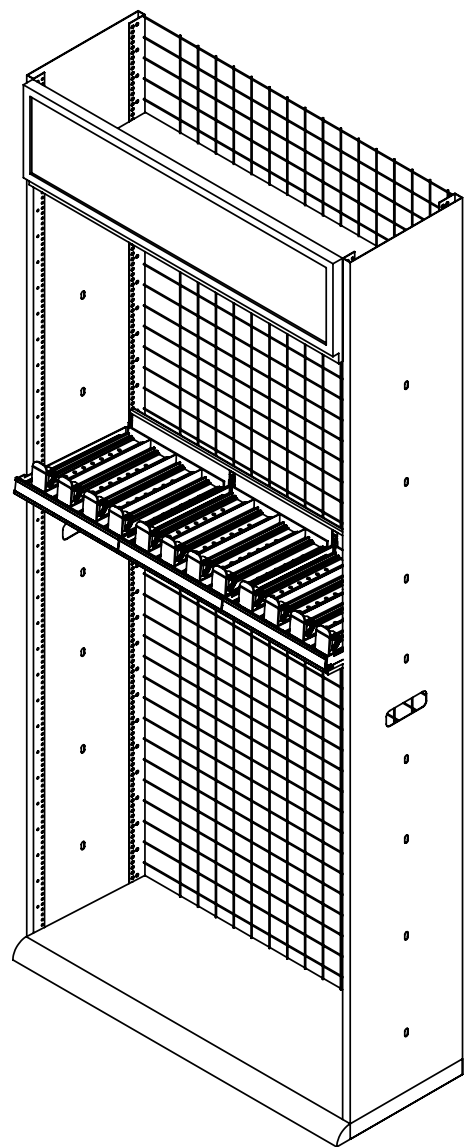


PARTS INCLUDED


Can Frame Kit

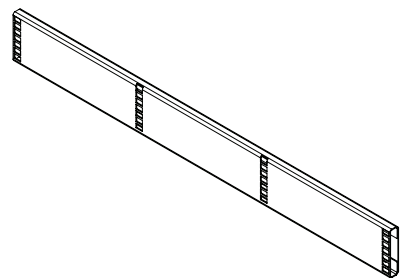


Frame Kit Brackets

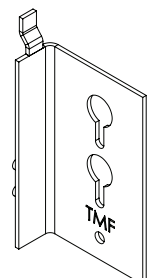


Short Knife Bracket

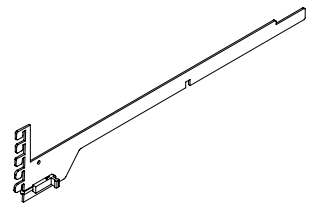


Fixed/Can Shelves

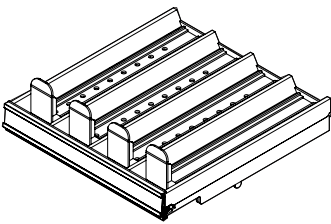

Step 1: Attach to left and right bracket to the display. Use gride lines for alignment.

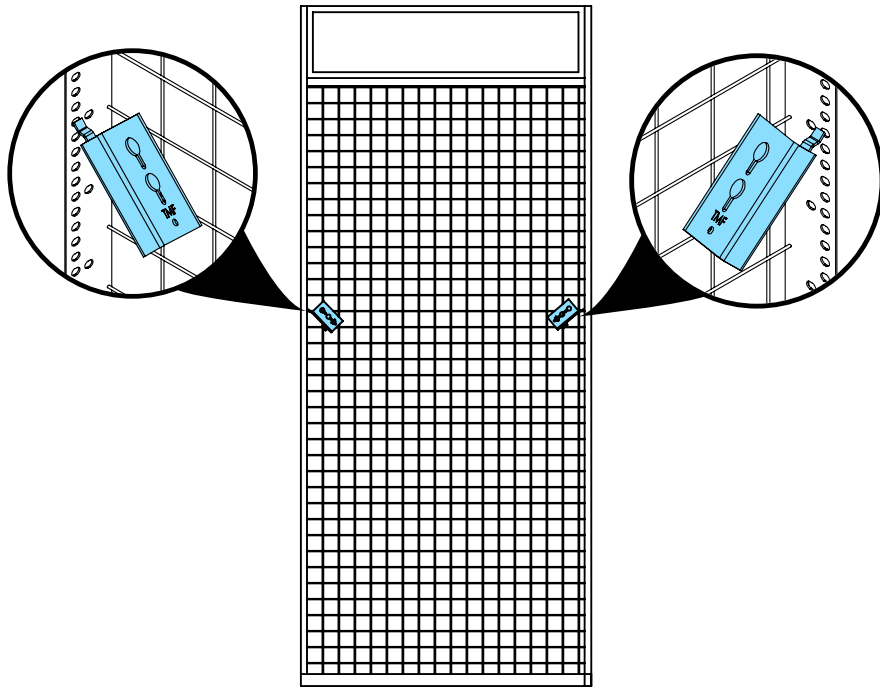

Step 2: Line up frame kit with keyhole slots, then push down to lock the kit into position. If you need to remove or reposition the frame kit, press in on the spring buttons of the brackets to release the frame kit from the brackets.

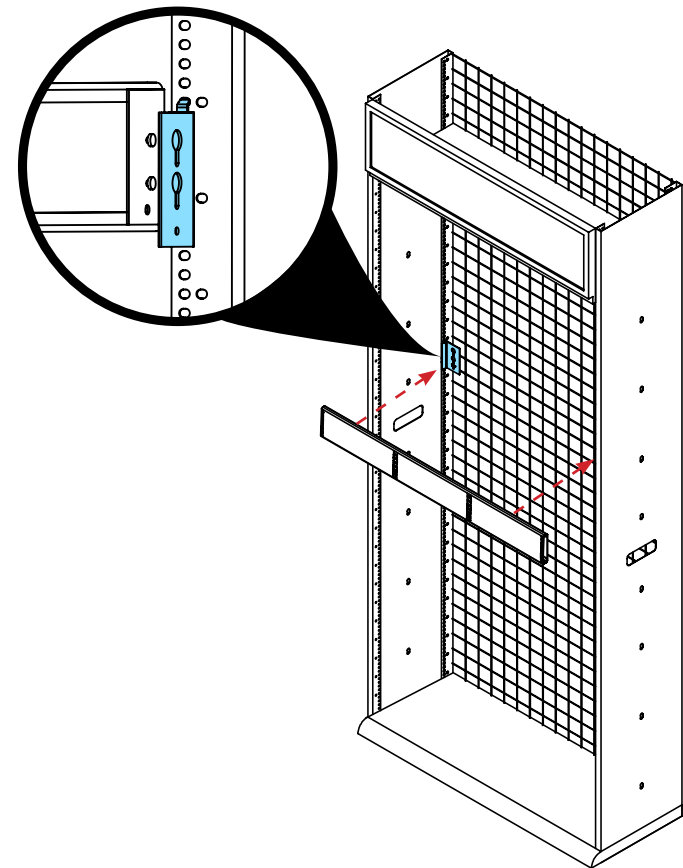

Step 3: Attach shelves.