


ZYN ZONE 2.1

SPECIFICATION AND INSTRUCTIONS

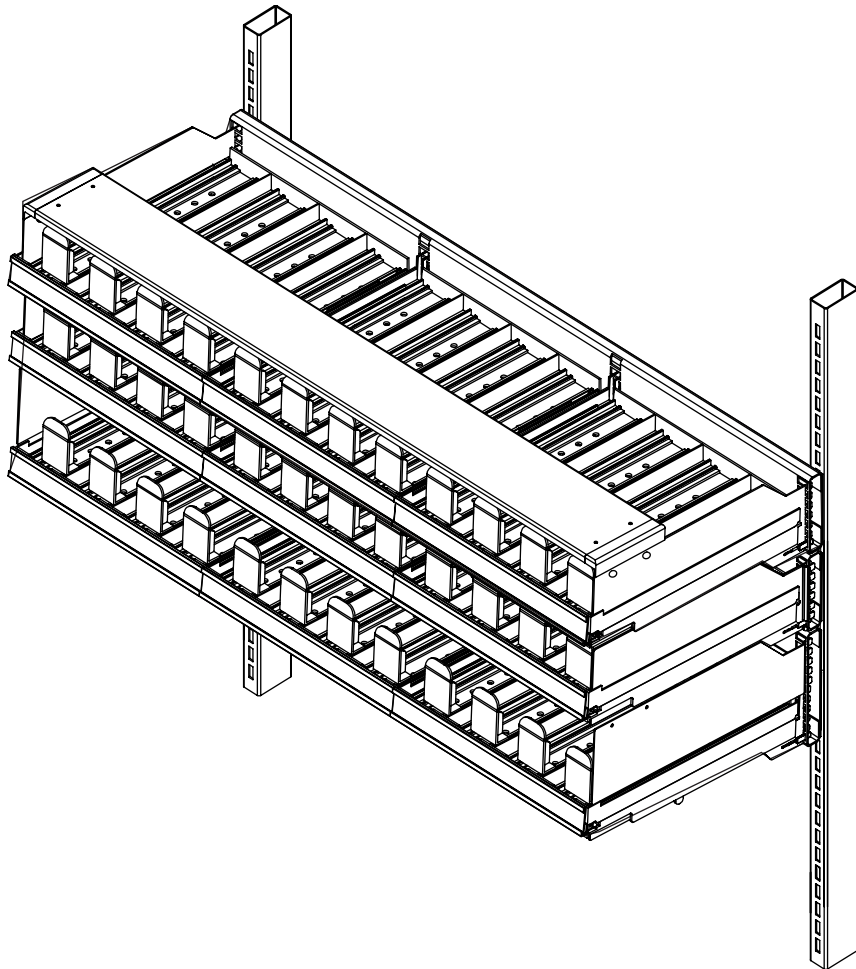


For Video Instructions Visit:

<https://www.benchmarc.com/swedishinstructions/>




We Invent Displays


Can Frame Kit

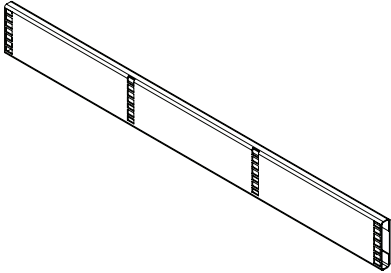


Roll Frame Kit

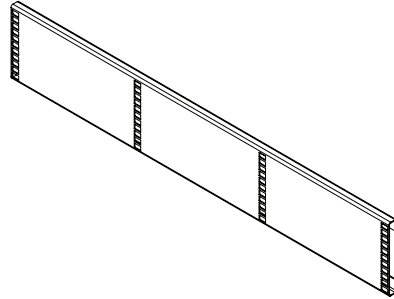


Roll Shelf Encasing

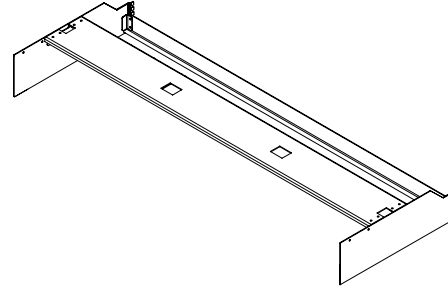


Shroud

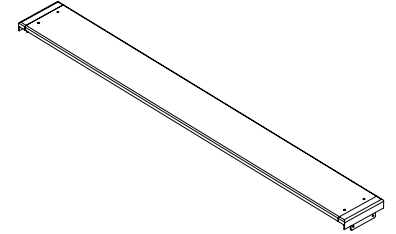


Roll/Can Shelves

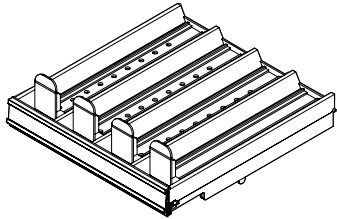


Jumper Cables

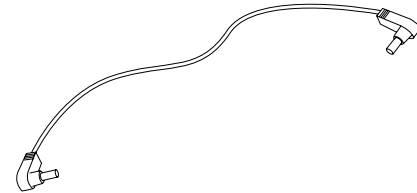


Power Supply

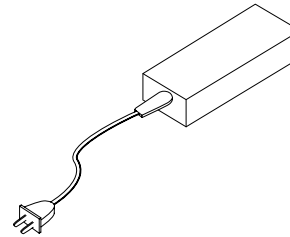


Screws

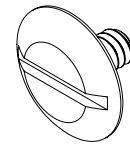


Tall Knife Bracket-with hole

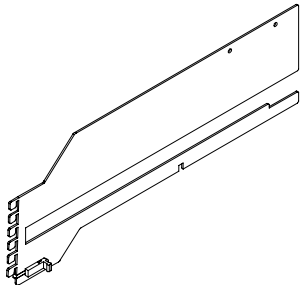


Tall Knife Bracket-no hole

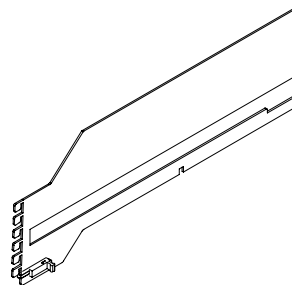

Short Knife Bracket

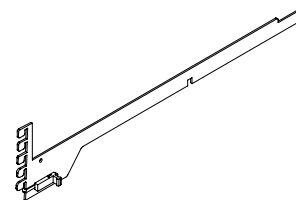


Frame Kit Brackets

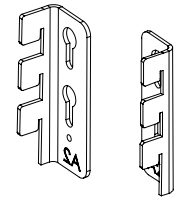

If you are installing the ZYN Zone on a fixture that requires a Frame Kit start below. If not, skip to Step 3.

Note: You will receive a frame kit for every level of Can and Roll shelving ordered for the following fixtures:

- Image Works Classic
- America Display

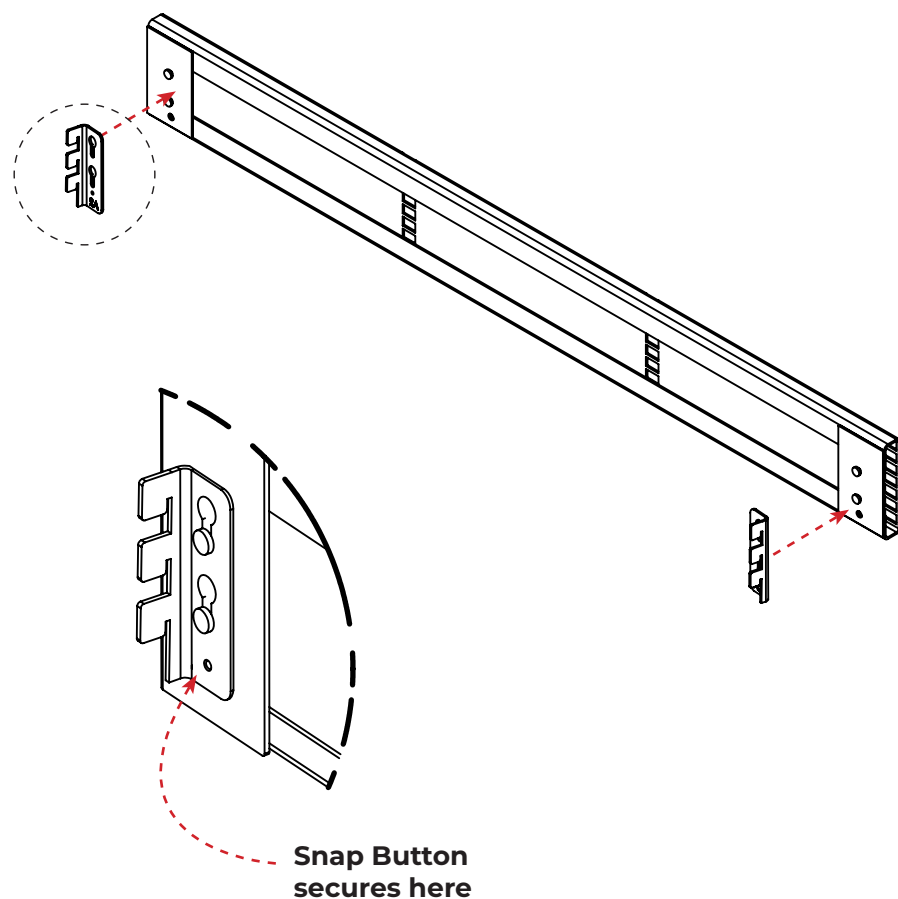


Imageworks Classic	American Display 2ft	American Display 3ft
IC	A2	A3
10015-524L/R	10015-526L/R	10015-522L/R

Step 1: Attach a left and right bracket to each Frame Kit received by sliding the bracket into place.


Reference the pictures to the left to make sure the brackets are facing the correct way.

The bracket will be secured when the hole in the bracket is aligned with the snap button head coming from the Frame.


Step 1: Attach to uprights from the lowest level first. There should be no visible fixture slots in between Frame Kits.

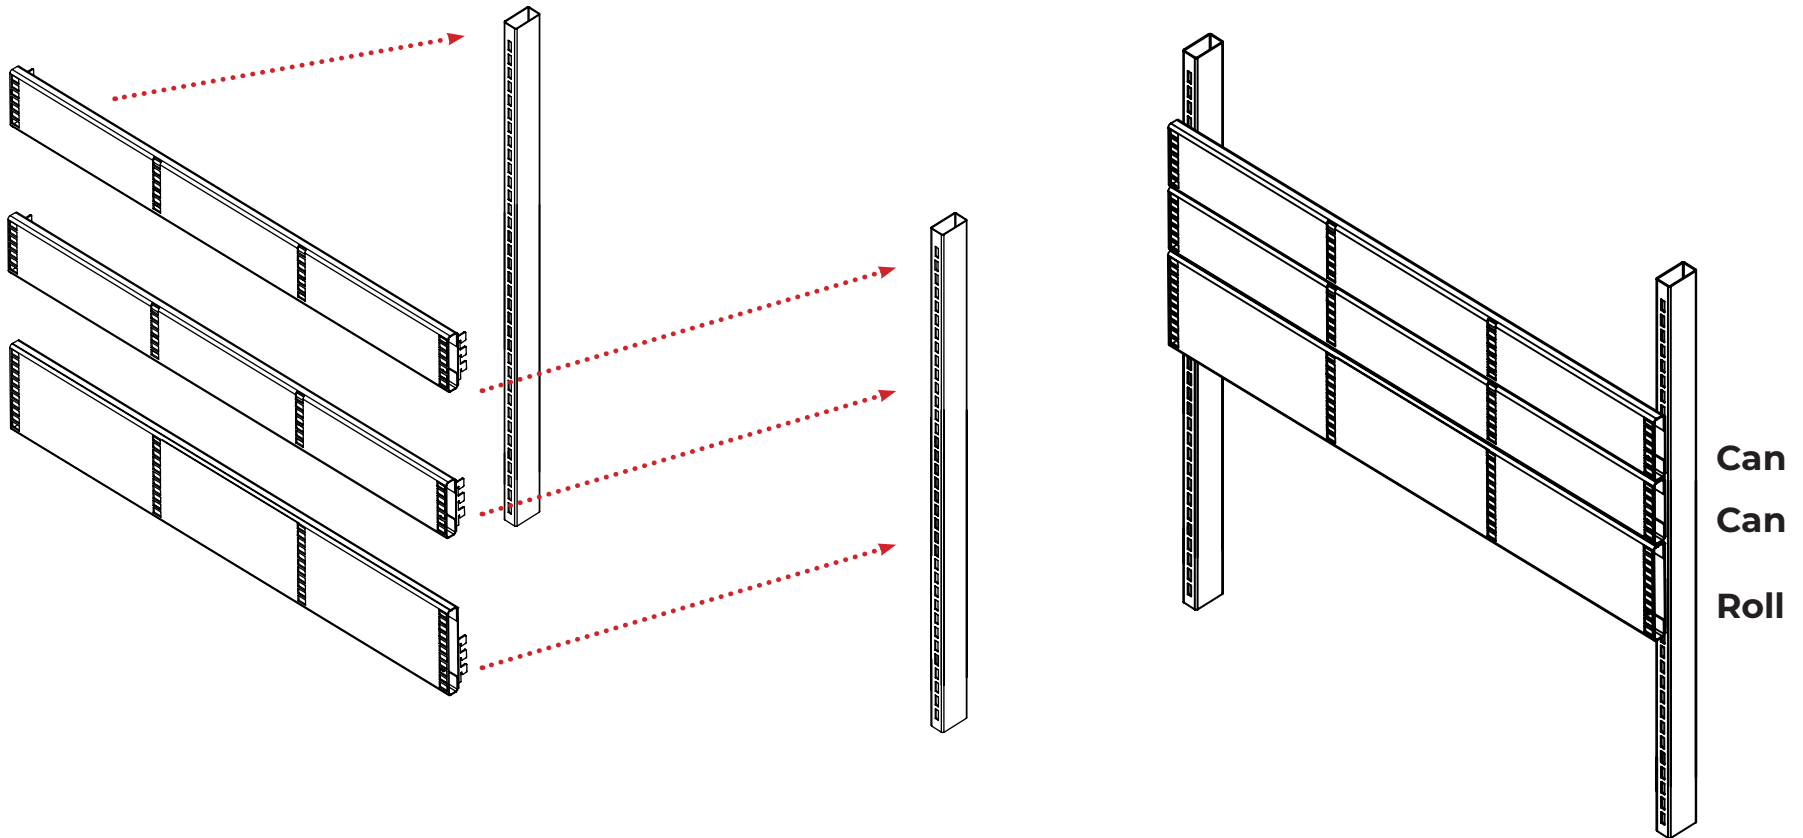


Step 2: Install Roll Shelves on the Frame Kits or the fixture, engage the locks, and connect the jumper cables to the bottom of each shelf.

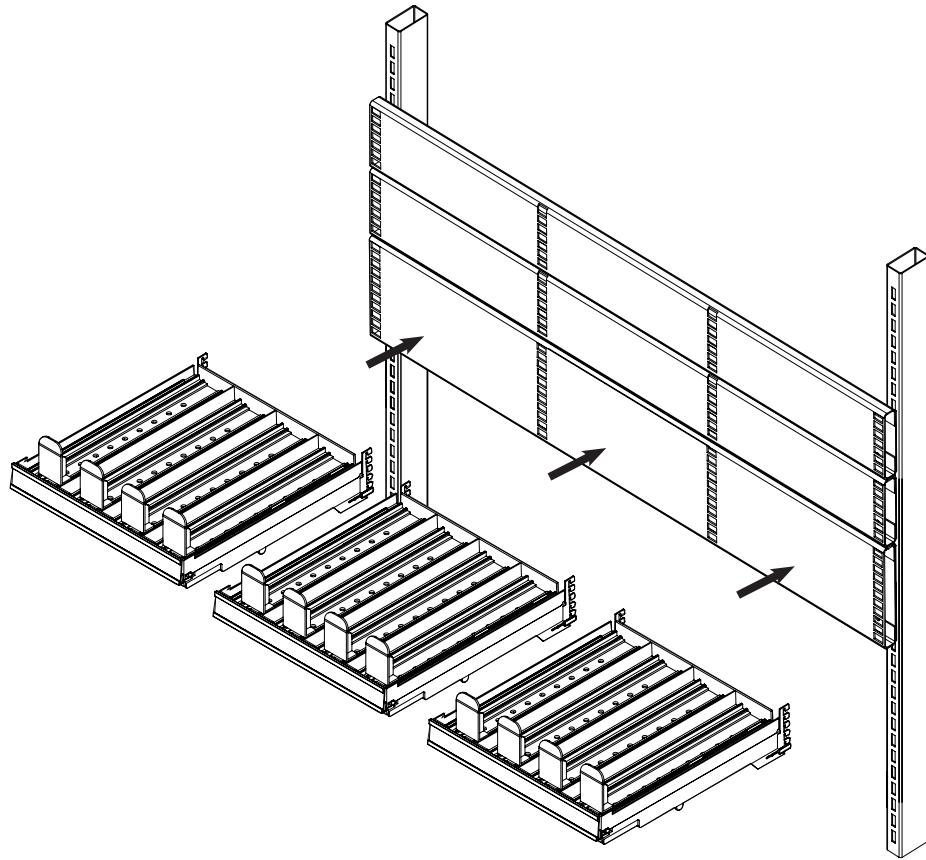


Step 3: Place the Roll Shelf encasing into the fixture or frame kit.

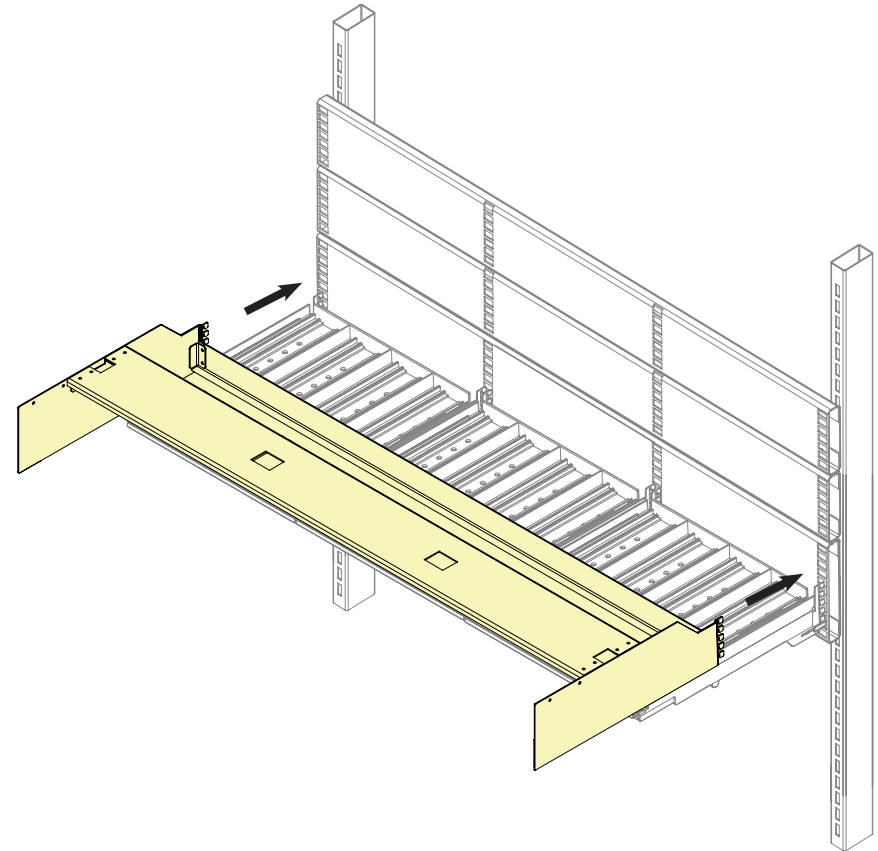



Step 4: Engage the locks to secure the shelf into place on both the left and the right side of the shelf.

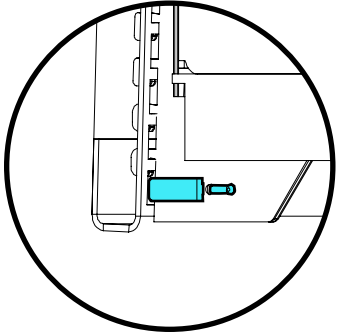


Unlocked

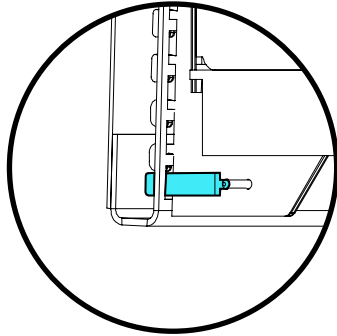


Locked

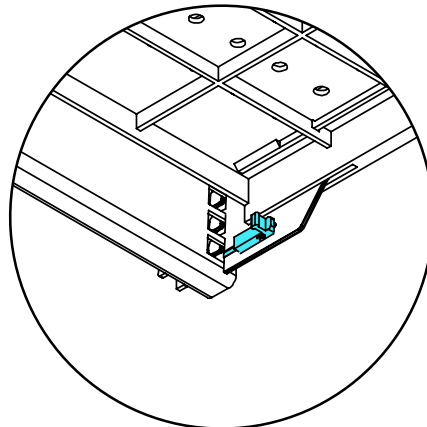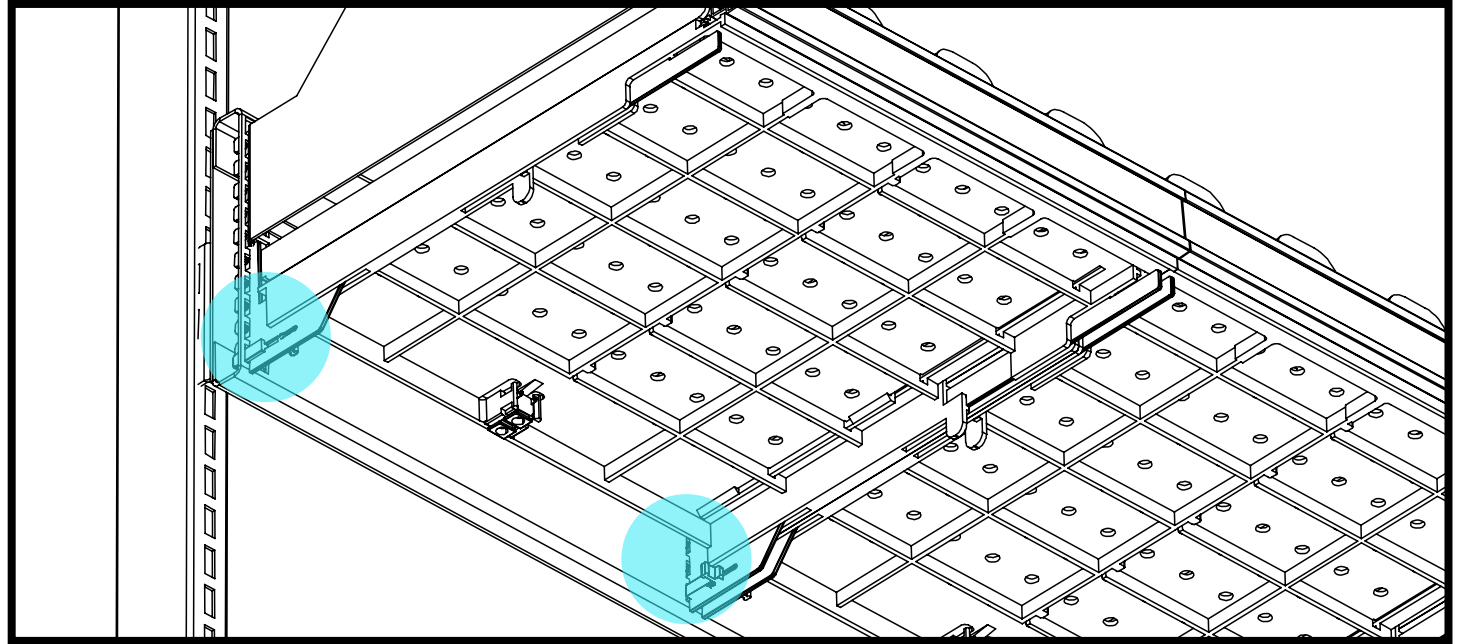

Unengaged

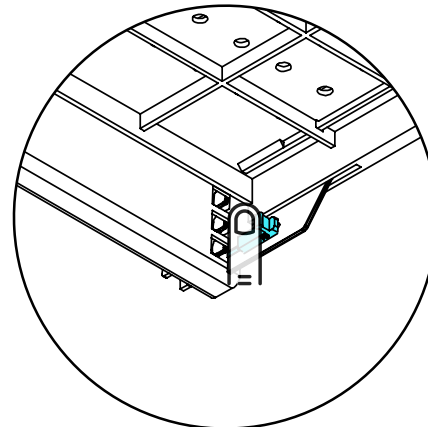


Push

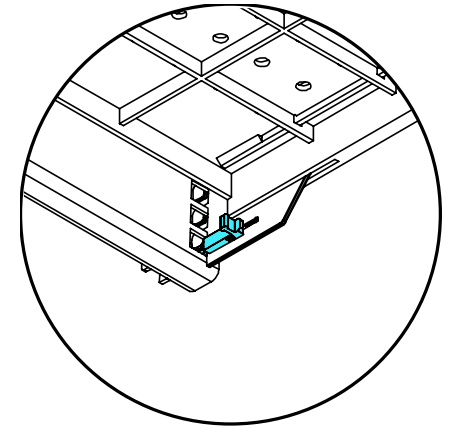


Engaged

Step 5: Insert jumper cables on each shelf and connect to each shelf layer as you build up.

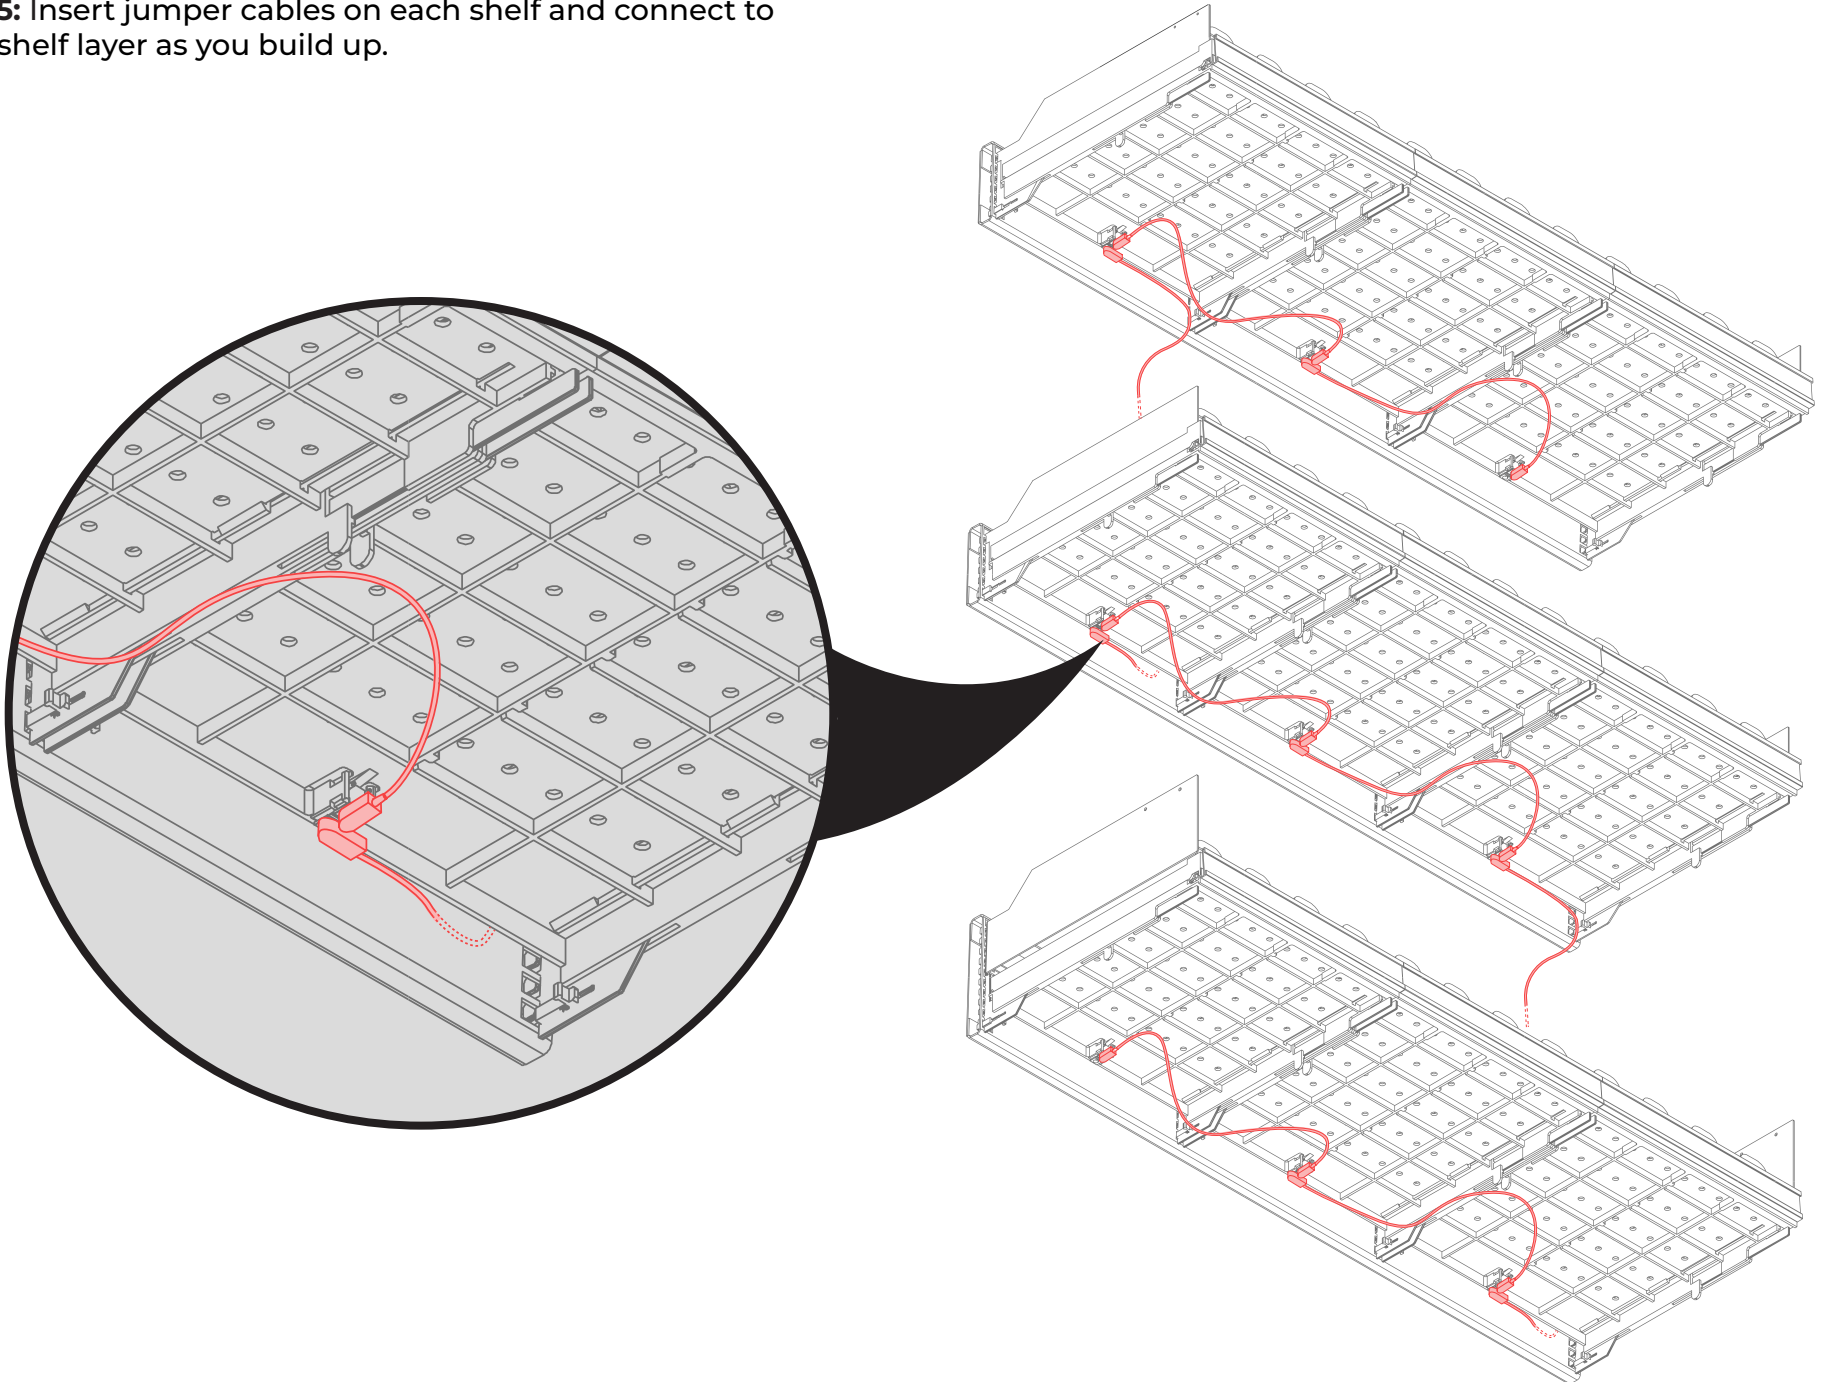


Note slot placement at the shelves at the ends.


Left side

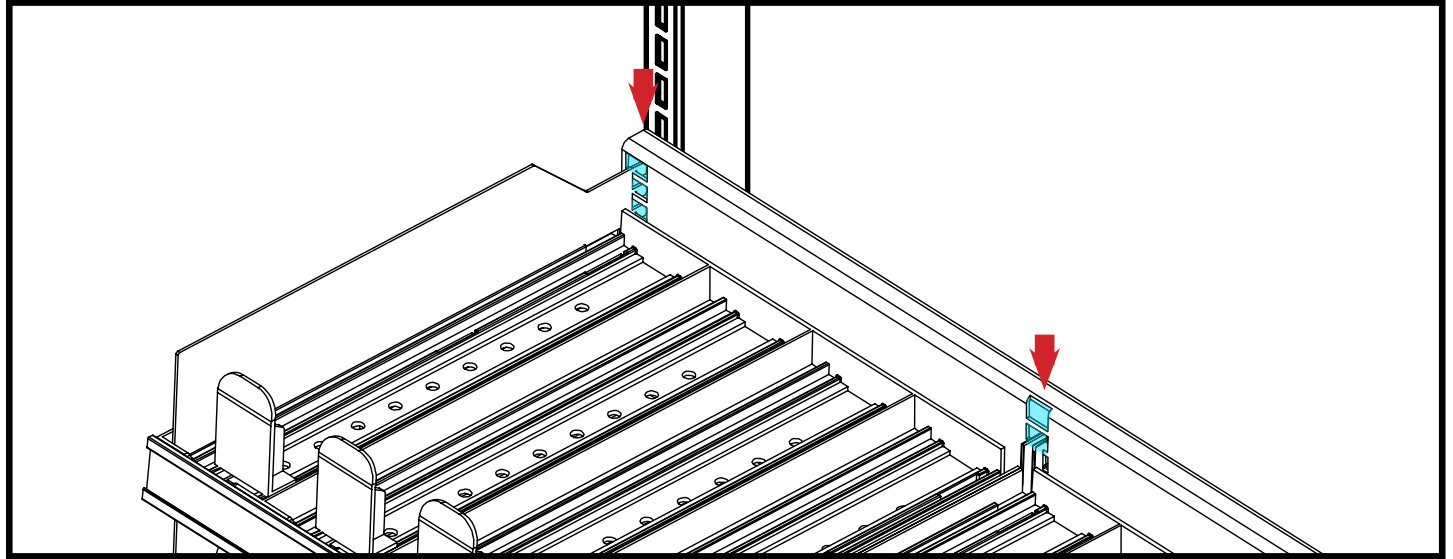


Right side

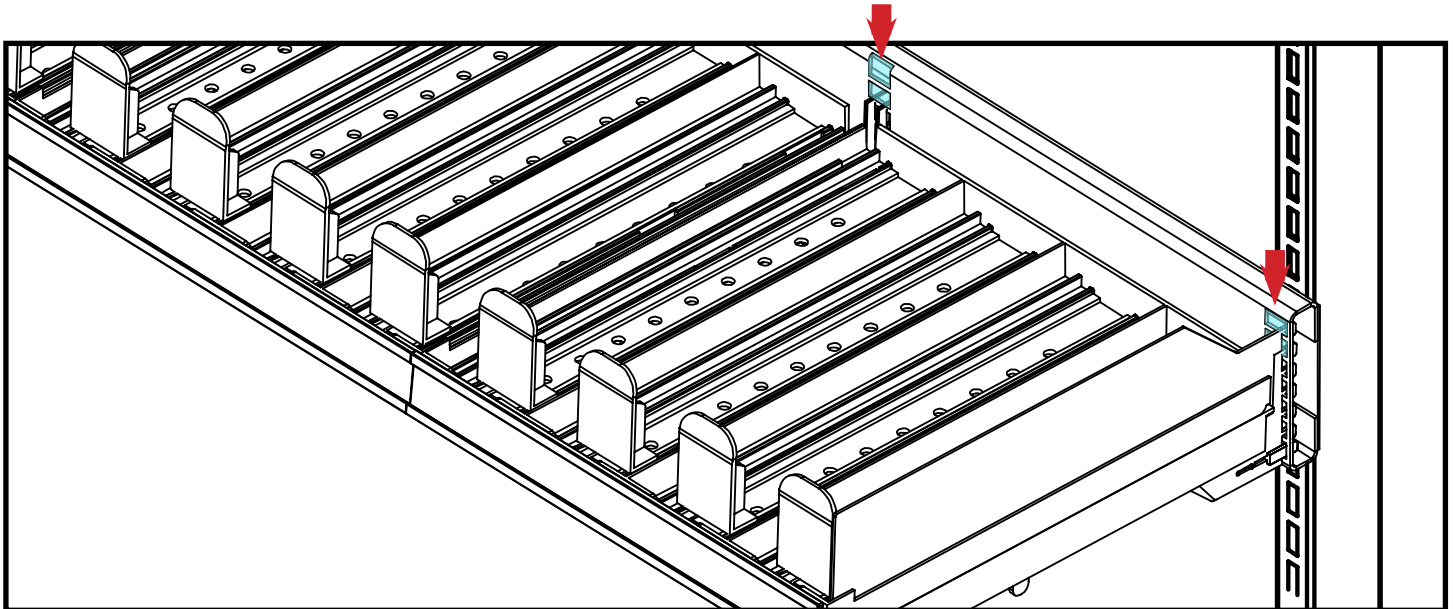

Step 6: Install second row Can Shelves on the Frame Kits or the fixture, engage the locks, and connect the jumper cables to the bottom of each shelf.

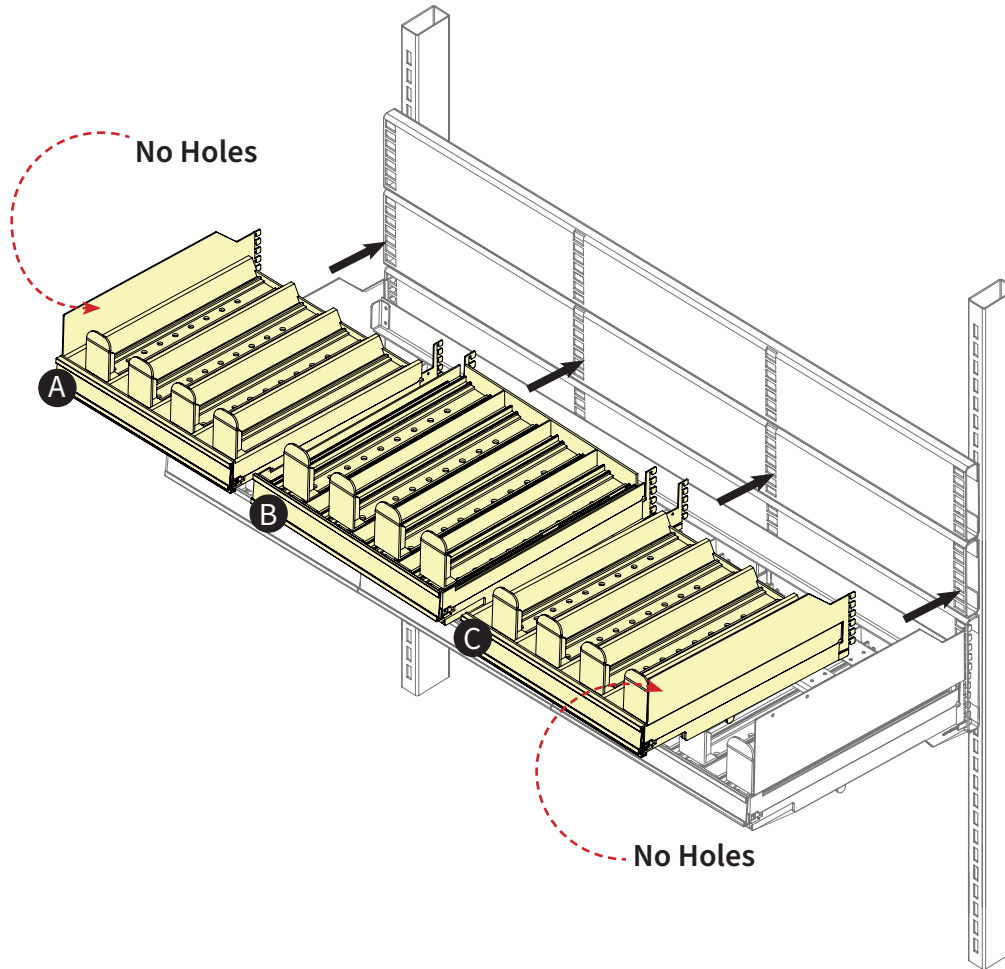

Step 7: Install top row Can Shelves on the Frame Kits or the fixture, engage the locks, and connect the jumper cables to the bottom of each shelf.

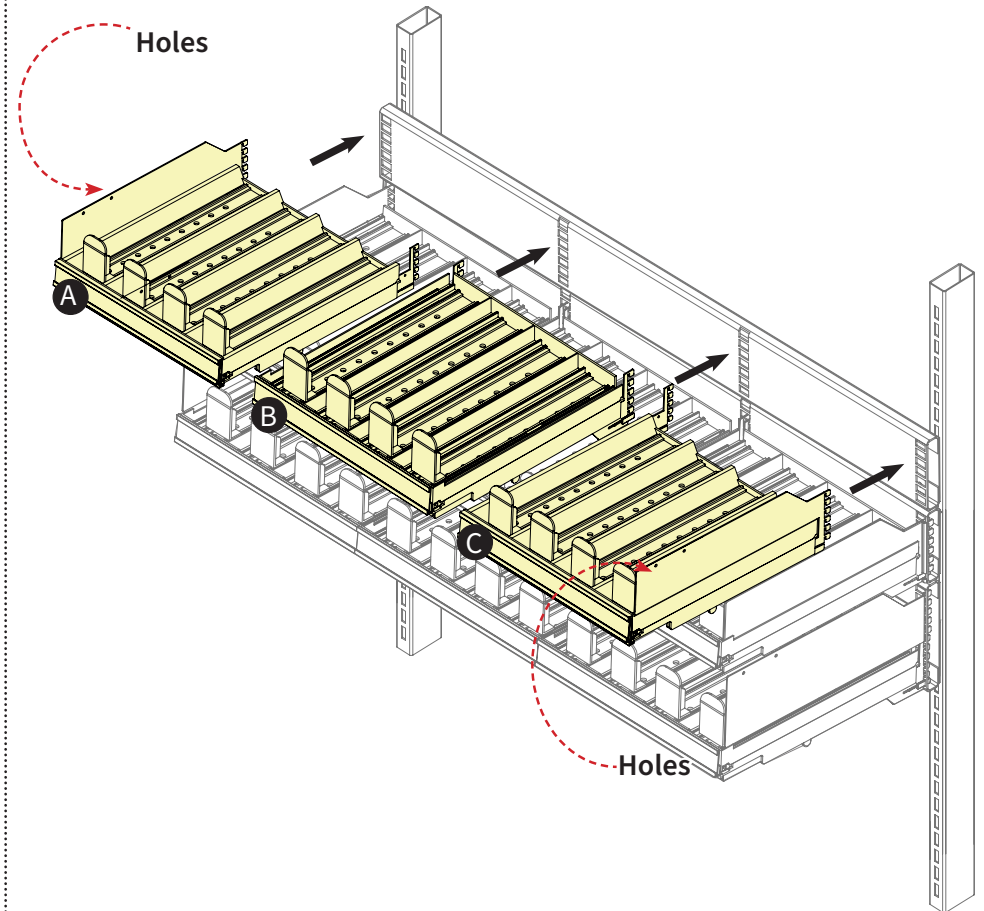

Step 8: Attach the shroud using the push pins provided.

