



ZYN ZONE 2.1 - SLATWALL HEADER

INSTRUCTIONS

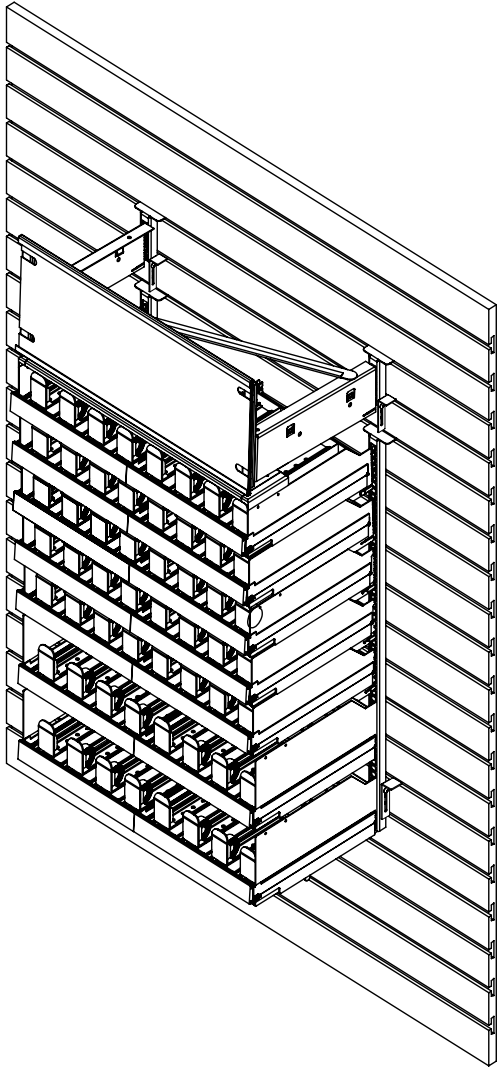


PARTS INCLUDED


Slatwall Brackets

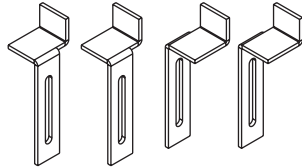


Mini Slatwall uprights

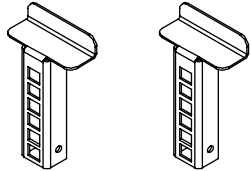

Header Face

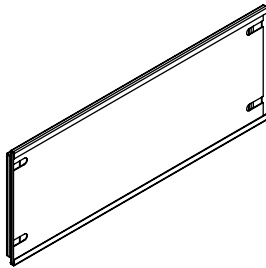


Foldable Header Bracket

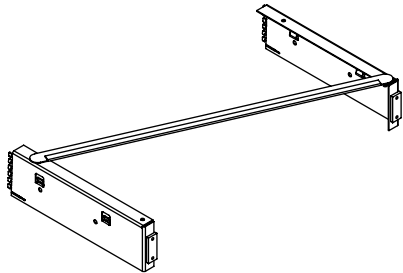


1/4 - 20 Screws




1 Attach header bracket to front header face.

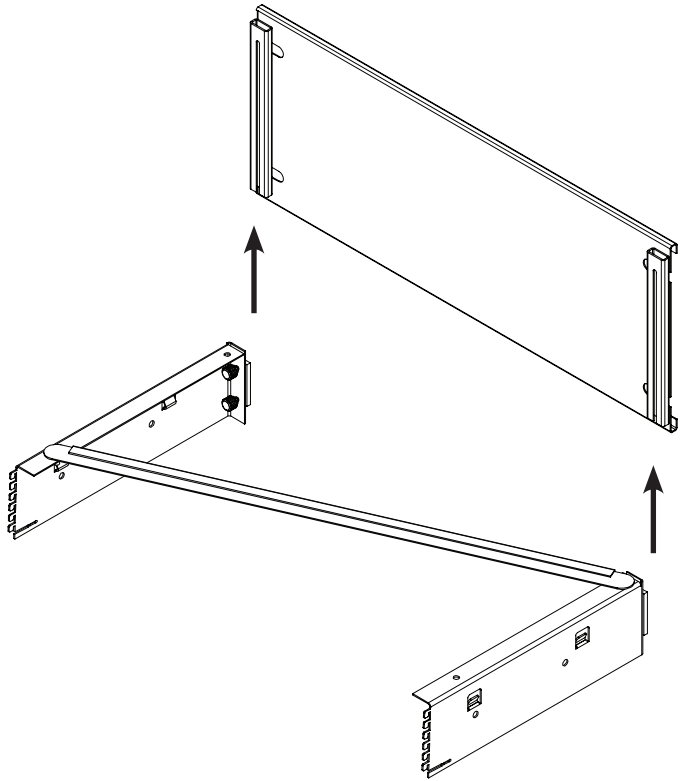


2 Position as needed. Tighten thumb screws to secure position.

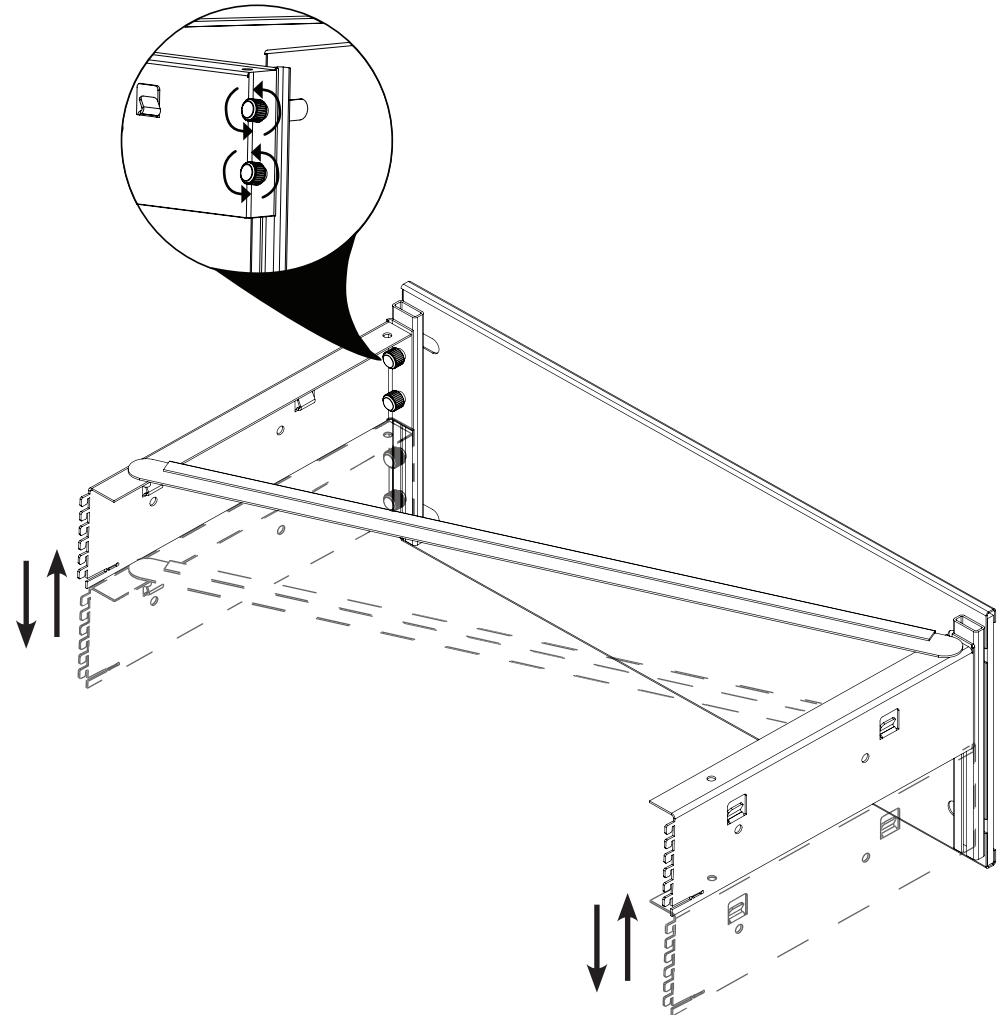


- 3** Place uprights one slot above the current Zyn Zone.
Place brackets the slot below it.

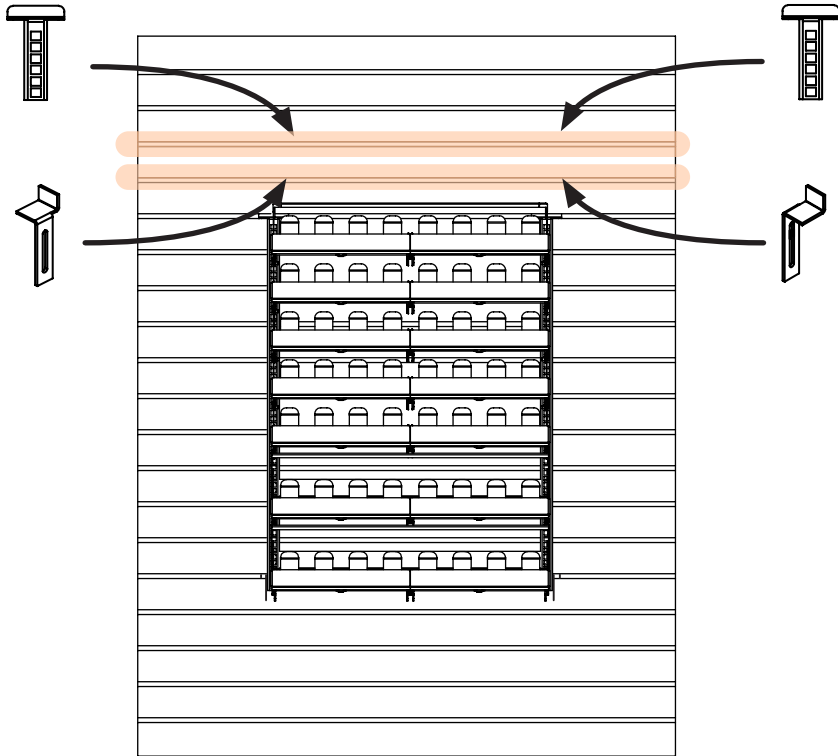

- 4** Attach slatwall brackets to the left and right side of the mini upright bracket.

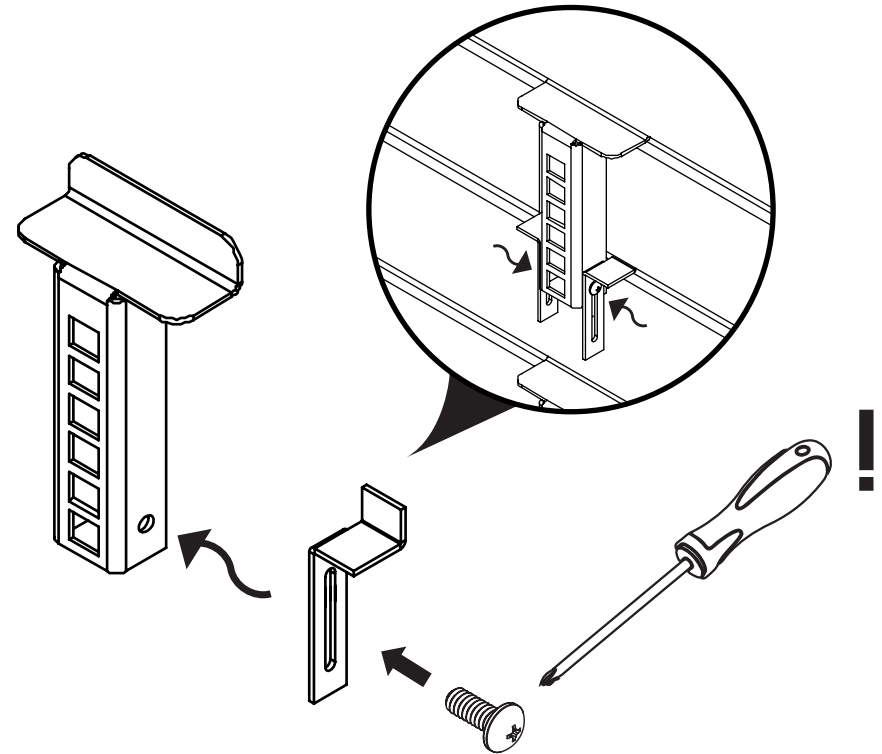

5 Attach header. Adjust header position as needed.

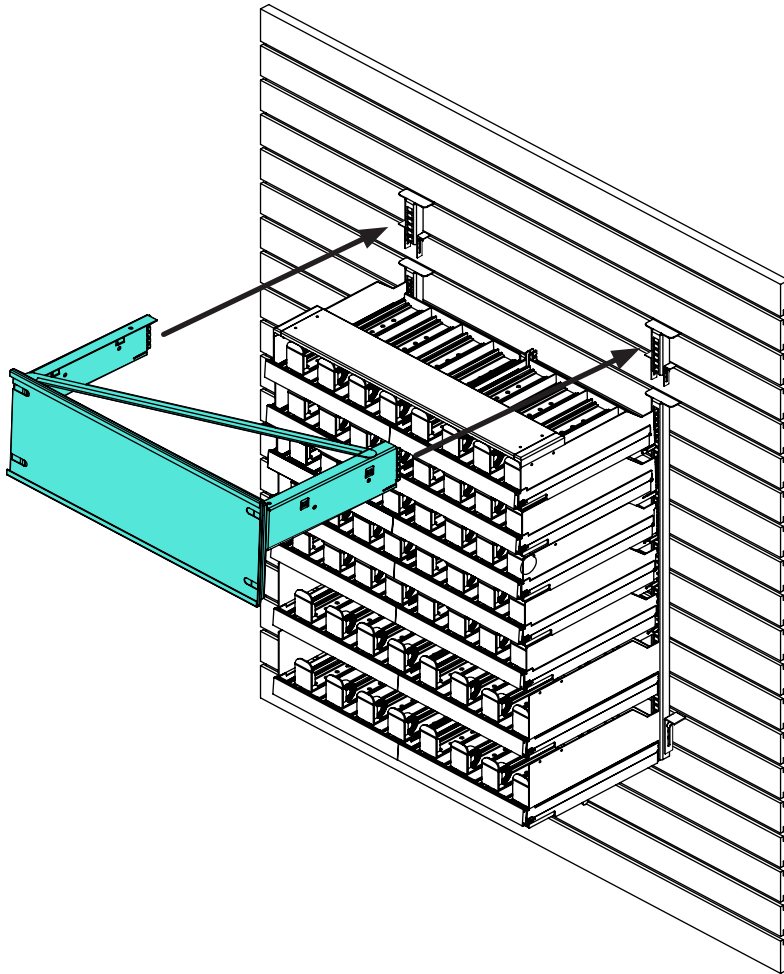

6 Engage the locks.

