
Burn code


1. Turn the power switch on the nano shield to the "ON" state, and connect the nano to the USB Port of the PC via a USB cable:

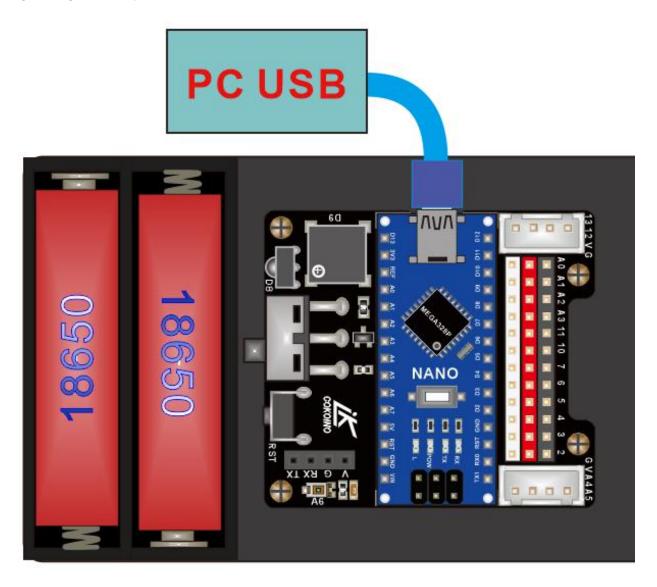


2. Double-click to open the sample code in the code file, as shown below:




3. Open the initial code diagram

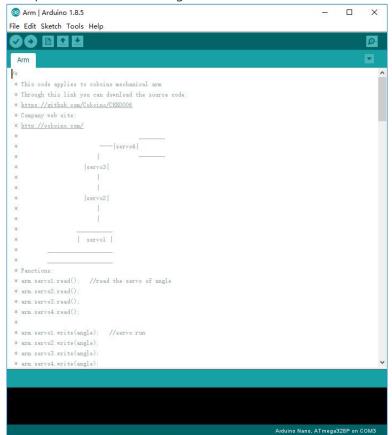


4. Check the code

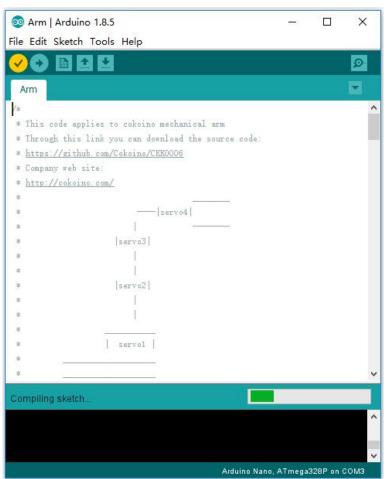


5. Select the development board model

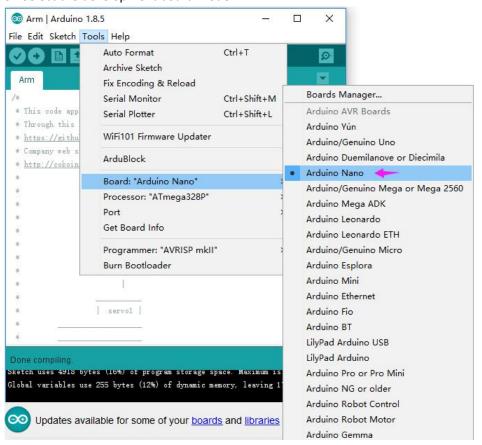

6. Select the burn port

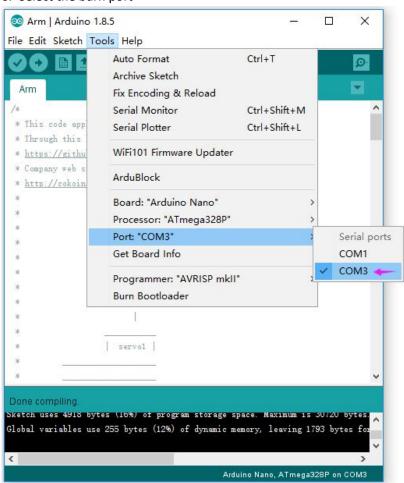

7. Burn the code:

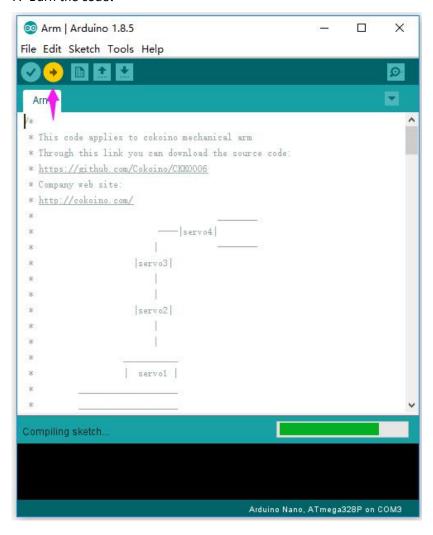

Now that the code has been burned, please follow the next step to learn how to move the robot arm and feel the joy of success!