Data Acquisition from Serial Ports With Python's pyserial module

Dan Walker

August 7, 2018



Serial Ports

In computing, a serial port is a serial communication physical interface through which information transfers in or out one bit at a time (in contrast to a parallel port). Throughout most of the history of personal computers, data was transferred through serial ports to devices such as moderns, terminals and various peripherals.

(ref: Wikipedia)

- Very basic form of communication. Low power, low CPU.
- ▶ Protocol is called "RS-232" or "RS-485"
- In common use on scientific equipment, for example NCAS's laser ceilometer.
- ▶ Usually a 9-pin or 25-pin "D-Sub" port, but sometimes a variety of others
- ▶ no longer common on computers. However, USB->Serial adapters are approx Â15.



The Papouch temperature probe

- ▶ Very basic serial RS232 temp probe
- ► approx â20
- ► Measures temperatures from -55ÂC to +125ÂC, 0.1ÂC resolution
- Output is in ASCII format in ÂC, no conversion needed.
- ▶ Port powered so needs no power source
- ► Datasheet included in your kit





Basic connections

https://pythonhosted.org/pyserial/shortintro.html

```
#!/usr/bin/python2.7
import serial

ser = serial.Serial(
    port='/dev/ttyUSB0',
    baudrate=9600,
    bytesize=serial.EIGHTBITS,
    parity=serial.PARITY_NONE,
    stopbits=serial.STOPBITS_ONE
)
```

Figure out how to read and return data from the ser object.

As well as the pyserial shortintro above, you may find https://pythonhosted.org/pyserial/pyserial_api.html and the Papouch thermometer datasheet useful.



lacktriangle baudrate, bytesize, parity and stopbits are the most common parameters that need changing



- ▶ baudrate, bytesize, parity and stopbits are the most common parameters that need changing
- ► They depend on the serial device in question



- ▶ baudrate, bytesize, parity and stopbits are the most common parameters that need changing
- ▶ They depend on the serial device in question
- ► The Papouch thermometer 9600 baud, eight bits, no parity checking and one stopbit. ("9600 8N1") (Same as pyserial's defaults!)



- baudrate, bytesize, parity and stopbits are the most common parameters that need changing
- ► They depend on the serial device in question
- ► The Papouch thermometer 9600 baud, eight bits, no parity checking and one stopbit. ("9600 8N1") (Same as pyserial's defaults!)
- ► For other parameters, see pyserial's API (https://pythonhosted.org/pyserial/pyserial_api.html)



```
#!/usr/bin/python2.7
import serial
ser = serial.Serial(
    port='/dev/ttyUSB0',
)
print ser.read(size=8) # "8" here is specific to the Papouch thermometer device
ser.close()
```

\$ python readserial_basic.py
+025.1C



- /dev/ttyUSB0 is Linux's way of referring to the first USB serial port
- subsequent ones /dev/ttyUSB1, /dev/ttyUSB2 and so-on
- ▶ Built-in serial ports would be /dev/ttyS0, /dev/ttyS1 etc.
- ▶ Windows machines, the portname will be of the form COM1, COM2, COM3, etc. (USB ports *normally* start at COM3, but not always)
- Mac OSX machines are different again. It will be something like /dev/tty.SOMETHING, e.g. /dev/tty.PL2303-xxx
- ▶ You may need to experiment to determine which the USB converter has attached to.
- More on this later



Why ser.read(size=8)?

If you refer to the Papouch thermometer datasheet 's "Communication Protocol" section, you will see:

```
<sign><3 characters âĂŞ integer ÂřC>
<decimal point><1 character âĂŞ tenths of ÂřC>
<C><Enter>
```

as a description of the output. In ASCII coding, each character is one byte so each temperature from the thermometer is eight bytes.



The datetime module

For the data to be useful you need to add a date and time reading. Python includes a standard module for this, datetime (http://docs.python.org/2/library/datetime.html)

- ► Can process times in a very wide variety of formats
- ► Can deal with different timezones (if you ask it to)
- ▶ Other date/time modules are available, but datetime is alwyas avaiable.



Date and Time formats

- ► Timezone should be in UTC or TAI in the majority of cases
- ▶ Use an unambiguous format
- ▶ isoformat() produces a standard format by default rarely is that a problem.
- strftime() will do any format you require (e.g. for documents intended to be read by people)

Add date and time to your output.



Time and Date example

```
#!/usr/bin/python2.7
from datetime import datetime
import serial
ser = serial.Serial(
  port='/dev/ttyUSB0',
   baudrate=9600,
print datetime.utcnow().isoformat(), ser.read(size=8)
ser.close()
```



datetime.utcnow().isoformat() is, as you might expect, a command to return the current UTC in ISO format, e.g.:

2014-03-06T11:55:43.852953 +025.3C

print datetime.utcnow().isoformat(), ser.read(size=8)

- datetime.utcnow() call can return in advance of the ser.read() call
- timestamp and the temperature should be as close as possible
- > store the data in a variable and output the variable and the time at the same time

datastring = ser.read(size=8)
print datetime.utcnow().isoformat(), datastring



```
Python 2.7.3 (default, Feb 21 2014, 13:11:38)
[GCC 4.4.7 20120313 (Red Hat 4.4.7-3)] on linux2
Type "help", "copyright", "credits" or "license" for more information.
>>> from datetime import datetime
>>> dt = datetime.now()
>>> print dt
2016-04-12 17:32:38.806353
th <<<
datetime.datetime(2016, 4, 12, 17, 32, 38, 806353)
>>> print dt.strftime('%Y-%m-%d %H:%M:%S')
2016-04-12 17:32:38
>>> print dt.strftime('%A, %B %d, %Y')
Tuesday, April 12, 2016
```



Continuous logging

You are probably going to want your data capture code to run indefinitely, or at least more than once. You should be familiar with flow control and looping constructs from your Intro To Python.

Add a loop to your code to continuously log the reading and time.

Try and get the same output using readline() instead. Why might this be preferable for other instruments?



Continuous logging example

In most cases, you will need to log more than one data point. A basic modification is fairly simple, using a while loop:

```
#!/usr/bin/python2.7
from datetime import datetime
import serial
ser = serial.Serial(
   port='/dev/ttyUSB0',
   baudrate=9600,
while ser.isOpen():
   datastring = ser.read(size=8)
   print datetime.utcnow().isoformat(), datastring
ser.close()
```

returns something like:

```
2014-03-06T14:20:28.147494 +023.9C
2014-03-06T14:20:28.849280 +024.0C
2014-03-06T14:20:38.769283 +024.0C
2014-03-06T14:20:48.688270 +024.1C
```



Continuous logging with readline()

- ▶ The example thermometer *always* returns exactly eight bytes, and so ser.read(size=8) is fine.
- instruments do not always return fixed-length data, and instead separate the readings (or sets of readings) with a special character.
- ► Usually newline or carriage return
- ▶ The pyserial module provides readline() to handle this case.
- worked differently prior to python v2.6



```
#!/usr/bin/python2.7
from datetime import datetime
import serial, io
ser = serial.Serial(
   port='/dev/ttyUSB0',
   baudrate=9600,
sio = io.TextIOWrapper(io.BufferedRWPair(ser, ser, 1), encoding='ascii', newline='\r')
while ser.isOpen():
  datastring = sio.readline()
  print datetime.utcnow().isoformat(), datastring
ser.close()
```



Outputting to a file

Usually you will want to output the data to a file rather than the terminal, so, e.g., the data are on disk in case of a fault or similar.

Alter your code to write the data out to a file.



Outputting to a file example

```
#!/usr/bin/python
'''This version of the readserial program demonstrates
using python to write an output file'''
from datetime import datetime
import serial, io
outfile='/tmp/serial-temperature.tsv'
ser = serial.Serial(
   port='/dev/ttyUSB0',
   baudrate=9600,
sio = io.TextIOWrapper(
   io.BufferedRWPair(ser, ser, 1),
   encoding='ascii', newline='\r'
```

(cont)



```
with open(outfile, 'a') as f: #appends to existing file
  while ser.isOpen():
    datastring = sio.readline()
    #\t is tab; \n is line separator
    f.write(datetime.utcnow().isoformat() + '\t' + datastring + '\n')
    f.flush() #included to force the system to write to disk
ser.close()
```

(see python/exercises/example_code/ldfsp.py in your git checkout)



Locating your serial port device

- ▶ Multiple USB->serial devices on one machine may not come back in the same order on reboot
- ► You can get multi-port USB->serial devices
- ▶ On Linux, there are alternative ways of addressing the device

```
[user01@unst ~]$ ls -F /dev/serial/by-id/*
/dev/serial/by-id/usb-Prolific_Technology_Inc._USB-Serial_Controller_D-if00-port0@
```

- ▶ No use if the devices have the same USB ID (e.g. if they are identical)
- ▶ Even devices that look different may have the same USB id if they are the same electronically

```
[user01@unst ~]$ ls -F /dev/serial/by-path/*
/dev/serial/by-path/pci-0000:00:14.0-usb-0:1:1.0-port0@
/dev/serial/by-path/pci-0000:00:14.0-usb-0:2:1.0-port0@
```

Identifies them by which port they're plugged in to



Finding out serial connection details

Most instruments with serial access will have a (possibly quite short) section in the manual detailing the connection settings. Of course, your instrument might be quite old and the manual lost, in which case: With any luck, the manual will be on their website. Of course they might be out of business, or unwilling or unable to help, in which case:

Use a search engine of your choice

As long as you get the voltage right (usually 3.3v or 5v) you **probably** can't damage your instrument by trying various combinations of serial settings until something works. 9600-8N1 is usually the best place to start



Outputting in NetCDF format

Assuming you've got some data of the format:

```
2017-02-22T10:00:08.457120 +019.4C

2017-02-22T10:00:18.438098 +019.4C

2017-02-22T10:00:28.419100 +019.4C

2017-02-22T10:00:38.400093 +019.4C

2017-02-22T10:00:48.381103 +019.3C

2017-02-22T10:00:58.362099 +019.3C

2017-02-22T10:01:08.342102 +019.3C

âĂę
```

You wouldn't really be happy with that as an archive file - if you came back to it in a few years (or someone else did, perhaps after you've moved on) there's several items of missing information.



Converting data from text to Python datatypes.

Before we write a NetCDF file, we must convert the text file to usable data. Our temperature is in a slightly weird format due to the Papouch sensor including the units, so we need functions to convert the string into a number and the time into a Python 'datetime' object.

$$(T_K = T_C + 273.15)$$



Converting data from text to Python datatypes - 2

```
def convert_time(tm):
    tm = datetime.strptime(tm, "%Y-%m-%dT%H:%M:%S.%f")
    return tm

def convert_temp(temp):
    value = temp.strip("+").strip("C").lstrip("0")
    return float(value) + 273.15
```

strptime is the opposite of strftime that we used earlier.



Reading data in with the csv module

Python has a module designed for reading in text formats. It's called csv, although it also does tab-separated and related structured ASCII formats. We only need the base reader object here. (Other reader objects deal with more complex cases - f.ex. DictReader)

Q1. Read your datafile into Python using the csv module such that you end up with list object(s) containing floating-point temperature in K and timestamps as Python datetime objects.



```
infile='sample-serial-temperature-2h.tsv'
outfile='sensor-data.nc'
from csv import reader
# Parse the data into python lists
times = []
temps = []
#open infile and read data into lists
with open(infile, 'rb') as tsvfile:
   tsvreader = reader(tsvfile, delimiter='\t')
   for row in tsyreader:
      times.append(convert time(row[0]))
      temps.append(convert temp(row[1]))
```

The call to reader returns an iterator so we can iterate over it with a for loop.



Writing NetCDF files with Python

We can write the data from the serial logging exercise to a new NetCDF file.

- Create a Dataset (use the format NETCDF4 CLASSIC)
- ▶ Convert your time series to a suitable CF-compliant series
- ► Create a suitable Dimension for your time series
- ► Create Variable objects for Temp and Time using appropriate units etc.
- ► Assign appropriate metadata to the Temp Variable and and the Dataset
- ► Add your time series and temp values to the Dataset
- ► Close and write your Dataset. Test that it parses correctly eith ncdump



Time series

NetCDF using CF conventions stores times as an offset from a base time rather than an absolute time, so we first subtract base_time, and then convert the resulting timedelta object to an offset in seconds.

```
# Set reference time and convert datetime values to offset values from reference time
#reference time is the first time in the input data
base_time = times[0]
time_values = []

for t in times:
    value = t - base_time
    ts = value.total_seconds()
    time_values.append(ts)

time_units = "seconds since " + base_time.strftime('%Y-%m-%d %H:%M:%S')
```



Create the NetCDF dimensions & variables

```
# Create the output file (NetCDF dataset)
dataset = Dataset(outfile, "w", format='NETCDF4 CLASSIC')
# Create the time dimension - with unlimited length
time dim = dataset.createDimension("time", None)
# Create the time variable
time var = dataset.createVariable("time", np.float64, ("time",))
time var[:] = time values
time var.units = time units
time var.standard name = "time"
time var.calendar = "standard"
# Create the temp variable
temp = dataset.createVariable("temp", np.float32, ("time",))
temp[:] = temps
```



Metadata

One of the advantages of NetCDF is that it can contain metadata. We'll set a dictionary to contain it so we don't repeat ourselves.


```
# Set the variable attributes
temp.var_id = "temp"
temp.long_name = "Temperature of sensor (K)"
temp.units = "K"
temp.stabdard_name = "air_temperature"

# Set the global attributes
dataset.Conventions = "CF-1.6"
dataset.institution = "NCAS"
dataset.title = "My first CF-netCDF file"
dataset.history = "%s: Written with script: write_sensor_data_to_netcdf.py" % (datetime.now().strict.edge)
```



Plotting data

You can do a quick-and-dirty plot with ncview:

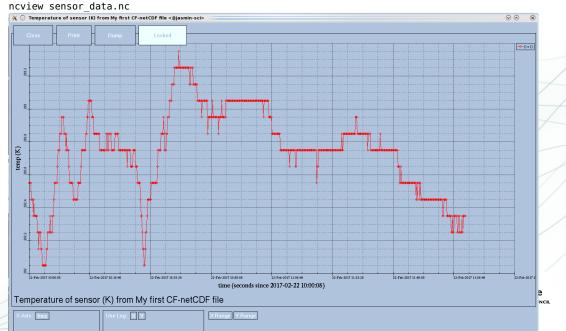

Plotting data

```
#!/usr/bin/python2.7
''' Plots a line graph from a NetCDF file '''
from netCDF4 import Dataset
import numpy as np
datafile = 'sensor data.nc'
nc = Dataset(datafile, mode='r')
temps = nc.variables['temp'][:]
times = nc.variables['time'][:]
times = num2date(time[:],units=time.units, calendar=time.calendar)
plt.plot date(times,temps)
plt.savefig('sensor data.png')
```

Plotting data - with labels

fig.tight layout()

After times = num2date(time{:},units=time.units, calendar=time.calendar)

```
#get "handles" to affect plot styling
fig, ax = plt.subplots()
#tick every tenth minute
ax.xaxis.set major locator(MinuteLocator(byminute=range(0,60,10)))
#format of date on x-axis (display minutes, uses strftime)
ax.xaxis.set major formatter(DateFormatter('%H:%M'))
#tick every minute
ax.xaxis.set minor locator(MinuteLocator())
ax.autoscale view()
#line graph
plt.plot date(times, temps, '-')
labels = ax.get xticklabels()
plt.setp(labels, rotation=90, fontsize=10, horizontalalignment='center')
plt.xlabel(time.standard name)
plt.ylabel(temp.standard_name + ' / ' + temp.units)
plt.title(nc.title)
#tidy up layout automatically
```

Plotting data with CIS (Community Intercomparison Suite)


Another option is CIS

"CIS is an open source command-line tool for easy collocation, visualization, analysis, and comparison of diverse gridded and ungridded datasets used in the atmospheric sciences"

It is based on python. Homepage: http://www.cistools.net/

```
cis plot temp:sensor_data.nc --xaxis time --yaxis temp \
    --title "Papouch Thermometer Data, 2017-02-22, UoL PRD" --xstep "0.010416" \
    --output sensor data sample.svg
```



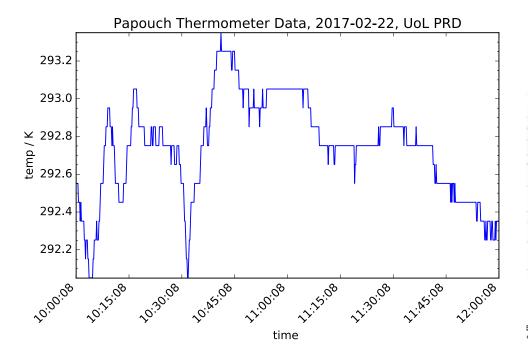

Further exercises

e.g. using optparse (for Python < v2.7) or argparse (Python â 2.7)

