Modeling CPU cores in gem5



gem5 simulator

Remember, gem5 is an execute-in-execute simulator.


We have looked at what happens to memory requests going through the caches and memory system.

Now, let's see how applications and their instructions are executed in gem5.



Executing an instruction

- Fetch: Get the next instruction from memory using the instruction cache port
 - Possibly checks the branch predictor to see if the instruction is a branch
- **Decode**: Calls into the ISA to decode the instruction and get an instance of the StaticInst class
- **Execute**: Calls into the <code>ExecContext</code> instance to execute the instruction. Actually update the registers
- **Memory**: If the instruction needs to access memory, it uses a different path than execute to send request to the data cache

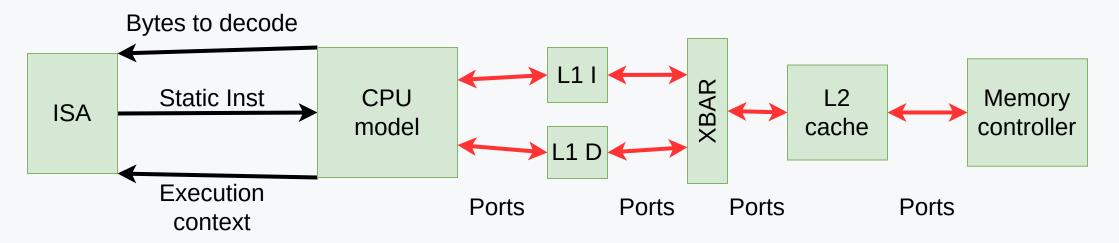




Outline

- Learn about CPU models in gem5
 - AtomicSimpleCPU, TimingSimpleCPU, O3CPU, MinorCPU, KvmCPU
- Using the CPU models
 - Set up a simple system with two cache sizes and three CPU models
- Look at the gem5 generated statistics
 - o To understand the differences between CPU models
- Create a custom processor
 - Change parameters of a processor based on O3CPU



gem5 CPU Models

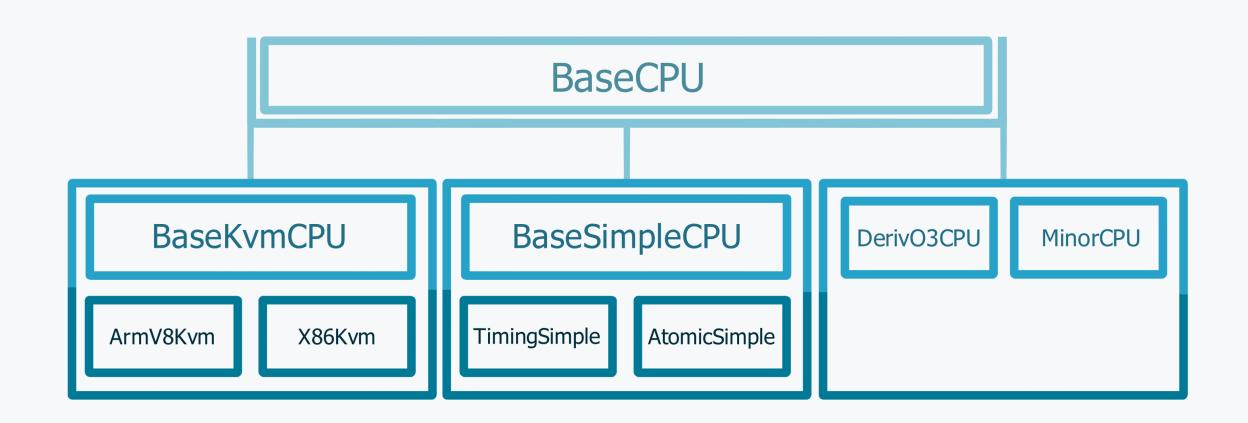



SimpleCPU

Atomic


Sequence of nested calls
Use: Warming up, fast-forwarding

Functional

Backdoor access to mem. (loading binaries)
No effect on coherency states

Timing

Split transactions
Models queuing delay and
resource contention

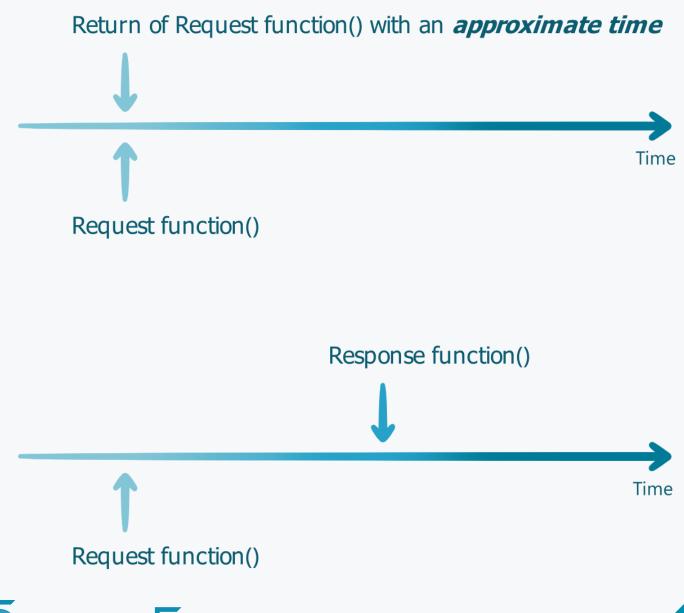



Other Simple CPUs

AtomicSimpleCPU

- Uses *Atomic* memory accesses
 - No resource contentions or queuing delay
 - Mostly used for fast-forwarding and warming of caches

TimingSimpleCPU

- Uses *Timing* memory accesses
 - Execute non-memory operations in one cycle
 - Models the timing of memory accesses in detail



O3CPU (Out of Order CPU Model)

- *Timing* memory accesses *execute-in-execute* semantics
- Time buffers between stages

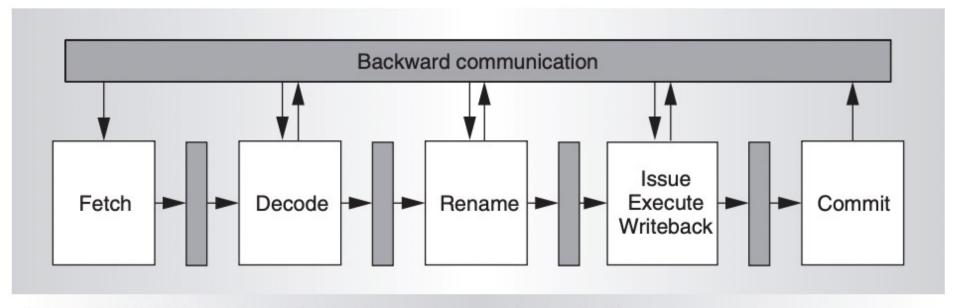


Figure 2. O3CPU pipeline. Shaded boxes represent time buffers.



The O3CPU Model has many parameters

src/cpu/o3/BaseO3CPU.py

Remember, do not update the parameters directly in the file. Instead, create a new *stdlib component* and extend the model with new values for parameters.

We will do this soon.



Minor CPU

- **Overview**: The Minor CPU model in gem5 is an in-order pipelined processor designed to help computer architects understand event-driven simulators.
- **Purpose**: The Minor CPU model provides a simplified yet detailed implementation of an in-order pipelined processor, making it easier to grasp the concepts of pipeline stages and their interactions.

Key Features:

- In-Order Execution: The Minor CPU executes instructions in the order they are fetched.
- Pipeline Stages: It consists of four main pipeline stages: Fetch1, Fetch2, Decode, and Execute.
- **SimObjects**: Each stage is implemented as a SimObject, allowing for modular and detailed simulation.



Minor CPU design

Pipeline Stages:


- Fetch1: Handles ITLB access and instruction fetch from main memory.
- Fetch2: Responsible for instruction decoding.
- Decode: Performs book-keeping tasks.
- Execute: Manages instruction issue, execution, memory access, writeback, and commit.

Implementation:

- Latches: The stages are connected via latches, which are used to transfer data between stages.
- **Evaluate Method**: Each stage has an <code>[evaluate()]</code> method that defines the actions performed at each CPU tick.



MinorCPU

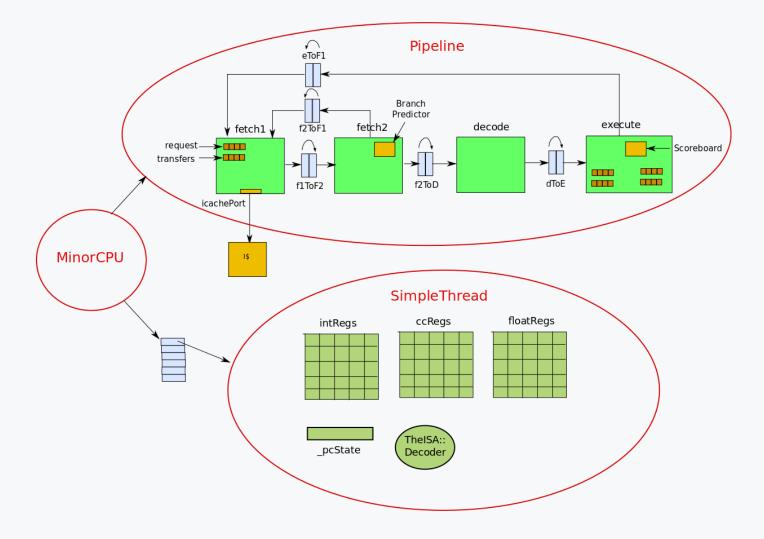



Minor CPU parameters

Like the O3CPU, the Minor CPU model has many parameters that can be modified to change the behavior of the CPU.

src/cpu/minor/BaseMinorCPU.py

```
fetch1FetchLimit = Param.Unsigned(
    1, "Number of line fetches allowable in flight at once"
fetch1ToFetch2ForwardDelay = Param.Cycles(
    1, "Forward cycle delay from Fetch1 to Fetch2 (1 means next cycle)"
executeIssueLimit = Param.Unsigned(
    2, "Number of issuable instructions in Execute each cycle"
```



Customizing instruction performance

Both the O3CPU and Minor CPU models allow you to customize the performance of instructions by changing the parameters of the CPU model.

These models have functional units and pools of functional units.

- [MinorFU] and [MinorFUPool] for the Minor CPU
- [FUDesc] and [FUPool] for the O3CPU

The pool of functional units is what the CPU uses to execute instructions. E.g., you could have an integer unit, a floating-point unit, and a memory unit.

Each unit has a "count" for the number of parallel units available and a list of operations that the unit can execute.

Each operation can be customized to execute a class of instructions and for each class of instructions it can have a latency and a throughput.



Example of a functional unit pool

From src/cpu/o3/FuncUnitConfig.py

```
class IntALU(FUDesc):
    opList = [OpDesc(opClass="IntAlu")]
    count = 6
class IntMultDiv(FUDesc):
    opList = [
        OpDesc(opClass="IntMult", opLat=3),
        OpDesc(opClass="IntDiv", opLat=20, pipelined=False),
    count = 2
class DefaultFUPool(FUPool):
    FUList = [IntALU(),IntMultDiv(),FP_ALU(),FP_MultDiv(),
        ReadPort(), SIMD_Unit(), PredALU(), WritePort(),
        RdWrPort(), IprPort(),
```

In this example, there are 6 parallel integer units which can execute all of the instructions tagged as "IntAlu". By default, they will complete in 1 cycle with a 1 cycle throughput.

The IntMultDiv unit has 2 parallel units, one of which can execute integer multiplication in 3 cycles and the other can execute integer division in 20 cycles.

For the multiply, a new instructions can start every cycle and for the division, the unit is not pipelined.

The pool has a list of all the functional units that are available to the CPU.



KvmCPU

- KVM Kernel-based virtual machine
- Used for native execution on x86 and ARM host platforms
- Guest and the host need to have the same ISA
- Very useful for functional tests and fast-forwarding




Summary of gem5 CPU Models

BaseKvmCPU

- Very fast
- No timing
- No caches, BP

BaseSimpleCPU

- Fast
- Some timing
- Caches, limited BP

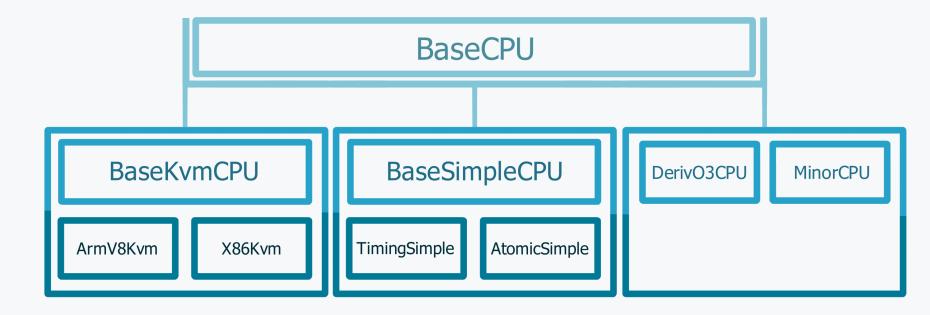


DerivO3CPU and MinorCPU

- Slow
- Timing
- Caches, BP



Interaction of CPU model with other parts of gem5

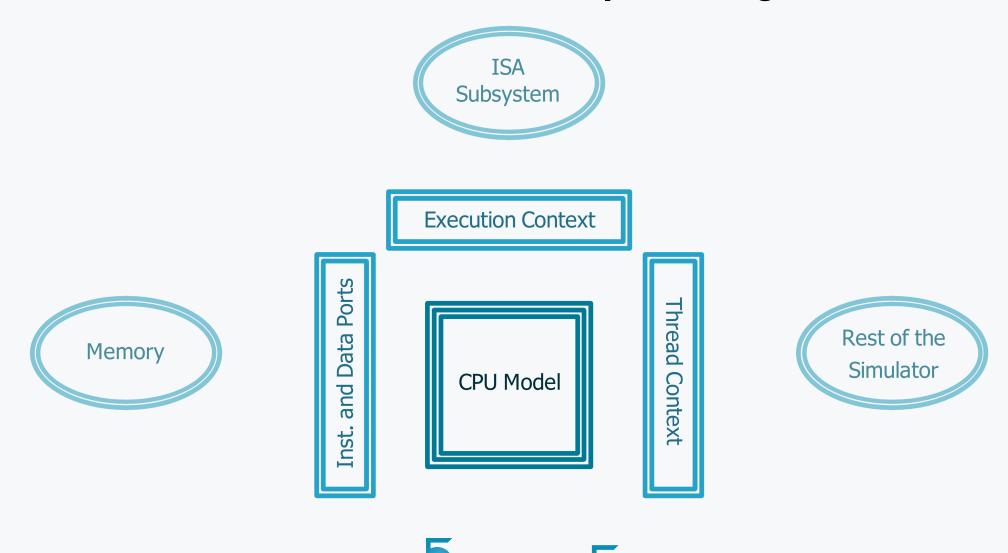

Outline

- Learn about CPU models in gem5
 - AtomicSimpleCPU, TimingSimpleCPU, O3CPU, MinorCPU, KvmCPU
- Using the CPU models
 - Set up a simple system with two cache sizes and three CPU models
- Look at the gem5 generated statistics
 - To understand differences among CPU models
- Create a custom processor
 - Change parameters of a processor based on O3CPU



Exercise 1: Comparing CPU models

In this exercise, we will compare the performance of different CPU models in gem5. You will compare the performance of the AtomicSimpleCPU, TimingSimpleCPU, MinorCPU, and O3CPU.

Use the "<u>riscv-matrix-multiply-run</u>" workload.

Questions:

- 1. Compare the total number of instructions simulated by each CPU model. What do you observe?
- 2. Compare the total simulated time for each CPU model. What do you observe?
- 3. Change the parameters of the cache hierarchy and compare the performance of the Atomic and Timing CPU models. What do you observe?



Step 1: Create the processor

In your script, use the SimpleProcessor.

See SimpleProcessor for more information.

Since you're going to be running the "riscv-matrix-multiply" workload, make sure you set up your processor to use the RISC-V ISA.

The workload is single threaded, so there's no need to set up multiple cores.

Choose the appropriate <u>CPU type</u> for the processor.



Step 1: Answer

```
processor = SimpleProcessor(
    cpu_type=CPUTypes.ATOMIC,
    isa=ISA.RISCV,
    num_cores=1
)
```

You can also use CPUTypes.TIMING for the TimingSimpleCPU, CPUTypes.MINOR for the MinorCPU, and CPUTypes.03 for the O3CPU.



Step 2: Create the board, set up the workload, and run the simulation

You can use the SimpleBoard component to create a simple system with a single processor. See SimpleBoard for more information.

With the SimpleBoard, you can set the processor, memory (use SingleChannelDDR4_2400), and cache hierarchy (use PrivateL1CacheHierarchy).

Then, use obtain_resource to get the workload and run the simulation.

See obtain_resource for more information.

We'll talk more about this in the next section.

You may want to use gem5 --outdir=<outdir-name> to separate the output directories for each simulation.



Step 2: Answer

```
board = SimpleBoard(
    processor=processor,
    memory=SingleChannelDDR4_2400(),
    cache_hierarchy=PrivateL1CacheHierarchy()
)
workload = obtain_resource("riscv-matrix-multiply")
board.set_workload(workload)
sim = Simulator(board=board)
sim.run()
```

Run this with Atomic, Timing, Minor, and O3 CPUs.



Step 3: Change the cache size and compare atomic and timing

Change the cache size in the PrivateL1CacheHierarchy component and run the simulation again.



Exercise 1: Question answers

- 1. Compare the total number of instructions simulated by each CPU model. What do you observe?
- 2. Compare the total simulated time for each CPU model. What do you observe?
- 3. Change the parameters of the cache hierarchy and compare the performance of the Atomic and Timing CPU models. What do you observe?



Outline

- Learn about CPU models in gem5
 - AtomicSimpleCPU, TimingSimpleCPU, O3CPU, MinorCPU, KvmCPU
- Using the CPU models
 - Set-up a simple system with two cache sizes and three CPU models
- Look at the gem5 generated statistics
 - To understand differences among CPU models
- Create a custom processor
 - Change parameters of a processor based on O3CPU



Statistics



Look at the Number of Operations

Assuming you called your output directories [atomic-normal-cache], [atomic-small-cache], [timing-normal-cache], and [timing-small-cache], you can look at the number of operations (instructions) simulated by each CPU model.

Run the following command.

```
grep "simOps" *cache/stats.txt
```

Here are the expected results. (Note: Some text is removed for readability.)

```
atomic-normal-cache/stats.txt:simOps33955020atomic-small-cache/stats.txt:simOps33955020timing-normal-cache/stats.txt:simOps33955020timing-small-cache/stats.txt:simOps33955020
```



Ops vs Instructions

The ISAs in gem5 have some "microcoded" instructions that are broken down into multiple operations.

Thus, you will often see more "ops" than "instructions" in the statistics.

The x86 ISA has more complex instructions that are broken down into multiple operations. In x86, you should expect to see almost double the number of ops compared to instructions.

It is the *ops* not the instructions that are executed by the CPU model.



Look at the Number of Execution Cycles

Run the following command.

```
grep -ri "cores0.*numCycles" *cache
```

Here are the expected results. (Note: Some text is removed for readability.)

atomic-normal-cache/stats.txt:board.processor.cores0.core.numCycles	38157549
atomic-small-cache/stats.txt:board.processor.cores0.core.numCycles	38157549
timing-normal-cache/stats.txt:board.processor.cores0.core.numCycles	62838389
timing-small-cache/stats.txt:board.processor.cores0.core.numCycles	96494522

Note that for Atomic CPU, the number of cycles is the **same** for a large cache *and* a small cache.

This is because Atomic CPU ignores memory access latency.



Extra Notes about gem5 Statistics

When you specify the out-directory for the stats file (when you use the flag [--outdir=<outdir-name>), go to [<outdir-name>/stats.txt] to look at the entire statistics file.

For example, to look at the statistics file for the Atomic CPU with a small cache, go to atomic-small-cache/stats.txt.

In general, if you don't specify the out-directory, it will be [m5out/stats.txt].

Other statistics to look at

- Simulated time (time simulated by gem5)
 - simSeconds
- Host time (time taken by gem5 to run your simulation)
 - hostSeconds



Outline

- Learn about CPU models in gem5
 - AtomicSimpleCPU, TimingSimpleCPU, O3CPU, MinorCPU, KvmCPU
- Using the CPU models
 - Set-up a simple system with two cache sizes and three CPU models
- Look at the gem5 generated statistics
 - To understand differences among CPU models
- Create a custom processor
 - Change parameters of a processor based on O3CPU



Exercise 2: Create a custom processor

Steps

- 1. Update class Big(O3CPU) and Little(O3CPU)
- 2. Run with Big processor
- 3. Run with Little processor
- 4. Compare statistics

We will be running the same workload (matrix-multiply) on **two custom processors**.

Questions

- 1. What is the IPC of the big and little processors?
- 2. What is the speedup of the big processor?
- 3. What is the bottleneck in the little processor?



Step 1: Create specialized models

In this step, you need to override the parameters of the O3CPU model to create two new classes:

Big03 and Little03.

Remember, the O3CPU is a gem5 *SimObject* and we are going to wrap it to make it a standard library component.

This is a little more complicated for the processor since it is made up of many cores (and gem5 doesn't have a very well-defined core interface).

Create a new file called [my_processor.py] in the same directory as your script.

Add new classes, [Big03] and [Little03], to this file. They will inherit from the [Riscv03CPU] class and override the parameters.

Important: The CPU models are specialized for each ISA, so you need to make sure the ISA is included in your gem5 binary to have the RISC-V O3CPU.



Step 1: Continued

In your specialized classes, override the parameters of the O3CPU model to create the Big03 and Little03 classes.

Specifically, change the fetchWidth, decodeWidth, renameWidth, issueWidth, wbWidth, commitWidth to either 2 or 8 (for little and big).

For the little processor, set the [numROBEntries], [numIntRegs], and [numFpRegs] parameters to 30, 40, and 40 respectively.

For the big processor, set the numROBEntries, numIntRegs, and numFpRegs parameters to 256, 512, and 512 respectively.

See [Base03CPU] for more information.



Step 1: Answer

```
class Big03(Riscv03CPU):
    def __init__(self):
        super().__init__()
        self.fetchWidth = 8
        self.decodeWidth = 8
        self.renameWidth = 8
        self.dispatchWidth = 8
        self issueWidth = 8
        self.wbWidth = 8
        self.commitWidth = 8
        self.numROBEntries = 256
        self.numPhysIntRegs = 512
        self.numPhysFloatRegs = 512
```

```
class Little03(Riscv03CPU):
    def __init__(self):
        super().__init__()
        self.fetchWidth = 2
        self.decodeWidth = 2
        self.renameWidth = 2
        self.dispatchWidth = 2
        self.issueWidth = 2
        self.wbWidth = 2
        self.commitWidth = 2
        self.numROBEntries = 30
        self.numPhysIntRegs = 40
        self.numPhysFloatRegs = 40
```



Step 2: Create stdlib core wrappers

In the same file, create two new classes: BigCore and LittleCore.

These classes will inherit from the BaseCPUCore class and override the cpu with your specialized O3CPU.

See BaseCPUCore for more information.



Step 2: Answer

```
class BigCore(BaseCPUCore):
    def __init__(self):
        core = Big03()
        super().__init__(core, ISA.RISCV)

class LittleCore(BaseCPUCore):
    def __init__(self):
        core = Little03()
        super().__init__(core, ISA.RISCV)
```



Step 3: Create the processors

Now, add two new classes: BigProcessor and LittleProcessor.

These classes will inherit from the [BaseCPUProcessor] class and override the cores with your specialized O3CPU.

[BaseCPUProcessor] is a class that creates a stdlib processor with stdlib cores.

In the BigProcessor and LittleProcessor classes, you need to override the constructor to construct the cores.

See BaseCPUProcessor for more information.



Step 3: Answer

```
class BigProcessor(BaseCPUProcessor):
    def __init__(self):
        super().__init__(
            cores=[BigCore()]
class LittleProcessor(BaseCPUProcessor):
    def __init__(self):
        super().__init__(
            cores=[LittleCore()]
```



Step 4: Update the run script

Update the run script to use the custom processors.



Step 4: Answer

```
from my_processor import BigProcessor, LittleProcessor
if args.cpu_type == "Big":
    processor = BigProcessor()
elif args.cpu_type == "Little":
    processor = LittleProcessor()
board = SimpleBoard(
    clk_freq="3GHz",
    processor=processor,
    memory=SingleChannelDDR4_2400("1GiB"),
    cache_hierarchy=PrivateL1CacheHierarchy(
        11d_size="32KiB", l1i_size="32KiB"
```



Exercise 2: Question answers

- 1. What is the IPC of the big and little processors?
- 2. What is the speedup of the big processor?
- 3. What is the bottleneck in the little processor?

