

UMC 0.11um LOGIC/MIXED_MODE AI Advanced Enhancement Standard Performance 2.5V IO, Operated at 1.2V, MOSFET Monte Carlo SPICE Model Document

**Version 0.5 Phase 1
2016/09/07**

Table of Contents

1	INTRODUCTION	5
1.1	Revision History	5
1.2	General Information.....	6
1.3	Model Usage	7
1.3.1	Simulators	7
1.3.2	The combination of statistical model & corner model	7
1.3.3	Mismatching parameters in corner model	7
1.3.4	Sigma number for Monte-Carlo model.....	8
1.3.5	Model usage.....	8
2	MONTE CARLO DC SIMULATION RESULTS FOR PROCESS VARIATION	16
2.1	Threshold voltage in linear region VTLIN	17
2.2	Threshold voltage in saturation region VTSAT	18
2.3	Linear Current IDLIN	19
2.4	Saturation Current IDSAT	20
3	MONTE CARLO DYNAMIC SIMULATION RESULTS FOR PROCESS VARIATION	21
3.1	Ring Oscillator Circuit.....	21
4	MONTE CARLO SIMULATION RESULTS FOR MISMATCH	23
4.1	Threshold voltage in linear region VTLIN	23
4.2	Saturation Current IDSAT	25
5	MONTE CARLO DC SIMULATION RESULTS FOR PROCESS VARIATION OF BPW N-CH MOSFET	27
5.1	Threshold voltage in linear region VTLIN	28
5.2	Threshold voltage in saturation region VTSAT	29
5.3	Linear Current IDLIN.....	30
5.4	Saturation Current IDSAT	31
6	MONTE CARLO DYNAMIC SIMULATION RESULTS FOR PROCESS VARIATION OF BPW N-CH MOSFET	32
6.1	Ring Oscillator Circuit.....	32
7	MONTE CARLO SIMULATION RESULTS FOR MISMATCH OF BPW N-CH MOSFET	34
7.1	Threshold voltage in linear region VTLIN	34
7.2	Saturation Current IDSAT	35
8	APPENDIX.....	36
8.1	HSPICE Warning Messages	36
8.2	ELDO warning message	36
8.3	SPECTRE warning message.....	36

List of Figures

Figure 1-1 Layout Example of parallel devices.....	9
Figure 1-2 Layout Example for LOD effect	10
Figure 2-1 Monte Carlo plots of threshold voltage at low drain bias	17
Figure 2-2 Monte Carlo plots of threshold voltage at high drain bias	18
Figure 2-3 Monte Carlo plots of linear current.....	19
Figure 2-4 Monte Carlo plots of saturation current	20
Figure 3-1 Ring oscillator netlist diagram	21
Figure 3-2 Corner plot of ring oscillator	22
Figure 4-1 VTLIN mis-matching simulation of 1.2V n-ch MOSFET.....	23
Figure 4-2 VTLIN mis-matching simulation of 1.2V p-ch MOSFET.....	24
Figure 4-3 IDSAT mis-matching simulation of 1.2V n-ch MOSFET	25
Figure 4-4 IDSAT mis-matching simulation of 1.2V p-ch MOSFET	26
Figure 5-1 Monte Carlo plots of threshold voltage at low drain bias	28
Figure 5-2 Monte Carlo plots of threshold voltage at high drain bias	29
Figure 5-3 Monte Carlo plots of linear current.....	30
Figure 5-4 Monte Carlo plots of saturation current	31
Figure 6-1 Ring oscillator netlist diagram	32
Figure 6-2 Corner plot of ring oscillator	33
Figure 7-1 VTLIN mis-matching simulation of 1.2V bpw n-ch MOSFET.....	34
Figure 7-2 IDSAT mis-matching simulation of 1.2V bpw n-ch MOSFET	35

List of Tables

Table 1-1 Revision history	5
Table 3-1 Ring oscillator (inverter) structure description for SA=SB=0.318um	22
Table 6-1 Ring oscillator (inverter) structure description for SA=SB=0.318um	33
Table 8-1 Hspice warning message	36
Table 8-2 Eldo warning message	36
Table 8-3 Spectre warning message	36

1 Introduction

1.1 Revision History

Table 1-1 Revision history

Version	Date	Author	Remark
0.2_p1	2011/04/12	Laney Fan	1. Original release. 2. This Monte Carlo model includes both process and mis-matching characteristics extracted from model cards as below: l110ae_25ud12_v021.mdl l110ae_25ud12_v021.lib
0.3_p1	2011/09/23	Laney Fan	1. Modify the Monte Carlo model base on baseband model. 2. This Monte Carlo model includes both process and mis-matching characteristics extracted from model cards as below: l110ae_25ud12_v031.mdl l110ae_25ud12_v031.lib
0.4_p1	2015/04/21	Roberto Hsu	1. Modify the Monte Carlo model base on baseband model. 2. This Monte Carlo model includes both process and mis-matching characteristics extracted from model cards as below: l110ae_25ud12_v041.mdl l110ae_25ud12_v041.lib
0.5_p1	2016/09/07	Denny Hung	1.This Monte Carlo model includes both process and mis-matching characteristics extracted from model cards as below: l110ae_25ud12_v051.mdl l110ae_25ud12_v051.lib

1.2 General Information

This document serves as a reference to the design of products that will be manufactured by UMC using the following process.

0.11um Logic and Mixed-Mode 1P8M Metal Metal Capacitor Al Advanced Enhancement Process

For more information about this process and technology, please see the electrical design rule listed below.

G-02-LOGIC/MIXED_MODE11-1P8M-MMC/AL/L110AE-EDR

The creation, verification, and usage of the compact model of the following devices are presented in this document.

1.2V n-ch MOSFET
1.2V p-ch MOSFET

The following compact model is chosen for the modeling of these devices.

BSIM3V3.24

For detailed descriptions of the compact model equations and parameters, please refer to this material.

BSIM3V3.24 MOSFET Model User Manual

In BSIM4V4.6.0, there are two types of models that can be used. One is a binning model, which means the whole device dimension range is chopped into several "bins" and different model parameter sets are provided for each bin. The other one is a global model, which means one scalable parameter set is provided and it can cover the whole device geometry range. Each of these two approaches has advantages over the other.

UMC provides global models for their many benefits and the model accuracy is guaranteed by a quantitative report of model fitting error against the silicon data, which can be found in the following sections.

Note: Please make sure you would not design two kind of 2.5V and 3.3V IO device at same time. If any design **requirement is necessary, please discuss in advance with UMC through CE department.**

1.3 Model Usage

1.3.1 Simulators

The compact model is provided in various formats. It is guaranteed that the simulation results of this model from different simulators show differences less than 0.5% and 1% for DC and AC simulations respectively. It should be noted that the model has been verified on different simulators of the specific versions listed below, and the simulation results from other versions of the simulators might be different

Synopsys HSPICE release 2014.9SP2
Cadence Spectre version 13.1.0.066
Mentor Graphics ELDO version 2013.1

1.3.2 The combination of statistical model & corner model

The Monte-Carlo model and corner model (5 corners) are combined into a single model library. The user can choose either the Monte-Carlo model or a corner case by selecting different model sections for simulation. The following sections are included:

MC: Monte-Carlo model

TT: Typical n-ch MOSFET and Typical p-ch MOSFET

SS: Total corner of Slow n-ch MOSFET and Slow p-ch MOSFET

SNFP: Total corner of Slow n-ch MOSFET and Fast p-ch MOSFET

FNSP: Total corner of Fast n-ch MOSFET and Slow p-ch MOSFET

FF: Total corner of Fast n-ch MOSFET and Fast p-ch MOSFET

TT_G: Typical n-ch MOSFET and Typical p-ch MOSFET (the same as TT)

SS_G: Global corner of Slow n-ch MOSFET and Slow p-ch MOSFET

SNFP_G: Global corner of Slow n-ch MOSFET and Fast p-ch MOSFET

FNSP_G: Global corner of Fast n-ch MOSFET and Slow p-ch MOSFET

FF_G: Global corner of Fast n-ch MOSFET and Fast p-ch MOSFET

1.3.3 Mismatching parameters in corner model

The mismatching parameters are included in the corner models. Therefore, the user can run Monte-Carlo mismatching simulation over a corner model. For example, the user can evaluate the mismatching performance at the SS_G case.

1.3.4 Sigma number for Monte-Carlo model

The user can define standard deviation at sigma level for Monte-Carlo simulation. If a larger sigma number is used, it means the model parameters will have greater variation. Sigma=3 is recommended to be used.

1.3.5 Model usage

The definitions of sub-circuit model parameters

After invoking Monte-Carlo model parameters, the compact transistor models evolve to sub-circuit models. The input parameters for the sub-circuit model are the same as the compact model, except two more input parameters (mis_flag, & mf) are added for the sub-circuit model.

The following is the parameter list:

- nf: number of gate fingers
- m: number of devices
- mf: the same as "m"
- mis_flag: the flag parameter is used to turn on/off mismatching parameters for individual devices. 1 is turn-on and 0 is turn-off. Default is 1.
- w: total gate width (gate finger width * number of gate fingers)
- l: gate finger length
- as: source area per finger
- ad: drain area per finger
- ps: source periphery per finger
- pd: drain periphery per finger
- sa: distance between OD edge to poly from one side
- sb: distance between OD edge to poly from the other side
- sd: poly space for multiple finger device
- sca: integral of the first distribution function for scattered well dopant
- scb: integral of the second distribution function for scattered well dopant
- scc: integral of the third distribution function for scattered well dopant

The following example shows 3 transistors connected in parallel; each transistor has 5 fingers and each finger has width 5u and length 1u. The mismatching parameters are turned on. And the parameter "mf" is a must for mismatching simulation of parallel devices. Please note mf and m have to be equal.

```
x1 (d g s b) DeviceName w='W1*Nf1' l=1u mis_flag=1 m=3*5 mf=3*5
```



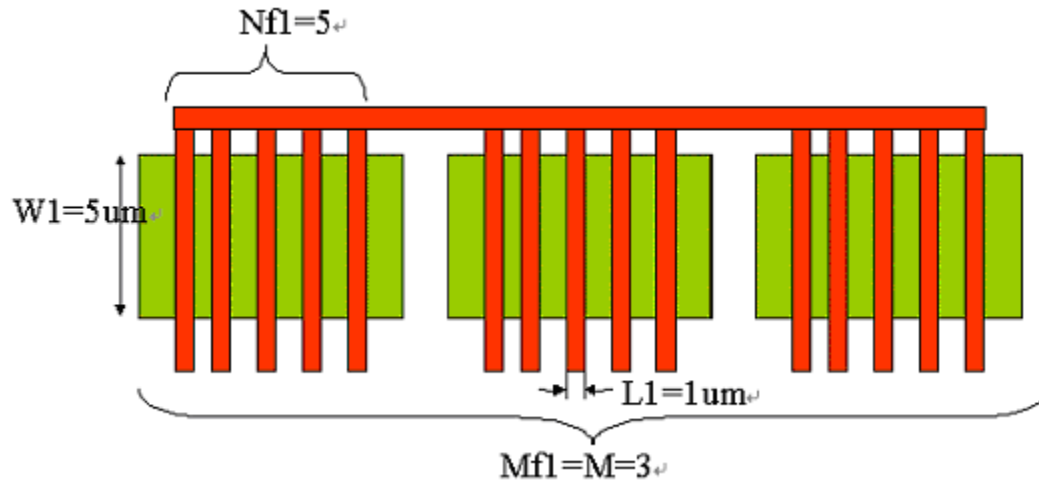



Figure 1-1 Layout Example of parallel devices.

Follow the description for the net-list of the LOD effect and these steps to invoke the model file during simulation.

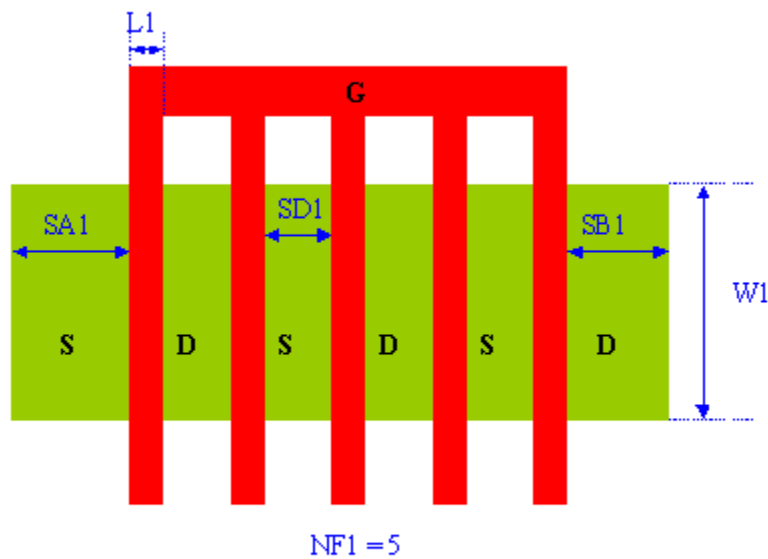

(a) Example for odd finger number

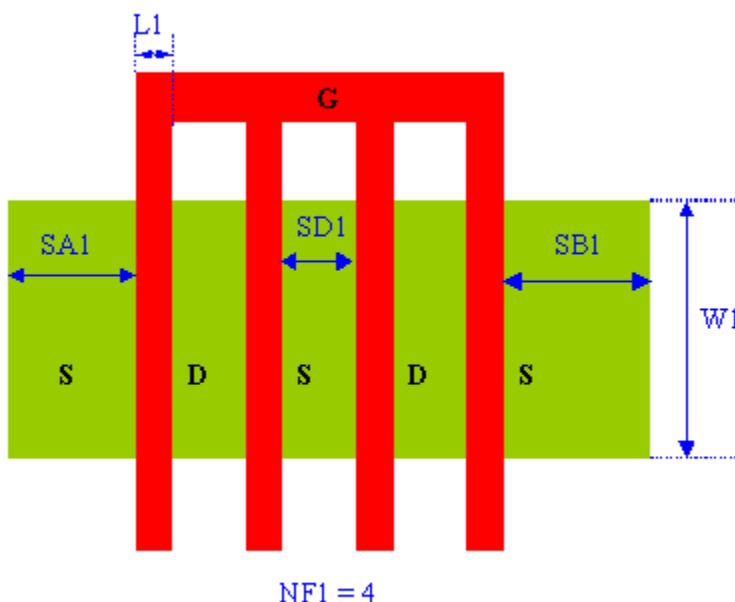

(b) Example for even finger number

Figure 1-2 Layout Example for LOD effect

For Synopsys HSPICE

- Include library file and select section.

Example 1: .lib " l110ae_25ud12_v051_mc_corner.lib" MC

Example 2: .lib " l110ae_25ud12_v051_mc_corner.lib" FF

Example 3: .lib " l110ae_25ud12_v051_mc_corner.lib" FF_G

- Define sigma value for MC simulation.

Example: .param sigma=3

.lib "./ModelFileName.lib" CaseName

, where CaseName could be MC, TT, FF, SS, FNFP, SNFP, FF_G, SS_G, FNFP_G or SNFP_G.

- Define device condition by 'Xxx' statement.

Example: For Finger Number device (Refer to Figure 1-2)

X1 Vdd Vgg Vss Vbb DeviceName W='W1*NF1' L=L1 NF=NF1

+ SA=SA1 SB=SB1 SD=SD1 SCA=SCA1 SCB=SCB1 SCC=SCC1

```
+ NF_ODD='NF-2*INT(NF/2)' NF_EVEN='1-NF_ODD'
+ A_UNIT='SD*W/NF' P_UNIT='2*(SD+W/NF)'
+ A_SA_EDGE='SA*W/NF' P_SA_EDGE='2*(SA+W/NF)'
+ A_SB_EDGE='SB*W/NF' P_SB_EDGE='2*(SB+W/NF)'
+ AD='NF_ODD*(A_UNIT*((NF+1)/2-1)+A_SB_EDGE) +
NF_EVEN*(A_UNIT*NF/2)'
+ AS='NF_ODD*(A_UNIT*((NF+1)/2-1)+A_SA_EDGE) +
NF_EVEN*(A_UNIT*(NF/2-1)+A_SA_EDGE+A_SB_EDGE)'
+ PD='NF_ODD*(P_UNIT*((NF+1)/2-1)+P_SB_EDGE) +
NF_EVEN*(P_UNIT*NF/2)'
+ PS='NF_ODD*(P_UNIT*((NF+1)/2-1)+P_SA_EDGE) +
NF_EVEN*(P_UNIT*(NF/2-1)+P_SA_EDGE+P_SB_EDGE)'
```

- Define the control of Monte-Carlo simulation.

Indicator:

PROCESS: 1 to turn on the global MC simulation

0 to turn off the global MC process simulation

MISMATCH: 1 to turn on the local MC mismatch simulation

0 to turn off the local MC mismatch simulation

Example 1:

run global & local (total) MC simulation together.

```
.lib "/ModelFileName.lib" MC
```

```
.PARAM PROCESS=1 MISMATCH=1
```

Example 2:

run global MC simulation only.

```
.lib "/ModelFileName.lib" MC
```

```
.PARAM PROCESS=1 MISMATCH=0
```

Example 3:

run local MC simulation only.

```
.lib "/ModelFileName.lib" MC
```

```
.PARAM PROCESS=0 MISMATCH=1
```

Example 4:

run local MC simulation on global corners.

```
.lib "/ModelFileName.lib" FF_G (or SS_G, FNFP_G,SNFP_G)
```

```
.PARAM PROCESS=0 MISMATCH=1
```

- Define the number of Monte Carlo iterations to run MC simulations.

Example: .DC Vgg 0 1.2 0.01 Sweep Monte=1000

For Cadence SPECTRE

- Include library file and select section.

Example 1: include "l110ae_25ud12_v051_mc_corner.lib.scs" section=mc

Example 2: include "l110ae_25ud12_v051_mc_corner.lib.scs" section=ff

Example 3: include "l110ae_25ud12_v051_mc_corner.lib.scs" section=ff_g

- Define sigma value for MC simulation.

Example: parameters sigma=3

include "./ModelFileName.lib.scs" section=CaseName

, where CaseName could be mc,tt, ff, ss, fnsfp, snfp, ff_g, ss_g, fnsfp_g or snfp_g.

- Define device condition by 'Xxx' statement.

Example: For Finger Number device (Refer to Figure 1-2)

```
X1 (Vdd Vgg Vss Vbb) DeviceName w='W1*NF1' l=L1 nf=NF1
+ sa=SA1 sb=SB1 sd=SD1 sca=SCA1 scb=SCB1 scc=SCC1
+ nf_odd=nf-2*int(nf/2) nf_even=1- nf_odd
+ a_unit=sd*w/nf p_unit=2*(sd+w/nf)
+ a_sa_edge=sa*w/nf p_sa_edge =2*(sa+w/nf)
+ a_sb_edge=sb* w/nf p_sb_edge =2*(sb+w/nf)
+ ad=nf_odd *( a_unit *((nf+1)/2-1)+ a_sb_edge) + nf_even *( a_unit
* nf/2)
+ as=nf_odd *( a_unit *((nf+1)/2-1)+ a_sa_edge) + nf_even *( a_unit
*(nf/2-1)+ a_sa_edge + a_sb_edge)
+ pd=nf_odd *( p_unit *((nf+1)/2-1)+ p_sb_edge) + nf_even *( p_unit
* nf/2)
+ ps=nf_odd *( p_unit *((nf+1)/2-1)+ p_sa_edge) + nf_even *( p_unit
*(nf/2-1)+ p_sa_edge + p_sb_edge)
```

- Define the number of Monte Carlo iterations and control MC simulations.

Example 1: run global & local (total) MC simulation together.

mc1 montecarlo numruns=1000 seed=1 variations=all donominal=yes

savefamilyplots=yes {

analysisDC1 dc param=Vgg start=0 stop=1.2 step=0.01}

Example 2: run global MC simulation only

mc1 montecarlo numruns=1000 seed=1 variations=process donominal=yes

savefamilyplots=yes {

analysisDC1 dc param=Vgg start=0 stop=1.2 step=0.01}

Example 3: run local simulation only

mc1 montecarlo numruns=1000 seed=1 variations=mismatch donominal=yes

savefamilyplots=yes {

analysisDC1 dc param=Vgg start=0 stop=1.2 step=0.01}

Example 4: run local MC simulation on global corners.

include "./ModelFileName.lib.scs" section= ff_g (or ss_g, fnsfp_g, snfp_g)

mc1 montecarlo numruns=1000 seed=1 variations=mismatch donominal=yes

savefamilyplots=yes {

analysisDC1 dc param=Vgg start=0 stop=1.2 step=0.01}

For Mentor Graphics ELDO

- Include library file and select section.

Example 1: .lib " l110ae_25ud12_v051_mc_corner.lib.eldo" MC

Example 2: .lib " l110ae_25ud12_v051_mc_corner.lib.eldo" FF

Example 3: .lib " l110ae_25ud12_v051_mc_corner.lib.eldo" FF_G

- Define sigma value for MC simulation.

Example: .param sigma=3

.lib "/ModelFileName.lib.eldo" CaseName

, where CaseName could be MC, TT, FF, SS, FNSP, or SNFP.

-Define device condition by 'Xxx' statement.

Example: For Finger Number device (Refer to Figure 1-2)

```
X1 Vdd Vgg Vss Vbb DeviceName W='W1*NF1' L=L1 NF=NF1
+ SA=SA1 SB=SB1 SD=SD1 SCA=SCA1 SCB=SCB1 SCC=SCC1
+ NF_ODD='NF-2*INT(NF/2)' NF_EVEN='1-NF_ODD'
+ A_UNIT='SD*W/NF' P_UNIT='2*(SD+W/NF)'
A_SA_EDGE='SA*W/NF' P_SA_EDGE='2*(SA+W/NF)'
+ A_SB_EDGE='SB*W/NF' P_SB_EDGE='2*(SB+W/NF)'
+ AD='NF_ODD*(A_UNIT*((NF+1)/2-1)+A_SB_EDGE) +
NF_EVEN*(A_UNIT*NF/2)'
+ AS='NF_ODD*(A_UNIT*((NF+1)/2-1)+A_SA_EDGE) +
NF_EVEN*(A_UNIT*(NF/2-1)+A_SA_EDGE+A_SB_EDGE)'
+ PD='NF_ODD*(P_UNIT*((NF+1)/2-1)+P_SB_EDGE) +
NF_EVEN*(P_UNIT*NF/2)'
+ PS='NF_ODD*(P_UNIT*((NF+1)/2-1)+P_SA_EDGE) +
NF_EVEN*(P_UNIT*(NF/2-1)+P_SA_EDGE+P_SB_EDGE)'
```

- Define the control of Monte-Carlo simulation.

Indicator:

PROCESS: 1 to turn on the global MC simulation

0 to turn off the global MC process simulation

MISMATCH: 1 to turn on the local MC simulation

0 to turn off the local MC simulation

Example 1:

run global & local (total) MC simulation together.

.lib "/ModelFileName.lib.eldo" MC

.PARAM PROCESS=1 MISMATCH=1

Example 2:

run global MC simulation only.

.lib "/ModelFileName.lib.eldo" MC

.PARAM PROCESS=1 MISMATCH=0

Example 3:

run local MC simulation only.
.lib "/ModelFileName.lib.eldo " MC
.PARAM PROCESS=0 MISMATCH=1

Example 4:

run local MC simulation on global corners.
.lib "/ModelFileName.lib.eldo " FF_G (or SS_G, FNSP_G, SNFP_G)

.PARAM PROCESS=0 MISMATCH=1
- Define the number of Monte Carlo iterations to run MC simulations.
Example: .DC Vgg 0 Vcc 1.2 Sweep Monte=1000

Benchmark Model: **l110ae_25ud12_v051**

Device Name for 1.2V n-ch MOSFET: **n_25ud12_l110ae**

Device Name for 1.2V p-ch MOSFET: **p_25ud12_l110ae**

As stated above that one global model is provided and this model is valid within the following geometry, voltage, and temperature ranges. Device behavior beyond these ranges may not be well described by the model and is not guaranteed.

Geometry range (After 90% shrink):

For both 1.2V n-ch and p-ch MOSFET:

$$0.234 \text{ } \mu\text{m} \leq L_{\text{DES}} \leq 45 \text{ } \mu\text{m}$$

$$0.35 \text{ } \mu\text{m} \leq W_{\text{DES}} \leq 90 \text{ } \mu\text{m}$$

Adopt multi-finger structures if $W_{\text{DES}} > 9 \text{ } \mu\text{m}$.

$$0.318 \text{ } \mu\text{m} \leq SA, SB \leq 1.98 \text{ } \mu\text{m}$$

Note: SAREF = SBREF = 2.2 μm is the reference dimension of the STI-stress (LOD) effect

Voltage range:

For 1.2V n-ch MOSFET:

$$0\text{V} \leq V_{\text{GS}} \leq 1.2\text{V} (*1.1)$$

$$0\text{V} \leq V_{\text{DS}} \leq 1.2\text{V} (*1.1)$$

$$-1.2\text{V} \leq V_{\text{BS}} \leq 0\text{V}$$

For 1.2V p-ch MOSFET:

$$0\text{V} \geq V_{\text{GS}} \geq -1.2\text{V} (*1.1)$$

$$0\text{V} \geq V_{\text{DS}} \geq -1.2\text{V} (*1.1)$$

$$1.2\text{V} \geq V_{\text{BS}} \geq 0\text{V}$$

Temperature range:

$$-50 \text{ } ^\circ\text{C} \sim +125 \text{ } ^\circ\text{C}$$

UMC L110E is UMC L130E 90% direct shrunk option. The following table gives users (including designers) a dimension correlation between Drawing vs. SPICE/Resistor dimensions.

Feature\ GDSII	Drawing in L130E GDSII database (unit : um)	L110 GDSII =0.9*(L130E GDSII) Dimension (unit : um)	L110 SPICE Dimension (unit : um)
Core (W/L)	10/0.12	9/0.108	(L sizing back 8 nm) 9/0.116
Salicide poly resistor	(Width/Length)	0.9*(Width/Length)	
3.3V I/O (W/L)	10/0.34	9/0.306	(L sizing back 12 nm) 9/0.318
contact size	0.16*0.16	0.144*0.144	
Via size(1X;2X)	0.2*0.2; 0.4*0.4	0.18*0.18; 0.36*0.36	
Metal size	Width/Space	0.9*(Width/Space)	
Slotting inserting	metal line width>5.556um	metal line width>5um	
N-well,salicide and non-salicide resistor	(Width/Length)	0.9*(Width/Length)	

Note:

1. Because process bias makes drawn and physical dimension different, please refer to interconnect capacitance model (G-04 document in individual DSM) for precise interconnection-capacitance extraction.
2. Please refer to SPICE model (G-05 document in individual DSM) for precise device characteristics.

2 Monte Carlo DC Simulation Results for Process Variation

Two hundred Monte Carlo iterations are performed in the following simulation conditions, and the following corner points show TT, SS, FF, SNFP and FNFP values individually.

A reasonable number of Monte Carlo iterations is 30. The statistical significance of 30 iterations is quite high. If the circuit operates correctly for all 30 iterations, there is 99% probability that over 80% of all possible component values operate correctly. The relative error of a quantity determined through Monte Carlo analysis is proportional to $(\text{iteration times})^{-1/2}$.

2.1 Threshold voltage in linear region VTLIN

The following figures show the Monte Carlo simulation result of saturation threshold voltage extracted at $I_D = 300\text{nA} * W_{DES} * 0.9 / (L_{DES} * 0.9 + 0.012 \mu\text{m})$ for NMOS and $I_D = -70\text{nA} * W_{DES} * 0.9 / (L_{DES} * 0.9 + 0.012 \mu\text{m})$ for PMOS at 25°C . The dimension is after 90% shrink and 12 nm sizing channel length back.

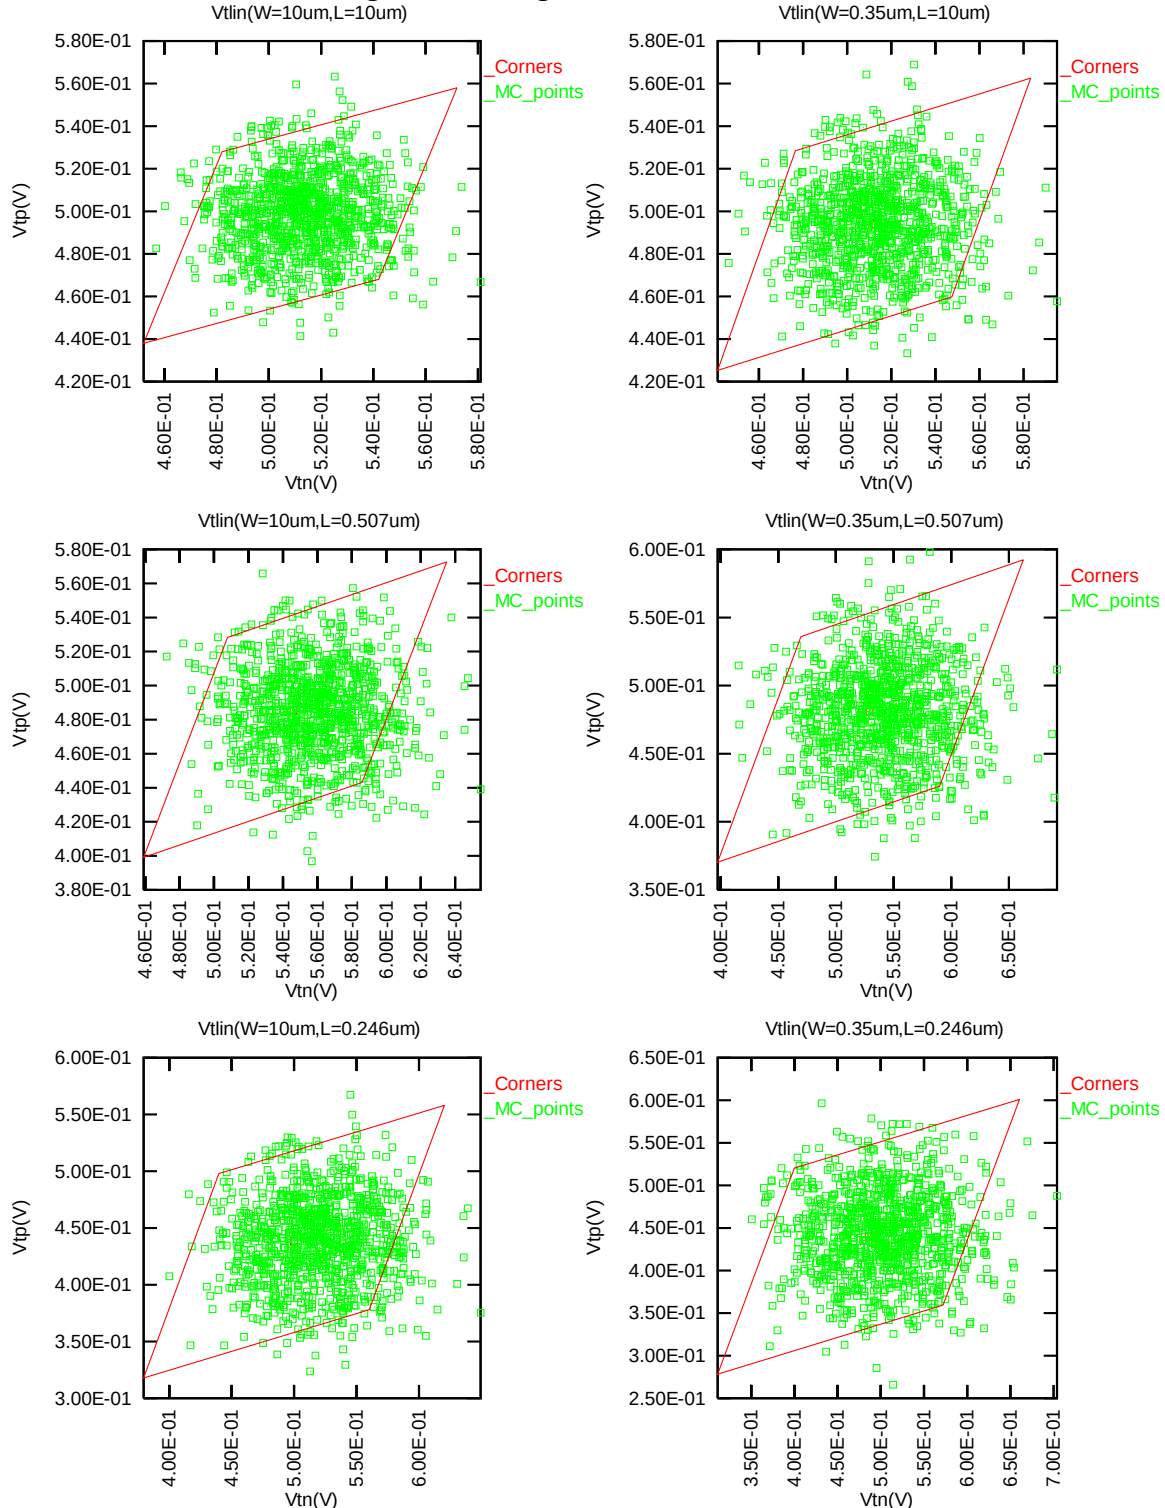


Figure 2-1 Monte Carlo plots of threshold voltage at low drain bias

2.2 Threshold voltage in saturation region VTSAT

The following figures show the Monte Carlo simulation result of saturation threshold voltage extracted at $I_D = 300\text{nA} * W_{DES} * 0.9 / (L_{DES} * 0.9 + 0.012 \mu\text{m})$ for NMOS and $I_D = -70\text{nA} * W_{DES} * 0.9 / (L_{DES} * 0.9 + 0.012 \mu\text{m})$ for PMOS at 25°C . The dimension is after 90% shrink and 12 nm sizing channel length back.

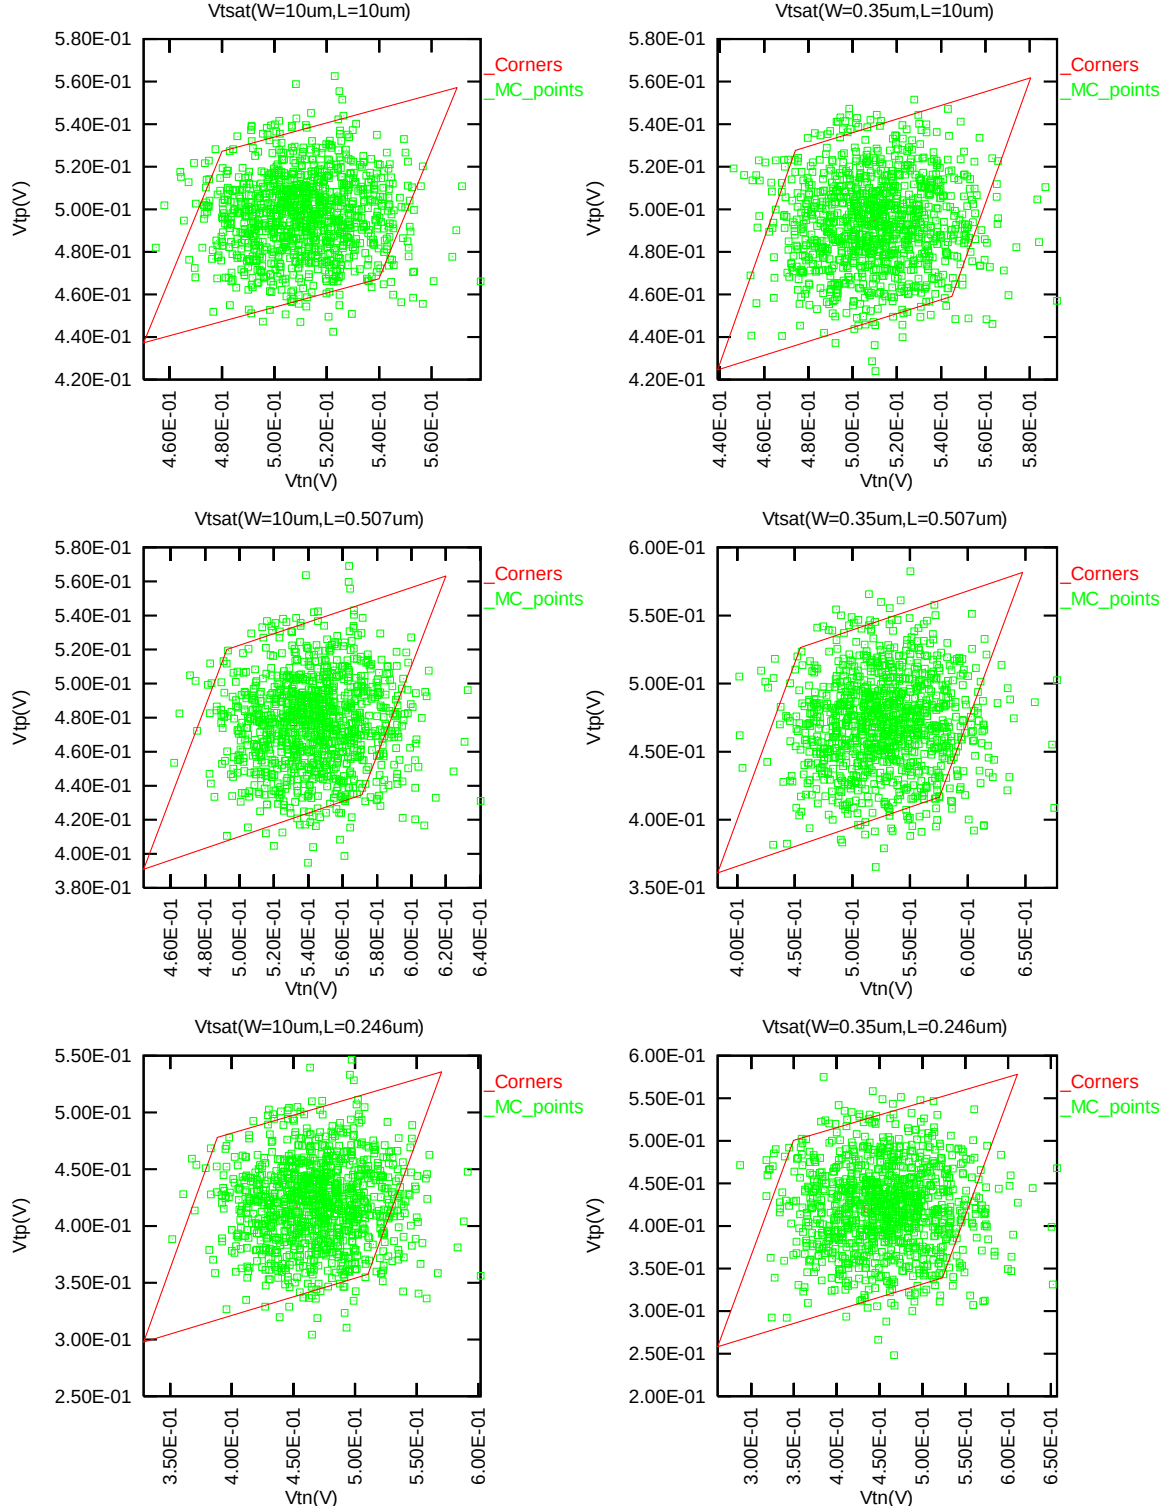


Figure 2-2 Monte Carlo plots of threshold voltage at high drain bias

2.3 Linear Current IDLIN

The following figures show the Monte Carlo simulation results of linear current at 25C.

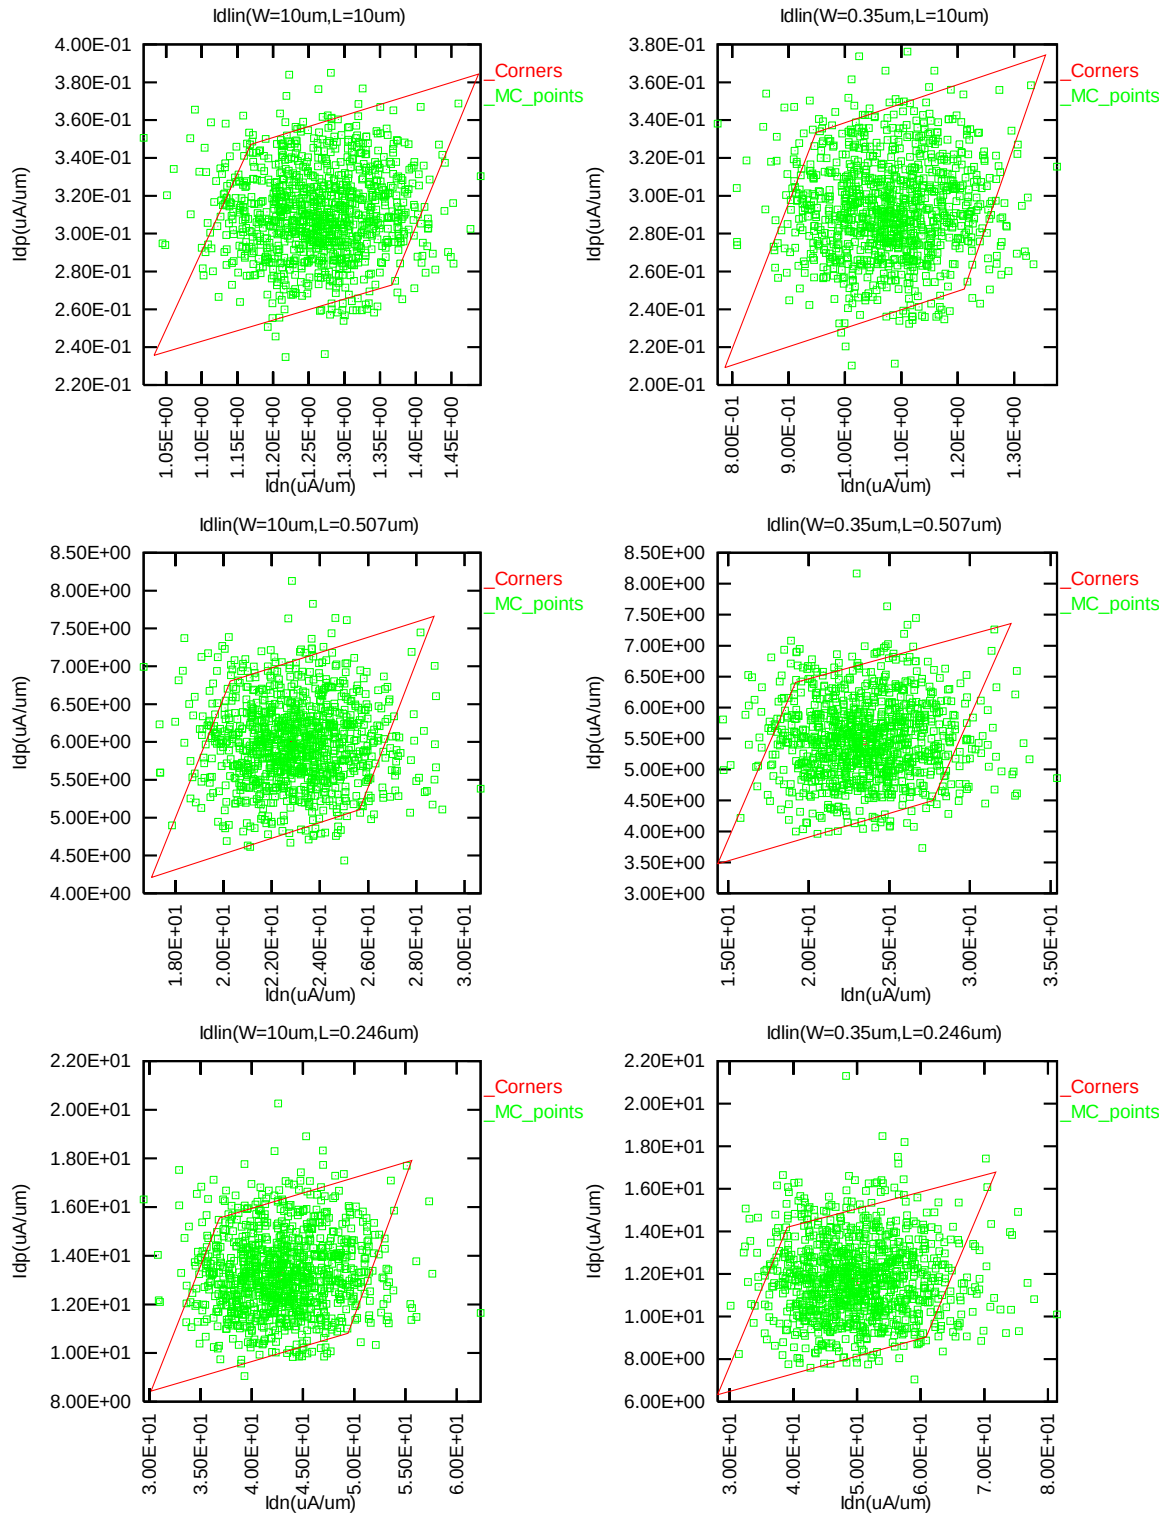


Figure 2-3 Monte Carlo plots of linear current

2.4 Saturation Current IDSAT

The following figures show the Monte Carlo simulation result of saturation current at 25C

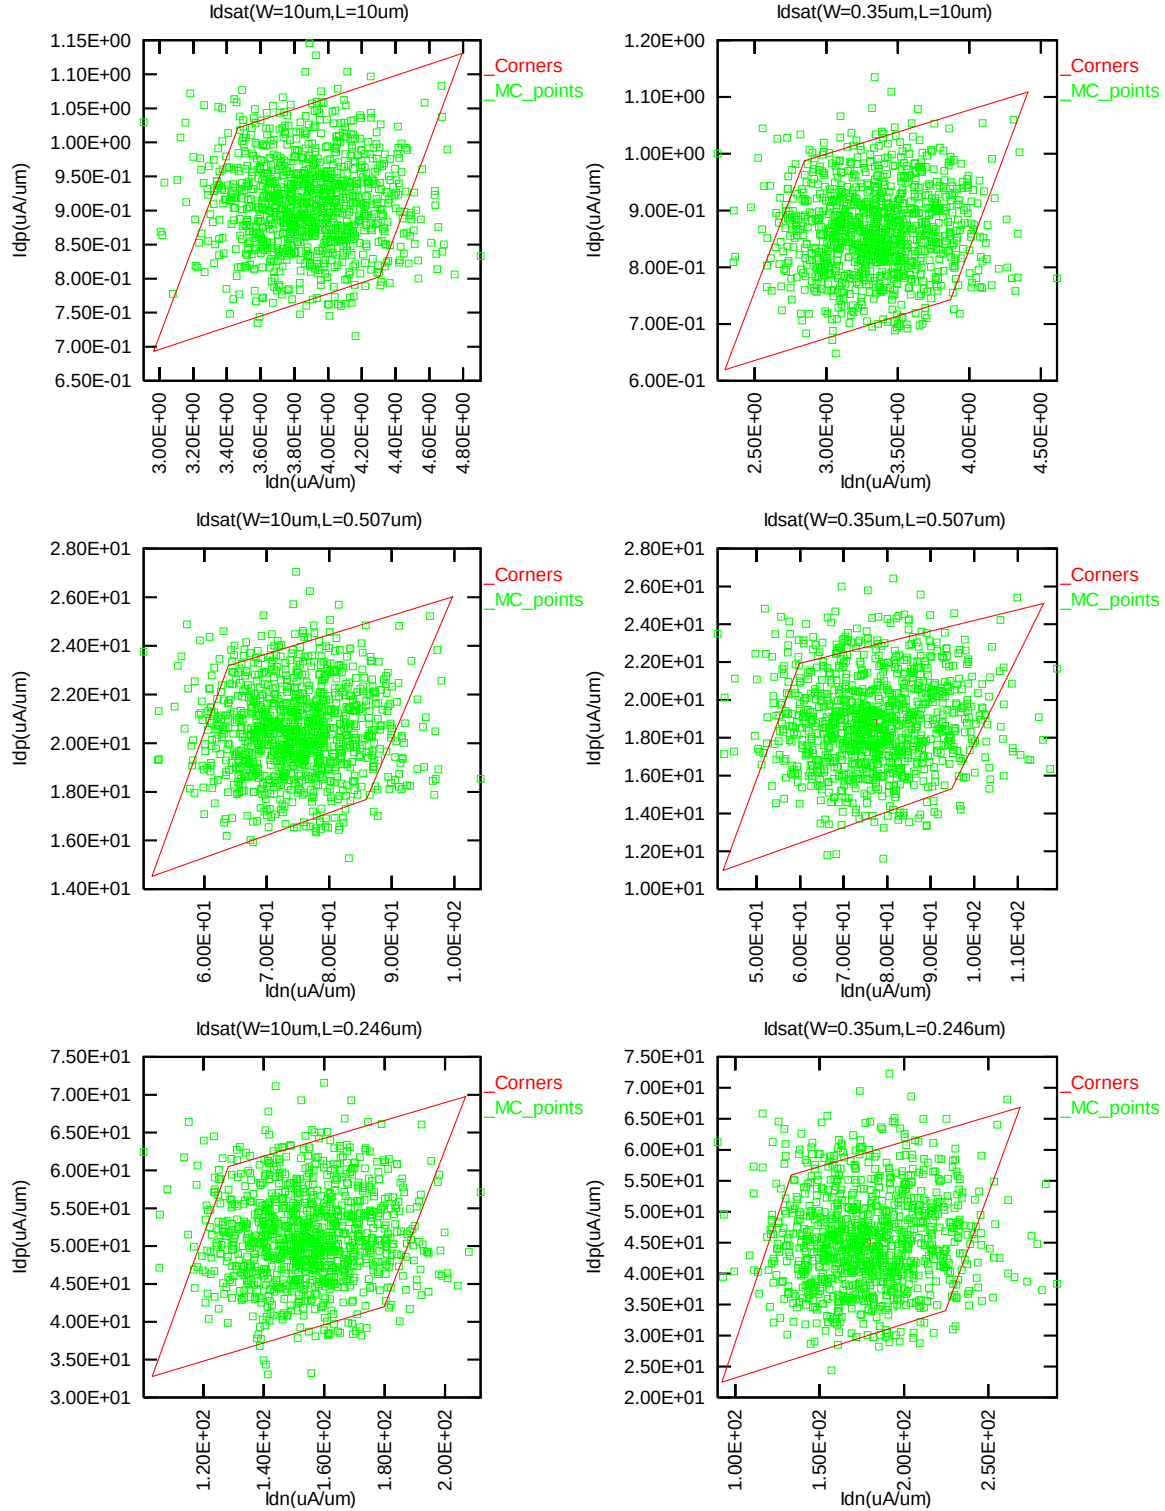



Figure 2-4 Monte Carlo plots of saturation current

3 Monte Carlo Dynamic Simulation Results for Process Variation


3.1 Ring Oscillator Circuit

To assess the dynamic performance of these devices, a ring oscillator circuit with the following configuration is adopted

R.O. (Inverter) circuit description

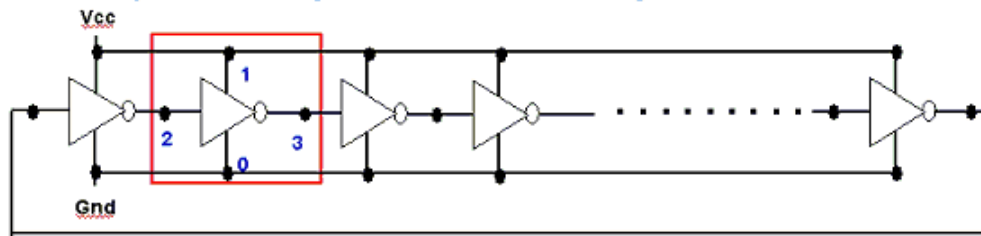

Ring Oscillator circuit

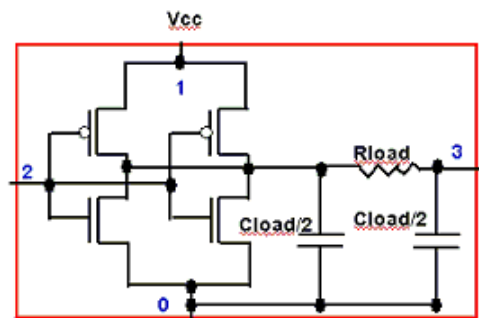

single stage R.O. circuit

Figure 3-1 Ring oscillator netlist diagram

Table 3-1 Ring oscillator (inverter) structure description for SA=SB=0.318um

R.O. (Inverter) Structure description		
Contact size	0.144 um X 0.144 um	
Polysilicon gate to contact spacing	0.12 um	
Contact to diffusion edge spacing	0.054 um	
Without RC loading	R = 0 ohm	C = 0 fF
Inverter		
Logic gate type	Inverter	
Channel width for n-ch MOSFET	5 um X 1	
Channel length for n-ch MOSFET	0.246 um	
Channel width for p-ch MOSFET	6.5 um X 1	
Channel Length for p-ch MOSFET	0.246 um	

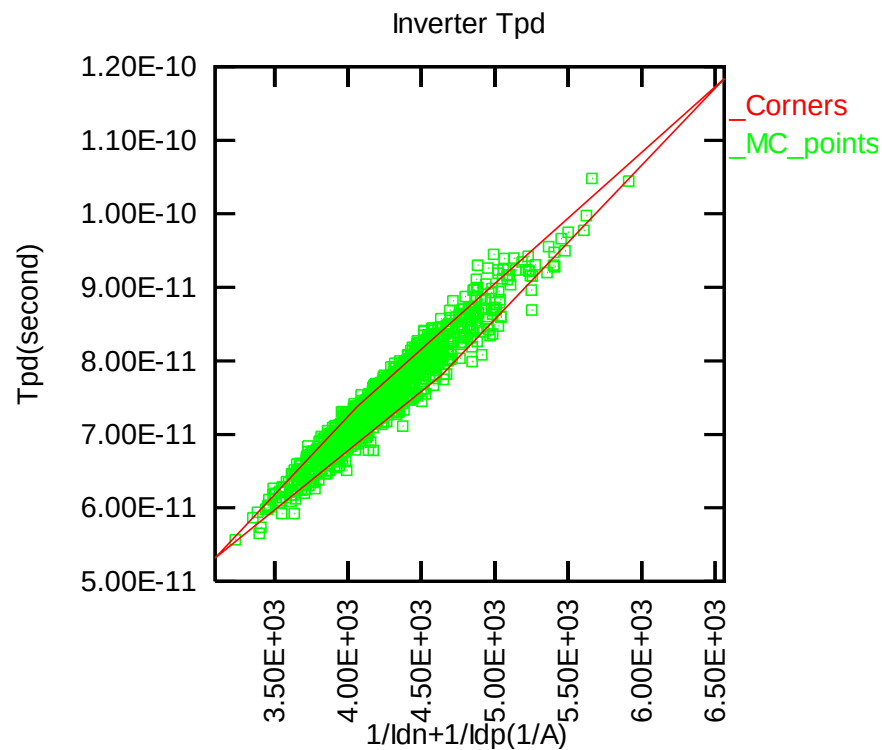


Figure 3-2 Corner plot of ring oscillator

4 Monte Carlo Simulation Results for Mismatch

4.1 Threshold voltage in linear region VTLIN

The following figures show the Monte Carlo mis-matching simulation results of linear threshold voltage extracted at $I_D = 300\text{nA} \cdot W_{\text{DES}} \cdot 0.9 / (L_{\text{DES}} \cdot 0.9 + 0.012\mu\text{m})$ for NMOS and $I_D = -70\text{nA} \cdot W_{\text{DES}} \cdot 0.9 / (L_{\text{DES}} \cdot 0.9 + 0.012\mu\text{m})$ for PMOS at 25C.

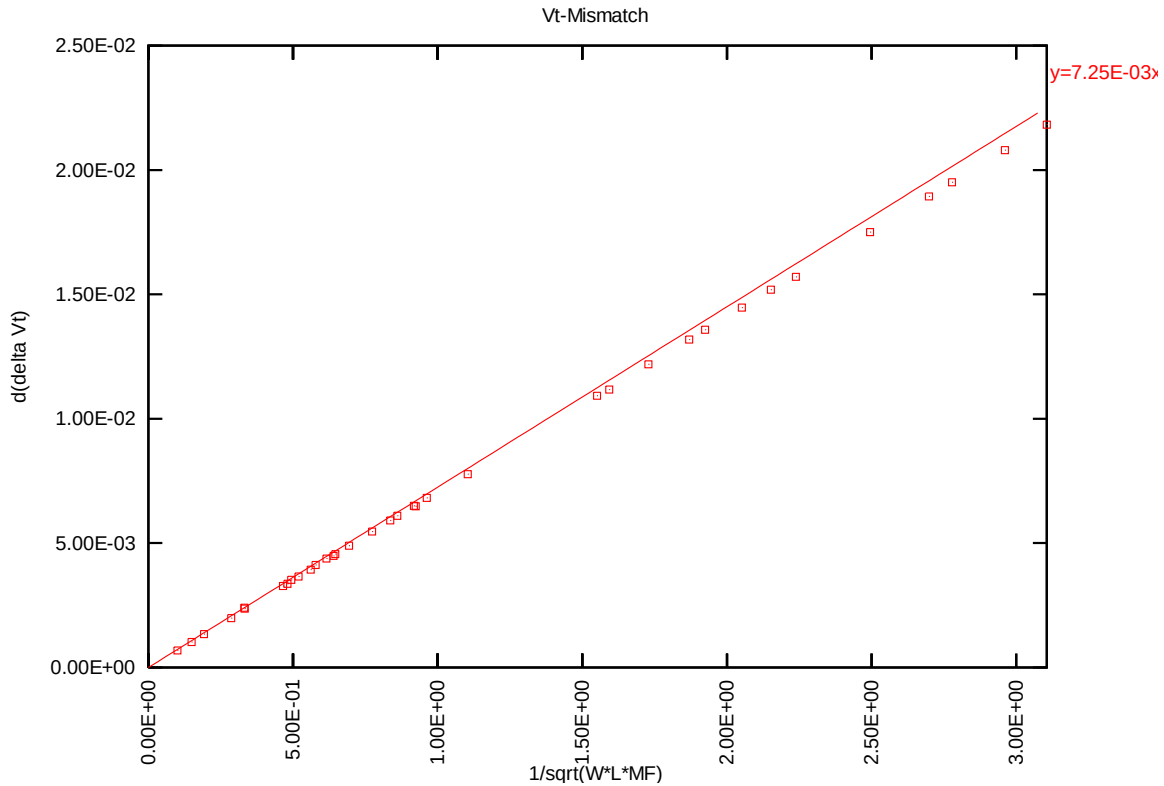


Figure 4-1 VTLIN mis-matching simulation of 1.2V n-ch MOSFET

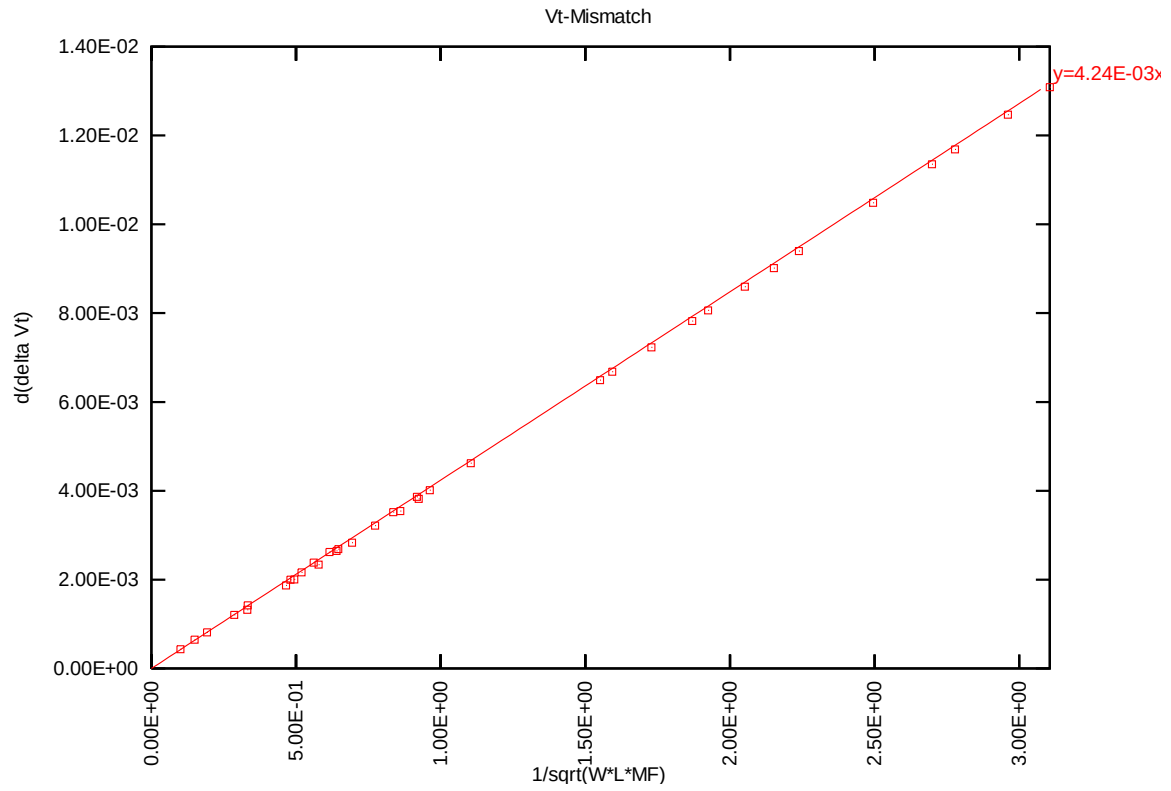


Figure 4-2 VTLIN mis-matching simulation of 1.2V p-ch MOSFET

4.2 Saturation Current IDSAT

The following figures show the Monte Carlo mis-matching simulation results of saturation current at 25C.

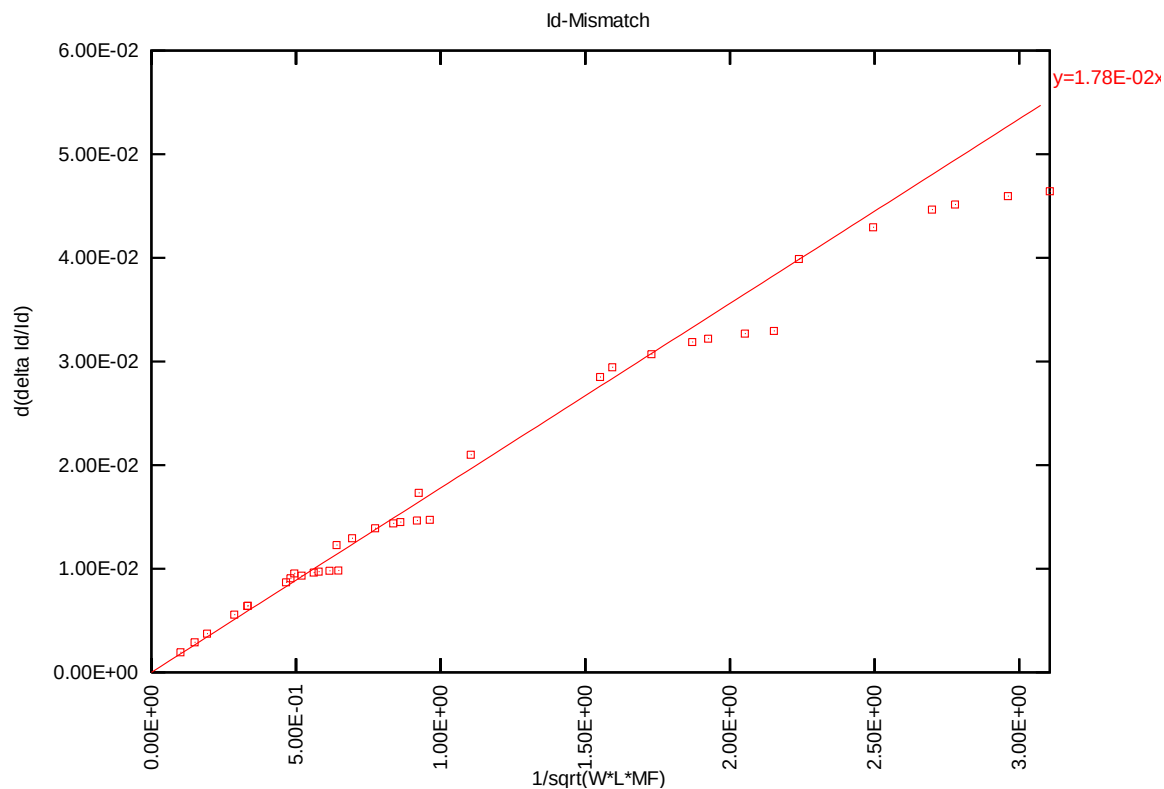


Figure 4-3 IDSAT mis-matching simulation of 1.2V n-ch MOSFET

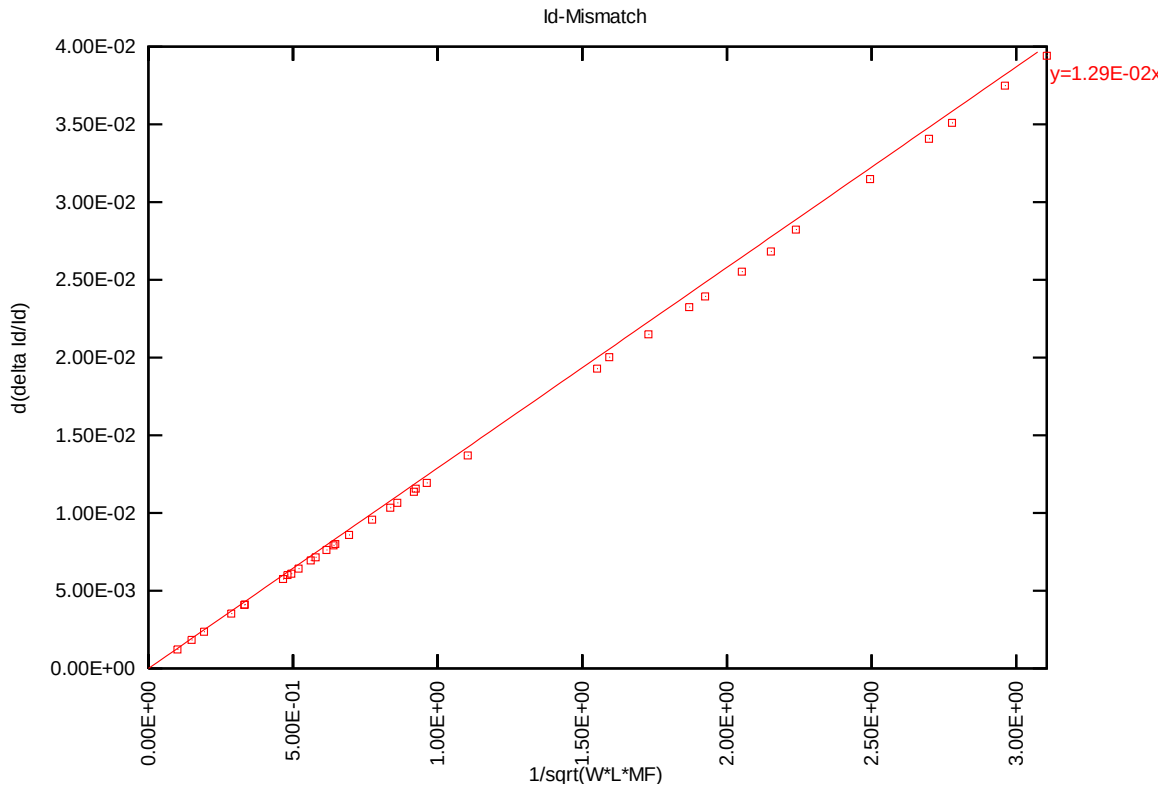


Figure 4-4 IDSAT mis-matching simulation of 1.2V p-ch MOSFET

5 Monte Carlo DC Simulation Results for Process Variation of bpw N-ch MOSFET

Two hundred Monte Carlo iterations are performed in the following simulation conditions, and the following corner points show TT, SS, FF, SNFP and FNSP values individually.

A reasonable number of Monte Carlo iterations is 30. The statistical significance of 30 iterations is quite high. If the circuit operates correctly for all 30 iterations, there is 99% probability that over 80% of all possible component values operate correctly. The relative error of a quantity determined through Monte Carlo analysis is proportional to (iteration times)^(-1/2).

5.1 Threshold voltage in linear region VTLIN

The following figures show the Monte Carlo simulation result of saturation threshold voltage extracted at $I_D = 300\text{nA} * W_{DES} * 0.9 / (L_{DES} * 0.9 + 0.012 \mu\text{m})$ for NMOS and $I_D = -70\text{nA} * W_{DES} * 0.9 / (L_{DES} * 0.9 + 0.012 \mu\text{m})$ for PMOS at 25 °C. The dimension is after 90% shrink and 12 nm sizing channel length back.

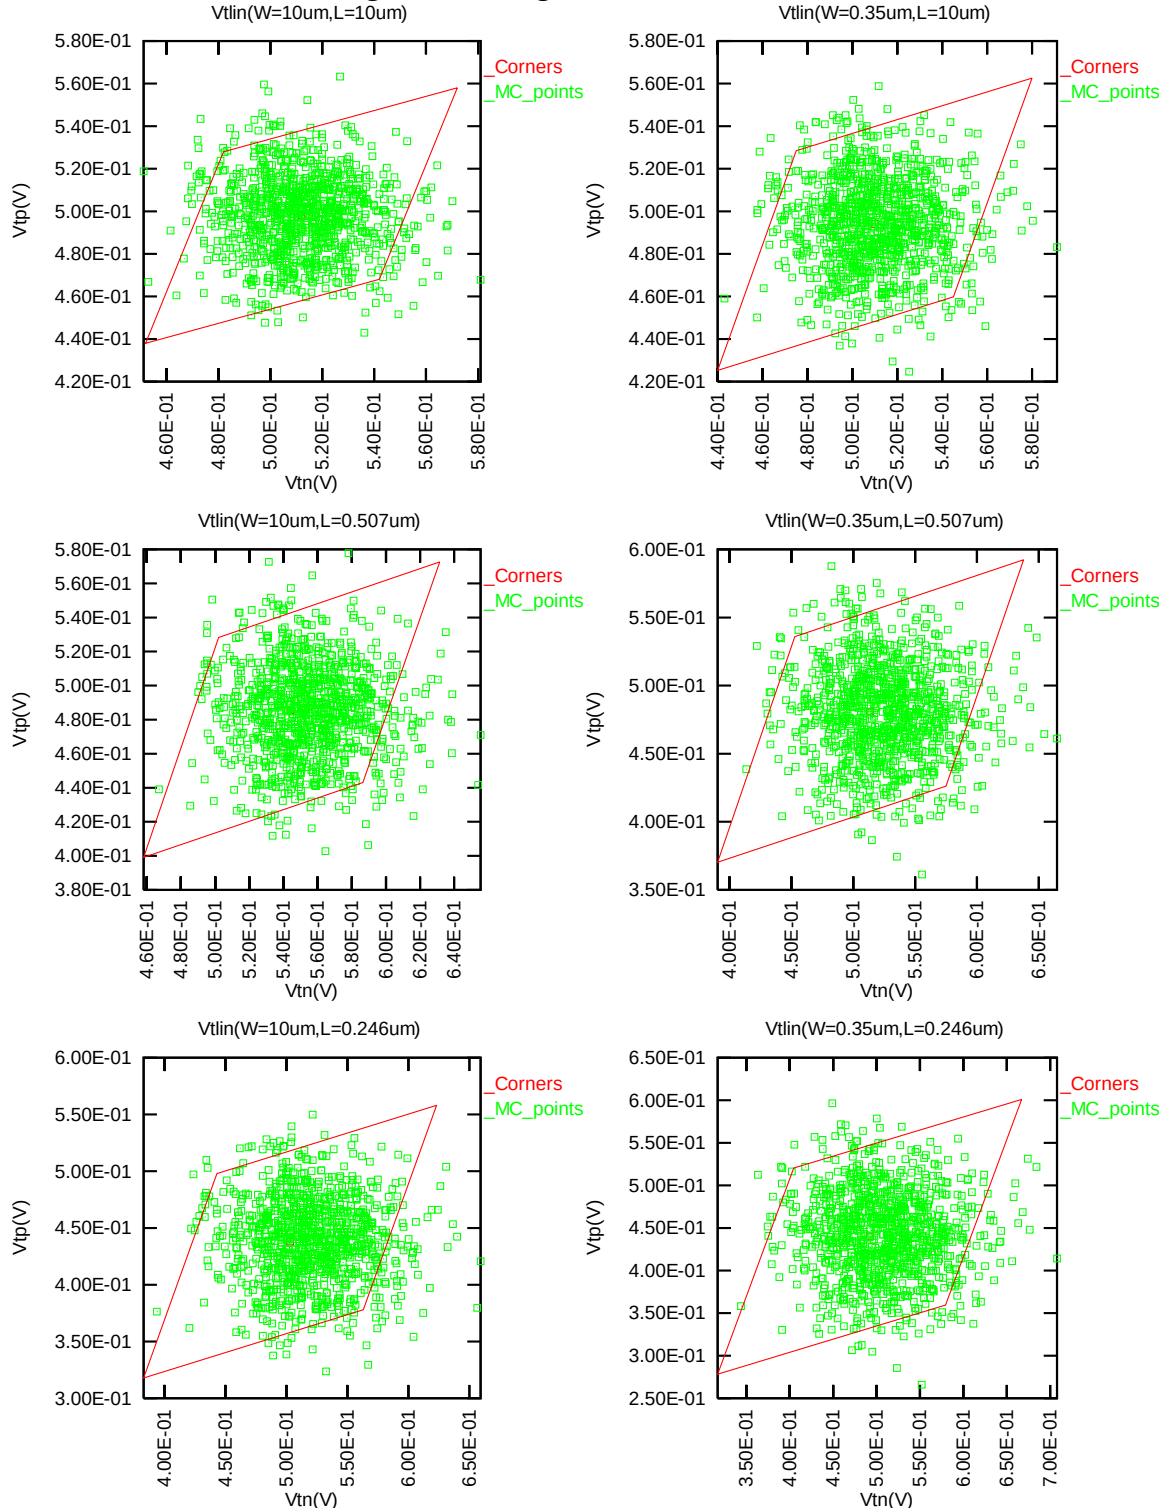


Figure 5-1 Monte Carlo plots of threshold voltage at low drain bias

5.2 Threshold voltage in saturation region VTSAT

The following figures show the Monte Carlo simulation result of saturation threshold voltage extracted at $I_D = 300\text{nA} * W_{DES} * 0.9 / (L_{DES} * 0.9 + 0.012 \mu\text{m})$ for NMOS and $I_D = -70\text{nA} * W_{DES} * 0.9 / (L_{DES} * 0.9 + 0.012 \mu\text{m})$ for PMOS at 25°C . The dimension is after 90% shrink and 12 nm sizing channel length back.

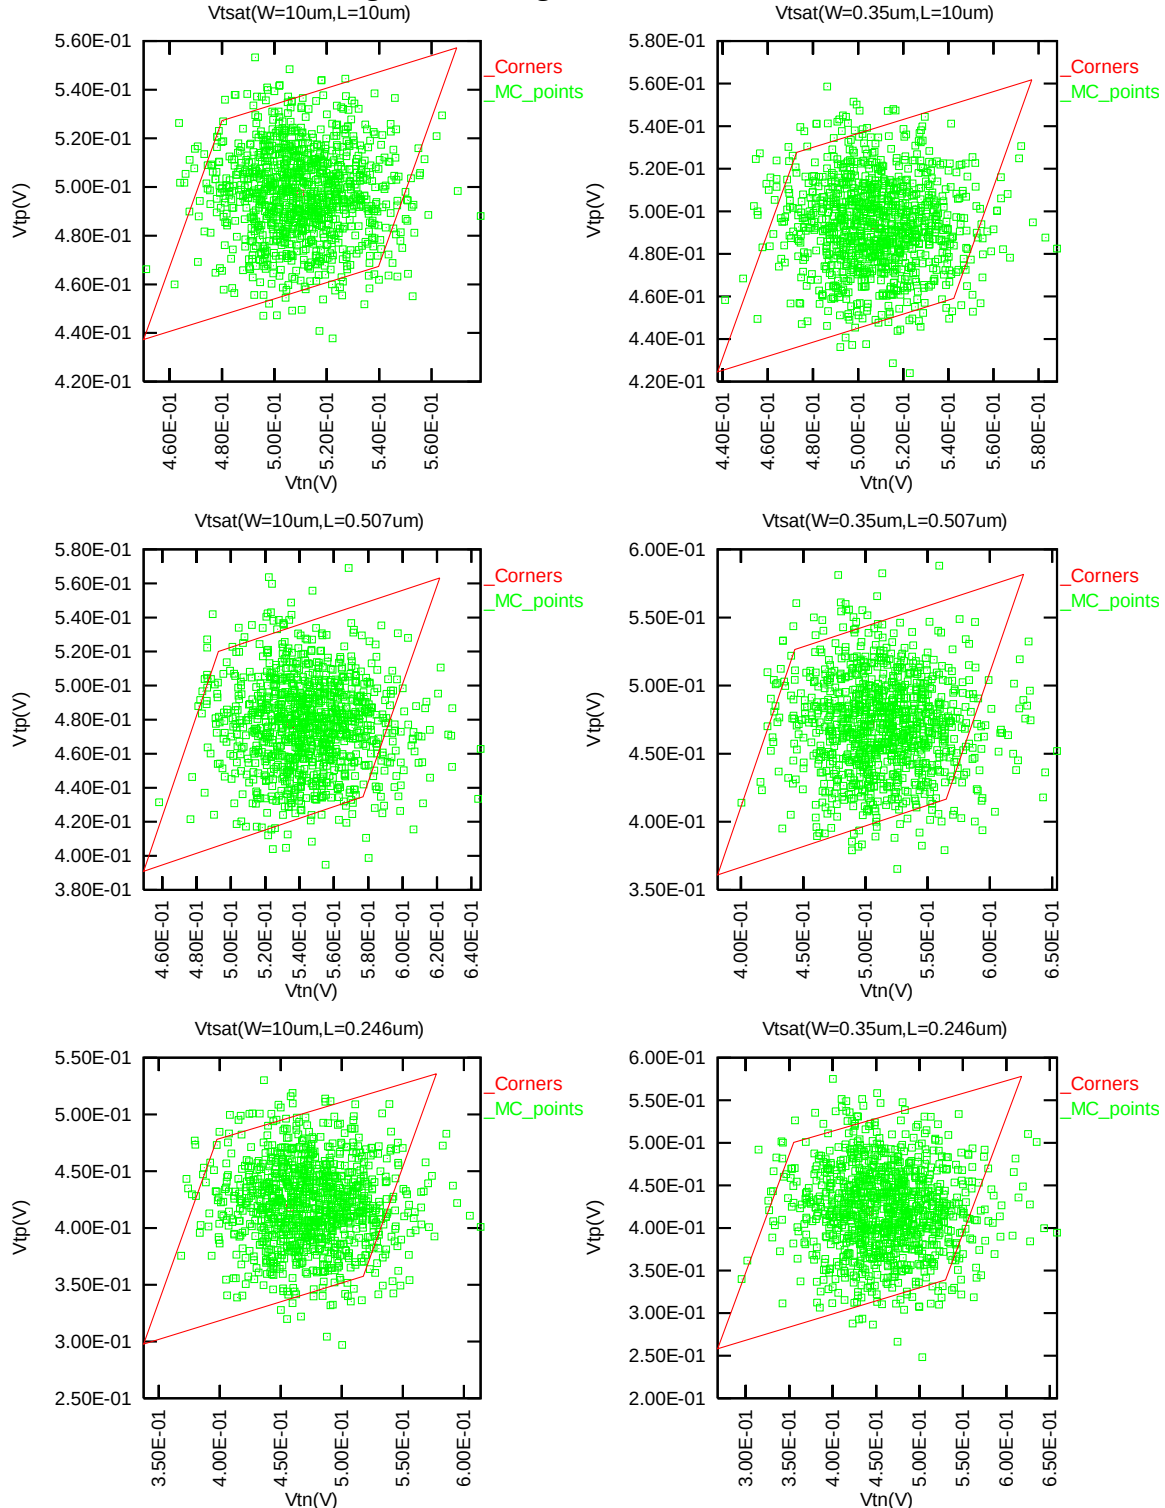


Figure 5-2 Monte Carlo plots of threshold voltage at high drain bias

5.3 Linear Current IDLIN

The following figures show the Monte Carlo simulation results of linear current at 25C.

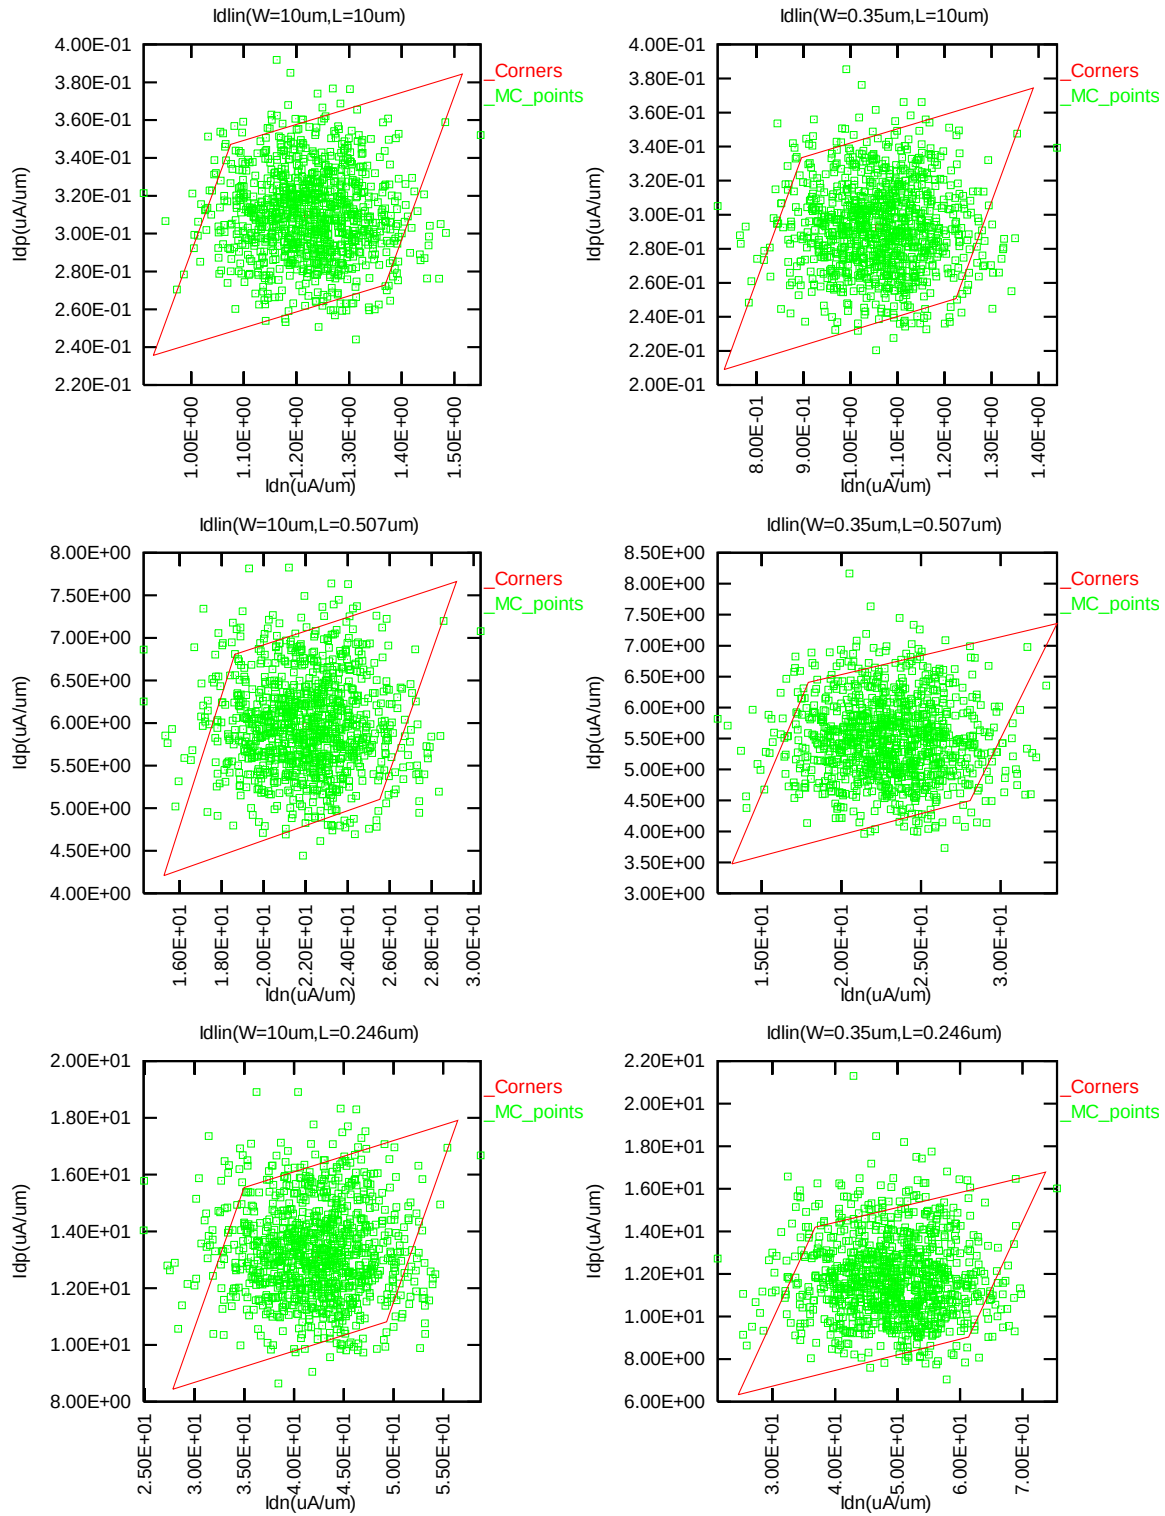


Figure 5-3 Monte Carlo plots of linear current

5.4 Saturation Current IDSAT

The following figures show the Monte Carlo simulation result of saturation current at 25C

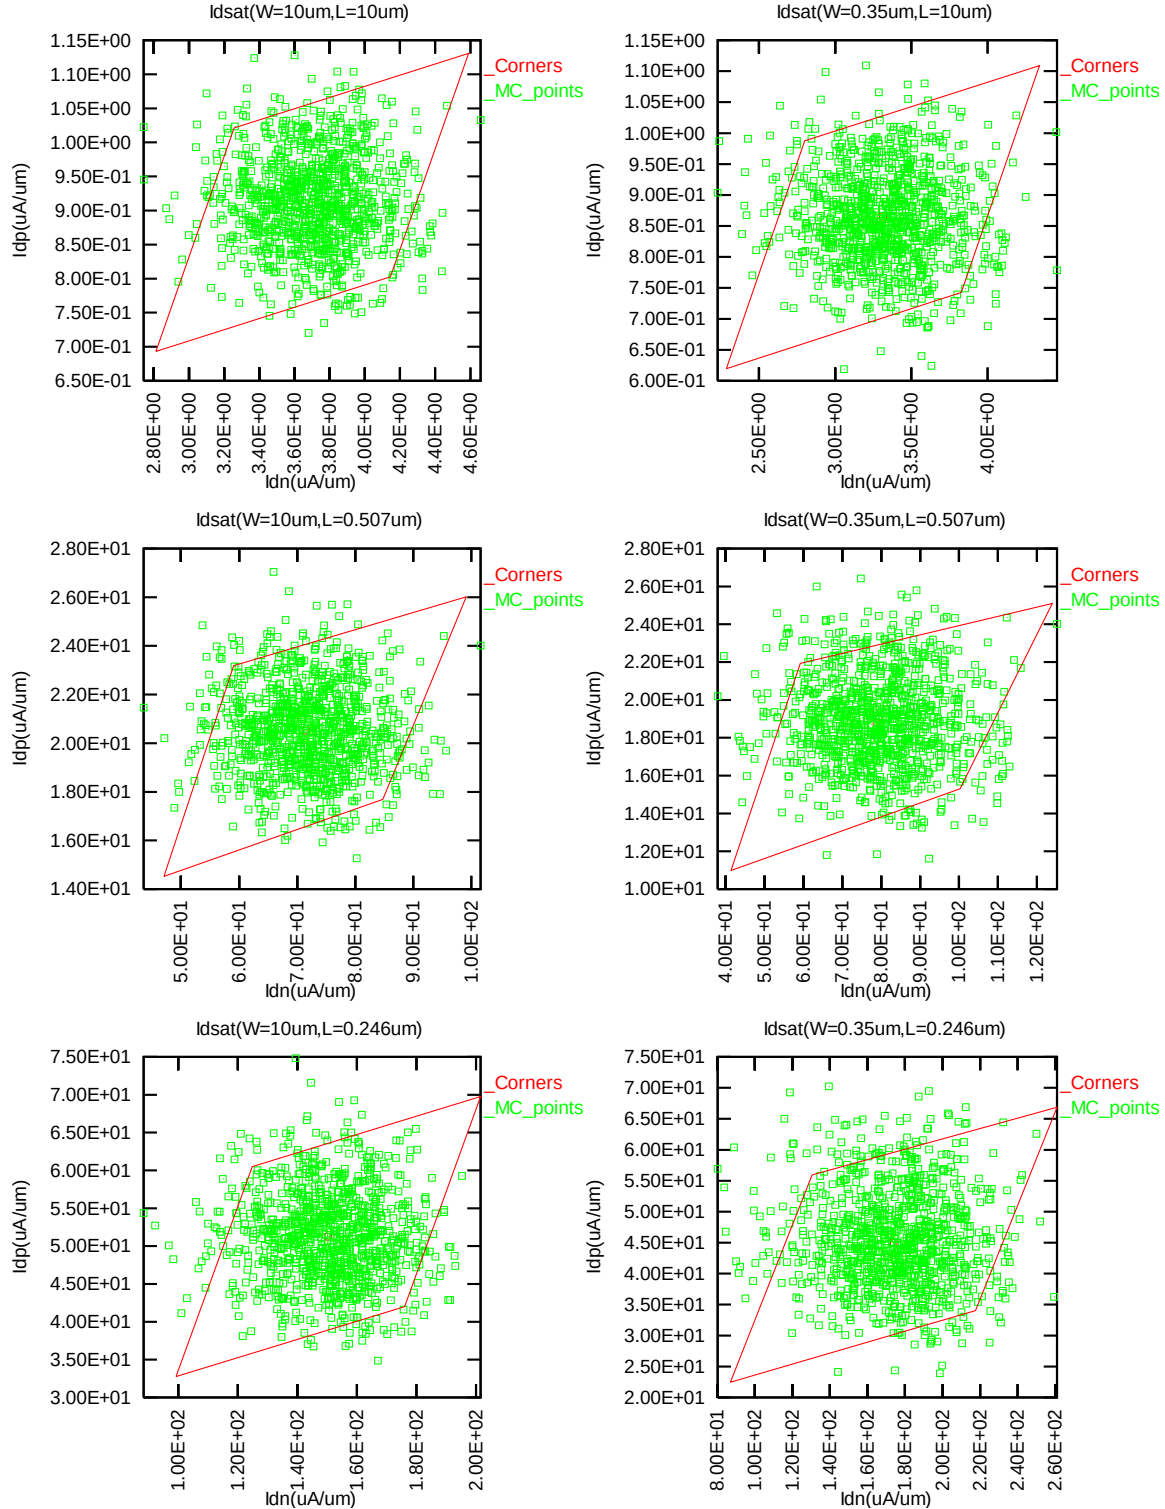



Figure 5-4 Monte Carlo plots of saturation current

6 Monte Carlo Dynamic Simulation Results for Process Variation of bpw N-ch MOSFET


6.1 Ring Oscillator Circuit

To assess the dynamic performance of these devices, a ring oscillator circuit with the following configuration is adopted

R.O. (Inverter) circuit description

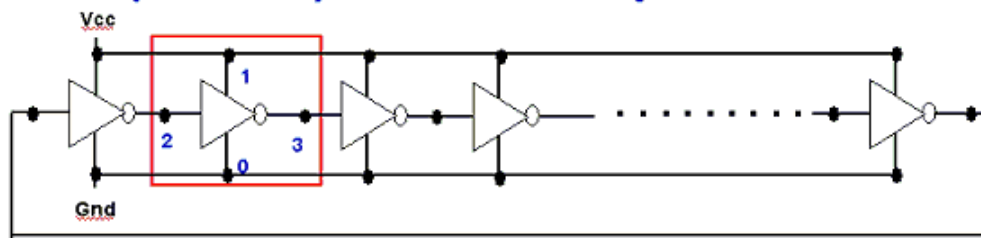

Ring Oscillator circuit

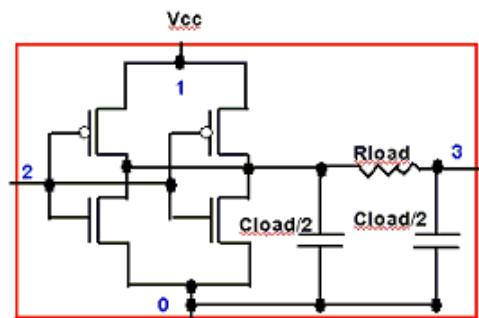

single stage R.O. circuit

Figure 6-1 Ring oscillator netlist diagram

Table 6-1 Ring oscillator (inverter) structure description for SA=SB=0.318um

R.O. (Inverter) Structure description		
Contact size	0.144 um X 0.144 um	
Polysilicon gate to contact spacing	0.12 um	
Contact to diffusion edge spacing	0.054 um	
Without RC loading	R = 0 ohm	C = 0 fF
Inverter		
Logic gate type	Inverter	
Channel width for n-ch MOSFET	5 um X 1	
Channel length for n-ch MOSFET	0.246 um	
Channel width for p-ch MOSFET	6.5 um X 1	
Channel Length for p-ch MOSFET	0.246 um	

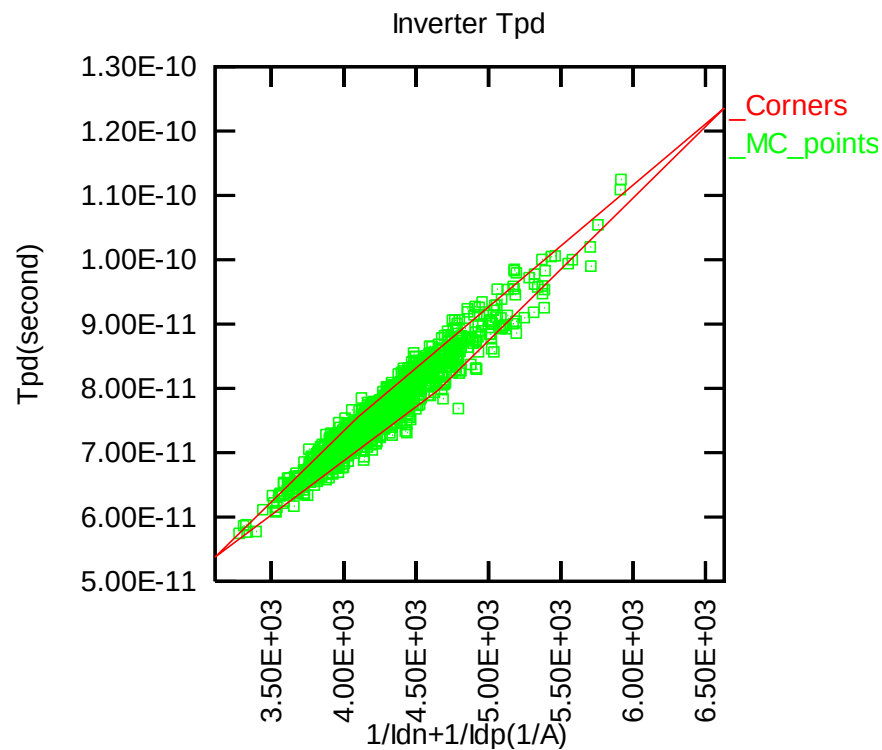


Figure 6-2 Corner plot of ring oscillator

7 Monte Carlo Simulation Results for Mismatch of bpw N-ch MOSFET

7.1 Threshold voltage in linear region VTLIN

The following figures show the Monte Carlo mis-matching simulation results of linear threshold voltage extracted at $I_D = 300\text{nA} \cdot W_{\text{DES}} \cdot 0.9 / (L_{\text{DES}} \cdot 0.9 + 0.012\mu\text{m})$ for NMOS and $I_D = -70\text{nA} \cdot W_{\text{DES}} \cdot 0.9 / (L_{\text{DES}} \cdot 0.9 + 0.012\mu\text{m})$ for PMOS at 25C.

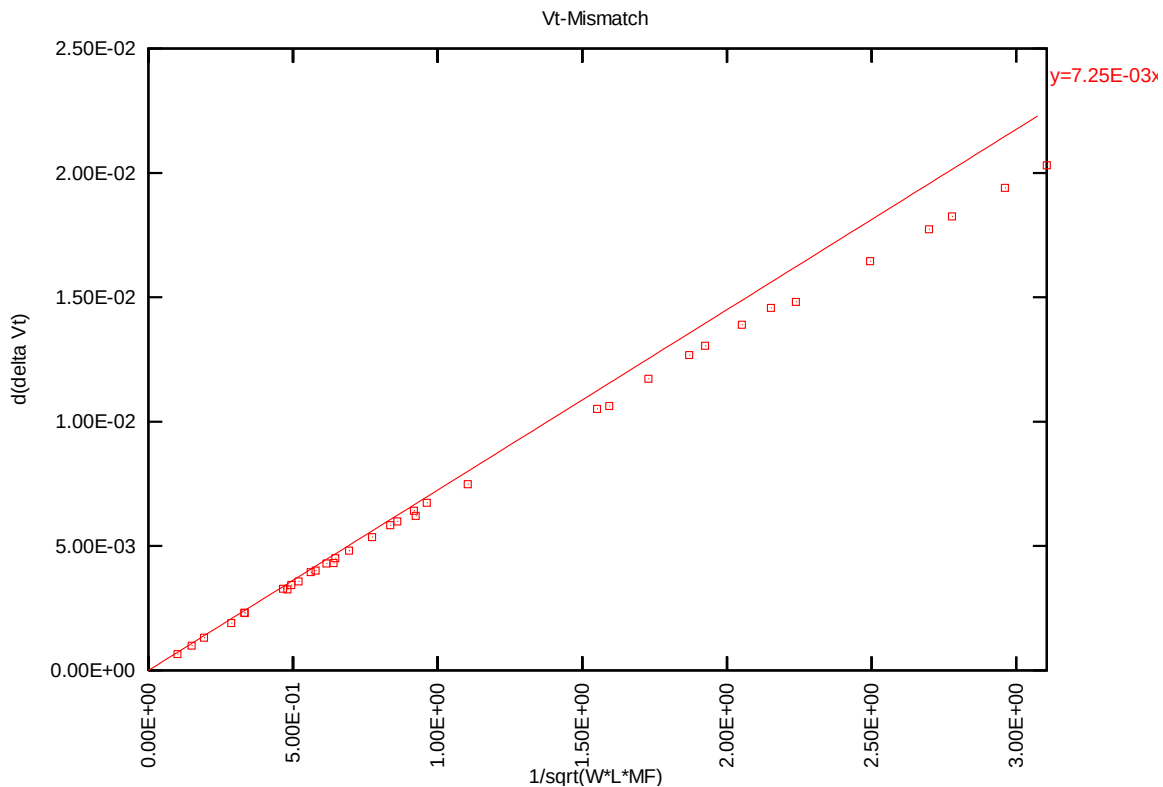


Figure 7-1 VTLIN mis-matching simulation of 1.2V bpw n-ch MOSFET

7.2 Saturation Current IDSAT

The following figures show the Monte Carlo mis-matching simulation results of saturation current at 25C.

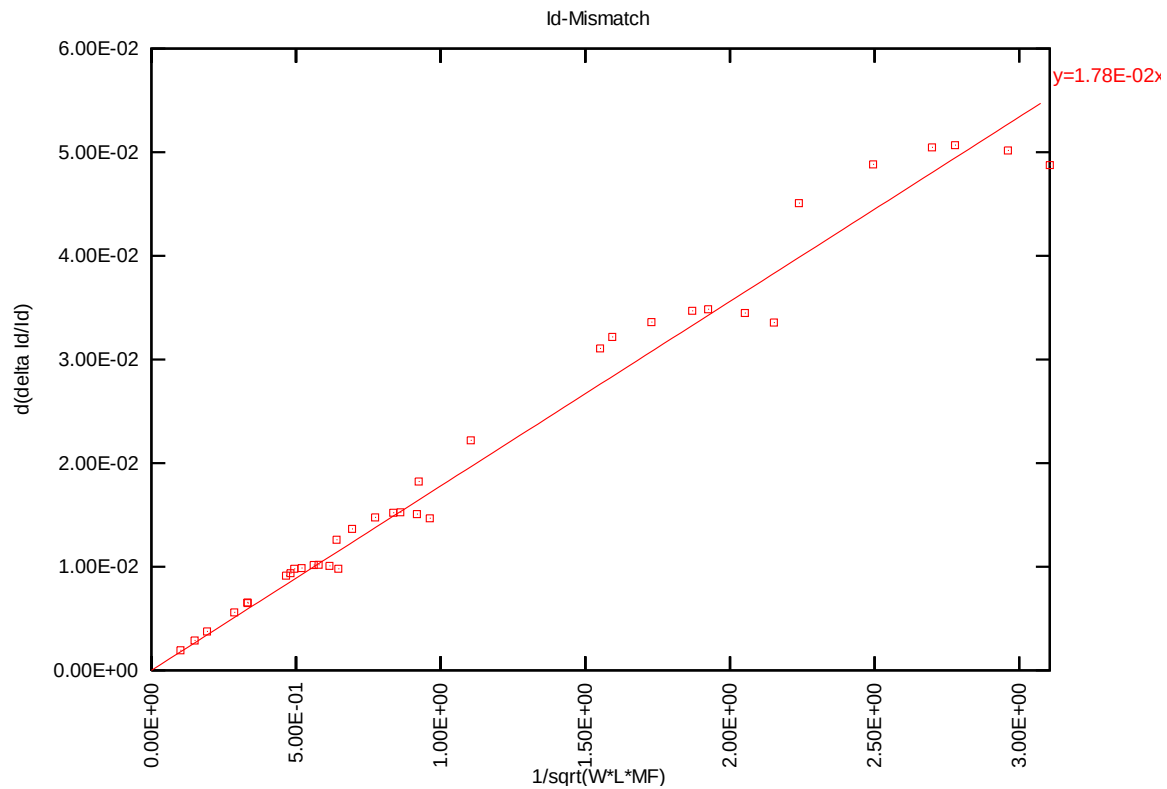


Figure 7-2 IDSAT mis-matching simulation of 1.2V bpw n-ch MOSFET

8 Appendix

8.1 HSPICE Warning Messages

Table 8-1 Hspice warning message

Item	Warning Message	Explanation
1.	None	None

8.2 ELDO warning message

Table 8-2 Eldo warning message

Item	Warning Message	Explanation
1.	None	None

8.3 SPECTRE warning message

Table 8-3 Spectre warning message

Item	Warning Message	Explanation
1.	None	None