

UMC 0.11um RFCMOS Al Advanced Enhancement 1.2V MIS Varactor SPICE Model Document

**Version 0.3 Phase 1
2010/10/18**

Table of Contents

1	INTRODUCTION	5
1.1	Revision History	5
1.2	Model Usage	6
2	1.2V N+/NWELL MIS VARACTOR RF SUB-CIRCUIT MODEL	8
2.1	Device Architecture and Layout	8
2.2	Sub-Circuit Model Topology	9
2.3	Silicon Wafer for Modeling	9
2.4	Test devices	10
2.5	Process Corner models	10
2.6	MIS varactor RF model	11
2.6.1	Model Accuracy Verification	11
2.6.2	Equation to Estimate Maximum Capacitance	11
2.6.3	Model verification plots	12
3	APPENDIX	30
3.1	Hspice Warning Message	30
3.2	Eldo Warning Message	30
3.3	Spectre Warning Message	30

List of Figures

Figure 2-1 Example layout of N+/Nwell MOS varactors	8
Figure 2-2 Sub-circuit model of N+/Nwell MIS Varactor	9
Figure 2-3 Q & Tuning Ratio vs. Lf @ 5.9 GHz	12
Figure 2-4 Q & Tuning Ratio vs. W @ 5.9 GHz	13
Figure 2-5 Q & Tuning Ratio vs. Nf @ 5.9 GHz	14
Figure 2-6 VAR_105:Cg vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V ...	15
Figure 2-7 VAR_105:Q vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V	15
Figure 2-8 VAR_105:Cg vs. Vgb at Freq=5.9GHz	16
Figure 2-9 VAR_105:Cg vs. Vgb at Freq=5.9GHz for center model	16
Figure 2-10 VAR_105:S11 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	17
Figure 2-11 VAR_105:S12 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	17
Figure 2-12 VAR_105:S21 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	18
Figure 2-13 VAR_105:S22 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.2GHz	18
Figure 2-14 VAR_105:Ig vs. Vgb	19
Figure 2-15 VAR_107:Cg vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V.	20
Figure 2-16 VAR_107:Q vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V ...	20
Figure 2-17 VAR_107:Cg vs. Vgb at Freq=5.9GHz	21
Figure 2-18 VAR_107:Cg vs. Vgb at Freq=5.9GHz	21
Figure 2-19 VAR_107:S11 at Vg=-1.2V to 1.2V, Vnw=0 V, Freq=100MHz to 20.1GHz	22
Figure 2-20 VAR_107:S12 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	22
Figure 2-21 VAR_107:S21 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	23
Figure 2-22 VAR_107:S22 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	23
Figure 2-23 VAR_107:Ig vs. Vgb	24
Figure 2-24 VAR_108:Cg vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V.	25
Figure 2-25 VAR_108:Q vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V ...	25
Figure 2-26 VAR_108:Cg vs. Vgb at Freq=5.9 GHz	26
Figure 2-27 VAR_108:Cg vs. Vgb at Freq=5.9GHz	26
Figure 2-28 VAR_108:S11 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	27
Figure 2-29 VAR_108:S12 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	27
Figure 2-30 VAR_108:S21 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	28
Figure 2-31 VAR_108:S22 at Vg=-1.2V to 1.2 V, Vnw=0 V, Freq=100MHz to 20.1GHz	28
Figure 2-32 VAR_108:Ig vs. Vgb	29

List of Tables

Table 1-1 Revision history.....	5
Table 2-1 Test wafer information for VARMIS.....	9
Table 2-2 Geometry of N+/Nwell VARMIS devices measured for parameters extraction.	10
Table 2-3 Corner parameters	10
Table 2-4 Comparison of measurements and as-extracted simulation results @ Freq.= 5.9GHz & T=25 °C	11
Table 3-1 Hspice warning message	30
Table 3-2 Eldo warning message.....	30
Table 3-3 Spectre warning message	30

1 Introduction

1.1 Revision History

Table 1-1 Revision history

Version	Date	Author	Remark
0.1_p1	2009/03/11	Jian Zhi	Original release.
0.1_p2	2010/04/12	Nancy Lee, Shih-Hsin Yeh	Revise W, L definition to meet the shrink methodology.
0.2_p1	2010/06/15	Jian Zhi	Modify RF model based on new silicon data. Baseband model was copied from L110AE_NCAP12_V021.
0.3_p1	2010/10/18	Laney Fan	1.Remove all descriptions about m and ms_1 in model card based on l110ae_ncap12_v031. 2.Revise the igate formula and parameters in the model (base on baseband model) Baseband model was copied from l110ae_ncap12_v031.

1.2 Model Usage

The compact model is provided in various formats. It is guaranteed that the simulation results of this model from different simulators show differences less than 0.5% and 1% for DC and AC simulations respectively. It should be noted that the model has been verified on different simulators of the specific versions listed below and the simulation results from other versions of the simulators might be different.

Synopsys HSPICE release 2007.9
Cadence Spectre version 6.2.1.299
Mentor Graphics Eldo version 6.11_1.1

To cope with the impact of process variations on circuit performance, worst-case models are provided along with the typical case and they are listed below.

- min: minimum capacitance and quality factor
- typ: typical capacitance and quality factor
- max: maximum capacitance and quality factor

Input Parameters:

- lf: gate finger length in meter
- wf: gate finger width in meter
- m: multiplier
- nf: number of gate fingers in an array

Follow these steps to invoke the model file during simulation.

For Synopsys Hspice

- Copy ModelFileName.mdl and ModelFileName.lib into your simulation directory.
- Add the following statement in the input file to the simulator for 90% dimension shrinkage
.lib "/ModelFileName.lib" CaseName
, where CaseName could be typ, max, or min.
- Define device condition by 'Xxx' statement.

Example:

```
x1 gate nwell psub DeviceName lf=2e-6 wf=5e-6 nf=2 m=1
```

For Cadence Spectre

- Copy ModelFileName.mdl.scs and ModelFileName.lib.scs into your simulation directory.

- Add the following statement in the input file to the simulator for 90% dimension shrinkage

include "/ModelFileName.lib.scs" section=CaseName

, where CaseName could be typ, max, or min.

- Define device condition by 'Xxx' statement.

Example:

x1 (gate nwell psub) DeviceName lf=2e-6 wf=5e-6 nf=2 m=1

For Mentor Graphics Eldo

- Copy ModelFileName.mdl.eldo and ModelFileName.lib.eldo into your simulation directory.

- Add the following statement in the input file to the simulator for 90% dimension shrinkage

.lib "/ModelFileName.lib.eldo" CaseName

, where CaseName could be typ, max, or min.

- Define device condition by 'Xxx' statement.

Example:

x1 gate nwell psub DeviceName lf=2e-6 wf=5e-6 nf=2 m=1

ModelFileName: l110ae_varmis12_v031_rf

DeviceName: varmis_12_rf

Geometry description (before 90% shrinkage):

$0.15\ \mu\text{m} \leq \text{lf} \leq 2\ \mu\text{m}$

$2.5\ \mu\text{m} \leq \text{wf} \leq 10\ \mu\text{m}$

$2 \leq \text{nf} \leq 8$ (even number only)

Bias Range:

$-1.2\text{V} \leq \text{VGS} \leq 1.2\text{V}$

$\text{VDS} = \text{VBS} = 0\text{V}$

Temperature range:

$-50\ ^\circ\text{C} \sim +125\ ^\circ\text{C}$

Frequency:

$0.1\text{GHz} \sim 20.1\ \text{GHz}$

2 1.2V N+/Nwell MIS Varactor RF Sub-circuit Model

In this report, RF modeling results of 1.2V N+/Nwell Standard Performance MIS varactors are described.

2.1 Device Architecture and Layout

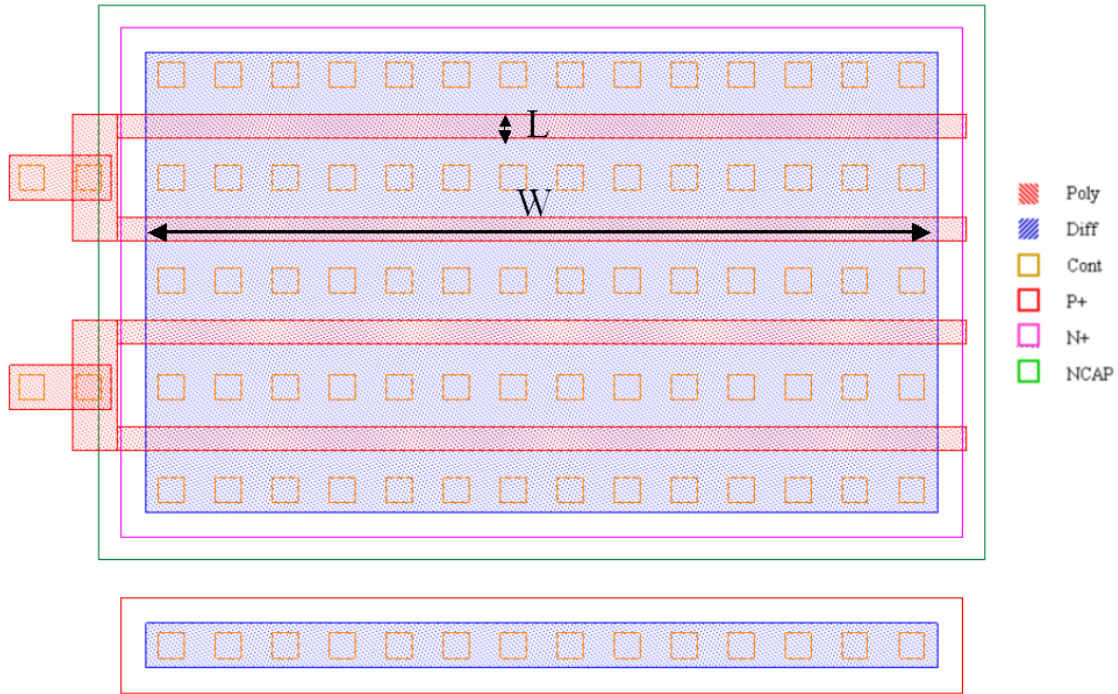


Figure 2-1 Example layout of N+/Nwell MOS varactors

2.2 Sub-Circuit Model Topology

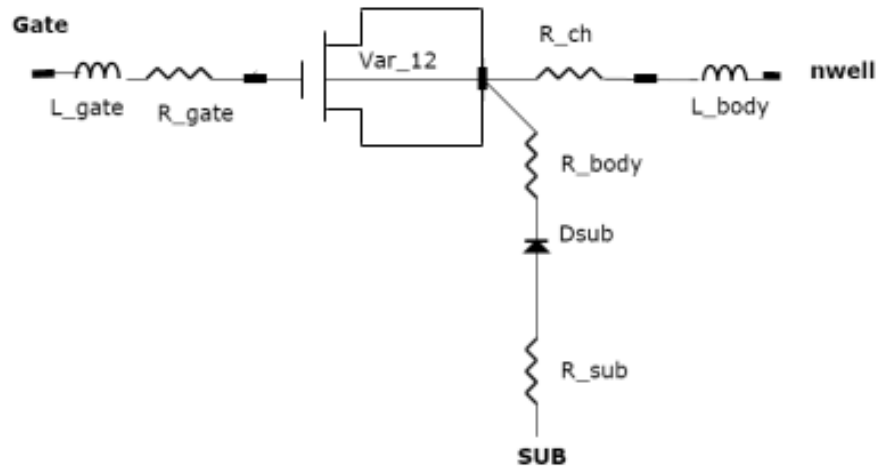


Figure 2-2 Sub-circuit model of N+/Nwell MIS Varactor

2.3 Silicon Wafer for Modeling

Table 2-1 Test wafer information for VARMIS

	Wafer for VARMIS measurements data
Mask ID	BSW0FA
Lot ID	D4YAA
Wafer Number	#4

2.4 Test devices

The following geometries were available for parameters extraction.

Table 2-2 Geometry of N+/Nwell VARMIS devices measured for parameters extraction.

W _{ALF}	1.812	0.912	0.462	0.237	0.147
9			X		
4.5	X	X	X	X	X
2.25			X		

Note : The sizes are post-shrinkage.

2.5 Process Corner models

Table 2-3 Corner parameters

Parameter	Min	Max
toxc	Nominal +8.40000e-11	Nominal - 8.49000e-11
toxg	Nominal +8.40000e-11	Nominal - 8.49000e-11
dcw	Nominal - 9.28000e-08	Nominal + 9.28000e-08
dcl	Nominal - 4.86300e-08	Nominal + 4.00507e-08
cmina	Nominal + 0.082820672	Nominal - 0.068470000
r_gate	Nominal × 1.15	Nominal × 0.85
cj	Nominal × 1.1	Nominal × 0.9
cjsw	Nominal × 1.1	Nominal × 0.9

2.6 MIS varactor RF model

2.6.1 Model Accuracy Verification

In all measurements (denoted by .m), Port-1 and Port-2 of VNA were connected to gate and nwell, respectively.

**Table 2-4 Comparison of measurements and as-extracted simulation results @
Freq.= 5.9GHz & T=25 °C**

Device	Dimensions				Cgb/Vgb=1.2V		Cgb/Vgb= -1.2V		Tuning ratio		Q/Vgb=0V	
Name	Wf (um)	Lf (um)	Nf	M	meas.	simu.	meas.	simu.	meas.	simu.	meas.	simu.
VAR101	4.5	0.147	4	4	1.19E-13	1.17E-13	3.74E-14	3.84E-14	3.2	3.1	16.7	25.2
VAR103	4.5	0.237	4	4	1.91E-13	1.99E-13	4.93E-14	5.25E-14	3.9	3.8	15.2	19.2
VAR105	4.5	0.462	4	2	1.92E-13	1.96E-13	4.03E-14	4.27E-14	4.8	4.6	11.4	12.3
VAR107	4.5	0.912	4	1	1.92E-13	1.92E-13	3.53E-14	3.70E-14	5.4	5.2	6.9	7.0
VAR108	4.5	1.812	2	1	1.92E-13	1.89E-13	3.27E-14	3.38E-14	5.9	5.6	4.9	4.9
VAR109	2.25	0.462	4	4	1.94E-13	2.02E-13	4.20E-14	4.38E-14	4.6	4.6	16.1	12.8
VAR110	9	0.462	4	1	1.92E-13	1.93E-13	3.95E-14	4.23E-14	4.8	4.6	5.7	6.4
VAR111	4.5	0.462	2	4	1.93E-13	1.96E-13	4.06E-14	4.27E-14	4.7	4.6	10.9	12.2
VAR112	4.5	0.462	8	1	1.92E-13	1.96E-13	4.02E-14	4.27E-14	4.8	4.6	10.9	9.2

Note:

- C & Q are extracted from Y12
- $Q = -\text{imag}(Y12^{-1})/\text{real}(Y12^{-1})$
- $C = -(2 \cdot \pi \cdot \text{freq} \cdot \text{imag}(Y12^{-1}))^{-1}$
- Wf and Lf in the table 2.4 are post-shrinkage.

2.6.2 Equation to Estimate Maximum Capacitance

The following equation can be used to estimate the capacitance value at (Vgb=1.2V) at low frequency (<1GHz) for given dimension (Lf, Wf, Nf and M)

$$C = 0.292 \times (Wf \times Lf \times Nf \times M)^{1.1303} + 1.7E-14 / W$$

The unit for capacitance is Farad, for l & w is meter. W & L are post-shrinkage sizes. For example, for a MIS varactor with Lf=0.462um, Wf=9um, Nf=4, M=1, the capacitance value at Vgb=1.2V is about 1.932e-13 (F)

2.6.3 Model verification plots

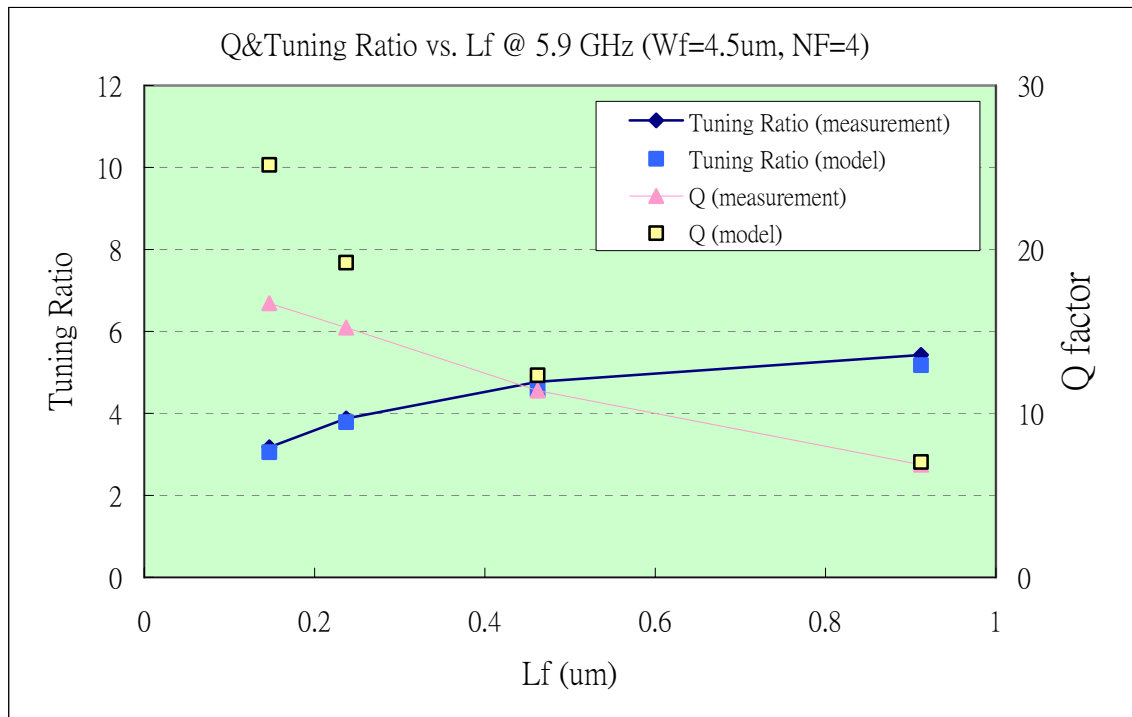


Figure 2-3 Q & Tuning Ratio vs. Lf @ 5.9 GHz

- wf & lf are post-shrinkage sizes.
- Smaller gate length can achieve better Q. Larger gate length can achieve high tuning ratio.

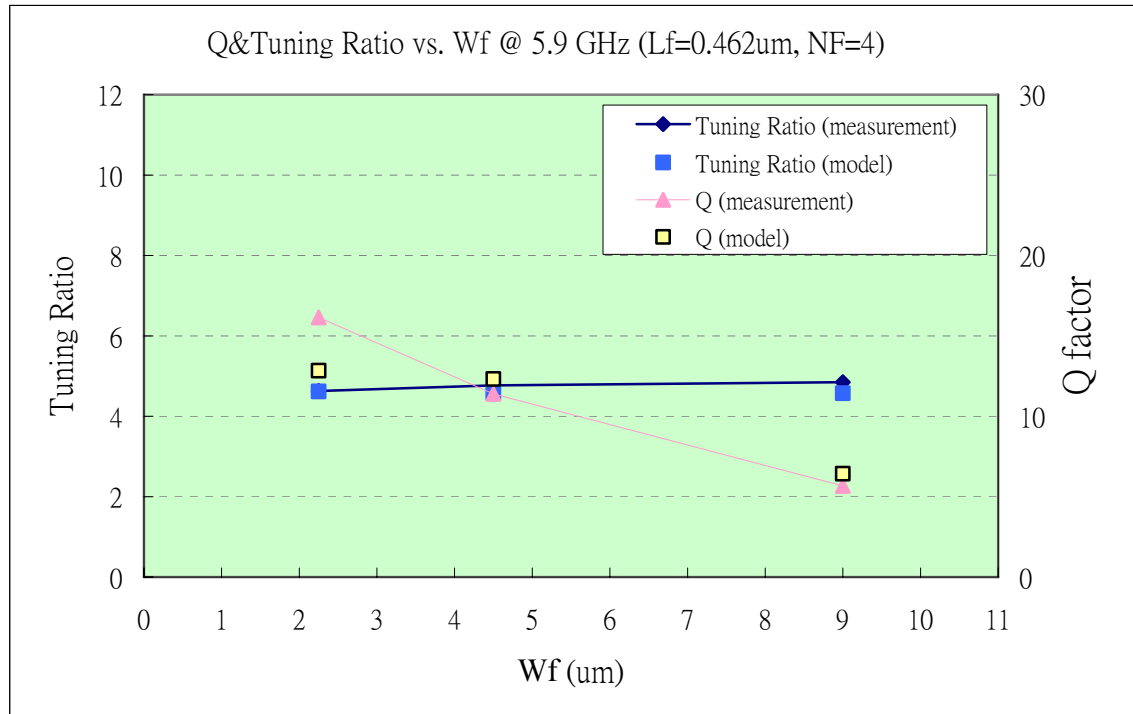


Figure 2-4 Q & Tuning Ratio vs. Wf @ 5.9 GHz

-wf & lf are post-shrinkage sizes.

- Larger gate width can achieve high tuning ratio; smaller gate width can achieve better Q due to reduced gate resistance.

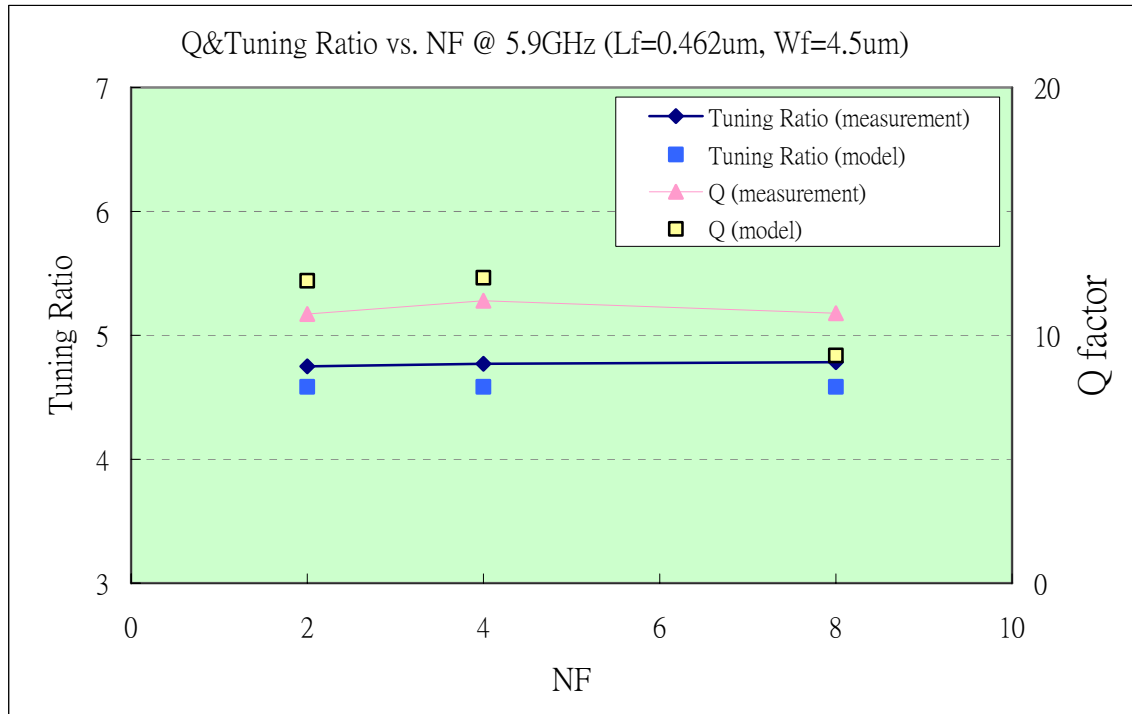


Figure 2-5 Q & Tuning Ratio vs. Nf @ 5.9 GHz

- Tuning ratio is relatively insensitive to finger number.

VAR_105

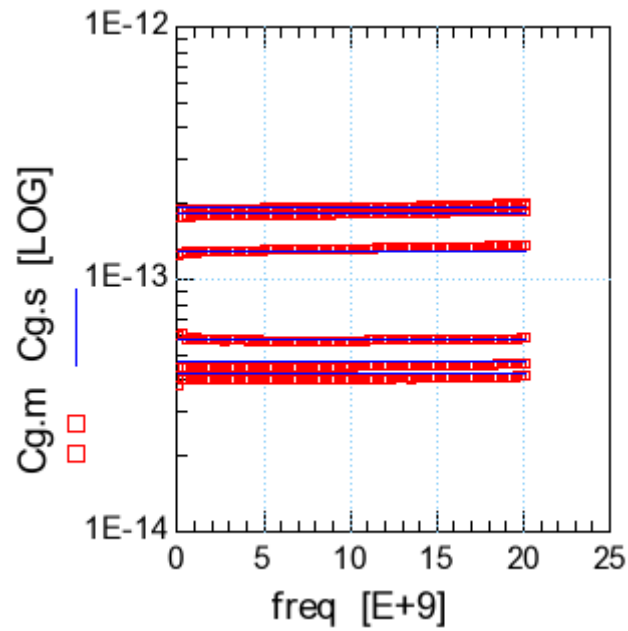


Figure 2-6 VAR_105:Cg vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V

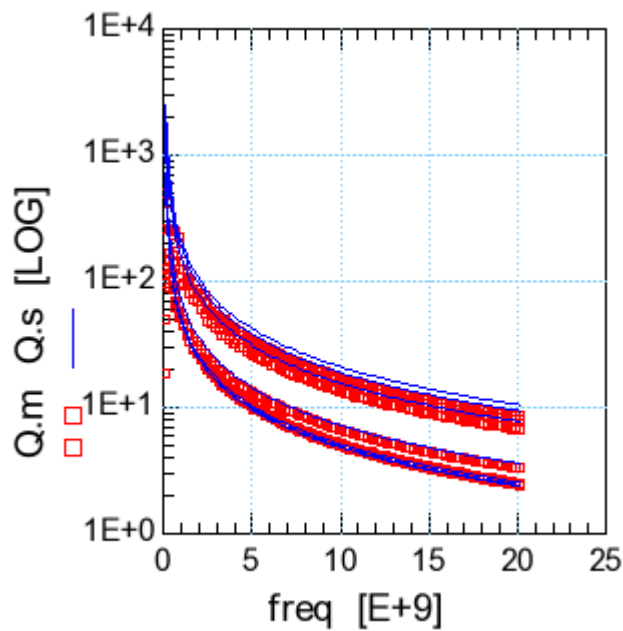


Figure 2-7 VAR_105:Q vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V

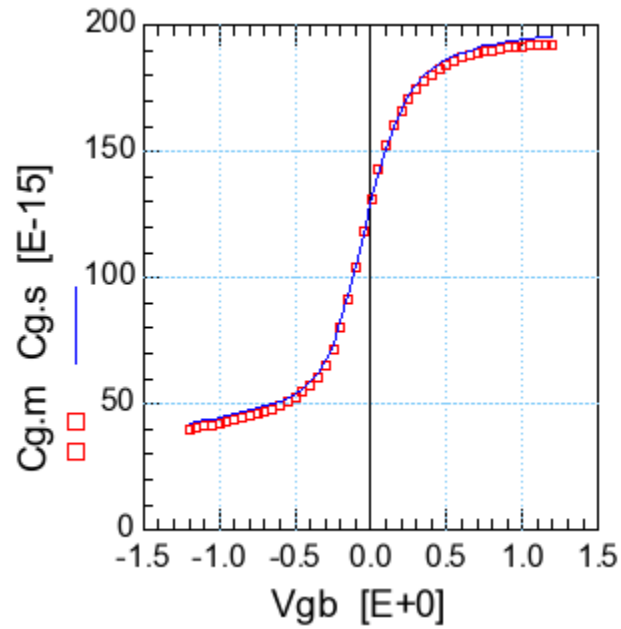


Figure 2-8 VAR_105:Cg vs. Vgb at Freq=5.9GHz

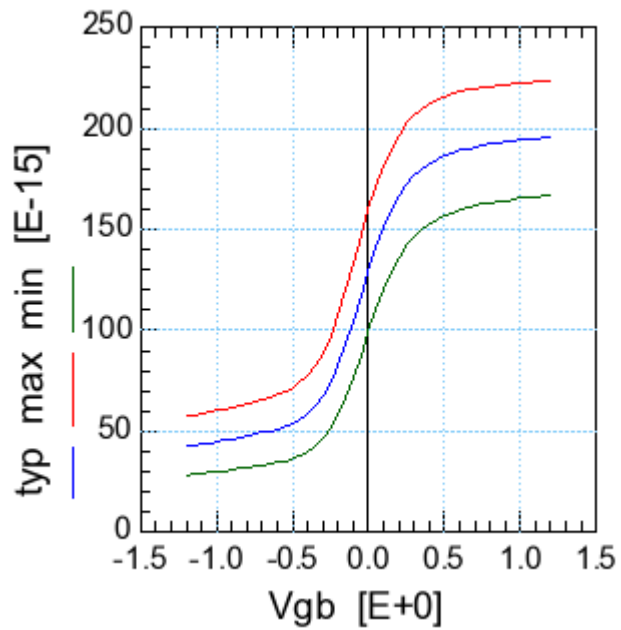


Figure 2-9 VAR_105:Cg vs. Vgb at Freq=5.9GHz for center model

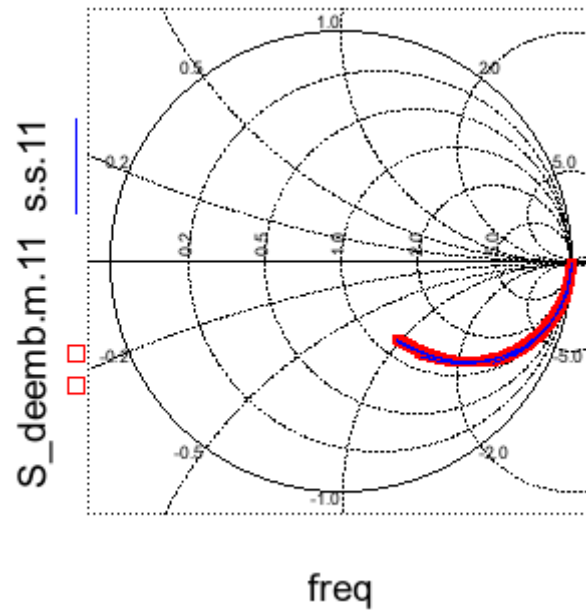


Figure 2-10 VAR_105:S11 at $V_g = -1.2\text{V}$ to 1.2V , $V_{nw} = 0\text{V}$, Freq=100MHz to 20.1GHz

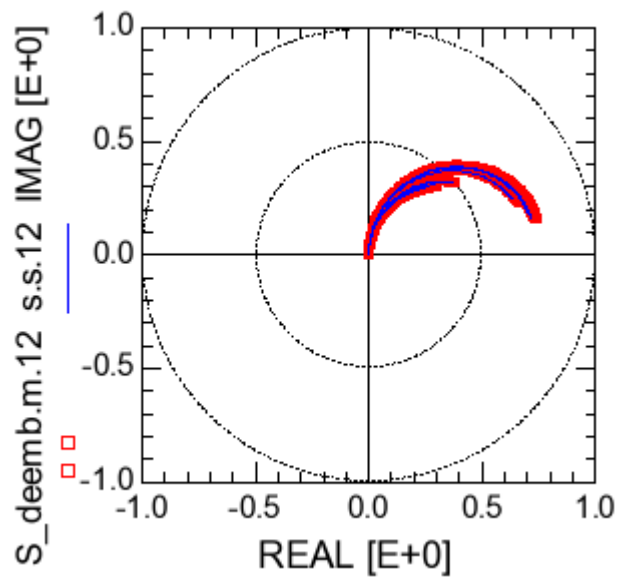


Figure 2-11 VAR_105:S12 at $V_g = -1.2\text{V}$ to 1.2V , $V_{nw} = 0\text{V}$, Freq=100MHz to 20.1GHz

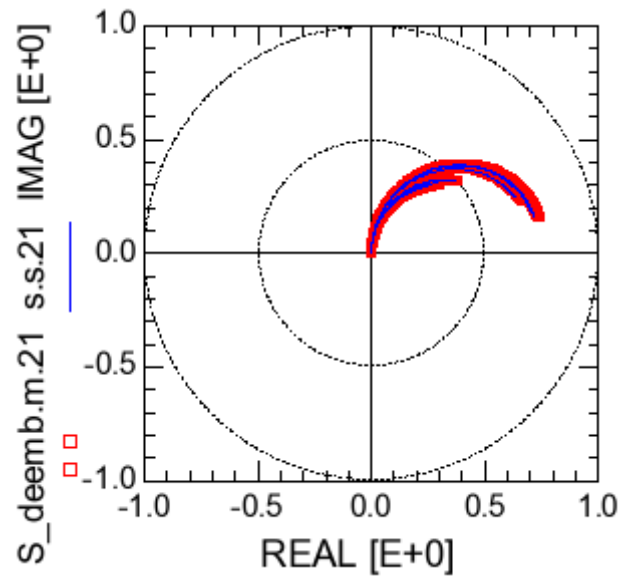


Figure 2-12 VAR_105:S21 at $V_g = -1.2\text{V}$ to 1.2V , $V_{nw} = 0\text{V}$, Freq=100MHz to 20.1GHz

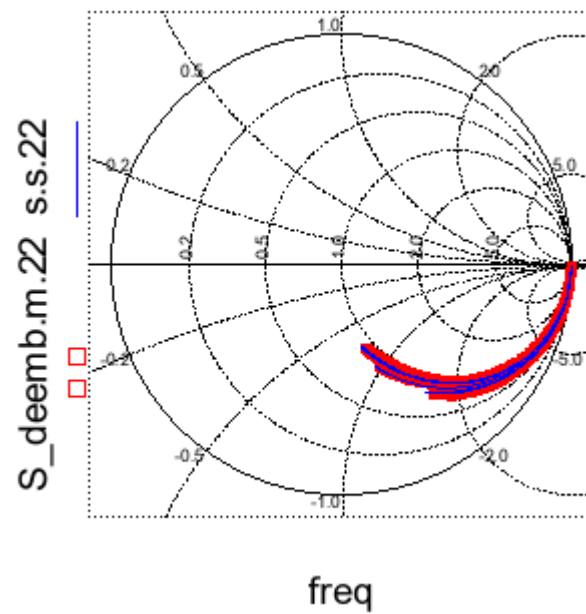


Figure 2-13 VAR_105:S22 at $V_g = -1.2\text{V}$ to 1.2V , $V_{nw} = 0\text{V}$, Freq=100MHz to 20.2GHz

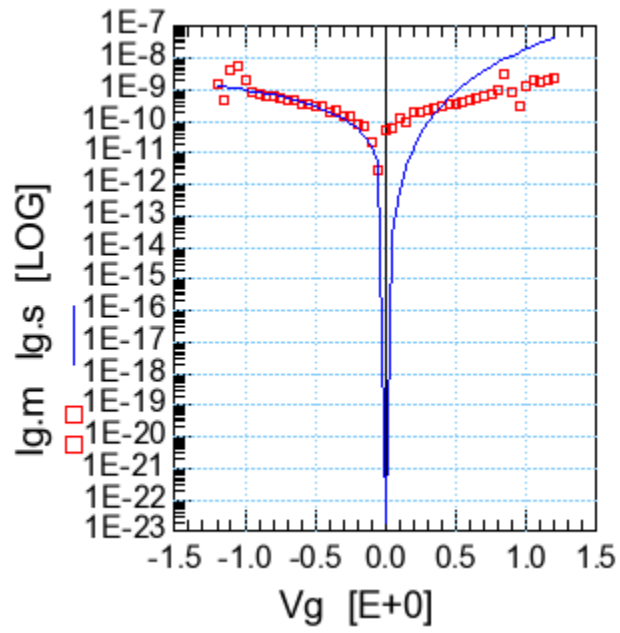


Figure 2-14 VAR_105:Ig vs. Vgb

VAR_107

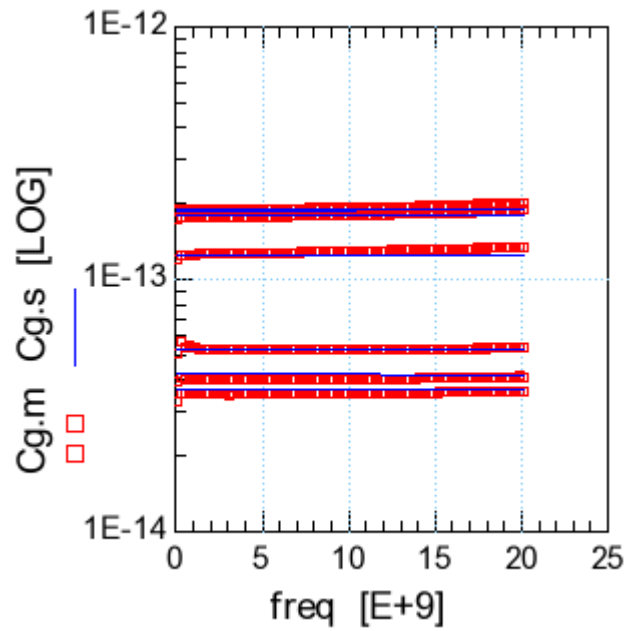


Figure 2-15 VAR_107:Cg vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V

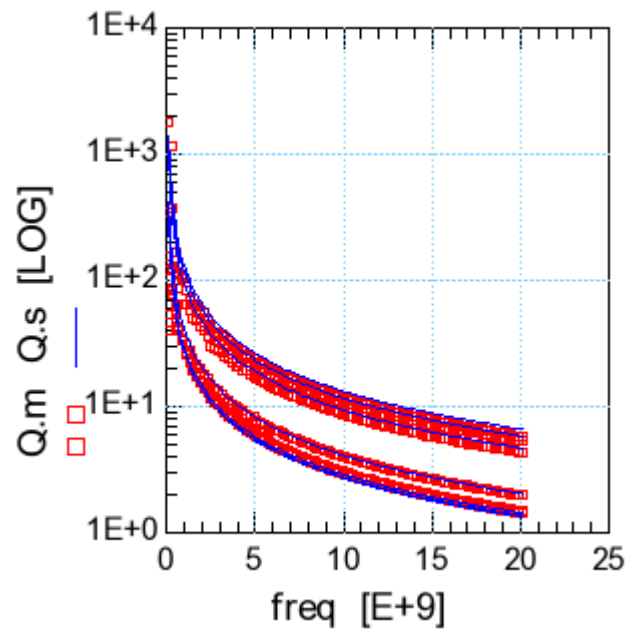


Figure 2-16 VAR_107:Q vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V

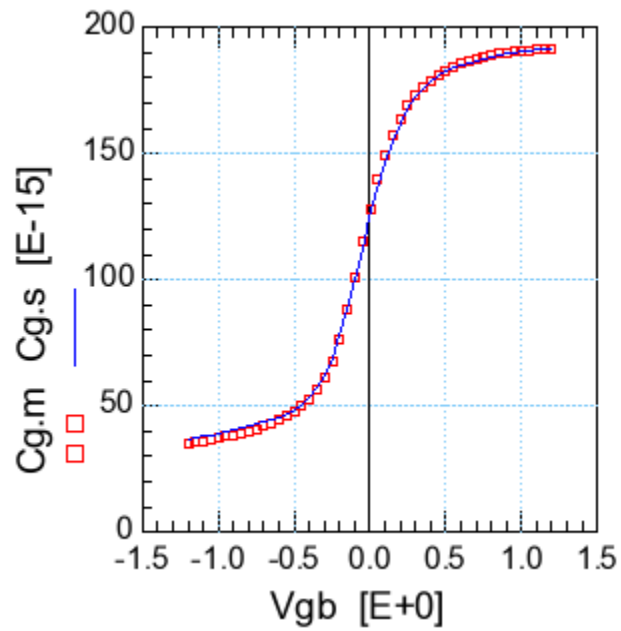


Figure 2-17 VAR_107:Cg vs. Vgb at Freq=5.9GHz

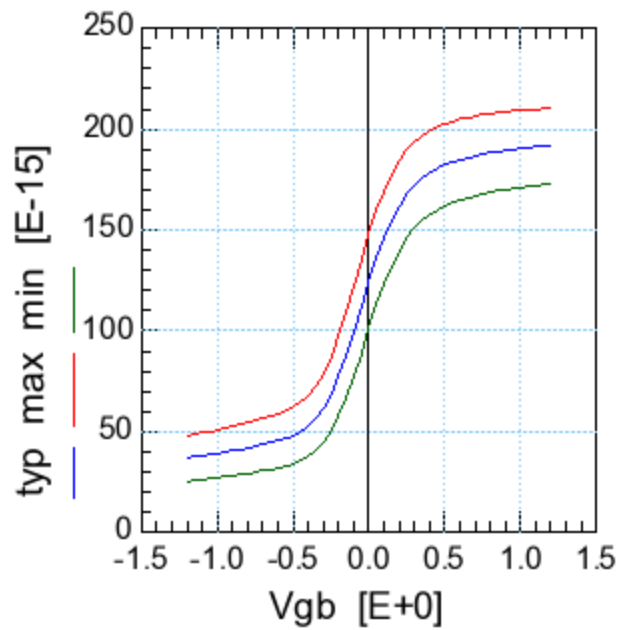


Figure 2-18 VAR_107:Cg vs. Vgb at Freq=5.9GHz

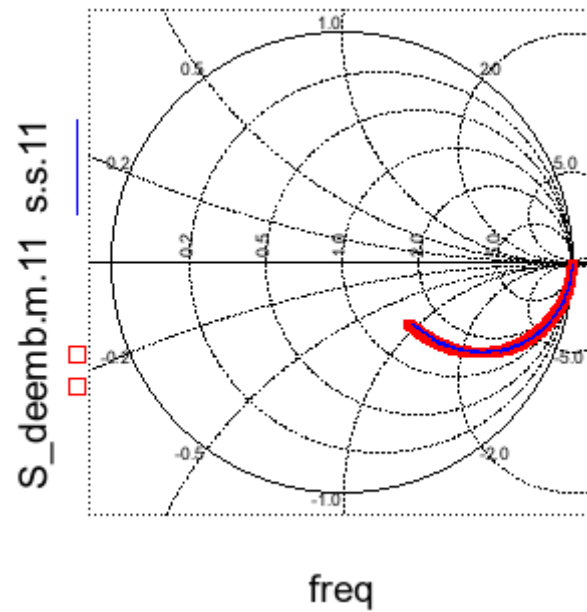


Figure 2-19 VAR_107:S11 at $V_g=-1.2V$ to $1.2V$, $V_{nw}=0 V$, Freq=100MHz to 20.1GHz

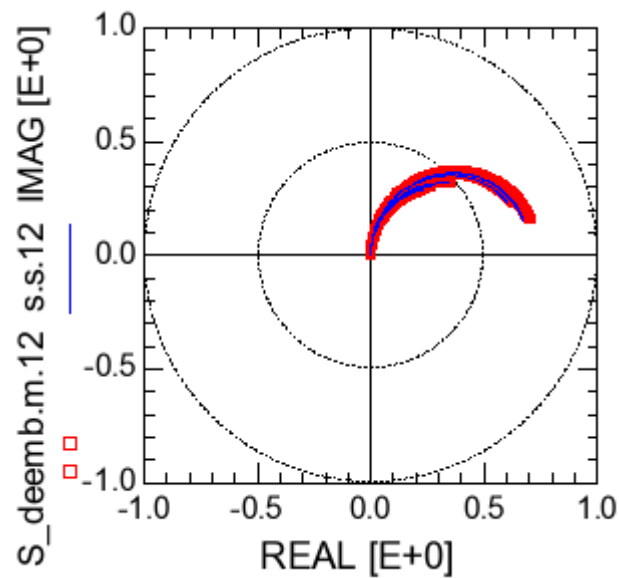


Figure 2-20 VAR_107:S12 at $V_g=-1.2V$ to $1.2 V$, $V_{nw}=0 V$, Freq=100MHz to 20.1GHz

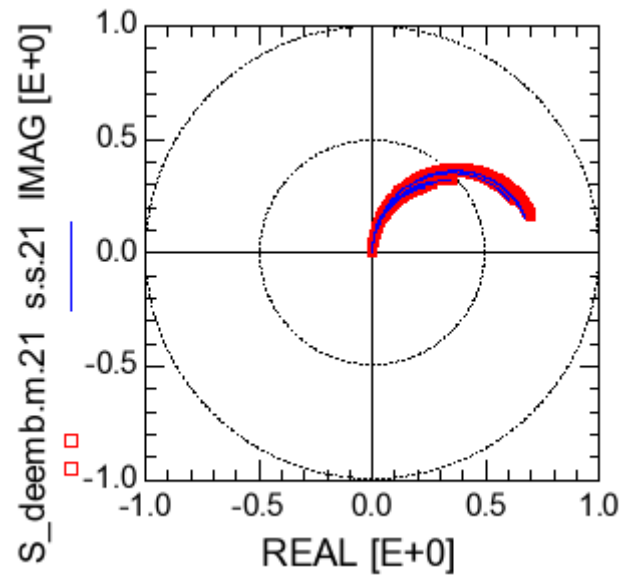


Figure 2-21 VAR_107:S21at $V_g = -1.2V$ to $1.2V$, $V_{nw} = 0V$, Freq=100MHz to 20.1GHz

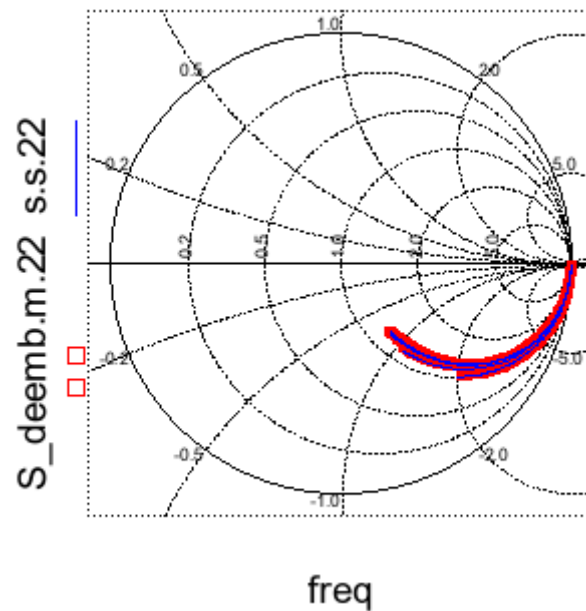


Figure 2-22 VAR_107:S22 at $V_g = -1.2V$ to $1.2V$, $V_{nw} = 0V$, Freq=100MHz to 20.1GHz

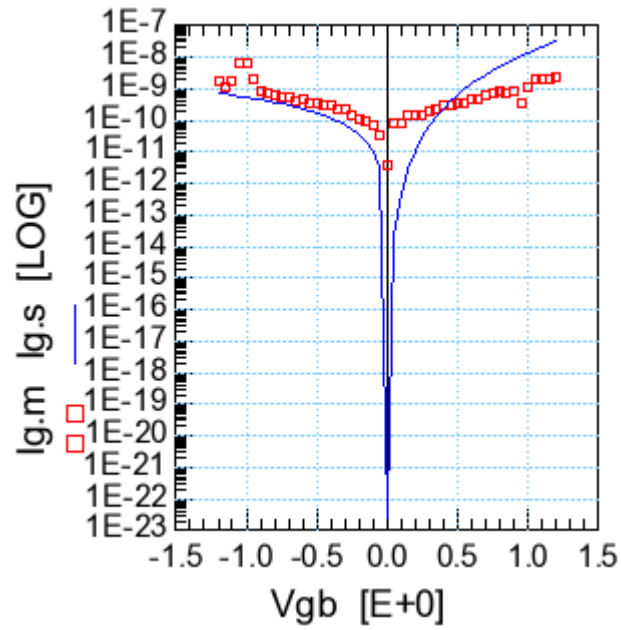


Figure 2-23 VAR_107: g_m vs. V_{gb}

VAR_108

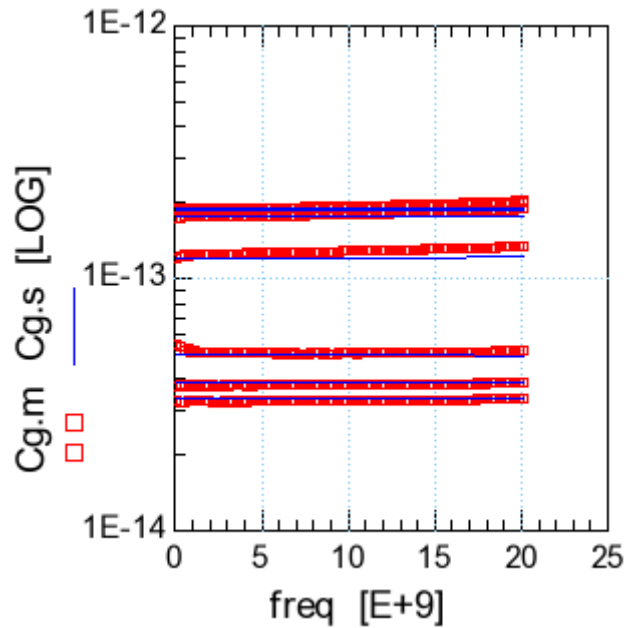


Figure 2-24 VAR_108:Cg vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V

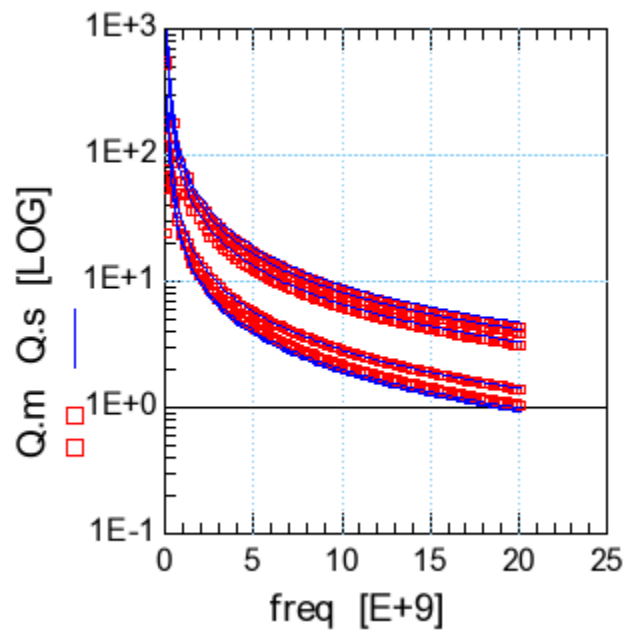


Figure 2-25 VAR_108:Q vs. Freq at Vg=-1.2, -0.8, -0.4, 0, 0.4, 0.8, 1.2 V, Vnw=0 V

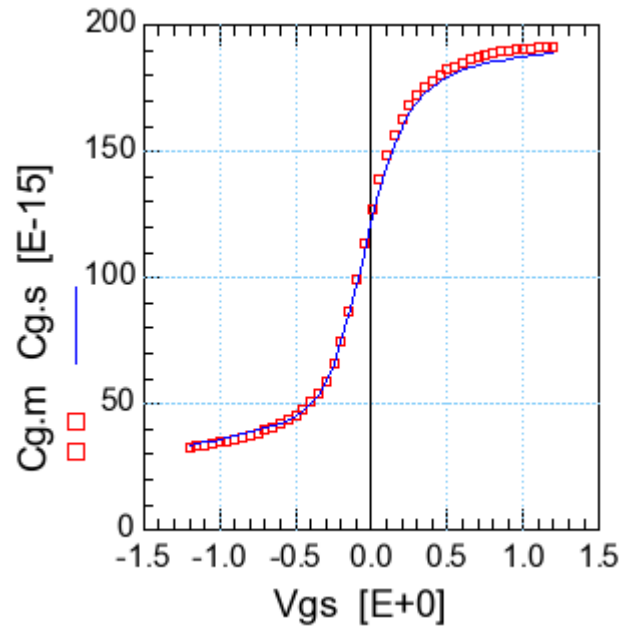


Figure 2-26 VAR_108:Cg vs. Vgb at Freq=5.9 GHz

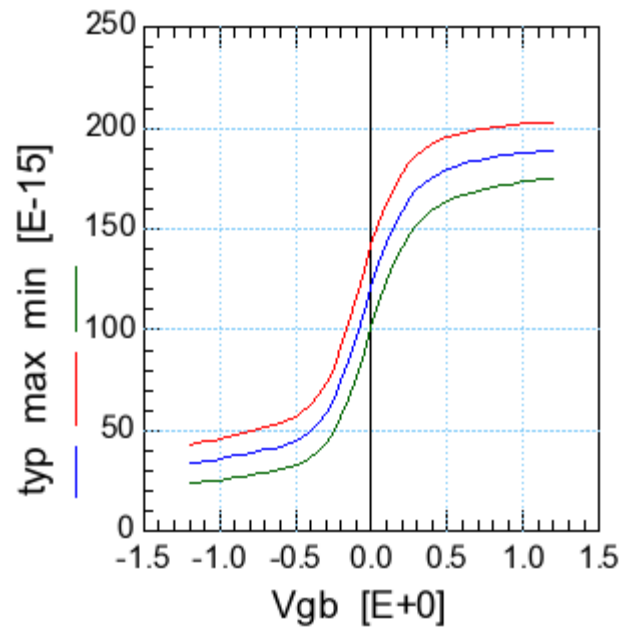


Figure 2-27 VAR_108:Cg vs. Vgb at Freq=5.9GHz

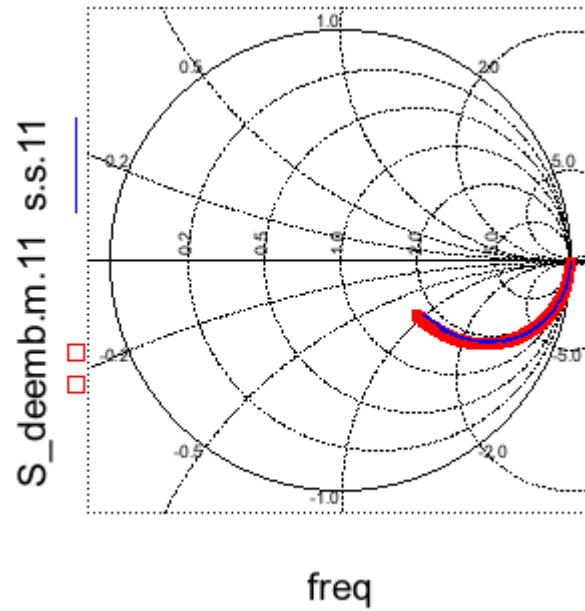


Figure 2-28 VAR_108:S11at $V_g = -1.2V$ to $1.2V$, $V_{nw} = 0V$, Freq=100MHz to 20.1GHz

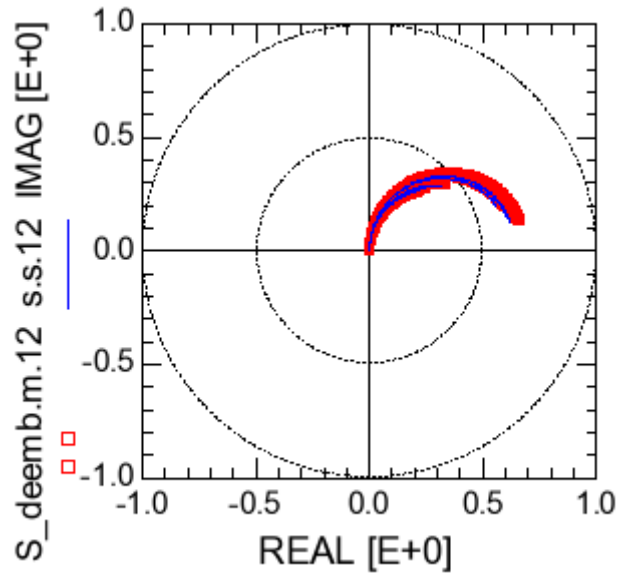


Figure 2-29 VAR_108:S12 at $V_g = -1.2V$ to $1.2V$, $V_{nw} = 0V$, Freq=100MHz to 20.1GHz

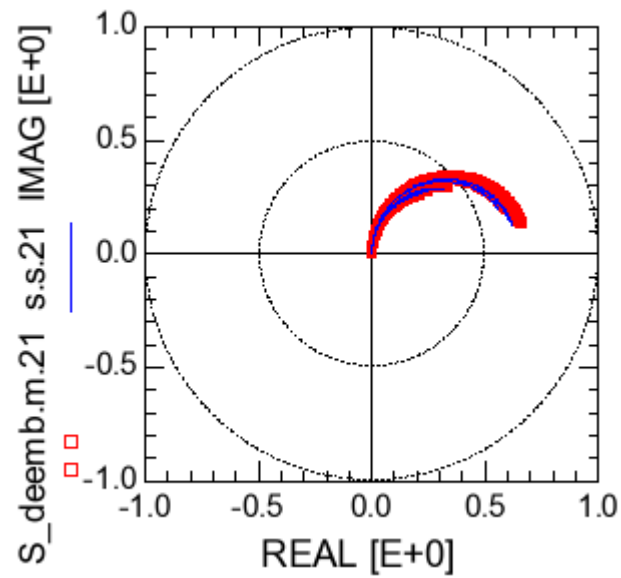


Figure 2-30 VAR_108:S21 at $V_g = -1.2\text{V}$ to 1.2V , $V_{nw} = 0\text{V}$, Freq=100MHz to 20.1GHz

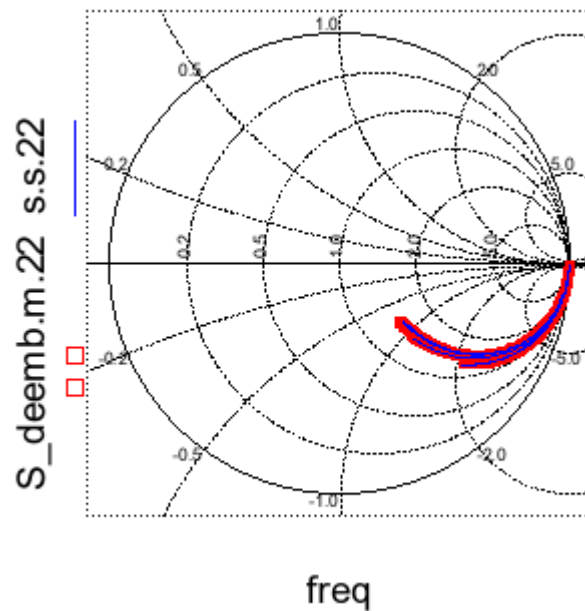


Figure 2-31 VAR_108:S22 at $V_g = -1.2\text{V}$ to 1.2V , $V_{nw} = 0\text{V}$, Freq=100MHz to 20.1GHz

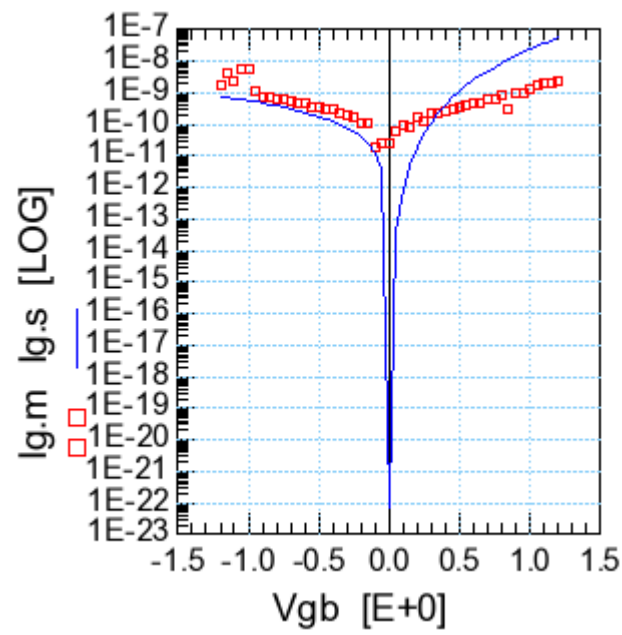


Figure 2-32 VAR_108: I_g vs. V_{gb}

3 Appendix

3.1 Hspice Warning Message

Table 3-1 Hspice warning message

No.	Warning Message	Explanation
1.	None	None

3.2 Eldo Warning Message

Table 3-2 Eldo warning message

No.	Warning Message	Explanation
1.	None	None

3.3 Spectre Warning Message

Table 3-3 Spectre warning message

No.	Warning Message	Explanation
1	None	None