TP-36 rotary tablet press: maintenance manual (synthetic)

4. Turret assembly

Figure 4 shows the turret of the TP-36 press from the front. The parts are marked with letters only; what each letter is, what to check on it and how often are given in Table 6 on page 3. Inspect the turret before every batch and record the result in the batch record.

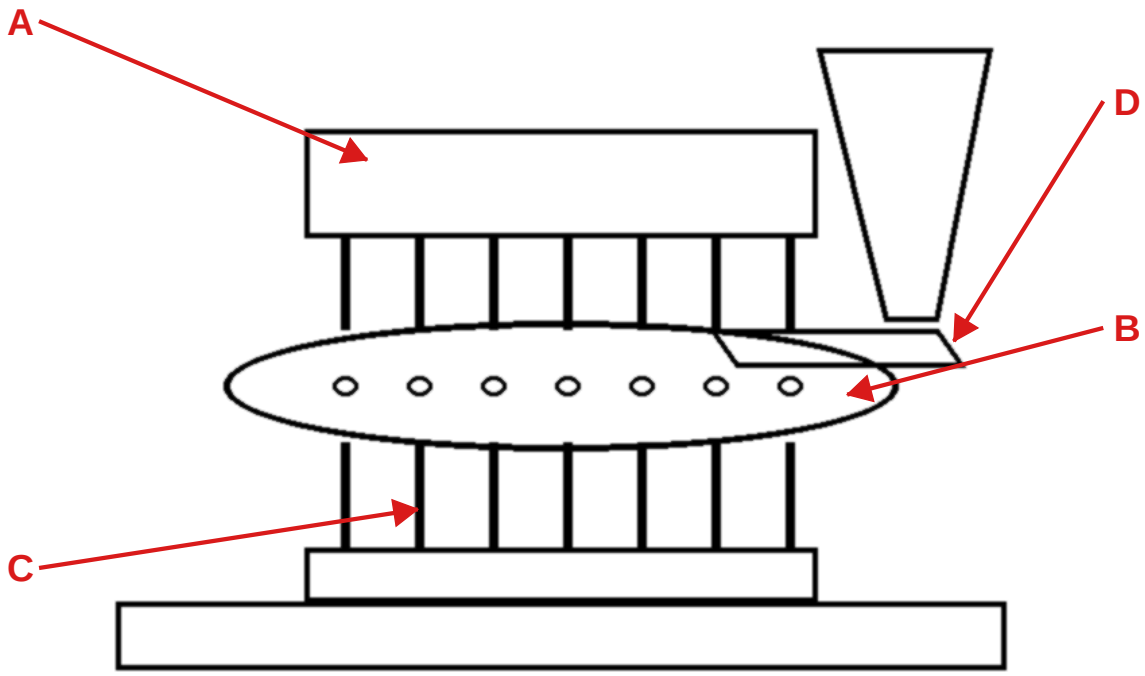


Figure 4. Turret assembly, front view.

5. Cleaning the feed frame

Take the feed frame apart after every product change. Figure 5 shows the parts laid out on the bench, numbered in the photo; Table 7 on page 3 says what each numbered part is and what to clean it with. Dry every part fully before it goes back on the press.

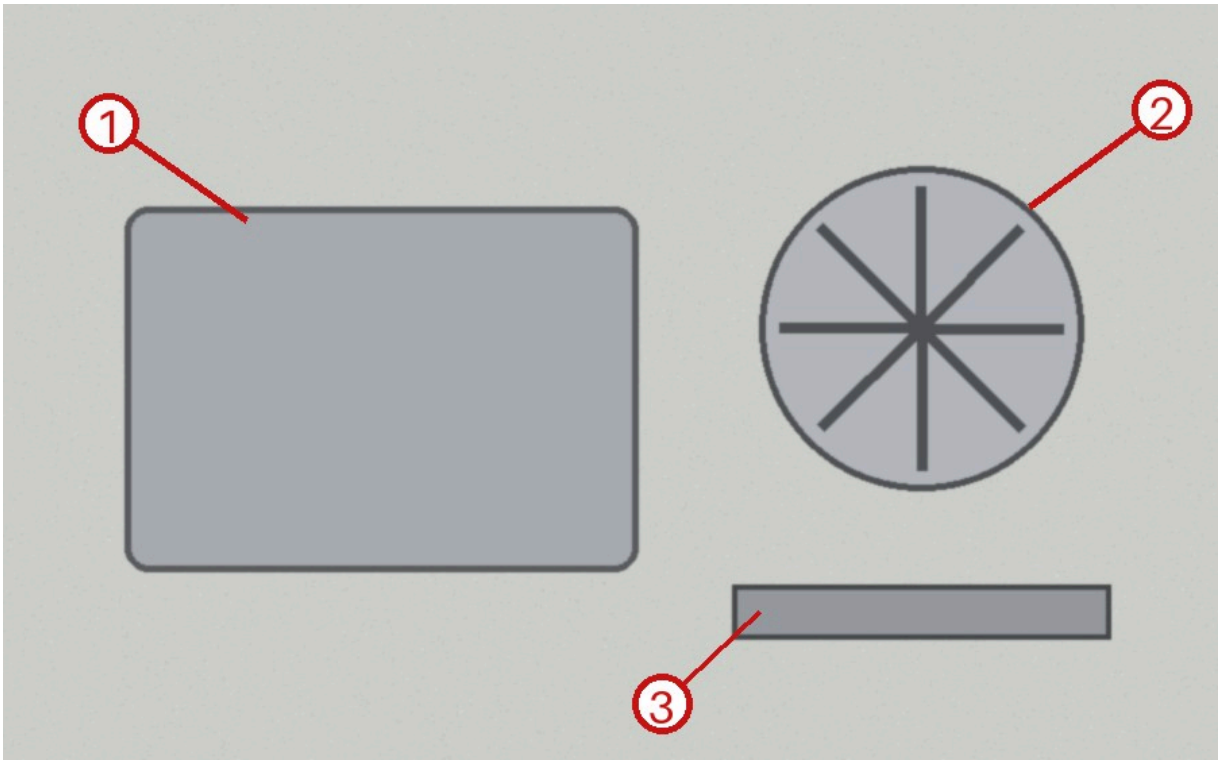


Figure 5. Feed frame taken apart for cleaning.

6. Keys to the figures

Table 6. Key to Figure 4

Label	Part	What to check	Interval
A	Upper punch guide	Wear on the cam track	Weekly
B	Die table	Cracks around the die bores	Every batch
C	Lower punch	Pitting on the punch tips	Weekly
D	Feed frame	Powder build-up under the frame	Every batch

Table 7. Key to Figure 5

No.	Part	Clean with	Then
1	Feed frame body	Warm water and neutral detergent	Air dry
2	Paddle wheel	Isopropyl alcohol 70%	Air dry
3	Scraper blade	Isopropyl alcohol 70%	Check edge