

Privacy Frames

Product Description

Package contents


2 pieces F-Profile 4200mm

1 piece F-profile 2000mm

1 piece of polycarbonate (type depending upon choice)



1. Accurately measure the sections of your canopy side where you wish to fit the privacy panel as shown below:

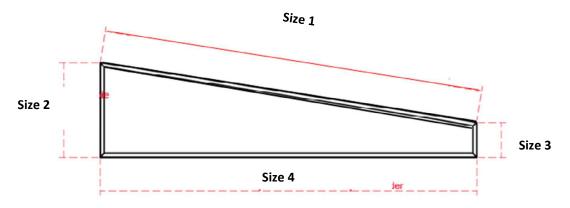

- 2. Take one length of 4.2m F profile and cut to length of Size 4 using 90 degree mitres at each end
- 3. Take the 2m F profile and cut oversized pieces for size 2 and 3
- 4. Cut 90 degree mitres into the bottom of each piece to fit with size 4
- 5. Lay the three pieces on a flat surface
- **6.** Mark the correct full lengths for size 2 and 3 and then place size 1 (the other 4.2m F profile length) in place and mark suitable mitres on size 1, 2 and 3 so they will all fit correctly when cut
- 7. Cut the mitres of size 1, 2 and 3*
- 8. If the paint has chipped at your cut ends then apply the touch up paint accordingly
- **9.** Measure and mark the polycarbonate sheet so there is a small gap all around within the F section. It must sit in the F section at least 25mm on all edges.
- 10. Cut the polycarbonate sheet and blow or vacuum all the chambers after cutting
- **11.** Put a bead of sealant inside size 4 (apply this to the inner side, not the bottom)
- 12. Attach all the F profiles in place

- **13.** Lift the full frame into position and fix through size 3 and 2 using self-tapping screws if fixing to posts or using a suitable wall fixing if going into brick. Ideally screw within 5cm of any edge and evenly across the lengths with a gap no greater than every 40cm
- *IMPORTANT NOTE Depending upon the exact requirements and fitting location you may need to trim a small section of the seat off the F profile at the top of size 3 to fit snugly around the back of the gutter

