


Stick Setup

Connect Cables

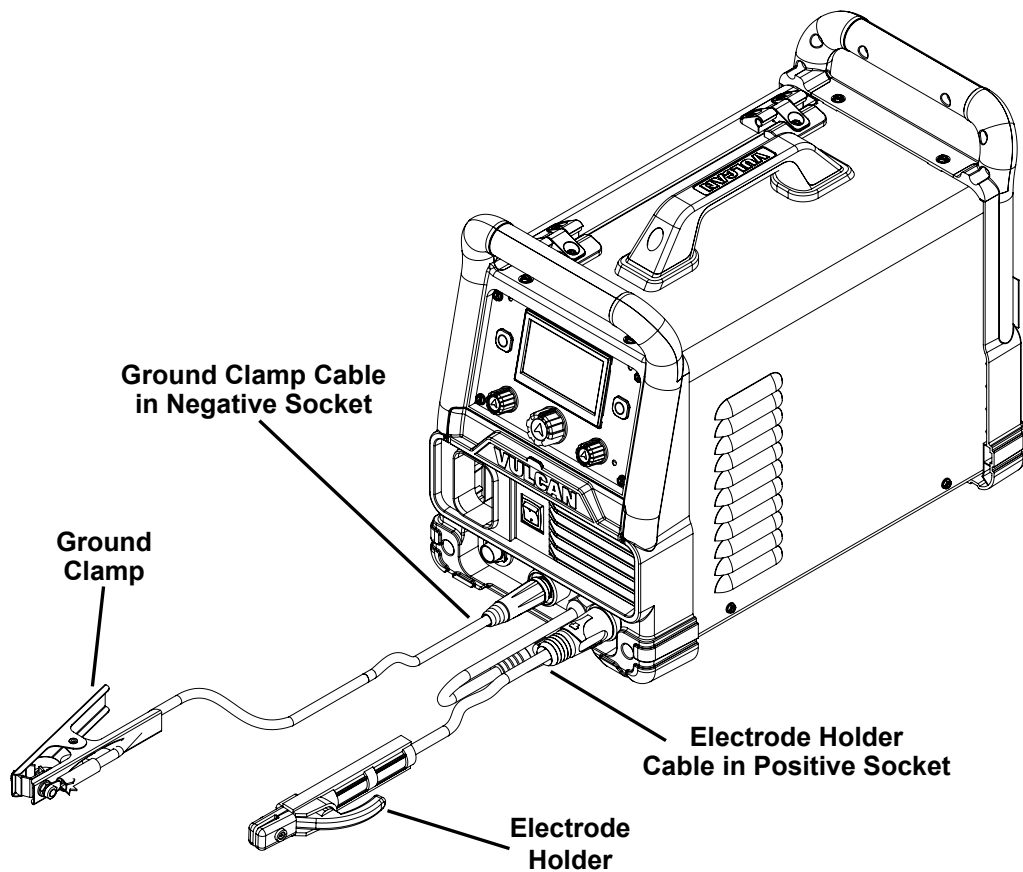

1. Plug Ground Clamp Cable into Negative Socket. Twist clockwise all the way to lock in place.
2. Plug Electrode Holder Cable into Positive Socket. Twist clockwise all the way to lock in place.

Connect Power Cord

Plug either 120VAC or 240VAC Power Cord into Power Input Socket.

Note: Plug will only fit one way.

WARNING! TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Do not plug cord into wall outlet at this time.

