PARAMETRIC MODERN CABINET SYSTEM

Cabinet with Door 300 x 500

Assembly guide - Cabinet 300 x 500 x 220 mm, one door on printed print-in-place leaf hinges (hidden behind the door), 1 shelf - dovetail + hidden M4 screws, magnet catch, built-in printed pull



Key facts

Size (W x H x D)	300 x 500 x 220 mm
Printer	Bambu Lab P2S
Build plates	19
Print time / filament	81 h / 3.2 kg
Filament	PETG, 3 walls, 15 % gyroid, 0.2 mm

> Safety: secure the cabinet to the wall (two holes in the top panel). The calculations are engineering estimates for printed PETG, not a test report.

Hardware you need

- 2 x Leaf hinge (printed in place, in the kit), 50 mm
- 8 x M3 x 10 countersunk screw (ISO 10642 / DIN 7991) for the hinge leaves
- 12 x M4 button-head screw 25 mm (ISO 7380)
- 12 x M4 hex nut (DIN 934, captive in the shelf)
- 9 x M3 x 16 self-tapping screw (back panel)
- 4 x Neodymium disc magnet 8 x 3 mm
- 2 x M4 x 27 mm screw for the handle (from the inside, door 16 mm)
- 2 x M4 hex nut for the built-in handle posts
- 2 x Wall screw + plug or anti-tip strap for the 2 anchor holes in the top panel (wall dependent)

Tools: 2.5 mm hex key; PH1 / T10 screwdriver; rubber mallet, glue (optional); drill for the wall anchor


Print plan

Plate	Objects on the plate
1	sideL0[0,1], keys x5, keys x5
2	sideR0[0,1], keys x5, keys x5
3	sideL0[0,0], keys x5, handle 1/1, keys x2
4	sideR0[0,0], leaf hinges x3
5	door0[0,0]
6	door0[0,1]
7	door0[1,0]
8	door0[1,1]
9	back0[0,0]
10	back0[0,1]
11	back0[1,0]
12	back0[1,1]
13	hp0[0,0]
14	hp1[0,0]
15	hp2[0,0]
16	hp0[1,0]
17	hp1[1,0]
18	hp2[1,0]
19	sideL0[0,2], sideR0[0,2]

Names: sideL / sideR = side panels, hp0 = bottom, hp1.. = shelves, last hp = top, back = back panel, door = door, [i,j] = tile column / row (tiles are joined by tongue-and-groove and bow-tie keys), keys = bow-tie keys, leaf hinges = print-in-place hinges.

0 Print and prepare


Print every plate with **PETG** (3 wall loops, 15 % gyroid, 0.2 mm). Use the **3MF** of this model: it carries modifier volumes that print the walls around every screw and insert hole with **6 wall loops and 100 % infill** (with plain STL files set 4-5 walls around these holes yourself). Print the **fit-test coupon** (`fit-test.stl`) first: the dovetail block must slide by hand with light friction, the bow-tie key must press in with your thumb, the **print-in-place hinge** must swing freely right after printing and an **M3 x 10 countersunk screw** must cut into its boss. If it is too tight / loose, change `fit` (0.25 default) or `hl_gap` (0.4 default) in the Customizer and generate the plates again.

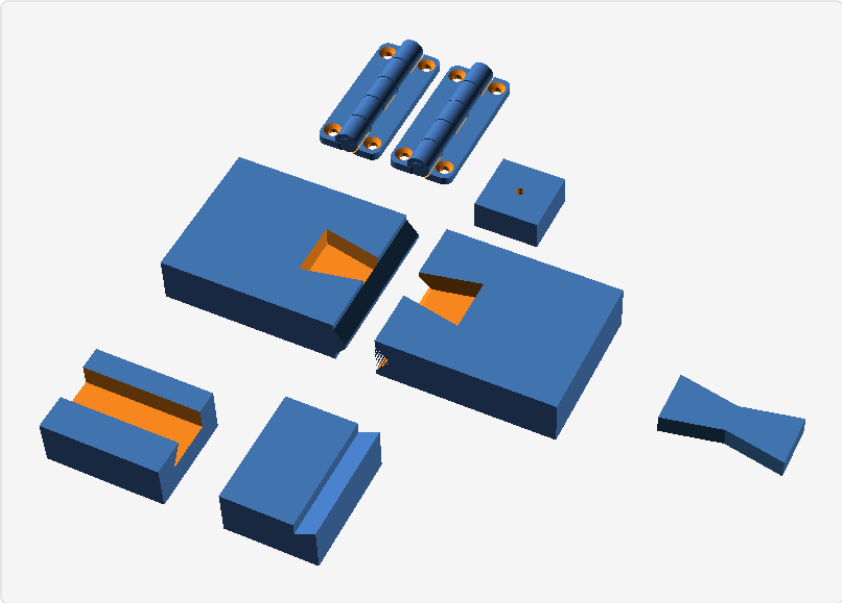

Fit-test coupon: print it first (dovetail, bow-tie key, hinge, M3 boss).

1 Join the tiles of every big panel


Large panels are printed as bed-sized tiles. Lay the tiles of one panel next to each other, **tongue into groove**, face-down on the table. Press the **bow-tie keys** into the pockets on the hidden face (the face that was *up* on the printer: inner face of the sides, underside of the shelves, back of the doors). Keys sit 0.4 mm below the surface; a drop of cyanoacrylate makes the seam permanent. The back panel has plain tongue-and-groove seams (add a few drops of glue or a strip of tape on the rear).

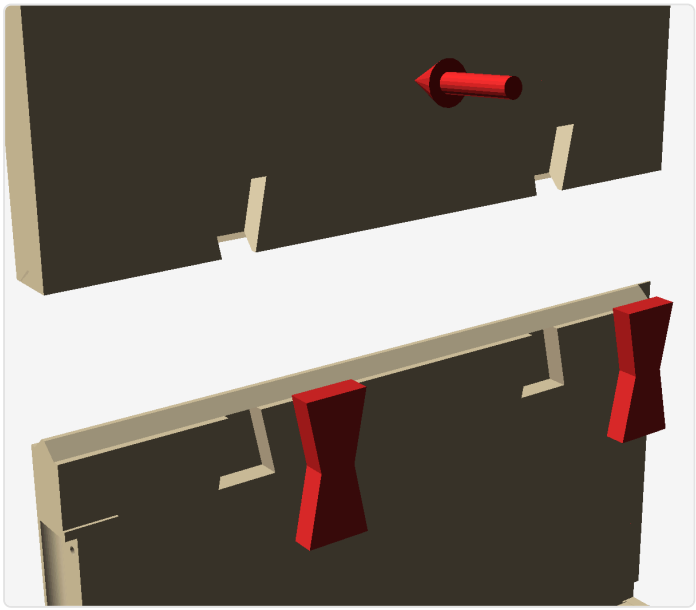

Tongue into groove. Press the bow-tie keys (red) into the pockets of the hidden face.

2 Insert the captive nuts


Press one M4 hex nut into every slot on the underside of the shelf / top / bottom panels (4 per panel). A touch of tape or glue keeps it in while you assemble.

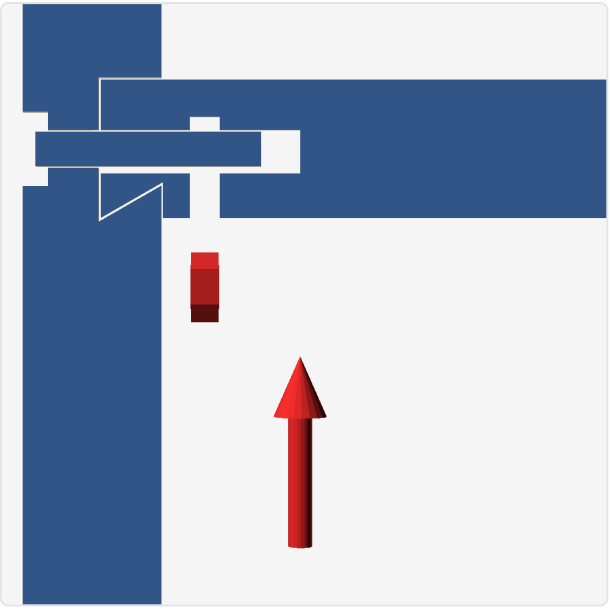

Section through the screw axis: the M4 nut (red) is pushed into its slot from below, the screw comes from outside.

3 Slide the shelves into the left side

Stand the left side on the table (inner face up). Push **every horizontal panel from the rear** into its dovetail groove until it stops against the blind front end. The tenon blocks lock the panel against the side - it cannot be pulled out sideways.

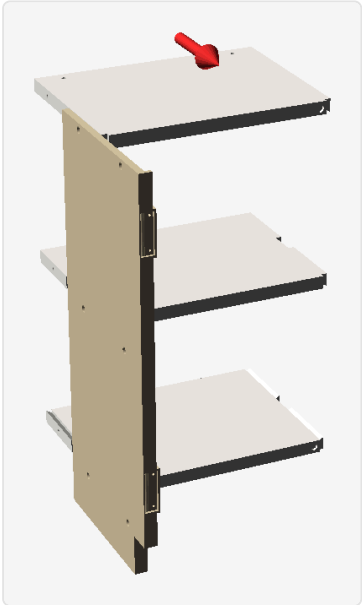

Slide every horizontal panel in from the rear (arrow).

4 Slide the right side on

Place the right side in front of the shelf ends and slide it **backwards** over all tenons at once until its grooves stop. Use a rubber mallet if the fit is tight.




Slide the right side on from the front, over all tenons at once (arrow).

5 Back panel


Slide the back panel into the rabbet from the rear and fix it with the M3 screws (pilot holes in the rear edge of every shelf). It locks all shelves against sliding out backwards.




5 Overview: the back panel is slid in from the rear (arrow).

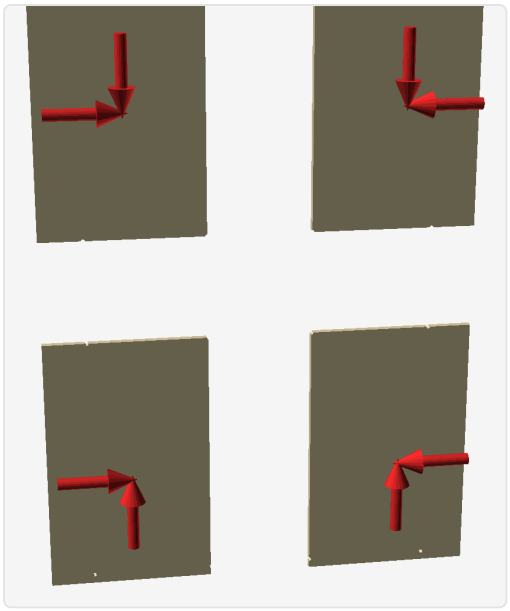


5a Lay the tiles of the back panel face-down in the arrangement shown and push them together (arrows): tongue into groove. A few drops of glue or a strip of tape on the rear make the seams permanent.

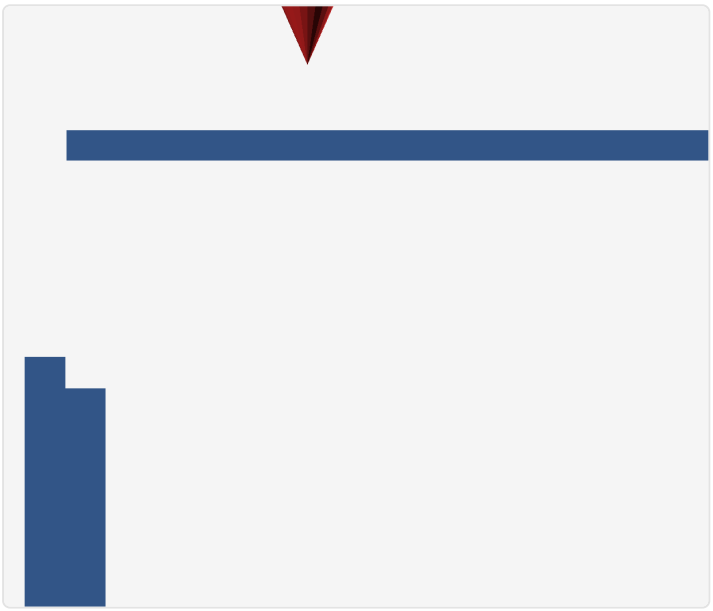

5b Section from above: the finished back panel slides from the rear (arrow) into the rabbet at the rear edge of both side panels and ends flush with them.

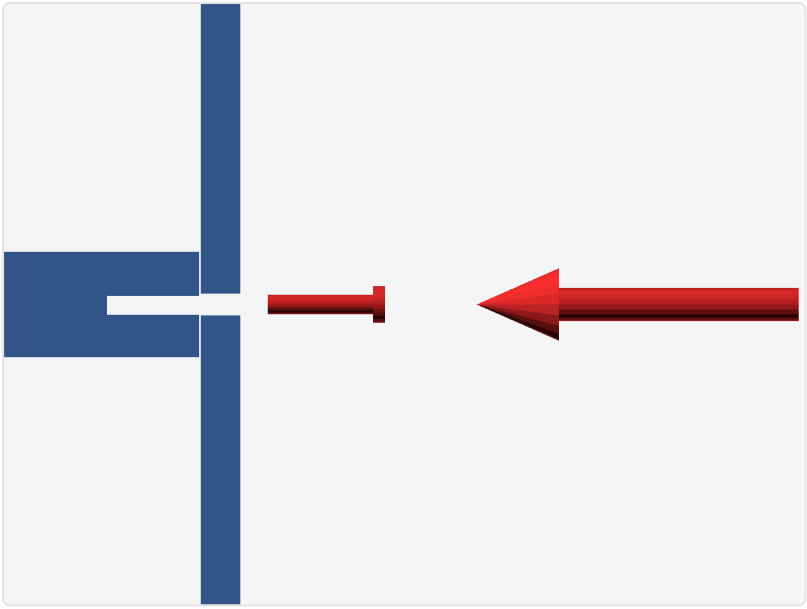


5c Section through one screw: the M3 x 16 screw (red) goes from the rear through the 3.4 mm hole in the back panel into the pilot hole in the rear edge of the shelf and cuts its own thread.

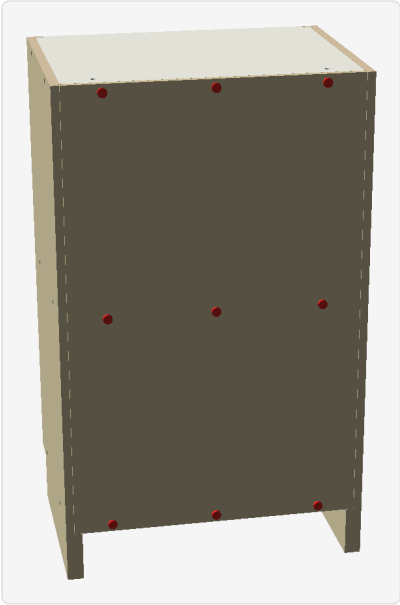

5d Rear view: one screw (red) at every shelf, top and bottom panel - 3 per edge, 1 on narrow cabinets.

6 Fasten the dovetails (optional but recommended for heavy loads)


From the outside drive the **M4 x 25 button-head screws** through the side panel into the captive nuts (2.5 mm hex key). The head sits flush in its recess.

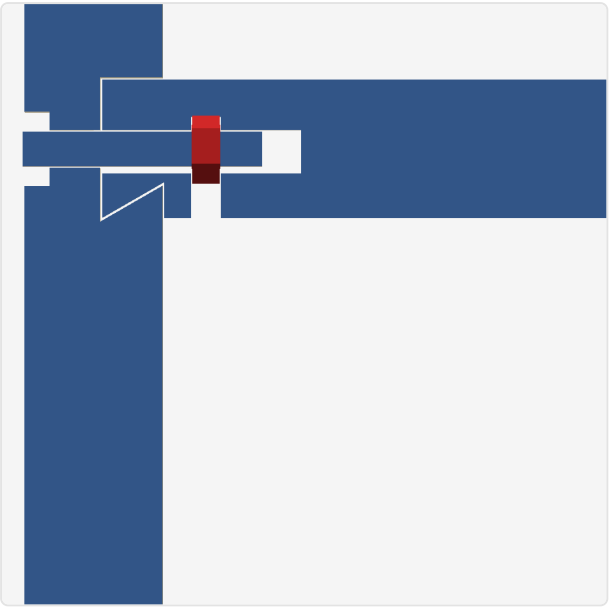


Section: the screw (grey) goes from outside through the side panel into the captive nut (red).

7 Hang the doors


Hinges: every hinge is one print-in-place part (two leaves joined by a printed pin) - do not pull it apart. Lay the door face-down, press a hinge leaf into its pocket on the back of the door and fix it with **two M3 x 10 countersunk screws** (the screws cut their own thread in the reinforced boss; with `hinge_inserts=true` press M3 heat-set inserts in first). Swing the hinge open, push the other leaf **from the front** into the pocket in the front edge of the side panel and fix it with two M3 x 10 screws. Repeat for every hinge, then close the door: it covers the opening as an overlay door and the hinges are hidden behind it. Check that the door swings freely; if a screw head stands proud the countersink is too shallow, re-print the leaf or lower `hinge_fit`.

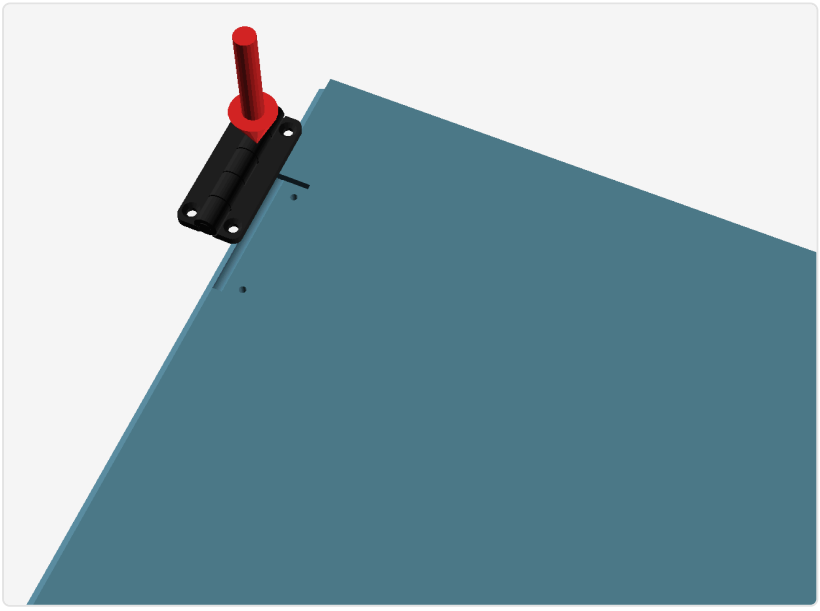


7a Lay the door face-down. Put every hinge (black, folded flat, do not pull it apart) into its pocket on the back of the door (arrow).

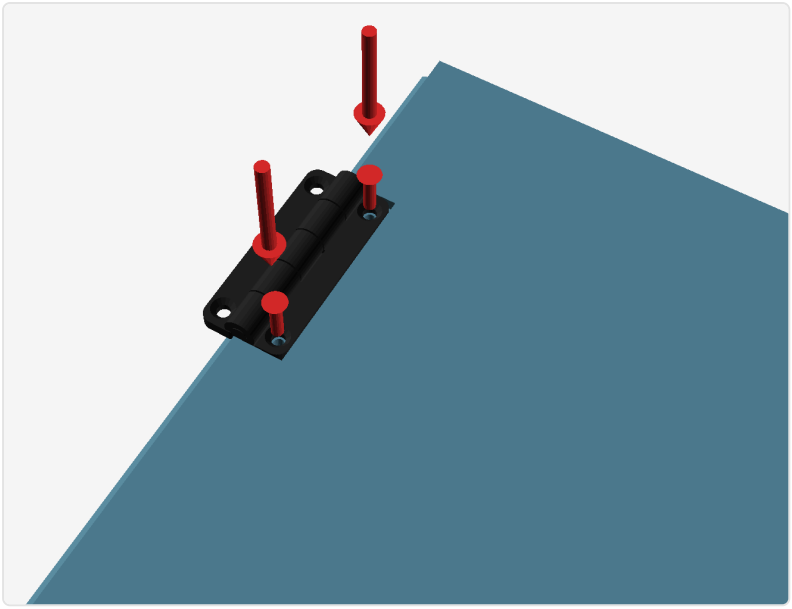


7b Fix the door leaf of every hinge with two M3 x 10 countersunk screws (red); the heads end flush with the leaf.

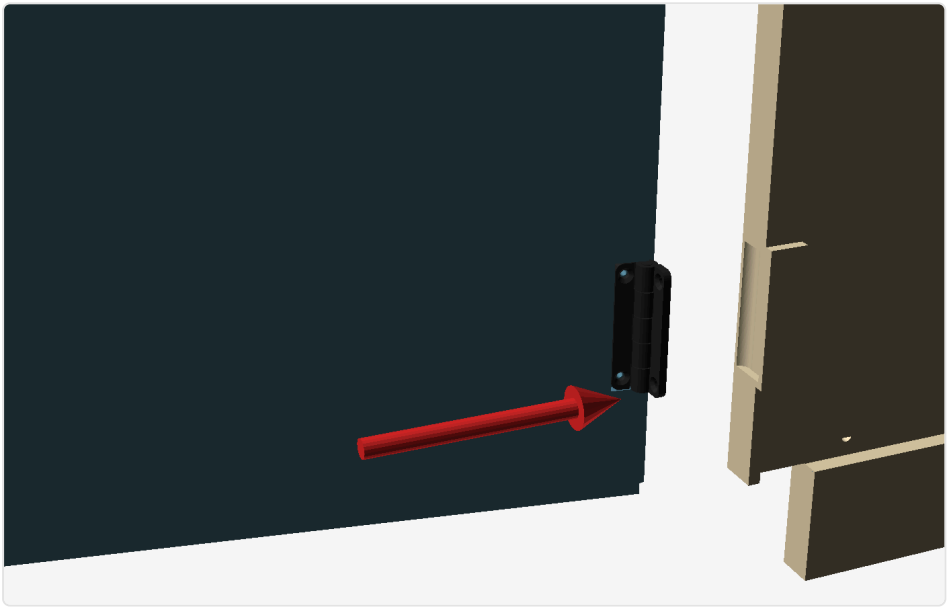


7c Hold the door open (about 100 degrees) and push the free hinge leaves from the front (arrow) into their pockets in the front edge of the side panel.

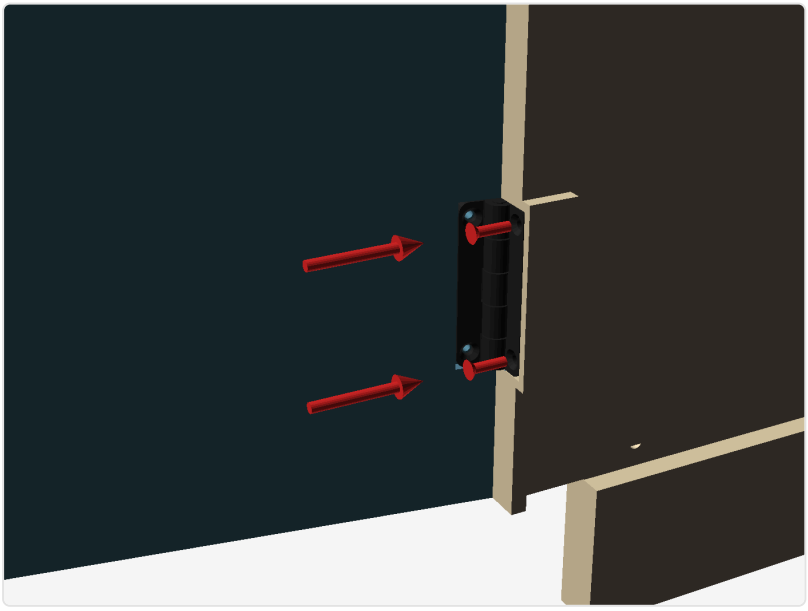

7d Fix these leaves with two M3 x 10 countersunk screws each (red), from the front.

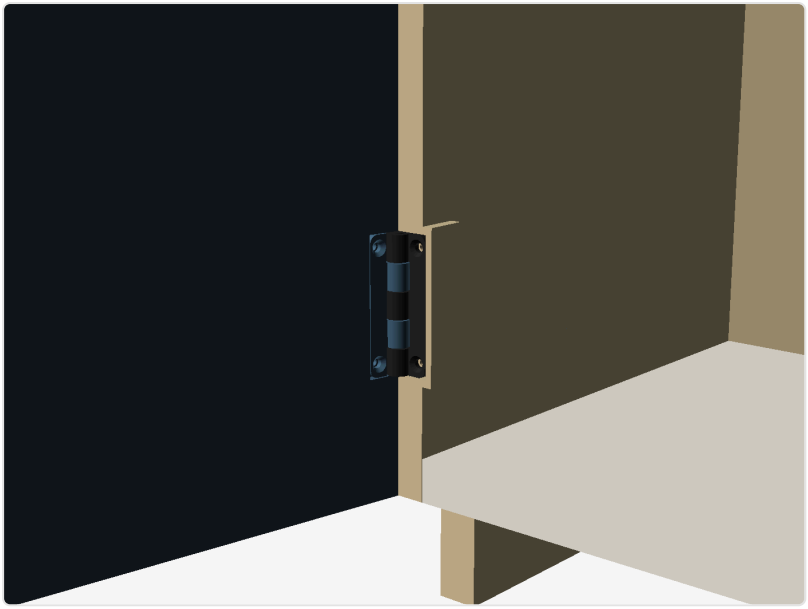

7e Hinges installed, door opened 100 degrees: both leaves sit in their pockets, the hinges are hidden when the door is closed.

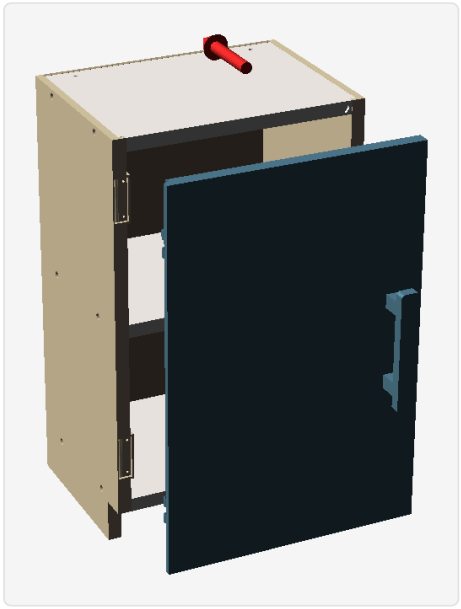


Overview: the door closes over the hinge side.


8 Magnets and handles

Press the magnets into the pockets (door back face + shelf front edge), **test the polarity before gluing**.


Built-in pull: press a hex nut into the pocket on top of each post, hold the pull on the door front and drive the screws **from the inside** through the door into the nuts.

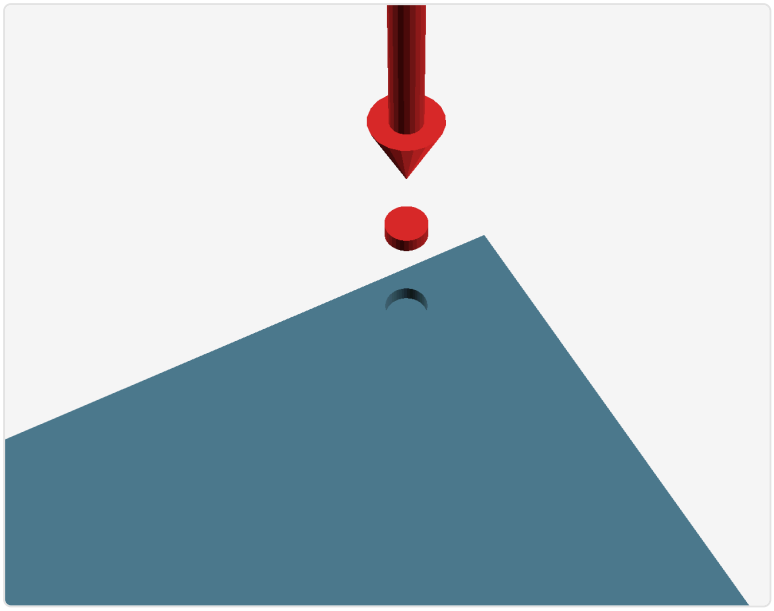


8a Press the disc magnets (red) into the pockets on the back of the door near the free edge (arrow). Test the polarity before you glue.

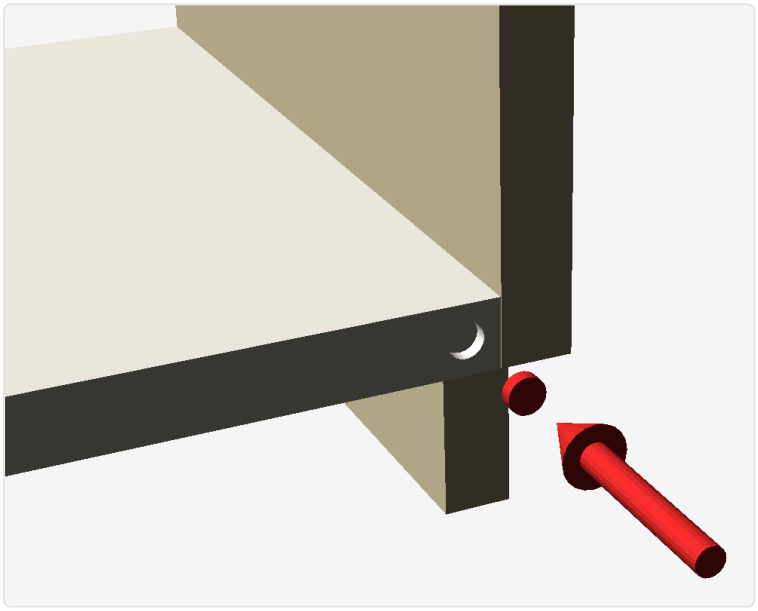

8b Press the counter magnets into the pockets in the front edge of the shelf / bottom panel (arrow) - the opposite polarity, so that the door is pulled shut.

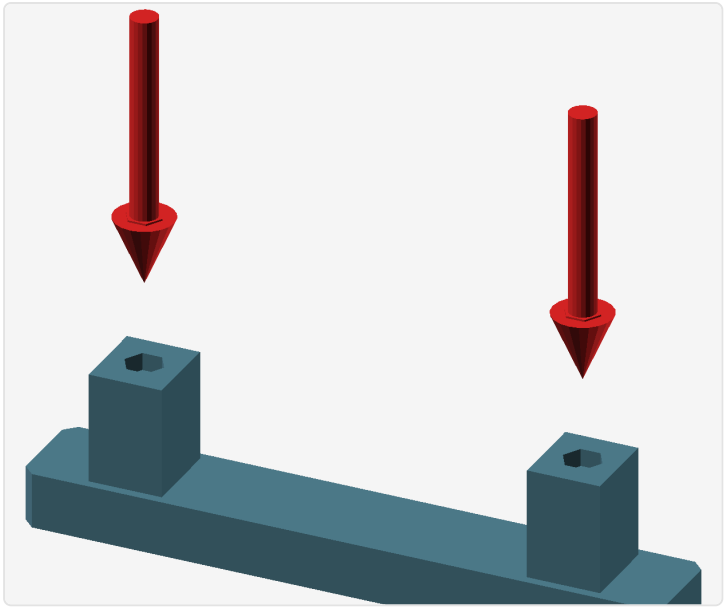


8c Built-in pull (shown upside down, as printed): press a hex nut (red) into the pocket on top of each post (arrows).

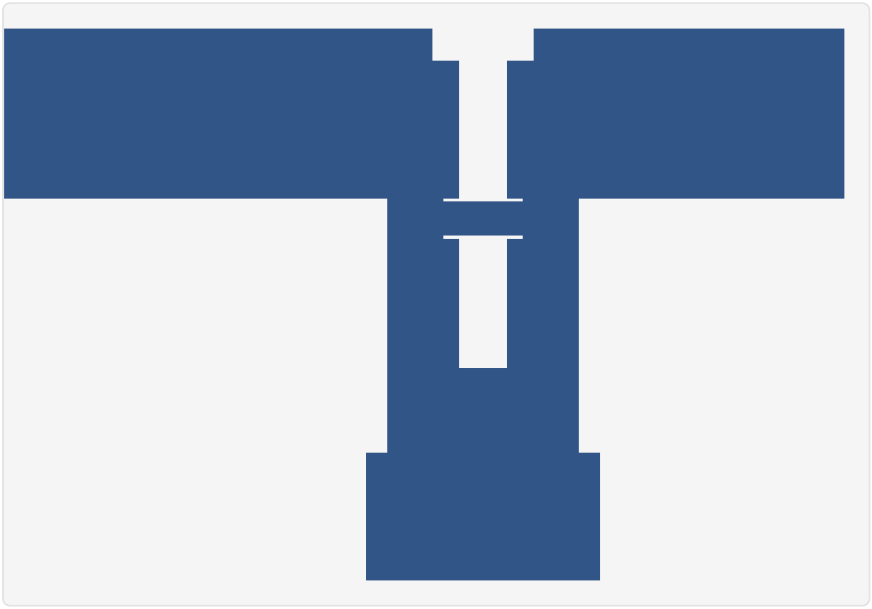


8d Section through one post: from the inside of the door the screw (red) goes through the door into the nut of the pull.

9 Secure the cabinet to the wall

Mandatory. The two holes in the top panel take wall brackets or an anti-tip strap. Free-standing, an empty cabinet of this kind tips forward under a small load on its front edge (see *tip-over* in the verification summary below).

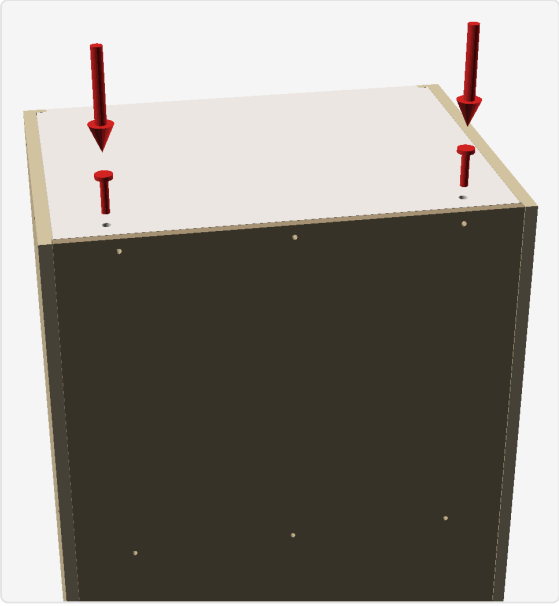

9 Wall anchor: the two holes (red = screws) in the top panel near the rear edge take the wall screws / anti-tip strap (arrows).

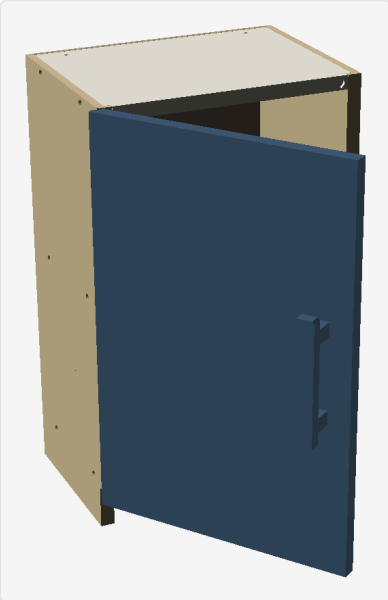

Finished cabinet, door opened.

Appendix - what was verified

Every assembly step above was simulated on the real parts (swept-path collision tests); strength values are conservative estimates.

Assembly and statics

	Check	Result
OK	S1 3 horizontal panels slide from the rear into the left side (tool-free)	worst intersection 0.00 mm3 over 16 positions each
OK	S2 right side slides from the front over all tenons simultaneously	worst 0.00 mm3
OK	S3 back panel slides into the rabbet from the rear	worst 0.00 mm3
OK	S4 1 door(s) slide in from the front onto the hinge side	worst 0.00 mm3
OK	S5 doors swing 0..110 deg without touching the carcass	worst 0.00 mm3
OK	S6 printed leaf hinges seat in their pockets from the front (M3 screws from the front, door swung open)	worst 0.00 mm3
OK	L1a shelves cannot be pushed out backwards once the back panel is on	
OK	L1b shelves cannot slide forwards (blind groove stop)	
OK	L2 sides cannot be pulled apart (half-dovetail locks every shelf)	
-	mass model	cabinet 3.2 kg (solid PETG 11.5 kg, fill factor 0.27 calibrated on the slicer weight); centre of mass x=151 y=89 z=267 m
-	tip-over (front edge load)	load that tips the empty cabinet forward: 6 kg; loaded 23 kg: 60 kg (lever = toe-kick 30 mm)
OK	stability class: wall anchor REQUIRED	top panel carries the 2 anchor holes (wall_anchor = true)
OK	centre of mass is centred between the sides	offset +1 mm
OK	free-standing with all doors open at 90 deg	door moment 1.4 N*m vs stabilising 1.4 N*m -> TIPS when empty: wall anchor is MANDATORY (anchor holes are part of the to
OK	door-open tipping is covered by the wall anchor	wall_anchor holes present
OK	shelf rating: 20 kg evenly distributed per shelf (stress and deflection <= L/200)	span 268 mm, shelf 16 mm thick
OK	shelf seam (bow-tie keys as tension ties) carries the bending moment	capacity 24.0 N*m vs demand 4.93 N*m (15 kg), safety 4.9
OK	dovetail bearing pressure on the sloped flank	0.15 MPa (allow 3.0) per shelf end, 2 blocks
OK	tenon neck shear (across layers)	0.044 MPa (allow 1.33)
OK	leaf hinge: screw withdrawal under the open-door couple (safety 4 vs 120 N per M3)	door 0.76 kg, 3.6 N on the outer hinge, 1.8 N per screw
OK	leaf hinge: door weight per hinge (shear on the leaf / screws)	3.7 N per hinge (2 hinges)

Printability

	Check	Result
OK	all 20 tiles fit the bed (256x256)	
OK	all tiles lie flat on the bed (zmin = 0)	
OK	every tile is ONE connected body	
OK	no large unsupported overhangs / long bridges (>10.5 mm)	

OK	tile seams (15): tongues sit in grooves without interference	
OK	assembly (closed): no part-part interference (17 pairs)	
OK	shelf 1 <-> left side clearance	gap=0.150 (design 0.15)
OK	back panel <-> side clearance	gap=0.200 (design 0.1)
OK	assembly (doors open 60 deg): no part-part interference (17 pairs)	
OK	assembly (doors open 110 deg): no part-part interference (17 pairs)	
OK	hardware part 'key' prints flat, one body, no steep overhang	z0=0.00 bodies=1 overhangs=[] size=[40.0, 18.0, 6.6]
OK	hardware part 'handle' prints flat, one body, no steep overhang	z0=0.00 bodies=1 overhangs=[] size=[140.0, 22.0, 36.0]
OK	hinge (print-in-place): flat on the bed, exactly two separate leaves (they must not fuse)	z0=0.00 bodies=2 size=[22.4, 50.0, 8.0]
OK	hinge leaves swing 0..180 deg without touching each other	worst overlap 0.00 mm3