PLUMBING Using the given components completely goin the pieces to make the arrangement as show in Figure. APPLICATIONS used for house hold purpose. SUPPLIED MATERIAL : 1" x 6" 62 pape. 3/4" × 6" 62 pape. 1/2" × 6" 62 plpe. 1/211 ×34 62 pipe. 1/2" pre pipe tape 1/2 11 Dunny. 3/4" × 1/2" reducer . 7) Ball value 1/2 11 stell plug.

1/2" coupling.

TOOLS REQUIRED:

1) Adjustable Spanner.

2) pipe wrenen.

3) pipe vice.


4) Double and Spanner.

Ring spanner.

SEQUENCE OF OPERATION

1) Setting.

2) Johning. 3) Taghtening. 4) Checking.

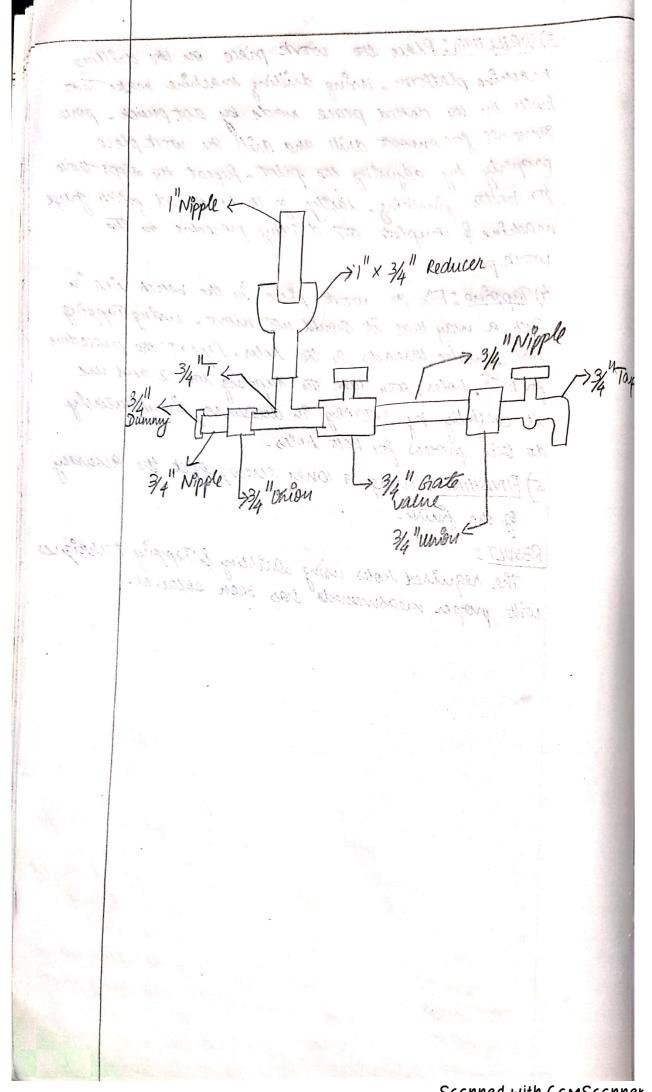

NORKING STEPS: Set the given materials as required In the 1) SETTING: figure. The given materials are soined as required in 2) JOINING: the figure. The joints are tightened by using pipe whench 3) Vightenling : (OV) Agustable spanner (OV) souble end spannel or This step is done, only to check whether there is any leakage (or) not. all. The pape has been joined together as it was shown In the figure.