# **Chapter 6 Physics of MOS Transistors**

- 6.1 Structure of MOSFET
- 6.2 Operation of MOSFET
- **▶** 6.3 MOS Device Models
- **▶** 6.4 PMOS Transistor
- 6.5 CMOS Technology
- 6.6 Comparison of Bipolar and CMOS Devices

### **Chapter Outline**

#### Operation of MOSFETs

- MOS Structure
- Operation in Triode Region
- Operation in Saturation
- I/V Characteristics


#### **MOS Device Models**

- Large-Signal Model
- Small-Signal Model

#### PMOS Devices


- Structure
- Models

### **Metal-Oxide-Semiconductor (MOS) Capacitor**

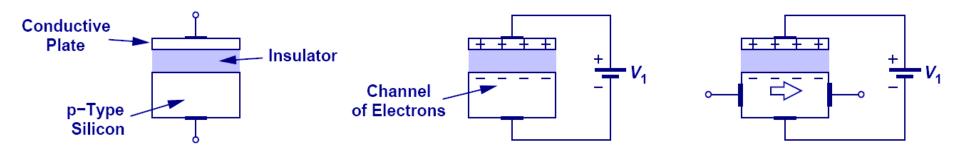


The MOS structure can be thought of as a parallel-plate capacitor, with the top plate being the positive plate, oxide being the dielectric, and Si substrate being the negative plate. (We are assuming P-substrate.)

### **Structure and Symbol of MOSFET**

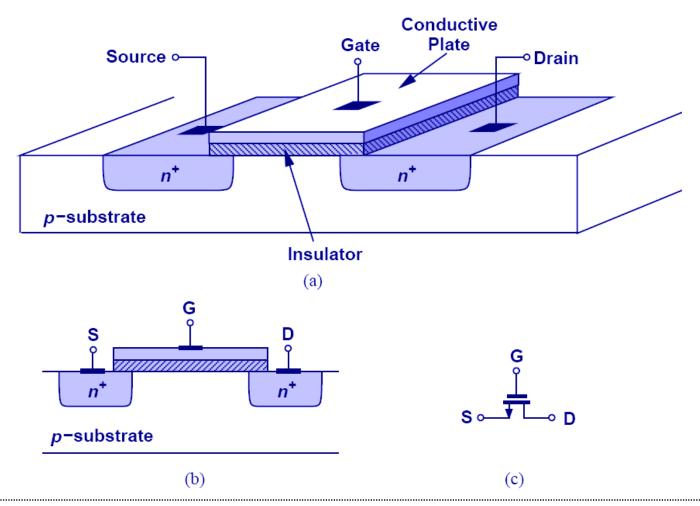


This device is symmetric, so either of the n+ regions can be source or drain.

#### State of the Art MOSFET Structure

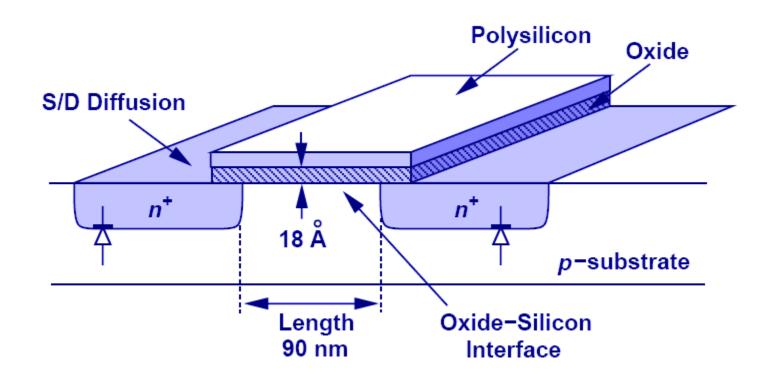


The gate is formed by polysilicon, and the insulator by Silicon dioxide.

#### **Formation of Channel**

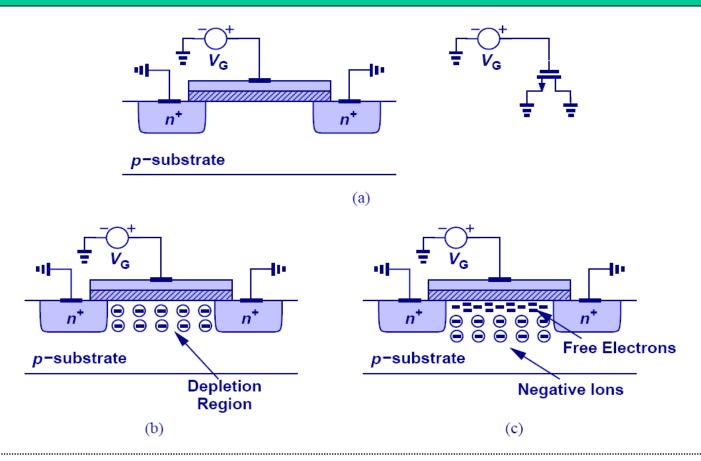


First, the holes are repelled by the positive gate voltage, leaving behind negative ions and forming a depletion region. Next, electrons are attracted to the interface, creating a channel ("inversion layer").

### **Voltage-Dependent Resistor**

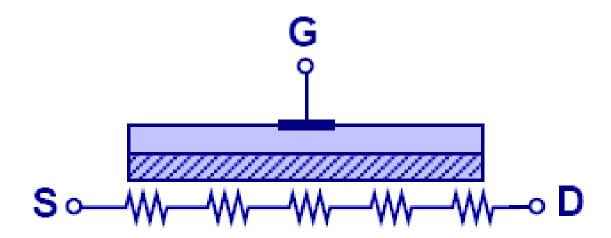


- The inversion channel of a MOSFET can be seen as a resistor.
- Since the charge density inside the channel depends on the gate voltage, this resistance is also voltage-dependent.


### **Voltage-Controlled Attenuator**

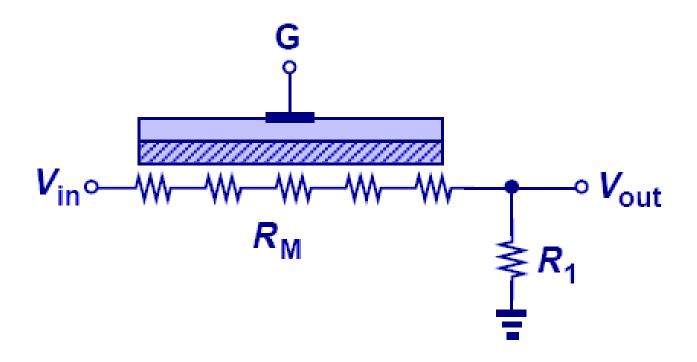



- As the gate voltage decreases, the output drops because the channel resistance increases.
- This type of gain control finds application in cell phones to avoid saturation near base stations.

#### **MOSFET Characteristics**

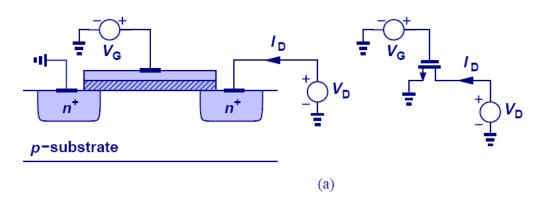

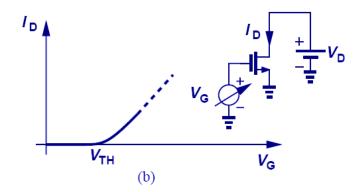


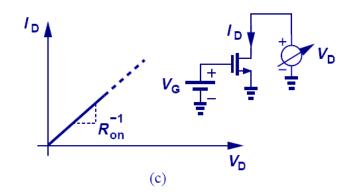

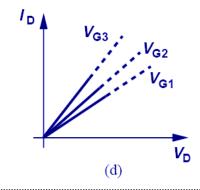


- The MOS characteristics are measured by varying V<sub>G</sub> while keeping V<sub>D</sub> constant, and varying V<sub>D</sub> while keeping V<sub>G</sub> constant.
- (d) shows the voltage dependence of channel resistance.

## L and t<sub>ox</sub> Dependence

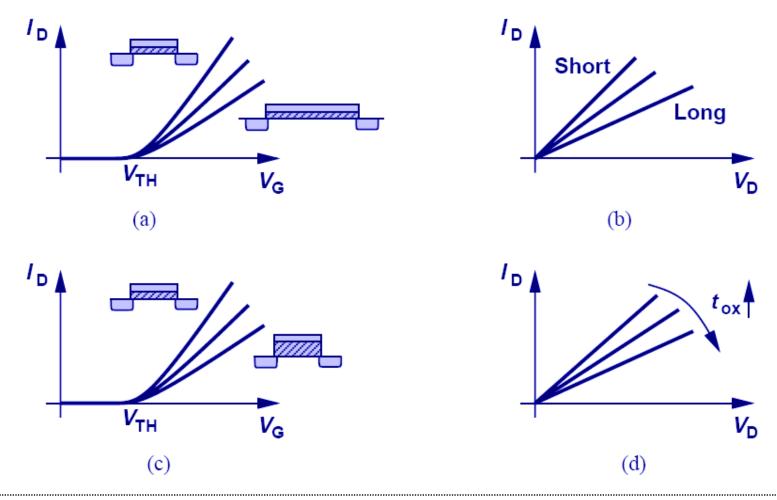


Small gate length and oxide thickness yield low channel resistance, which will increase the drain current.


#### **Effect of W**

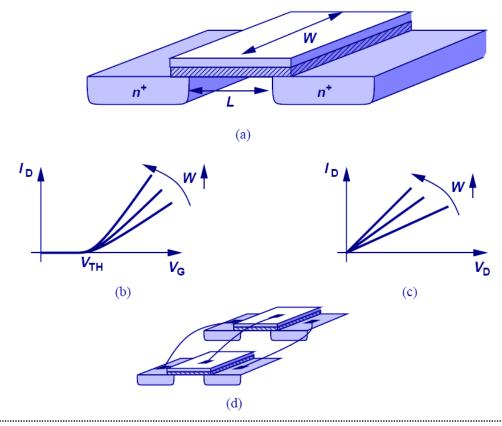

- As the gate width increases, the current increases due to a decrease in resistance. However, gate capacitance also increases thus, limiting the speed of the circuit.
- An increase in W can be seen as two devices in parallel.


#### **Channel Potential Variation**

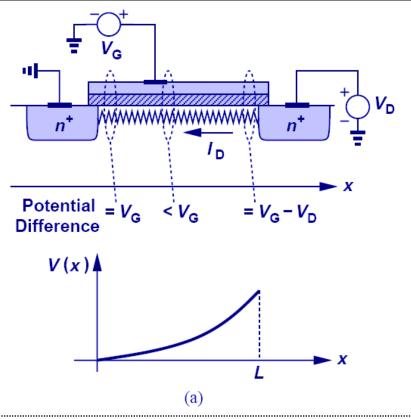

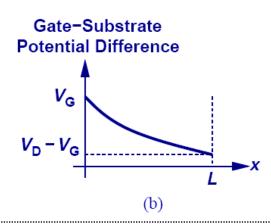


Since there's a channel resistance between drain and source, and if drain is biased higher than the source, channel potential increases from source to drain, and the potential between gate and channel will decrease from source to drain.

#### **Channel Pinch-Off**

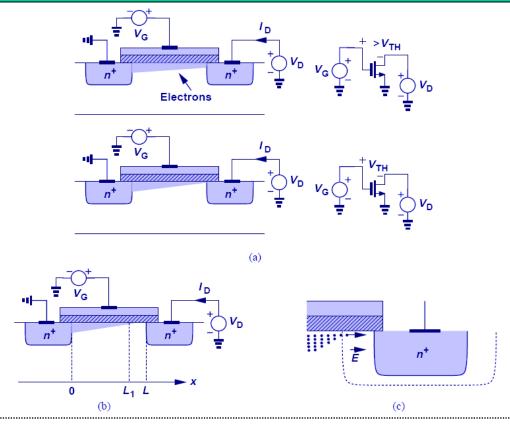

- As the potential difference between drain and gate becomes more positive, the inversion layer beneath the interface starts to pinch off around drain.
- When  $V_D V_G = V_{th}$ , the channel at drain totally pinches off, and when  $V_D V_G > V_{th}$ , the channel length starts to decrease.


### **Channel Charge Density**

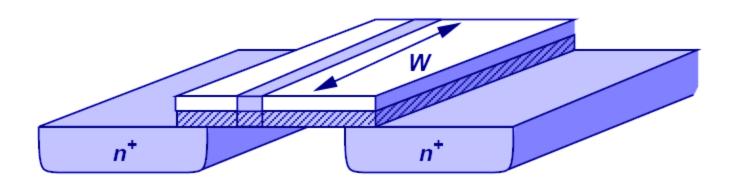

$$Q = WC_{ox}(V_{GS} - V_{TH})$$


The channel charge density is equal to the gate capacitance times the gate voltage in excess of the threshold voltage.

## **Charge Density at a Point**

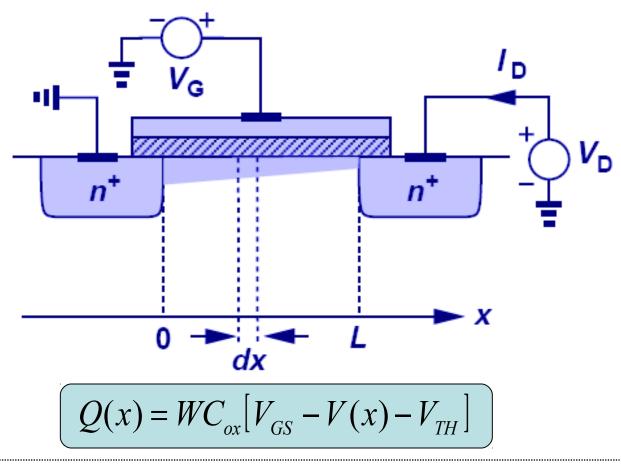

Let x be a point along the channel from source to drain, and V(x) its potential; the expression above gives the charge density (per unit length).

### **Charge Density and Current**

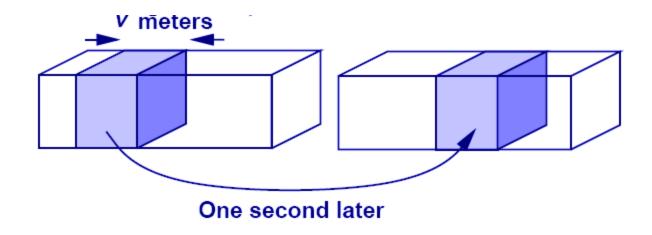

$$I = Q \cdot v$$

The current that flows from source to drain (electrons) is related to the charge density in the channel by the charge velocity.


#### **Drain Current**

$$v = +\mu_{n} \frac{dV}{dx}$$

$$I_{D} = WC_{ox} [V_{GS} - V(x) - V_{TH}] \mu_{n} \frac{dV(x)}{dx}$$


$$I_{D} = \frac{1}{2} \mu_{n} C_{ox} \frac{W}{L} [2(V_{GS} - V_{TH})V_{DS} - V_{DS}^{2}]$$

## Parabolic I<sub>D</sub>-V<sub>DS</sub> Relationship

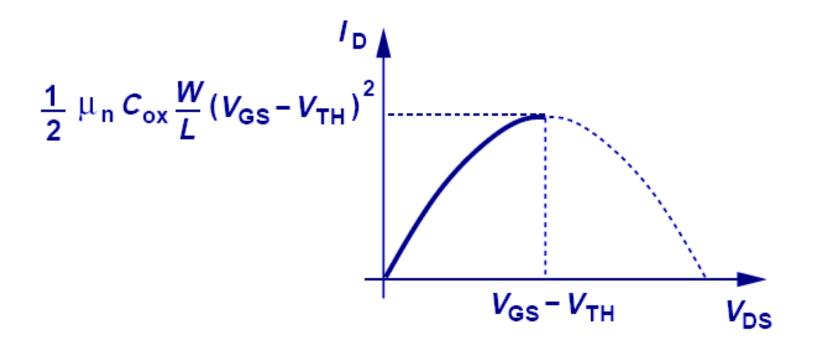


- By keeping V<sub>G</sub> constant and varying V<sub>DS</sub>, we obtain a parabolic relationship.
- ► The maximum current occurs when V<sub>DS</sub> equals to V<sub>GS</sub>- V<sub>TH</sub>.

# I<sub>D</sub>-V<sub>DS</sub> for Different Values of V<sub>GS</sub>

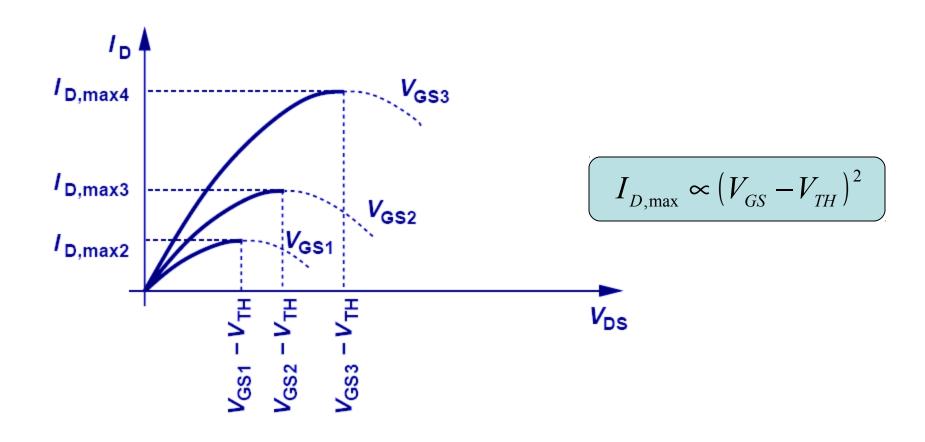



#### **Linear Resistance**

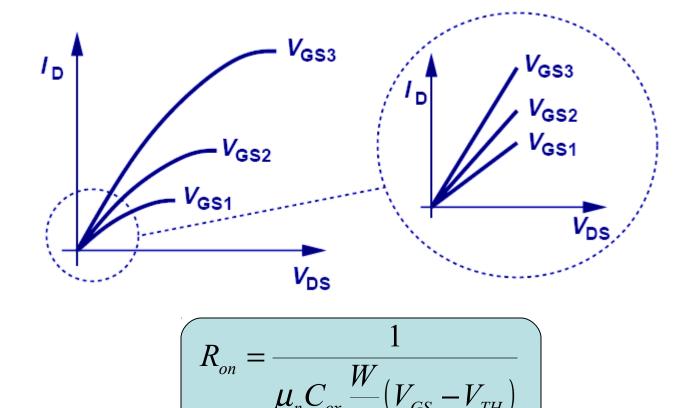

- ➤ At small V<sub>DS</sub>, the transistor can be viewed as a resistor, with the resistance depending on the gate voltage.
- It finds application as an electronic switch.


#### **Application of Electronic Switches**

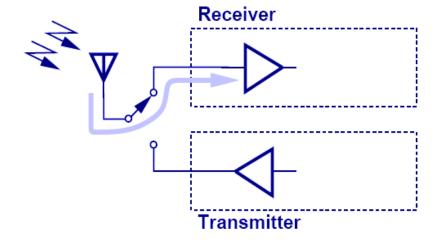

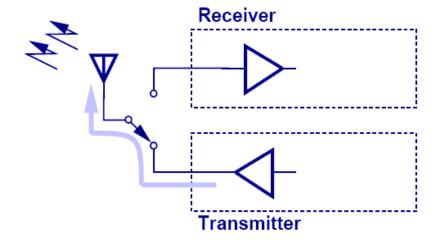


In a cordless telephone system in which a single antenna is used for both transmission and reception, a switch is used to connect either the receiver or transmitter to the antenna.

#### **Effects of On-Resistance**

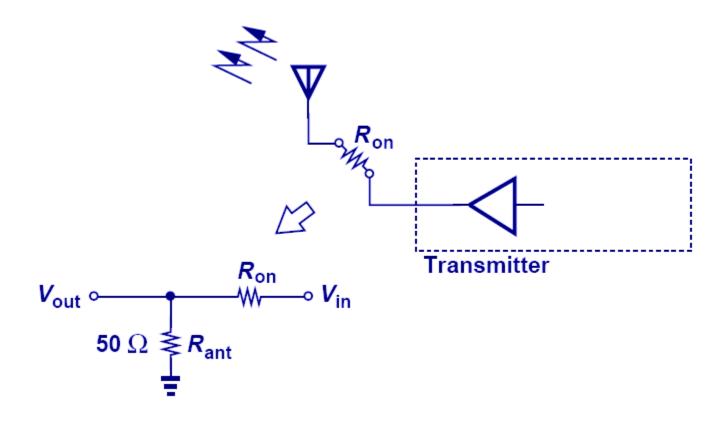


➤ To minimize signal attenuation, R<sub>on</sub> of the switch has to be as small as possible. This means larger W/L aspect ratio and greater V<sub>GS</sub>.

### **Different Regions of Operation**

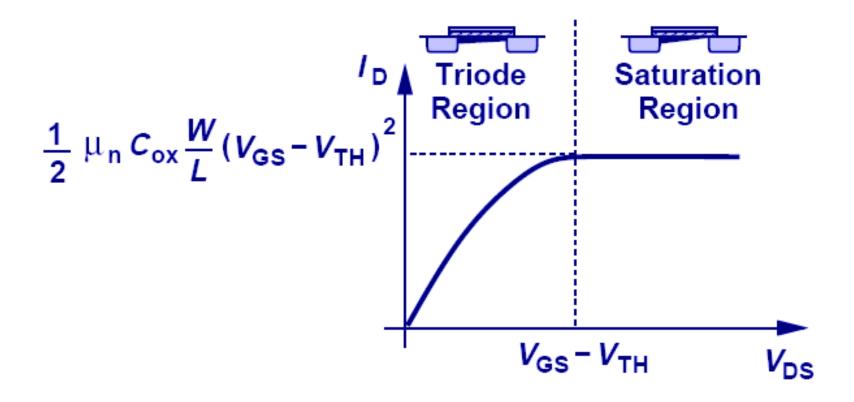


### How to Determine 'Region of Operation'

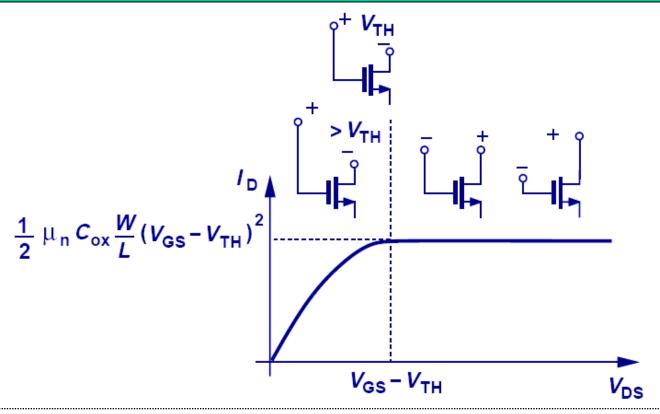


- $\triangleright$  When the potential difference between gate and drain is greater than  $V_{TH}$ , the MOSFET is in triode region.
- When the potential difference between gate and drain becomes equal to or less than  $V_{TH}$ , the MOSFET enters saturation region.

#### **Triode or Saturation?**

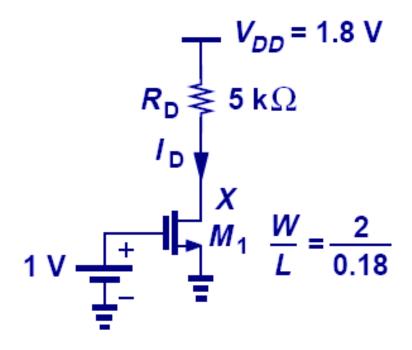


When the region of operation is not known, a region is assumed (with an intelligent guess). Then, the final answer is checked against the assumption.


### **Channel-Length Modulation**

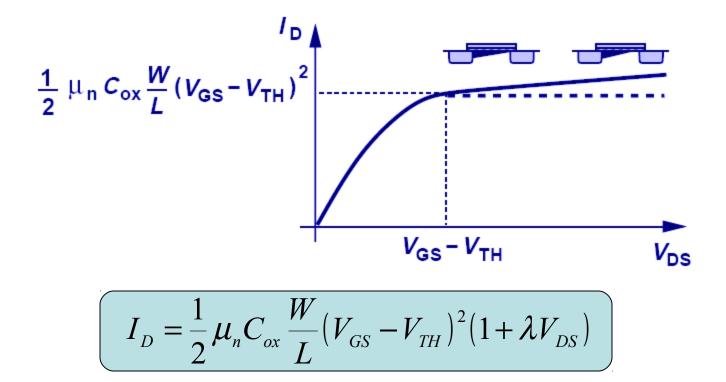

➤ The original observation that the current is constant in the saturation region is not quite correct. The end point of the channel actually moves toward the source as V<sub>D</sub> increases, increasing I<sub>D</sub>. Therefore, the current in the saturation region is a weak function of the drain voltage.

#### $\lambda$ and L

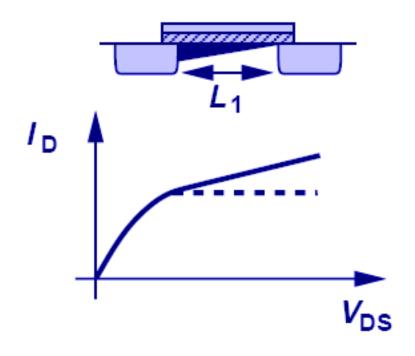

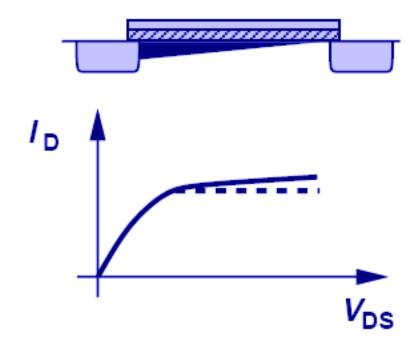

- Unlike the Early voltage in BJT, the channel- length modulation factor can be controlled by the circuit designer.
- For long L, the channel-length modulation effect is less than that of short L.


#### **Transconductance**

W/L Constant V <sub>GS</sub> −V <sub>TH</sub> Variable	W/L Variable V <sub>GS</sub> −V <sub>TH</sub> Constant	W/L Variable V <sub>GS</sub> − V <sub>TH</sub> Constant
$g_{ m m}\!\propto\!\sqrt{I_{ m D}}$ $g_{ m m}\!\propto\!V_{ m GS}\!-\!V_{ m TH}$	$egin{aligned} oldsymbol{g}_{m} & \propto oldsymbol{I}_{D} \ oldsymbol{g}_{m} & \propto rac{oldsymbol{W}}{oldsymbol{L}} \end{aligned}$	$g_{ m m}\!\propto\!\sqrt{rac{W}{L}}$ $g_{ m m}\!\proptorac{1}{V_{ m GS}\!-\!V_{ m TH}}$

$$g_{m} = \mu_{n} C_{ox} \frac{W}{L} (V_{GS} - V_{TH})$$
  $g_{m} = \sqrt{2\mu_{n} C_{ox} \frac{W}{L} I_{D}}$   $g_{m} = \frac{2I_{D}}{V_{GS} - V_{TH}}$ 

- Transconductance is a measure of how strong the drain current changes when the gate voltage changes.
- It has three different expressions.

## **Doubling of g<sub>m</sub> Due to Doubling W/L**

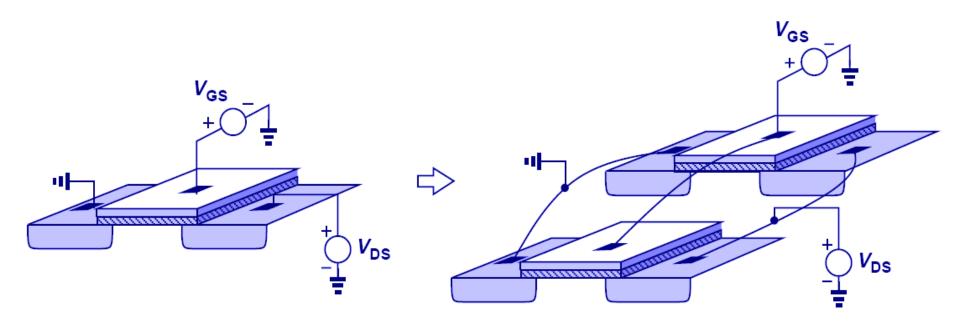

If W/L is doubled, effectively two equivalent transistors are added in parallel, thus doubling the current (if  $V_{\rm GS}$ - $V_{\rm TH}$  is constant) and hence  $g_{\rm m}$ .


### **Velocity Saturation**

$$I_{D} = v_{sat} \cdot Q = v_{sat} \cdot WC_{ox} (V_{GS} - V_{TH})$$

$$g_{m} = \frac{\partial I_{D}}{\partial V_{GS}} = v_{sat} WC_{ox}$$

- Since the channel is very short, it does not take a very large drain voltage to velocity saturate the charge particles.
- In velocity saturation, the drain current becomes a linear function of gate voltage, and gm becomes a function of W.


### **Body Effect**

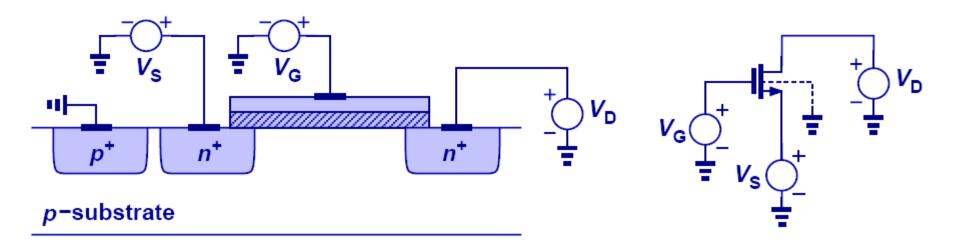

$$V_{TH} = V_{TH0} + \rho \left(\sqrt{2\phi_F + V_{SB}} - \sqrt{2\phi_F}\right)$$

As the source potential departs from the bulk potential, the threshold voltage changes.


### **Large-Signal Models**

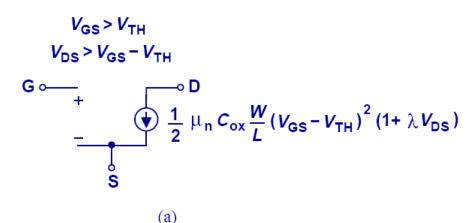

$$V_{GS} > V_{TH} V_{DS} < V_{GS} - V_{TH} V_{DS} << 2(V_{GS} - V_{TH}) G \longrightarrow + \frac{1}{2} \mu_n C_{ox} \frac{W}{L} [2(V_{GS} - V_{TH}) V_{DS} + V_{DS}^2] S (b)$$


$$(b)$$

$$V_{GS} > V_{TH} V_{DS} << 2(V_{GS} - V_{TH}) G \longrightarrow + \frac{1}{\mu_n C_{ox} \frac{W}{L} (V_{GS} - V_{TH})}$$

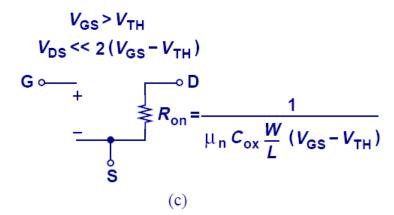

Based on the value of V<sub>DS</sub> MOSFET can be represented with different large-signal models.


## Example: Behavior of I<sub>D</sub> with V<sub>1</sub> as a Function

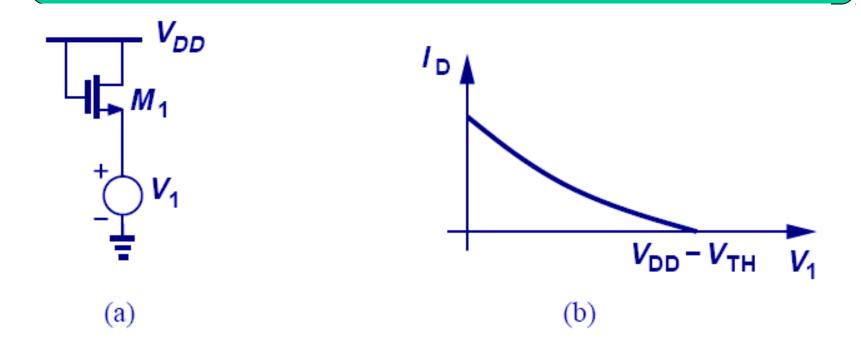

$$I_{D} = \frac{1}{2} \mu_{n} C_{ox} \frac{W}{L} (V_{DD} - V_{1} - V_{TH})^{2}$$


➤ Since V₁ is connected at the source, as it increases, the current drops.

### **Small-Signal Model**

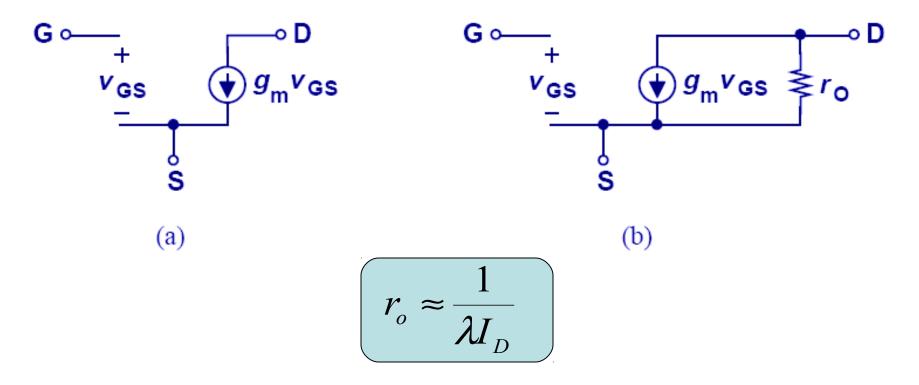


- When the bias point is not perturbed significantly, small-signal model can be used to facilitate calculations.
- To represent channel-length modulation, an output resistance is inserted into the model.

#### **PMOS Transistor**

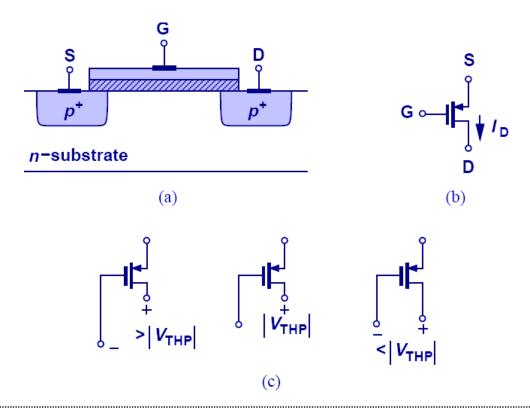


- Just like the PNP transistor in bipolar technology, it is possible to create a MOS device where holes are the dominant carriers. It is called the PMOS transistor.
- It behaves like an NMOS device with all the polarities reversed.

### **PMOS Equations**

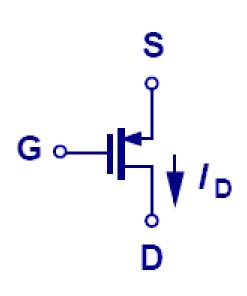


$$\begin{split} I_{D,sat} &= \frac{1}{2} \mu_p C_{ox} \frac{W}{L} (V_{GS} - V_{TH})^2 (1 - \lambda V_{DS}) \\ I_{D,tri} &= \frac{1}{2} \mu_p C_{ox} \frac{W}{L} [2(V_{GS} - V_{TH}) V_{DS} - V_{DS}^2] \\ I_{D,sat} &= \frac{1}{2} \mu_p C_{ox} \frac{W}{L} (|V_{GS}| - |V_{TH}|)^2 (1 + \lambda |V_{DS}|) \\ I_{D,tri} &= \frac{1}{2} \mu_p C_{ox} \frac{W}{L} [2(|V_{GS}| - |V_{TH}|) |V_{DS}| - V_{DS}^2] \end{split}$$

### **Small-Signal Model of PMOS Device**

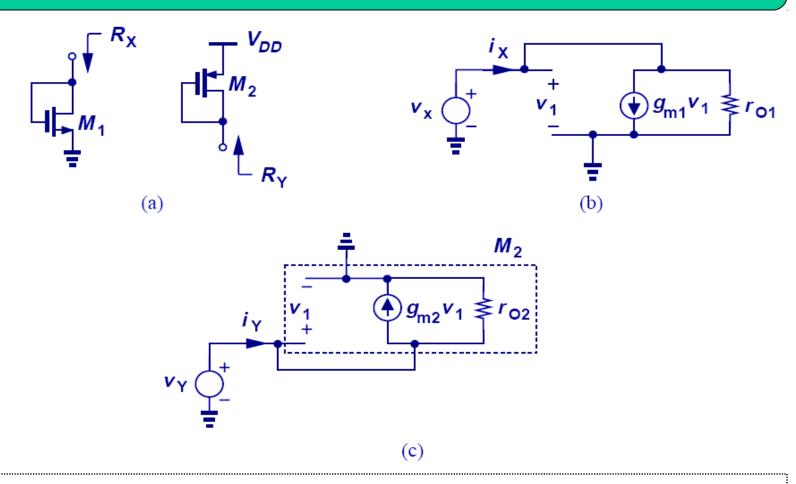

The small-signal model of PMOS device is identical to that of NMOS transistor; therefore, R<sub>x</sub> equals R<sub>y</sub> and hence (1/gm)||r<sub>o</sub>.

### **CMOS Technology**

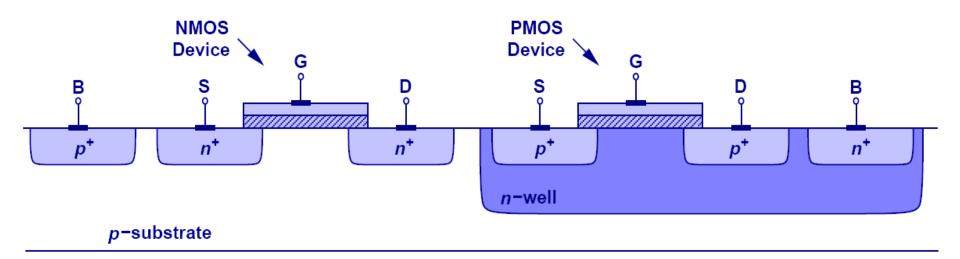

- It possible to grow an n-well inside a p-substrate to create a technology where both NMOS and PMOS can coexist.
- It is known as CMOS, or "Complementary MOS".

## **Comparison of Bipolar and MOS Transistors**

Bipolar Transistor	MOSFET	
Exponential Characteristic  Active: $V_{\text{CB}} > 0$ Saturation: $V_{\text{CB}} < 0$ Finite Base Current  Early Effect  Diffusion Current  -	Quadratic Characteristic Saturation: $V_{DS} > V_{GS} - V_{TH}$ Triode: $V_{DS} < V_{GS} - V_{TH}$ Zero Gate Current Channel-Length Modulation Drift Current Voltage-Dependent Resistor	
_	Voltage-Dependent Resistor	

▶ Bipolar devices have a higher g<sub>m</sub> than MOSFETs for a given bias current due to its exponential IV characteristics.