

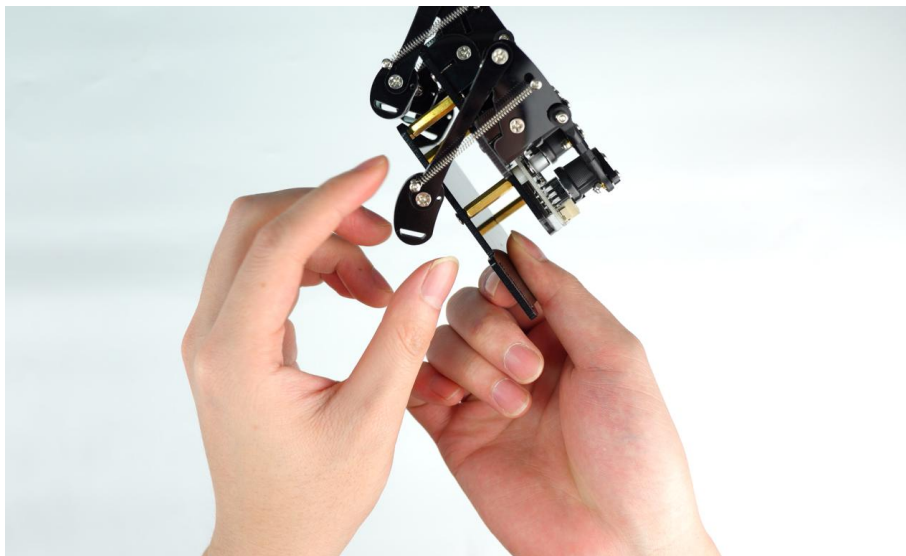
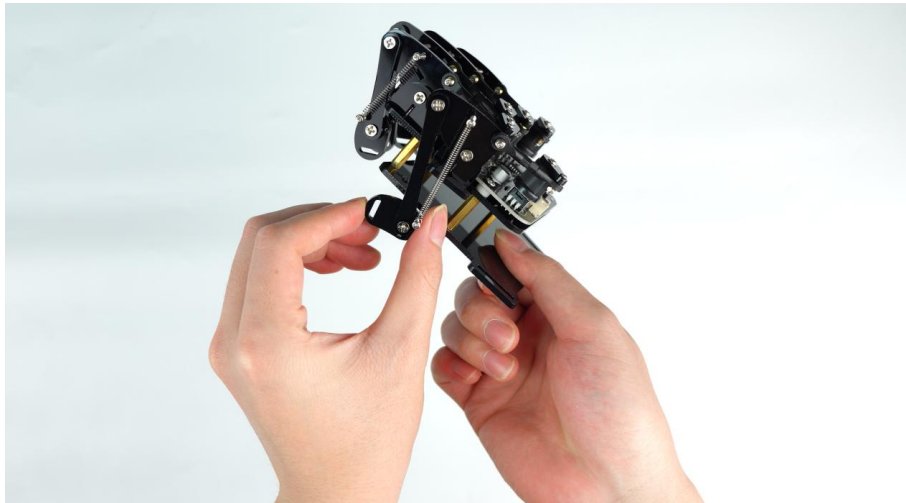


Glove Wearing Method

Step 1: After receiving the product, open the packaging and take out the gloves. Rotate the acrylic tip of the thumb clockwise for one full turn as shown in the figure, so that it is in the same state as the tips of the other fingers.

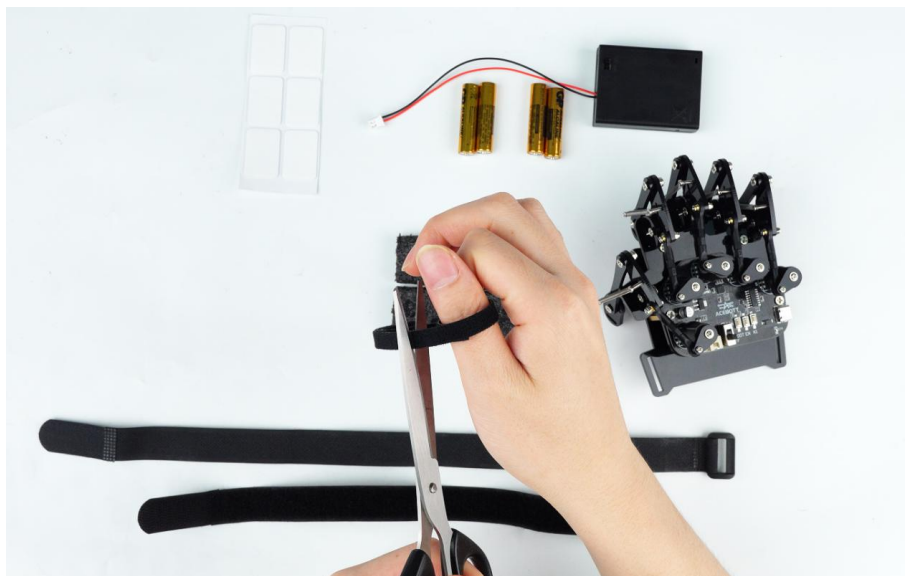

Step 2: Wrap the small Velcro around your finger, and then cut off 2-3cm of excess for subsequent adjustments.

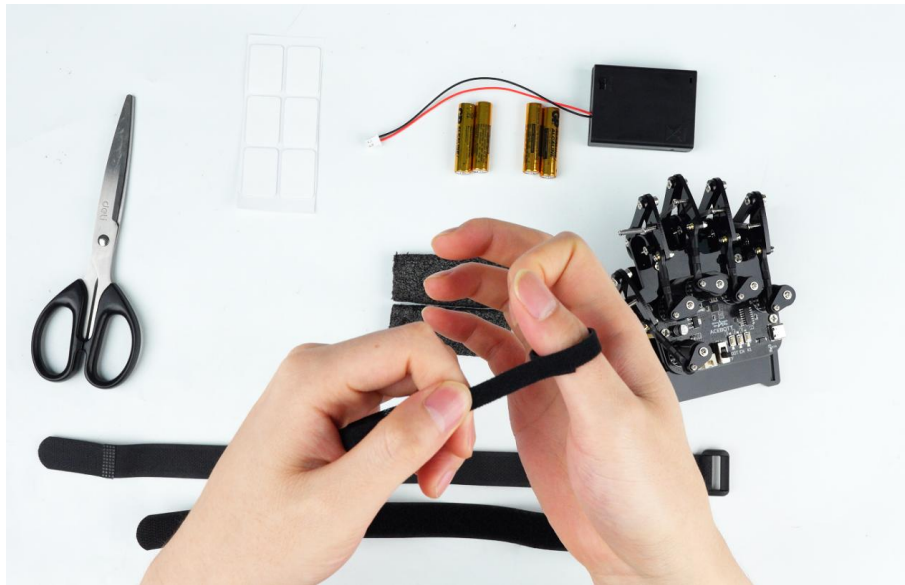


Step 3: Pass the cut Velcro piece through the corresponding finger acrylic, note that the hairy side is on the inner circle. After pasting, make sure that the corresponding finger is neither loose nor tight when inserted, and is in a comfortable state. You can adjust it according to your own habits.



Step 4: Use the same method to install the Velcro on the remaining fingers. After all are pasted, try the overall tightness and then make adjustments.






Step 5: Stick the double-sided tape on the two hand guards, and then stick them to the corresponding positions of the claws.

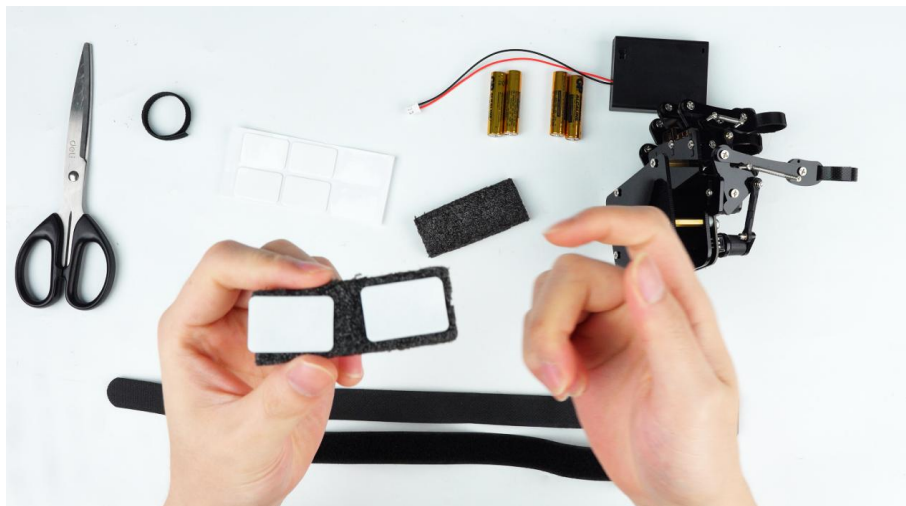




Step 6: Find the short reverse-fastening Velcro, make sure the fur side of the Velcro faces upwards, then pass it through the gap in the middle of your claws and buckle it; finally, your entire palm can pass through, and it is in a comfortable position and can be adjusted by yourself.

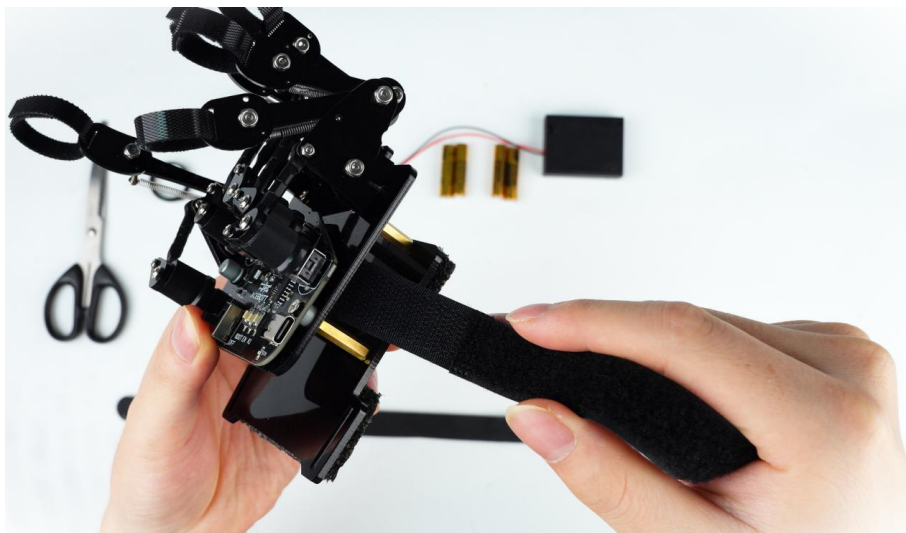


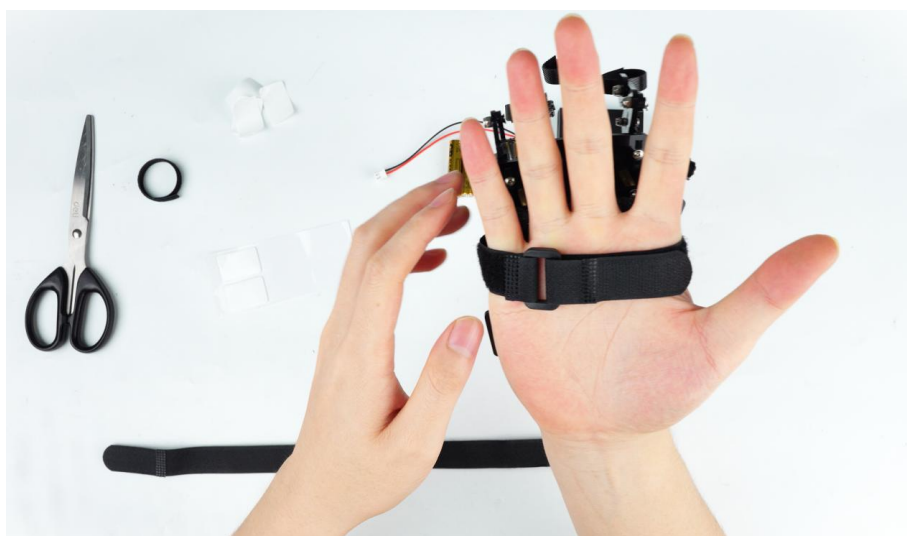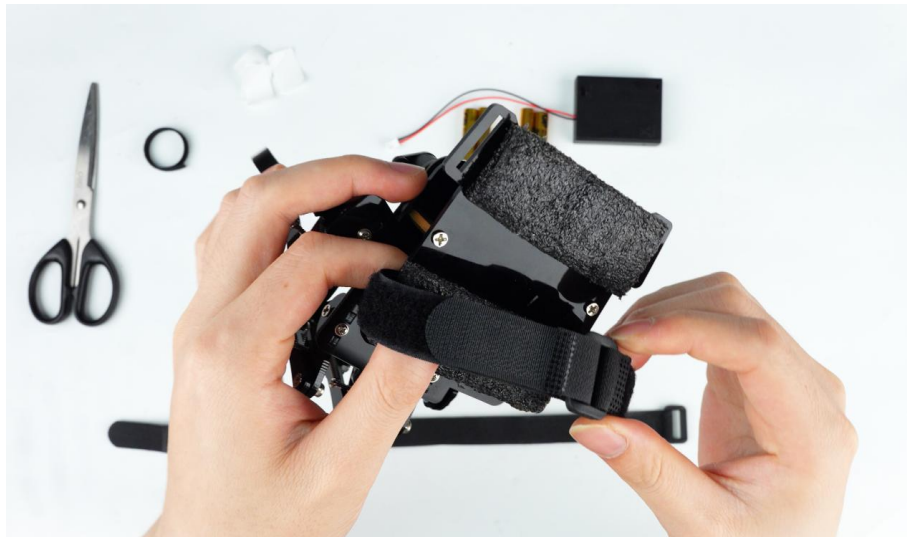


Step 7: First install 4 No. 7 batteries, then turn the battery box switch upwards, stick double-sided tape on the other side, then



stick it to the gripper, and finally connect the battery box terminals to the mainboard.

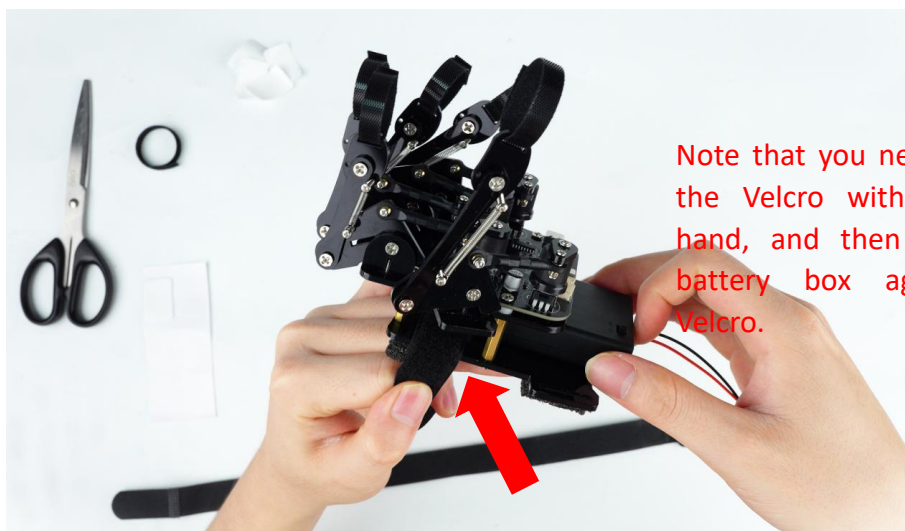

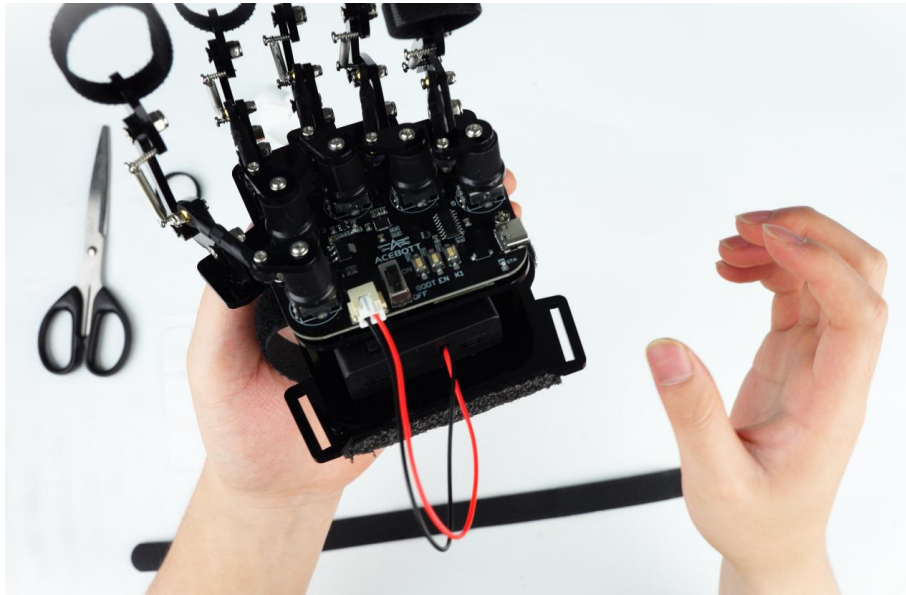

Step 8: With the long Velcro side facing up, pass it through the hole on the right from top to bottom, and then out from the hole on the left.

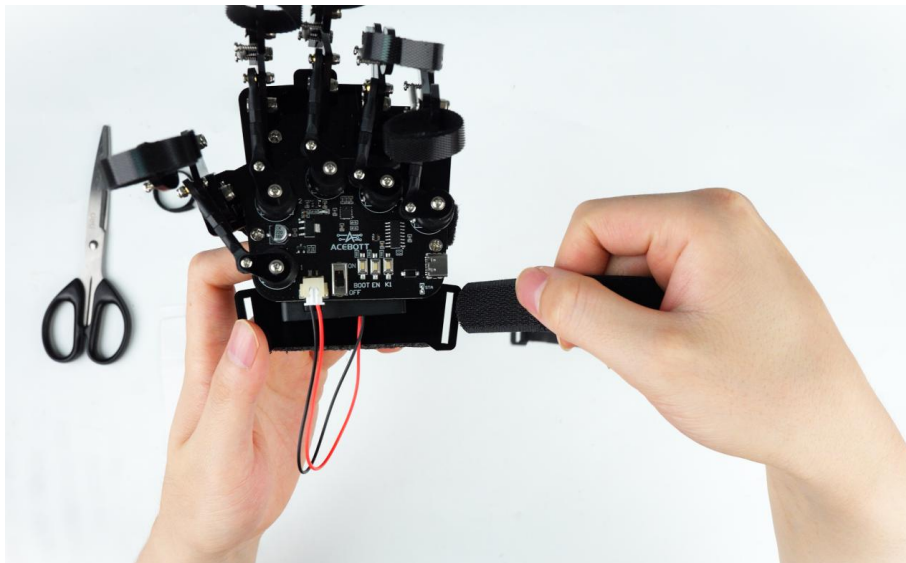

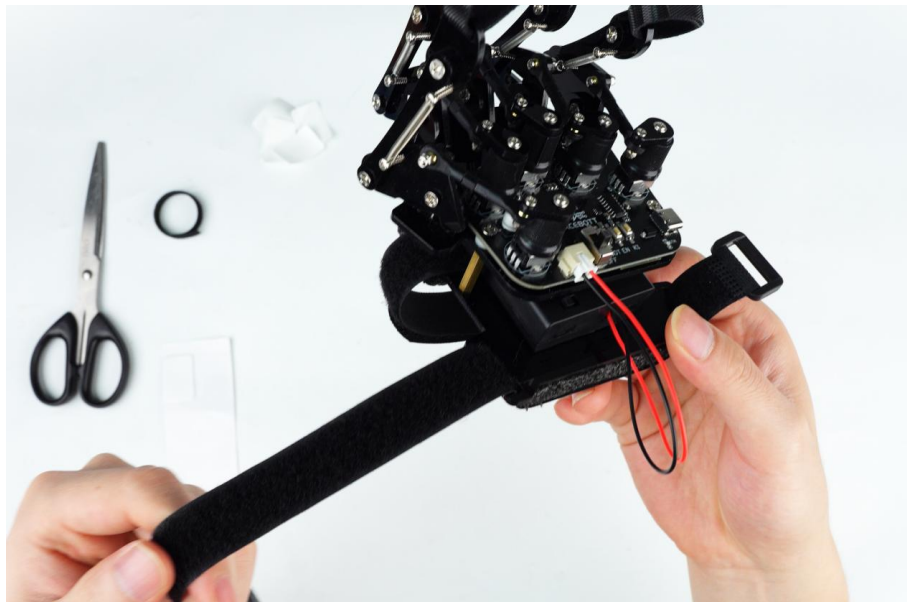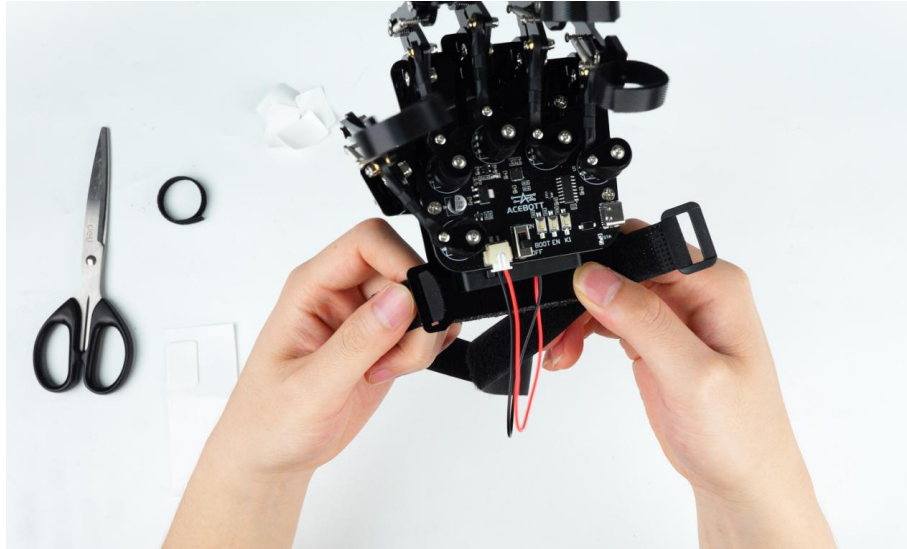

Wearing demonstration:

Step 1: First, insert your palm into the short Velcro.



Step 2: Put each ring onto the corresponding finger in turn. You can adjust the tightness first and then put it onto your finger.





Final step: Tie the long Velcro to your wrist.



