
How to assemble a watch


What you need:

1. 3D Printed housing
2. Screws
3. Tape
4. Watch Strap (link)
5. Main PCB Board
6. PPG Board
7. 8 Pin 0.5mm Ribbon Connector (link)
8. 3.7v 500mAh Lipo Battery
9. 2 pin Battery Connector (link)
10. Watch charger (link) *make sure they are on B polarity*

Step 1. Solder Battery Connector onto Battery pads of the PCB.

(battery connector cable may need to be trimmed if too long)

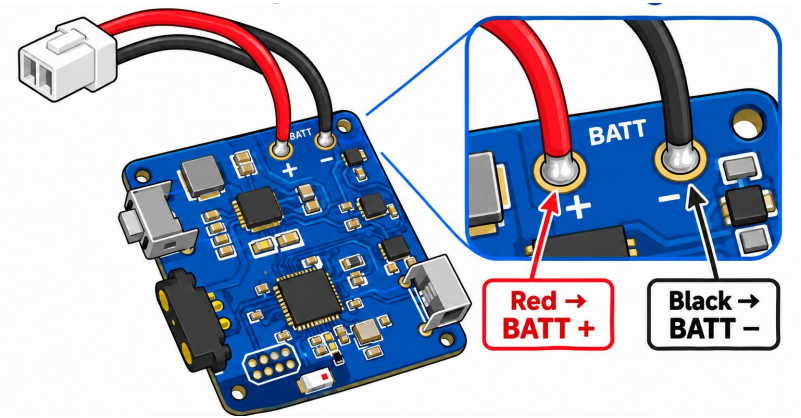


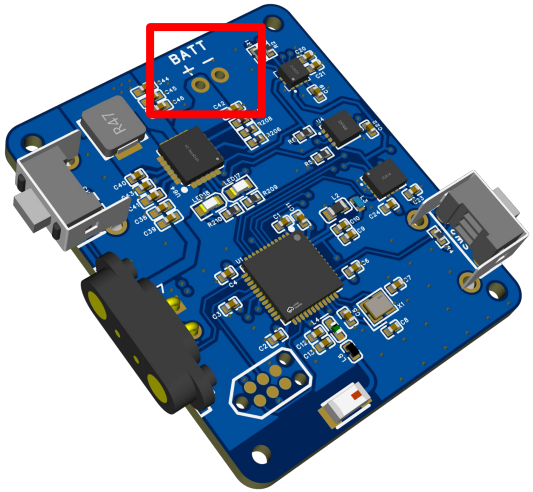

Step 2. Attach the PPG board to the main board via a ribbon connector and tape it to the bottom of the housing



Step 3. Screw Main Board to the housing

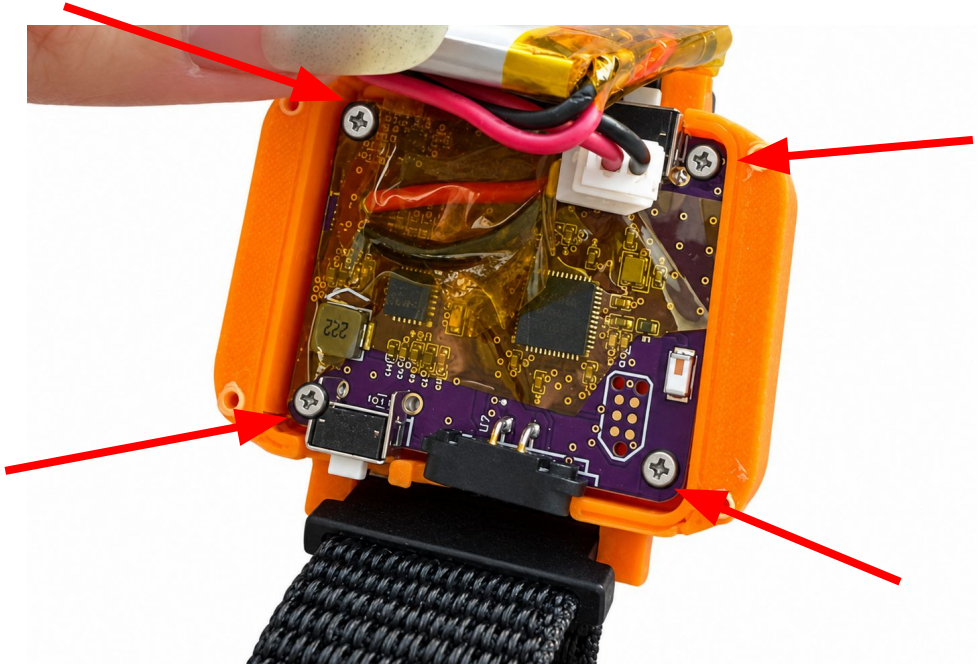

Step 4. Attach the the battery to the lid



It should fit snug!

Step 5. Screw on the lid to the housing



Then, attach the watch strap and you are done!