

SOLIDWORKS API (VB6 COM) — Reference (86/102): SketchManager-SketchPatternFeatureData

SOLIDWORKS API Documentation (converted from CHM)

SketchManager (Type)

SOLIDWORKS Type Library

SketchManager Object

 Object Model

SketchManager

- ActiveSketch (Sketch)
- AddAlongXDimension (DisplayDimension)
- AddAlongYDimension (DisplayDimension)
- AddAlongZDimension (DisplayDimension)
- Create3PointArc (SketchSegment)
- CreateArc (SketchSegment)
- CreateCenterLine (SketchSegment)
- CreateChamfer (SketchSegment)
- CreateCircle (SketchSegment)
- CreateCircleByRadius (SketchSegment)
- CreateConic (SketchSegment)
- CreateEllipse (SketchSegment)
- CreateEllipticalArc (SketchSegment)
- CreateEquationSpline (SketchSpline)
- CreateEquationSpline2 (SketchSpline)
- CreateFillet (SketchSegment)
- CreateLine (SketchSegment)
- CreateParabola (SketchSegment)
- CreatePoint (SketchPoint)
- CreateRegionHatch (SketchHatch)
- CreateSketchSlot (SketchSlot)
- CreateSpline (SketchSegment)
- CreateSpline2 (SketchSegment)
- CreateSplineByEqnParams (SketchSegment)
- CreateSplineParamData (SplineParamData)
- CreateTangentArc (SketchSegment)
- Document (ModelDoc2)
- ICreateSpline (SketchSegment)
- ICreateSpline2 (SketchSegment)
- ICreateSplineByEqnParams (SketchSegment)

- ICreateSplinesByEqnParams (EnumSketchSegments)
- IGetSketchBlockDefinitions (SketchBlockDefinition)
- InsertSketchBlockInstance (SketchBlockInstance)
- InsertSketchPicture (SketchPicture)
- InsertSketchPicture2 (SketchPicture)
- MakeSketchBlockFromFile (SketchBlockDefinition)
- MakeSketchBlockFromSelected (SketchBlockDefinition)
- MakeSketchBlockFromSketch (SketchBlockDefinition)

SOLIDWORKS Type Library

SketchManager Object Members

Public Methods

- AddAlongXDimension
- AddAlongYDimension
- AddAlongZDimension
- ConvertEntities
- Create3PointArc
- Create3PointCenterRectangle
- Create3PointCornerRectangle
- CreateArc
- CreateBoundaryHatch
- CreateCenterLine
- CreateCenterRectangle
- CreateChamfer
- CreateCircle
- CreateCircleByRadius
- CreateCircularSketchStepAndRepeat
- CreateConic
- CreateConstructionGeometry
- CreateCornerRectangle
- CreateEllipse
- CreateEllipticalArc
- CreateEquationSpline
- CreateEquationSpline2
- CreateFiller
- CreateLine
- CreateLinearSketchStepAndRepeat
- CreateParabola
- CreateParallelogram
- CreatePoint

 [CreatePolygon](#)

 [CreateRegionHatch](#)

 [CreateSketchBelt](#)

 [CreateSketchPlane](#)

 [CreateSketchSlot](#)

 [CreateSpline](#)

 [CreateSpline2](#)

 [CreateSpline3](#)

 [CreateSplineByEgnParams](#)

 [CreateSplineParamData](#)

 [CreateSplinesByEgnParams](#)

 [CreateSplinesByEgnParams2](#)

 [CreateTangentArc](#)

 [EditCircularSketchStepAndRepeat](#)

 [EditLinearSketchStepAndRepeat](#)

 [EditSketchBlock](#)

 [EndEditSketchBlock](#)

 [ExplodeSketchBlockInstance](#)

 [FullyDefineSketch](#)

 [GetDynamicMirror](#)

 [GetSketchBlockDefinitionCount](#)

 [GetSketchBlockDefinitions](#)

 [ICreateSpline](#)

 [ICreateSpline2](#)

 [ICreateSplineByEgnParams](#)

 [ICreateSplinesByEgnParams](#)

 [IGetSketchBlockDefinitions](#)

 [Insert3DSketch](#)

 [InsertExplodeLineSketch](#)

 [InsertSketch](#)

 [InsertSketchBlockInstance](#)

 [InsertSketchPicture](#)

 [InsertSketchPicture2](#)

 [IntersectCurves](#)

 [MakeSketchBlockFromFile](#)

 [MakeSketchBlockFromSelected](#)

 [MakeSketchBlockFromSketch](#)

 [MakeSketchChain](#)

 [PerimeterCircle](#)

 [ReverseEndPointTangent](#)

 [RotateOrCopy3DAboutVector](#)

 [RotateOrCopy3DAboutXYZ](#)

 [SetDynamicMirror](#)

 SetGridOptions
 SketchExtend
 SketchOffset
 SketchOffset2
 SketchReplace
 SketchReplace2
 SketchTrim
 SketchUseEdge
 SketchUseEdge2
 SketchUseEdge3
 SplitClosedSegment
 SplitOpenSegment

Public Properties

 ActiveSketch
 AddToDB
 AutoInference
 AutoSolve
 CurvatureDensity
 CurvatureScale
 DisplayWhenAdded
 Document
 InferenceMode

SOLIDWORKS Type Library

ActiveSketch Property (SketchManager)

Syntax

Visual Basic for Applications (VBA)

Public Property ActiveSketch As [Sketch](#)

SOLIDWORKS Type Library

AddAlongXDimension Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddAlongXDimension( _
    ByVal X As Double, _
    ByVal Y As Double, _
    ByVal Z As Double _
) As DisplayDimension
```

SOLIDWORKS Type Library

AddAlongYDimension Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AddAlongYDimension( _
    ByVal X As Double, _
    ByVal Y As Double, _
    ByVal Z As Double _
) As DisplayDimension
```

AddAlongZDimension Method (SketchManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function AddAlongZDimension( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double _  
) As DisplayDimension
```

AddToDB Property (SketchManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Property AddToDB As Boolean
```

AutoInference Property (SketchManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Property AutoInference As Boolean
```

AutoSolve Property (SketchManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Property AutoSolve As Boolean
```

ConvertEntities Method (SketchManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Sub ConvertEntities()
```

Create3PointArc Method (SketchManager) **Syntax**

Visual Basic for Applications (VBA)

```
Public Function Create3PointArc( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double, _  
    ByVal X3 As Double, _  
    ByVal Y3 As Double, _  
    ByVal Z3 As Double _  
) As SketchSegment
```

Create3PointCenterRectangle Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function Create3PointCenterRectangle( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double, _  
    ByVal X3 As Double, _  
    ByVal Y3 As Double, _  
    ByVal Z3 As Double _  
) As Variant
```

SOLIDWORKS Type Library

Create3PointCornerRectangle Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function Create3PointCornerRectangle( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double, _  
    ByVal X3 As Double, _  
    ByVal Y3 As Double, _  
    ByVal Z3 As Double _  
) As Variant
```

SOLIDWORKS Type Library

CreateArc Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function CreateArc( _  
    ByVal XC As Double, _  
    ByVal YC As Double, _  
    ByVal Zc As Double, _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double, _  
    ByVal Direction As Integer _  
) As SketchSegment
```

SOLIDWORKS Type Library

CreateBoundaryHatch Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function CreateBoundaryHatch( _  
    ByVal Angle As Double, _  
    ByVal Scale As Double, _  
    ByVal Color As Long, _  
    ByVal Hatchname As String, _  
    ByVal Layername As String _  
) As Variant
```

SOLIDWORKS Type Library

CreateCenterLine Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateCenterLine( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double _  
) As SketchSegment
```

SOLIDWORKS Type Library

CreateCenterRectangle Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateCenterRectangle( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double _  
) As Variant
```

SOLIDWORKS Type Library

CreateChamfer Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateChamfer( _  
    ByVal Type As Long, _  
    ByVal Distance As Double, _  
    ByVal AngleORdist As Double _  
) As SketchSegment
```

SOLIDWORKS Type Library

CreateCircle Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateCircle( _  
    ByVal XC As Double, _  
    ByVal YC As Double, _  
    ByVal Zc As Double, _  
    ByVal Xp As Double, _  
    ByVal Yp As Double, _  
    ByVal Zp As Double _  
) As SketchSegment
```

SOLIDWORKS Type Library

CreateCircleByRadius Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateCircleByRadius( _  
    ByVal XC As Double, _  
    ByVal YC As Double, _  
    ByVal Zc As Double, _  
    ByVal Radius As Double _  
) As SketchSegment
```

CreateCircularSketchStepAndRepeat Method (SketchManager)

Visual Basic for Applications (VBA)

```
Public Function CreateCircularSketchStepAndRepeat( _
    ByVal ArcRadius As Double, _
    ByVal ArcAngle As Double, _
    ByVal PatternNum As Long, _
    ByVal PatternSpacing As Double, _
    ByVal PatternRotate As Boolean, _
    ByVal DeleteInstances As String, _
    ByVal RadiusDim As Boolean, _
    ByVal AngleDim As Boolean, _
    ByVal CreateNumOfInstancesDim As Boolean _
) As Boolean
```

CreateConic Method (SketchManager)

Visual Basic for Applications (VBA)

```
Public Function CreateConic( _
    ByVal XFocus As Double, _
    ByVal YFocus As Double, _
    ByVal ZFocus As Double, _
    ByVal XApex As Double, _
    ByVal YApex As Double, _
    ByVal ZApex As Double, _
    ByVal X1 As Double, _
    ByVal Y1 As Double, _
    ByVal Z1 As Double, _
    ByVal X2 As Double, _
    ByVal Y2 As Double, _
    ByVal Z2 As Double _
) As SketchSegment
```

CreateConstructionGeometry Method (SketchManager)

Visual Basic for Applications (VBA)

```
Public Sub CreateConstructionGeometry()
```

CreateCornerRectangle Method (SketchManager)

Visual Basic for Applications (VBA)

```
Public Function CreateCornerRectangle( _
    ByVal X1 As Double, _
    ByVal Y1 As Double, _
    ByVal Z1 As Double, _
    ByVal X2 As Double, _
    ByVal Y2 As Double, _
    ByVal Z2 As Double _
) As Variant
```

CreateEllipse Method (SketchManager)

Visual Basic for Applications (VBA)

```
Public Function CreateEllipse( _
    ByVal XC As Double, _
    ByVal YC As Double, _
    ByVal Zc As Double, _
    ByVal XMajor As Double, _
    ByVal YMajor As Double, _
    ByVal ZMajor As Double, _
    ByVal XMinor As Double, _
    ByVal YMinor As Double, _
    ByVal ZMinor As Double _
) As SketchSegment
```

SOLIDWORKS Type Library

CreateEllipticalArc Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateEllipticalArc( _
    ByVal XC As Double, _
    ByVal YC As Double, _
    ByVal Zc As Double, _
    ByVal XMajor As Double, _
    ByVal YMajor As Double, _
    ByVal ZMajor As Double, _
    ByVal XMinor As Double, _
    ByVal YMinor As Double, _
    ByVal ZMinor As Double, _
    ByVal X1 As Double, _
    ByVal Y1 As Double, _
    ByVal Z1 As Double, _
    ByVal X2 As Double, _
    ByVal Y2 As Double, _
    ByVal Z2 As Double, _
    ByVal Direction As Integer _
) As SketchSegment
```

SOLIDWORKS Type Library

CreateEquationSpline Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateEquationSpline( _
    ByVal YExpression As String, _
    ByVal RangeStart As Double, _
    ByVal RangeEnd As Double, _
    ByVal IsAngleRange As Boolean, _
    ByVal RotationAngle As Double, _
    ByVal XOffset As Double, _
    ByVal YOffset As Double, _
    ByVal LockStart As Boolean, _
    ByVal LockEnd As Boolean _
) As SketchSpline
```

SOLIDWORKS Type Library

CreateEquationSpline2 Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateEquationSpline2( _
    ByVal XExpression As String, _
    ByVal YExpression As String, _
    ByVal ZExpression As String, _
    ByVal RangeStart As String, _
    ByVal RangeEnd As String, _
```

```
ByVal IsAngleRange As Boolean, _  
ByVal RotationAngle As Double, _  
ByVal XOffset As Double, _  
ByVal YOffset As Double, _  
ByVal LockStart As Boolean, _  
ByVal LockEnd As Boolean _  
) As SketchSpline
```

SOLIDWORKS Type Library

CreateFillet Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateFillet( _  
    ByVal Radius As Double, _  
    ByVal ConstrainedCorners As Long _  
) As SketchSegment
```

SOLIDWORKS Type Library

CreateLine Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateLine( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double _  
) As SketchSegment
```

SOLIDWORKS Type Library

CreateLinearSketchStepAndRepeat Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateLinearSketchStepAndRepeat( _  
    ByVal NumX As Long, _  
    ByVal NumY As Long, _  
    ByVal SpacingX As Double, _  
    ByVal SpacingY As Double, _  
    ByVal AngleX As Double, _  
    ByVal AngleY As Double, _  
    ByVal DeleteInstances As String, _  
    ByVal XSpacingDim As Boolean, _  
    ByVal YSpacingDim As Boolean, _  
    ByVal AngleDim As Boolean, _  
    ByVal CreateNumOfInstancesDimInXDir As Boolean, _  
    ByVal CreateNumOfInstancesDimInYDir As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

CreateParabola Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateParabola( _  
    ByVal XFocus As Double, _  
    ByVal YFocus As Double, _  
    ByVal ZFocus As Double, _  
    ByVal XApex As Double, _  
    ByVal YApex As Double, _  
    ByVal ZApex As Double, _
```

```
ByVal X1 As Double, _  
ByVal Y1 As Double, _  
ByVal Z1 As Double, _  
ByVal X2 As Double, _  
ByVal Y2 As Double, _  
ByVal Z2 As Double _  
) As SketchSegment
```

SOLIDWORKS Type Library

CreateParallelogram Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateParallelogram( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double, _  
    ByVal X3 As Double, _  
    ByVal Y3 As Double, _  
    ByVal Z3 As Double _  
) As Variant
```

SOLIDWORKS Type Library

CreatePoint Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreatePoint( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double _  
) As SketchPoint
```

SOLIDWORKS Type Library

CreatePolygon Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreatePolygon( _  
    ByVal XC As Double, _  
    ByVal YC As Double, _  
    ByVal Zc As Double, _  
    ByVal Xp As Double, _  
    ByVal Yp As Double, _  
    ByVal Zp As Double, _  
    ByVal Sides As Long, _  
    ByVal Inscribed As Boolean _  
) As Variant
```

SOLIDWORKS Type Library

CreateRegionHatch Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateRegionHatch( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double, _  
    ByVal Angle As Double, _  
    ByVal Scale As Double, _  
    ByVal Color As Long, _
```

```
    ByVal Hatchname As String, _  
    ByVal Layername As String _  
) As SketchHatch
```

SOLIDWORKS Type Library

CreateSketchBelt Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateSketchBelt( _  
    ByVal Length As Double, _  
    ByVal Thickness As Double, _  
    ByVal Engage As Long, _  
    ByVal PulleyCount As Long, _  
    ByVal Side1 As Long, _  
    ByVal Side2 As Long, _  
    ByVal Side3 As Long, _  
    ByVal Side4 As Long, _  
    ByVal Side5 As Long, _  
    ByVal Side6 As Long, _  
    ByVal Side7 As Long, _  
    ByVal Side8 As Long, _  
    ByVal Side9 As Long, _  
    ByVal Side10 As Long, _  
    ByVal Side11 As Long, _  
    ByVal Side12 As Long _  
) As Boolean
```

SOLIDWORKS Type Library

CreateSketchPlane Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateSketchPlane( _  
    ByVal Relation1 As Long, _  
    ByVal Relation2 As Long, _  
    ByVal Relation3 As Long _  
) As Boolean
```

SOLIDWORKS Type Library

CreateSketchSlot Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateSketchSlot( _  
    ByVal SlotCreationType As Long, _  
    ByVal SlotLengthType As Long, _  
    ByVal Width As Double, _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double, _  
    ByVal X3 As Double, _  
    ByVal Y3 As Double, _  
    ByVal Z3 As Double, _  
    ByVal CenterArcDirection As Long, _  
    ByVal AddDimension As Boolean _  
) As SketchSlot
```

SOLIDWORKS Type Library

CreateSpline Method (SketchManager)

Syntax

```
Public Function CreateSpline( _  
    ByVal PointData As Variant _  
    ) As SketchSegment
```

SOLIDWORKS Type Library

CreateSpline2 Method (SketchManager) Syntax

```
Public Function CreateSpline2( _  
    ByVal PointData As Variant, _  
    ByVal SimulateNaturalEnds As Boolean _  
    ) As SketchSegment
```

SOLIDWORKS Type Library

CreateSpline3 Method (SketchManager) Syntax

```
Public Function CreateSpline3( _  
    ByVal PointData As Variant, _  
    ByVal Surfs As Variant, _  
    ByVal Direction As Variant, _  
    ByVal SimulateNaturalEnds As Boolean, _  
    ByRef Status As Variant _  
    ) As Object
```

SOLIDWORKS Type Library

CreateSplineByEqnParams Method (SketchManager) Syntax

```
Public Function CreateSplineByEqnParams( _  
    ByVal Parameters As Variant _  
    ) As SketchSegment
```

SOLIDWORKS Type Library

CreateSplineParamData Method (SketchManager) Syntax

```
Public Function CreateSplineParamData() As SplineParamData
```

SOLIDWORKS Type Library

CreateSplinesByEqnParams Method (SketchManager) Syntax

```
Public Function CreateSplinesByEqnParams( _  
    ByVal Parameters As Variant _  
    ) As Variant
```

SOLIDWORKS Type Library

CreateSplinesByEqnParams2 Method (SketchManager) Syntax

```
Public Function CreateSplinesByEqnParams2( _  
    ByVal ParamData As SplineParamData _  
    ) As Variant
```

SOLIDWORKS Type Library

CreateTangentArc Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function CreateTangentArc( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double, _  
    ByVal ArcType As Long _  
    ) As SketchSegment
```

SOLIDWORKS Type Library

CurvatureDensity Property (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property CurvatureDensity As Long
```

SOLIDWORKS Type Library

CurvatureScale Property (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property CurvatureScale As Double
```

SOLIDWORKS Type Library

DisplayWhenAdded Property (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property DisplayWhenAdded As Boolean
```

SOLIDWORKS Type Library

Document Property (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property Document As ModelDoc2
```

SOLIDWORKS Type Library

EditCircularSketchStepAndRepeat Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function EditCircularSketchStepAndRepeat( _  
    ByVal ArcRadius As Double, _  
    ByVal ArcAngle As Double, _  
    ByVal PatternNum As Long, _  
    ByVal PatternSpacing As Double, _  
    ByVal PatternRotate As Boolean, _  
    ByVal DeleteInstances As String, _
```

```
ByVal RadiusDim As Boolean, _  
ByVal AngleDim As Boolean, _  
ByVal CreateNumOfInstancesDim As Boolean, _  
ByVal Seeds As String _  
) As Boolean
```

SOLIDWORKS Type Library

EditLinearSketchStepAndRepeat Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function EditLinearSketchStepAndRepeat( _  
    ByVal NumX As Long, _  
    ByVal NumY As Long, _  
    ByVal SpacingX As Double, _  
    ByVal SpacingY As Double, _  
    ByVal AngleX As Double, _  
    ByVal AngleY As Double, _  
    ByVal DeleteInstances As String, _  
    ByVal XSpacingDim As Boolean, _  
    ByVal YSpacingDim As Boolean, _  
    ByVal AngleDim As Boolean, _  
    ByVal CreateNumOfInstancesDimInXDir As Boolean, _  
    ByVal CreateNumOfInstancesDimInYDir As Boolean, _  
    ByVal Seeds As String _  
) As Boolean
```

SOLIDWORKS Type Library

EditSketchBlock Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub EditSketchBlock()
```

SOLIDWORKS Type Library

EndEditSketchBlock Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub EndEditSketchBlock( _  
    ByVal AcceptChanges As Boolean _  
)
```

SOLIDWORKS Type Library

ExplodeSketchBlockInstance Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ExplodeSketchBlockInstance( _  
    ByVal LpSketchBlockInstance As SketchBlockInstance _  
)
```

SOLIDWORKS Type Library

FullyDefineSketch Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function FullyDefineSketch( _  
    ByVal EntitiesToFullyDefine As Boolean, _  
    ByVal UseRelations As Boolean, _  
    ByVal RelationsToApply As Long, _  
    ByVal UseDimensions As Boolean, _
```

```
ByVal HorizontalDimScheme As Long, _  
ByVal HorizontalDatumDisp As Object, _  
ByVal VerticalDimScheme As Long, _  
ByVal VerticalDatumDisp As Object, _  
ByVal HorizontalDimPlacement As Long, _  
ByVal VerticalDimPlacement As Long _  
) As Long
```

SOLIDWORKS Type Library

GetDynamicMirror Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetDynamicMirror() As Boolean
```

SOLIDWORKS Type Library

GetSketchBlockDefinitionCount Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSketchBlockDefinitionCount() As Long
```

SOLIDWORKS Type Library

GetSketchBlockDefinitions Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSketchBlockDefinitions() As Variant
```

SOLIDWORKS Type Library

ICreateSpline Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ICreateSpline( _  
    ByVal PointCount As Long, _  
    ByRef PointData As Double _  
) As SketchSegment
```

SOLIDWORKS Type Library

ICreateSpline2 Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ICreateSpline2( _  
    ByVal PointCount As Long, _  
    ByRef PointData As Double, _  
    ByVal SimulateNaturalEnds As Boolean _  
) As SketchSegment
```

SOLIDWORKS Type Library

ICreateSplineByEqnParams Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ICreateSplineByEqnParams( _  
    ByRef Properties As Long, _  
    ByVal KnotArrayCount As Long, _  
    ByRef Knots As Double, _  
    ByVal ControlPointArrayCount As Long, _
```

```
ByRef ControlPoints As Double _  
) As SketchSegment
```

SOLIDWORKS Type Library

ICreateSplinesByEqnParams Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function ICreateSplinesByEqnParams( _  
    ByRef Properties As Long, _  
    ByVal KnotArrayCount As Long, _  
    ByRef Knots As Double, _  
    ByVal ControlPointArrayCount As Long, _  
    ByRef ControlPoints As Double _  
) As EnumSketchSegments
```

SOLIDWORKS Type Library

IGetSketchBlockDefinitions Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetSketchBlockDefinitions( _  
    ByVal BlockDefCount As Long _  
) As SketchBlockDefinition
```

SOLIDWORKS Type Library

InferenceMode Property (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Property InferenceMode As Boolean
```

SOLIDWORKS Type Library

Insert3DSketch Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub Insert3DSketch( _  
    ByVal UpdateEditRebuild As Boolean _  
)
```

SOLIDWORKS Type Library

InsertExplodeLineSketch Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertExplodeLineSketch() As Boolean
```

SOLIDWORKS Type Library

InsertSketch Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub InsertSketch( _  
    ByVal UpdateEditRebuild As Boolean _  
)
```

SOLIDWORKS Type Library

InsertSketchBlockInstance Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertSketchBlockInstance( _  
    ByVal BlockDef As SketchBlockDefinition, _  
    ByVal Position As MathPoint, _  
    ByVal Scale As Double, _  
    ByVal Angle As Double _  
    ) As SketchBlockInstance
```

SOLIDWORKS Type Library

InsertSketchPicture Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertSketchPicture( _  
    ByVal FileName As String _  
    ) As SketchPicture
```

SOLIDWORKS Type Library

InsertSketchPicture2 Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function InsertSketchPicture2( _  
    ByVal FileName As String, _  
    ByVal HighestResolution As Boolean _  
    ) As SketchPicture
```

SOLIDWORKS Type Library

IntersectCurves Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub IntersectCurves()
```

SOLIDWORKS Type Library

MakeSketchBlockFromFile Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function MakeSketchBlockFromFile( _  
    ByVal InsertionPoint As MathPoint, _  
    ByVal FileName As String, _  
    ByVal LinkedToFile As Boolean, _  
    ByVal Scale As Double, _  
    ByVal Angle As Double _  
    ) As SketchBlockDefinition
```

SOLIDWORKS Type Library

MakeSketchBlockFromSelected Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function MakeSketchBlockFromSelected( _  
    ByVal InsertionPoint As MathPoint _  
    ) As SketchBlockDefinition
```

SOLIDWORKS Type Library

MakeSketchBlockFromSketch Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function MakeSketchBlockFromSketch( _  
    ByVal InsertionPoint As MathPoint, _  
    ByVal Sketch As Sketch _  
    ) As SketchBlockDefinition
```

SOLIDWORKS Type Library

MakeSketchChain Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function MakeSketchChain() As Boolean
```

SOLIDWORKS Type Library

PerimeterCircle Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function PerimeterCircle( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal X3 As Double, _  
    ByVal Y3 As Double _  
    ) As Object
```

SOLIDWORKS Type Library

ReverseEndPointTangent Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function ReverseEndPointTangent( _  
    ByVal ForceDeleteConstraints As Boolean _  
    ) As Long
```

SOLIDWORKS Type Library

RotateOrCopy3DAboutVector Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function RotateOrCopy3DAboutVector( _  
    ByVal Copy As Boolean, _  
    ByVal NumCopies As Long, _  
    ByVal KeepRelations As Boolean, _  
    ByVal BaseX As Double, _  
    ByVal BaseY As Double, _  
    ByVal BaseZ As Double, _  
    ByVal VectorXCoord As Double, _  
    ByVal VectorYCoord As Double, _  
    ByVal VectorZCoord As Double, _  
    ByVal AngleAboutVector As Double _  
    ) As Boolean
```

SOLIDWORKS Type Library

RotateOrCopy3DAboutXYZ Method (SketchManager)



Visual Basic for Applications (VBA)

```
Public Function RotateOrCopy3DAboutXYZ( _
    ByVal Copy As Boolean, _
    ByVal NumCopies As Long, _
    ByVal KeepRelations As Boolean, _
    ByVal BaseX As Double, _
    ByVal BaseY As Double, _
    ByVal BaseZ As Double, _
    ByVal AngleAboutXDir As Double, _
    ByVal AngleAboutYDir As Double, _
    ByVal AngleAboutZDir As Double _
) As Boolean
```

SOLIDWORKS Type Library

SetDynamicMirror Method (SketchManager)



Syntax

Visual Basic for Applications (VBA)

```
Public Function SetDynamicMirror( _
    ByVal DynamicMirror As Boolean _
) As Boolean
```

SOLIDWORKS Type Library

SetGridOptions Method (SketchManager)



Syntax

Visual Basic for Applications (VBA)

```
Public Sub SetGridOptions( _
    ByVal Display As Boolean, _
    ByVal Spacing As Double, _
    ByVal Snap As Boolean, _
    ByVal DotStyle As Boolean, _
    ByVal NumMajor As Integer, _
    ByVal NumMinor As Integer, _
    ByVal AlignToEdge As Boolean, _
    ByVal AngleSnap As Boolean, _
    ByVal AngleUnit As Double, _
    ByVal MinorAuto As Boolean _
)
```

SOLIDWORKS Type Library

SketchExtend Method (SketchManager)



Syntax

Visual Basic for Applications (VBA)

```
Public Function SketchExtend( _
    ByVal X As Double, _
    ByVal Y As Double, _
    ByVal Z As Double _
) As Boolean
```

SOLIDWORKS Type Library

SketchOffset Method (SketchManager)



Syntax

Visual Basic for Applications (VBA)

```
Public Function SketchOffset( _
    ByVal Offset As Double, _
    ByVal BothDirections As Boolean, _
    ByVal Chain As Boolean, _
    ByVal CapEnds As Boolean, _
    ByVal MakeConstruction As Boolean, _
```

```
ByVal AddDimensions As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

SketchOffset2 Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SketchOffset2( _  
    ByVal Offset As Double, _  
    ByVal BothDirections As Boolean, _  
    ByVal Chain As Boolean, _  
    ByVal CapEnds As Long, _  
    ByVal MakeConstruction As Long, _  
    ByVal AddDimensions As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

SketchReplace Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SketchReplace( _  
    ByVal MakeConstruction As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

SketchReplace2 Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SketchReplace2( _  
    ByVal MakeConstruction As Boolean, _  
    ByVal MakeContour As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

SketchTrim Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SketchTrim( _  
    ByVal Option As Long, _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double _  
) As Boolean
```

SOLIDWORKS Type Library

SketchUseEdge Method (SketchManager)

Syntax

Visual Basic for Applications (VBA)

```
Public Function SketchUseEdge( _  
    ByVal Chain As Boolean _  
) As Boolean
```

SOLIDWORKS Type Library

SketchUseEdge2 Method (SketchManager)

Syntax

```
Public Function SketchUseEdge2( _  
    ByVal Chain As Boolean _  
    ) As Boolean
```

 Syntax

```
Public Function SketchUseEdge3( _  
    ByVal Chain As Boolean, _  
    ByVal InnerLoops As Boolean _  
    ) As Boolean
```

 Syntax

```
Public Function SplitClosedSegment( _  
    ByVal X1 As Double, _  
    ByVal Y1 As Double, _  
    ByVal Z1 As Double, _  
    ByVal X2 As Double, _  
    ByVal Y2 As Double, _  
    ByVal Z2 As Double _  
    ) As Variant
```


 Syntax

```
Public Function SplitOpenSegment( _  
    ByVal X As Double, _  
    ByVal Y As Double, _  
    ByVal Z As Double _  
    ) As Variant
```

SketchParabola (Type)

SOLIDWORKS Type Library
SketchParabola Object

Object Model

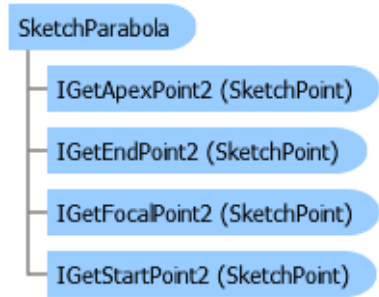

SOLIDWORKS Type Library
SketchParabola Object Members

Public Methods

	GetApexPoint
	GetApexPoint2
	GetEndPoint
	GetEndPoint2
	GetFocalPoint
	GetFocalPoint2
	GetStartPoint
	GetStartPoint2
	IGetApexPoint
	IGetApexPoint2
	IGetEndPoint
	IGetEndPoint2
	IGetFocalPoint
	IGetFocalPoint2
	IGetStartPoint
	IGetStartPoint2
	SetPoints

SOLIDWORKS Type Library
GetApexPoint Method (SketchParabola)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetApexPoint() As Variant
```

SOLIDWORKS Type Library
GetApexPoint2 Method (SketchParabola)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetApexPoint2() As Object
```

SOLIDWORKS Type Library

GetEndPoint Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function GetEndPoint() As Variant
```

SOLIDWORKS Type Library

GetEndPoint2 Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function GetEndPoint2() As Object
```

SOLIDWORKS Type Library

GetFocalPoint Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function GetFocalPoint() As Variant
```

SOLIDWORKS Type Library

GetFocalPoint2 Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function GetFocalPoint2() As Object
```

SOLIDWORKS Type Library

GetStartPoint Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function GetStartPoint() As Variant
```

SOLIDWORKS Type Library

GetStartPoint2 Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function GetStartPoint2() As Object
```

SOLIDWORKS Type Library

IGetApexPoint Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function IGetApexPoint() As Double
```

SOLIDWORKS Type Library

IGetApexPoint2 Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function IGetApexPoint2() As SketchPoint
```

SOLIDWORKS Type Library

IGetEndPoint Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function IGetEndPoint() As Double
```

SOLIDWORKS Type Library

IGetEndPoint2 Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function IGetEndPoint2() As SketchPoint
```

SOLIDWORKS Type Library

IGetFocalPoint Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function IGetFocalPoint() As Double
```

SOLIDWORKS Type Library

IGetFocalPoint2 Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function IGetFocalPoint2() As SketchPoint
```

SOLIDWORKS Type Library

IGetStartPoint Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function IGetStartPoint() As Double
```

SOLIDWORKS Type Library

IGetStartPoint2 Method (SketchParabola)



Visual Basic for Applications (VBA)

```
Public Function IGetStartPoint2() As SketchPoint
```

SOLIDWORKS Type Library

SetPoints Method (SketchParabola)



Visual Basic for Applications (VBA)


```
Public Function SetPoints( _  
    ByVal CenterX As Double, _  
    ByVal CenterY As Double, _  
    ByVal CenterZ As Double, _  
    ByVal ApexX As Double, _  
    ByVal ApexY As Double, _  
    ByVal ApexZ As Double, _  
    ByVal StartX As Double, _
```

```
ByVal StartY As Double, _  
ByVal StartZ As Double, _  
ByVal EndX As Double, _  
ByVal EndY As Double, _  
ByVal EndZ As Double _  
) As Boolean
```

SketchPath (Type)

SOLIDWORKS Type Library
SketchPath Object

Object Model

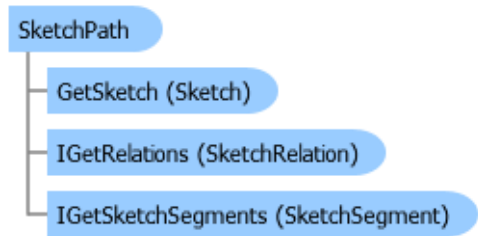

SOLIDWORKS Type Library
SketchPath Object Members

Public Methods

 GetConstraints
 GetConstraintsCount
 GetLength
 GetRelations
 GetRelationsCount
 GetSketch
 GetSketchSegmentCount
 GetSketchSegments
 IGetConstraints
 IGetRelations
 IGetSketchSegments
 Select

SOLIDWORKS Type Library
GetConstraints Method (SketchPath)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetConstraints() As Variant
```

SOLIDWORKS Type Library
GetConstraintsCount Method (SketchPath)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetConstraintsCount() As Long
```

SOLIDWORKS Type Library
GetLength Method (SketchPath)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetLength() As Double
```

SOLIDWORKS Type Library

GetRelations Method (SketchPath)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetRelations() As Variant
```

SOLIDWORKS Type Library

GetRelationsCount Method (SketchPath)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetRelationsCount() As Long
```

SOLIDWORKS Type Library

GetSketch Method (SketchPath)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSketch() As Sketch
```

SOLIDWORKS Type Library

GetSketchSegmentCount Method (SketchPath)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSketchSegmentCount() As Long
```

SOLIDWORKS Type Library

GetSketchSegments Method (SketchPath)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetSketchSegments() As Variant
```

SOLIDWORKS Type Library

IGetConstraints Method (SketchPath)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetConstraints( _  
    ByVal Count As Long _  
) As String
```

SOLIDWORKS Type Library

IGetRelations Method (SketchPath)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetRelations( _  
    ByVal Count As Long _  
) As SketchRelation
```

SOLIDWORKS Type Library

IGetSketchSegments Method (SketchPath)



Syntax

```
Public Function IGetSketchSegments( _  
    ByVal Count As Long _  
    ) As SketchSegment
```

 Syntax


```
Public Function Select( _  
    ByVal Append As Boolean, _  
    ByVal Data As SelectData _  
    ) As Boolean
```

SketchPatternFeatureData (Type)

SOLIDWORKS Type Library

SketchPatternFeatureData Object

Object Model

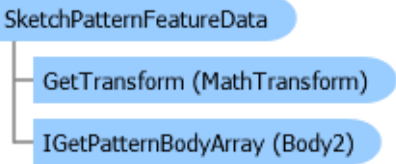

SOLIDWORKS Type Library

SketchPatternFeatureData Object Members

Public Methods

	AccessSelections
	GetBasePoint
	GetPatternBodyCount
	GetPatternFaceCount
	GetPatternFeatureCount
	GetReferencePointType
	GetTransform
	IAccessSelections
	IAccessSelections2
	IGetBasePoint
	IGetPatternBodyArray
	IGetPatternFaceArray
	IGetPatternFeatureArray
	ISetPatternBodyArray
	ISetPatternFaceArray
	ISetPatternFeatureArray
	ReleaseSelectionAccess
	SetFeatureScope

Public Properties

	AutoSelect
	BodyPattern
	FeatureScope
	FeatureScopeBodies
	GeometryPattern
	PatternBodyArray
	PatternElement
	PatternFaceArray
	PatternFeatureArray
	PropagateVisualProperty



[ReferencePoint](#)



[Sketch](#)



[UseCentroid](#)

SOLIDWORKS Type Library

AccessSelections Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function AccessSelections( _  
    ByVal TopDoc As Object, _  
    ByVal Component As Object _  
    ) As Boolean
```

SOLIDWORKS Type Library

AutoSelect Property (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property AutoSelect As Boolean
```

SOLIDWORKS Type Library

BodyPattern Property (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property BodyPattern As Boolean
```

SOLIDWORKS Type Library

FeatureScope Property (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property FeatureScope As Boolean
```

SOLIDWORKS Type Library

FeatureScopeBodies Property (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property FeatureScopeBodies As Variant
```

SOLIDWORKS Type Library

GeometryPattern Property (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Property GeometryPattern As Boolean
```

SOLIDWORKS Type Library

GetBasePoint Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function GetBasePoint() As Variant
```

SOLIDWORKS Type Library

GetPatternBodyCount Method (SketchPatternFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPatternBodyCount() As Long
```

SOLIDWORKS Type Library

GetPatternFaceCount Method (SketchPatternFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPatternFaceCount() As Long
```

SOLIDWORKS Type Library

GetPatternFeatureCount Method (SketchPatternFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetPatternFeatureCount() As Long
```

SOLIDWORKS Type Library

GetReferencePointType Method (SketchPatternFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetReferencePointType() As Long
```

SOLIDWORKS Type Library

GetTransform Method (SketchPatternFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function GetTransform( _  
    ByVal Instance As Long _  
) As MathTransform
```

SOLIDWORKS Type Library

IAccessSelections Method (SketchPatternFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections( _  
    ByVal TopDoc As ModelDoc, _  
    ByVal Component As Component _  
) As Boolean
```

SOLIDWORKS Type Library

IAccessSelections2 Method (SketchPatternFeatureData)



Syntax

Visual Basic for Applications (VBA)

```
Public Function IAccessSelections2( _  
    ByVal TopDoc As ModelDoc2, _  
    ByVal Component As Component2 _  
) As Boolean
```

SOLIDWORKS Type Library

IGetBasePoint Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetBasePoint() As Double
```

SOLIDWORKS Type Library

IGetPatternBodyArray Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetPatternBodyArray() As Body2
```

SOLIDWORKS Type Library

IGetPatternFaceArray Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetPatternFaceArray() As Object
```

SOLIDWORKS Type Library

IGetPatternFeatureArray Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Function IGetPatternFeatureArray() As Object
```

SOLIDWORKS Type Library

ISetPatternBodyArray Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetPatternBodyArray( _  
    ByVal BodyCount As Long, _  
    ByVal ArrayDataIn As Body2 _  
)
```

SOLIDWORKS Type Library

ISetPatternFaceArray Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetPatternFaceArray( _  
    ByVal FaceCount As Long, _  
    ByRef ArrayDataIn As Object _  
)
```

SOLIDWORKS Type Library

ISetPatternFeatureArray Method (SketchPatternFeatureData)

Syntax

Visual Basic for Applications (VBA)

```
Public Sub ISetPatternFeatureArray( _  
    ByVal FeatCount As Long, _  
    ByRef ArrayDataIn As Object _  
)
```

SOLIDWORKS Type Library

PatternBodyArray Property (SketchPatternFeatureData)



Visual Basic for Applications (VBA)

```
Public Property PatternBodyArray As Variant
```

SOLIDWORKS Type Library

PatternElement Property (SketchPatternFeatureData)



Visual Basic for Applications (VBA)

```
Public Property PatternElement As Long
```

SOLIDWORKS Type Library

PatternFaceArray Property (SketchPatternFeatureData)



Visual Basic for Applications (VBA)

```
Public Property PatternFaceArray As Variant
```

SOLIDWORKS Type Library

PatternFeatureArray Property (SketchPatternFeatureData)



Visual Basic for Applications (VBA)

```
Public Property PatternFeatureArray As Variant
```

SOLIDWORKS Type Library

PropagateVisualProperty Property (SketchPatternFeatureData)



Visual Basic for Applications (VBA)

```
Public Property PropagateVisualProperty As Boolean
```

SOLIDWORKS Type Library

ReferencePoint Property (SketchPatternFeatureData)



Visual Basic for Applications (VBA)

```
Public Property ReferencePoint As Object
```

SOLIDWORKS Type Library

ReleaseSelectionAccess Method (SketchPatternFeatureData)



Visual Basic for Applications (VBA)

```
Public Sub ReleaseSelectionAccess()
```

SOLIDWORKS Type Library

SetFeatureScope Method (SketchPatternFeatureData)



Visual Basic for Applications (VBA)

```
Public Function SetFeatureScope( _  
    ByVal FeatureScopeOption As Boolean, _  
    ByVal AutoSelectBodies As Boolean, _
```

```
ByVal Bodies As Variant _  
) As Boolean
```

SOLIDWORKS Type Library

Sketch Property (SketchPatternFeatureData)

 **Syntax**

Visual Basic for Applications (VBA)

```
Public Property Sketch As Object
```

SOLIDWORKS Type Library

UseCentroid Property (SketchPatternFeatureData)

 **Syntax**

Visual Basic for Applications (VBA)

```
Public Property UseCentroid As Boolean
```