


SOLIDWORKS Enumerations (swconst) — Examples (1/8): DP_Annotations-DP_Detailing

SOLIDWORKS API Documentation (converted from CHM)


Document Properties > Annotations

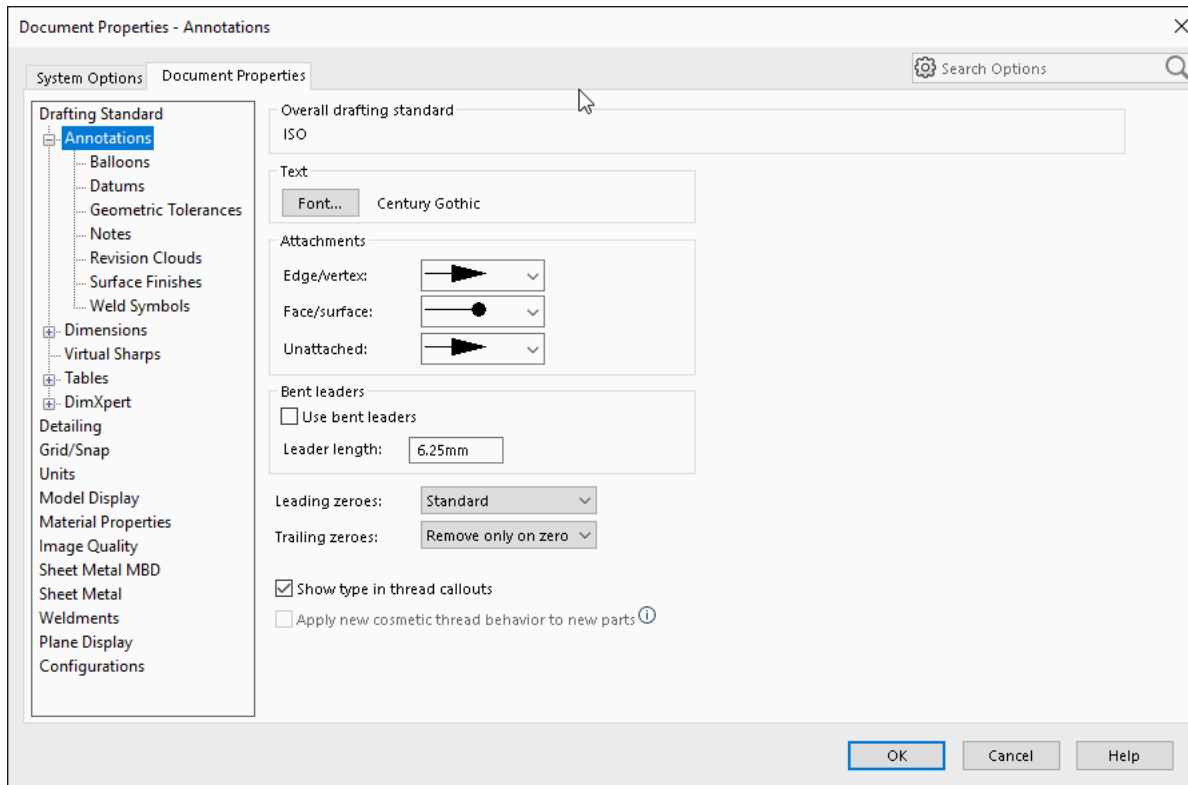

Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	Comments
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAnnotationTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAnnotationTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method.
Attachments - Edge/vertex	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingArrowStyleForEdgeVertexAttachment, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingArrowStyleForEdgeVertexAttachment, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swArrowStyle_e.<Value>)	See swArrowStyle_e for valid options	Specifies the default style of dimension arrows attached to edges
Attachments - Face/Surface	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingArrowStyleForFaceAttachment, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingArrowStyleForFaceAttachment, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swArrowStyle_e.<Value>)	See swArrowStyle_e for valid options	Specifies the default style of dimension arrows attached to faces
Attachments - Unattached	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingArrowStyleForUnattached, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingArrowStyleForUnattached, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swArrowStyle_e.<Value>)	See swArrowStyle_e for valid options	Specifies the default style of dimension arrows
Bent leaders - Use bent leaders	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAnnotationUseBentLeaders, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAnnotationUseBentLeaders, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whether to use bent leaders for annotations
Bent leaders - Leader length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingAnnotationBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingAnnotationBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the length of the annotation bend leaders in a drawing document
Leading zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingAnnotation)	See swDetailingLeadingZero_e for valid options	

	IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingAnnotation, swDetailingLeadingZero_e.<Value>)		
Trailing zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingAnnotation) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingAnnotation, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : • swDimShowTrailingZeroes • swDimRemoveTrailingZeroes • swDimRemoveOnlyOnZero • swDimSameAsSource	
Show type in thread callouts	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAnnotationShowTypeInThreadCallouts, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAnnotationShowTypeInThreadCallouts, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Apply new cosmetic thread behavior to new parts	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAnnotationApplyNewCTDepthArchForToNewParts, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAnnotationApplyNewCTDepthArchForToNewParts, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Valid only for part templates. New parts created from the templates with this option turned on will follow the new behavior for the cosmetic thread depth measurement and feature ownership. Turn this option off in the template to create new parts with the old behavior.


Document Properties > Annotations > Balloons

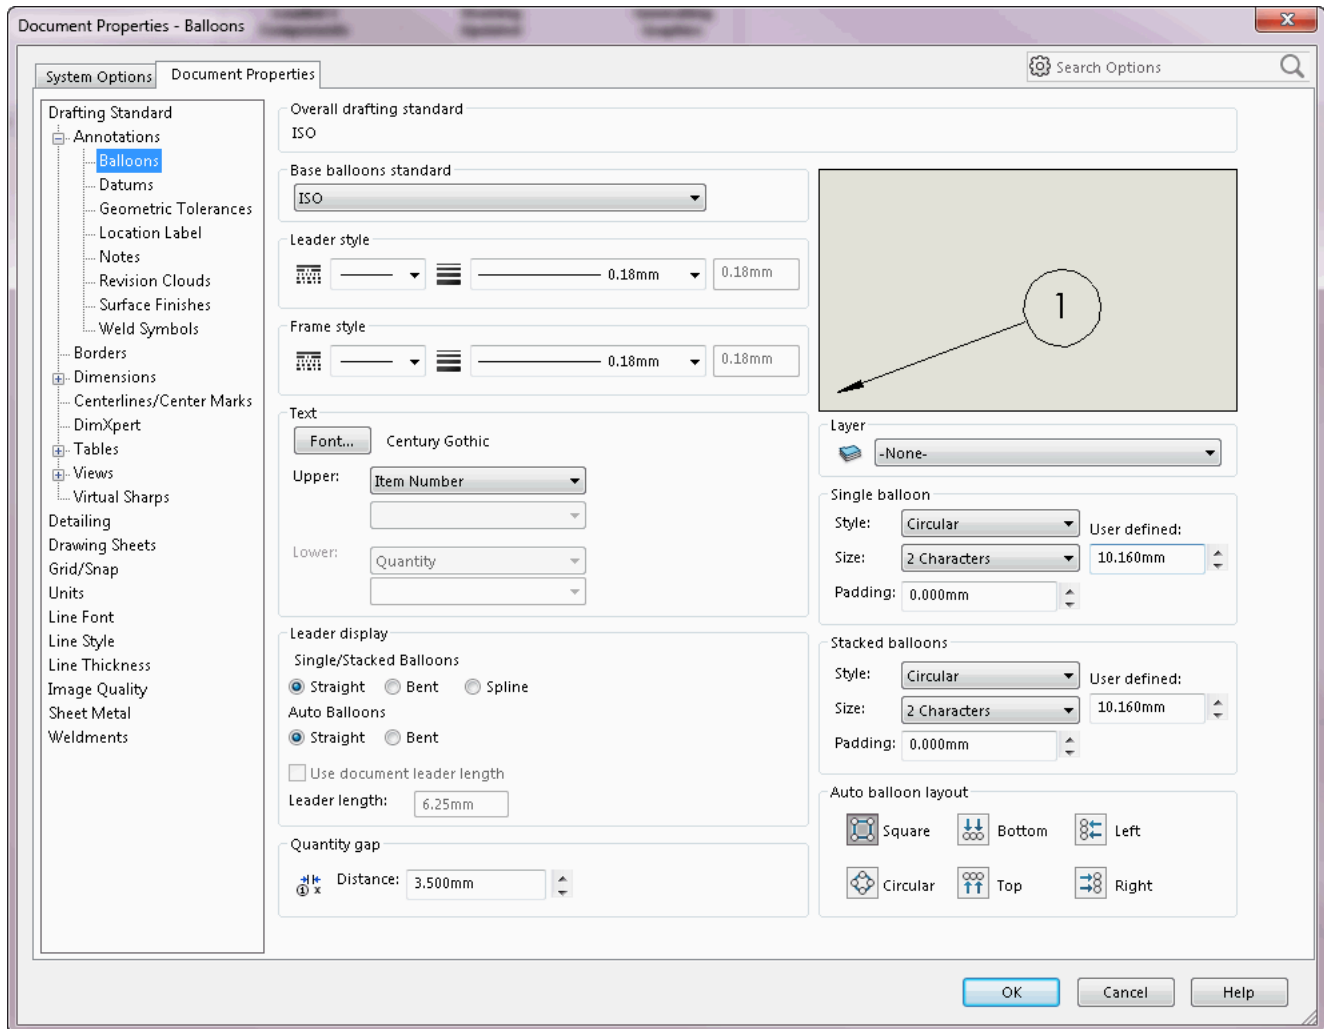


Setting	Get/Set Methods	Return Value or <Value>	Comments
Base balloons standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingBalloons) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingBalloons, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base balloons standard to use
Leader style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonsLeaderLineStyle, swUserPreferenceOption_e.swDetailingBalloons) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonsLeaderLineStyle, swUserPreferenceOption_e.swDetailingBalloons, swLineStyle_e.<Value>)	See swLineStyle_e for valid options	
Leader style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonsLeaderLineThickness, swUserPreferenceOption_e.swDetailingBalloons) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonsLeaderLineThickness, swUserPreferenceOption_e.swDetailingBalloons, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies the default style of unattached dimension arrows
Leader style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBalloonsLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingBalloons) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBalloonsLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingBalloons, <Value>)	Double value	Specifies custom thickness for balloon leader lines; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Frame style - Frame Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonsFrameLineStyle, swUserPreferenceOption_e.swDetailingBalloons) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonsFrameLineStyle, swUserPreferenceOption_e.swDetailingBalloons, swLineStyle_e.<Value>)	See swLineStyle_e for valid options	Specifies the length of the annotation bend leaders in a drawing document
Frame style - Frame	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonsFrameLineThickness, swUserPreferenceOption_e.swDetailingBalloons)	See swLineWeights_e for valid options	

Thickness	IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonFrameLineThickness, swUserPreferenceOption_e.swDetailingBalloon, swLineWeights_e.<Value>)		
Frame style - custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBalloonFrameLineThicknessCustom, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBalloonFrameLineThicknessCustom, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	Double value	Specifies custom thickness for balloon frame lines; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingBalloonTextFormat, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingBalloonTextFormat, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	See ITextFormat for valid font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method
Text - Upper	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMUpperText, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMUpperText, swUserPreferenceOption_e.swDetailingBalloon, swBalloonTextContent_e.<Value>)	See swBalloonTextContent_e for valid options	Specifies the upper section of the text of BOM balloons
Text - Upper - Custom property	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingBOMUpperCustomProperty, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingBOMUpperCustomProperty, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	String value	
Text - Lower	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMLowerText, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMLowerText, swUserPreferenceOption_e.swDetailingBalloon, swBalloonTextContent_e.<Value>)	See swBalloonTextContent_e for valid options	Specifies the lower section of the text of BOM balloons
Text - Lower - Custom property	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingBOMLowerCustomProperty, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingBOMLowerCustomProperty, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	String value	
Leader display - Single/Stacked Balloons	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonLeaderStyle, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonLeaderStyle, swUserPreferenceOption_e.swDetailingBalloon, swLeaderStyle_e.<Value>)	See swLeaderStyle_e ; valid options: - swLeaderStyle_e.swSTRAIGHT - swLeaderStyle_e.swBENT - swLeaderStyle_e.swSPLINE	
Leader display - Auto Balloons	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonAutoBalloons, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonAutoBalloons, swUserPreferenceOption_e.swDetailingBalloon, swLeaderStyle_e.<Value>)	See swLeaderStyle_e ; valid options: - swLeaderStyle_e.swSTRAIGHT - swLeaderStyle_e.swBENT	
Leader display - Use document leader length	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBalloonUseBentLeaderLength, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBalloonUseBentLeaderLength, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	Boolean value	Specifies whether to use bent leaders for annotations
Leader display - Leader length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBalloonBentLeaderLength, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBalloonBentLeaderLength, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	Double value	Specifies length of the balloon bent leader
Quantity gap - Distance	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBalloonQtyGapDistance, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBalloonQtyGapDistance, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	Double value	Specifies the distance between the balloon edge and the quantity
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	String value	Specifies the name of the layer to apply these settings to; this setting is available only on drawings
Single balloon - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMBalloonStyle, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMBalloonStyle, swUserPreferenceOption_e.swDetailingBalloon, swBalloonStyle_e.<Value>)	See swBalloonStyle_e for valid options	Specifies shape of single BOM balloon
Single balloon - Size	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMBalloonFit, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMBalloonFit, swUserPreferenceOption_e.swDetailingBalloon, swBalloonFit_e.<Value>)	See swBalloonFit_e for valid options	Specifies size of single BOM balloon
Single balloon - User defined	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBOMBalloonCustomSize, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBOMBalloonCustomSize, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	Double value	Specifies the custom size of a single BOM balloon; sets the Size spin box to the specified size and the Size dropdown to Custom Size

Single balloon - Padding	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBOMBalloonPadding, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBOMBalloonPadding, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	Double value	Specifies the padding for single BOM balloons
Stacked balloons - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMStackedBalloonStyle, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMStackedBalloonStyle, swUserPreferenceOption_e.swDetailingBalloon, swBalloonStyle_e.<Value>)	See swBalloonStyle_e for valid options	Specifies the shapes of stacked BOM balloons
Stacked balloons - Size	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMStackedBalloonFit, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBOMStackedBalloonFit, swUserPreferenceOption_e.swDetailingBalloon, swBalloonFit_e.<Value>)	See swBalloonFit_e for valid options	Specifies the sizes of stacked BOM balloons
Stacked balloons - User defined	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBOMStackedBalloonCustomSize, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBOMStackedBalloonCustomSize, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	Double value	Specifies the custom sizes of stacked BOM balloons; sets the Size spin box to the specified size and the Size dropdown to Custom Size
Stacked balloons - Padding	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBOMStackedBalloonPadding, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBOMStackedBalloonPadding, swUserPreferenceOption_e.swDetailingBalloon, <Value>)	Double value	Specifies the padding for stacked BOM balloons
Auto balloon layout	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAutoBalloonLayout, swUserPreferenceOption_e.swDetailingBalloon) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAutoBalloonLayout, swUserPreferenceOption_e.swDetailingBalloon, swBalloonLayoutType_e.<Value>)	See swBalloonLayoutType_e for valid options	Specifies default auto balloon layout

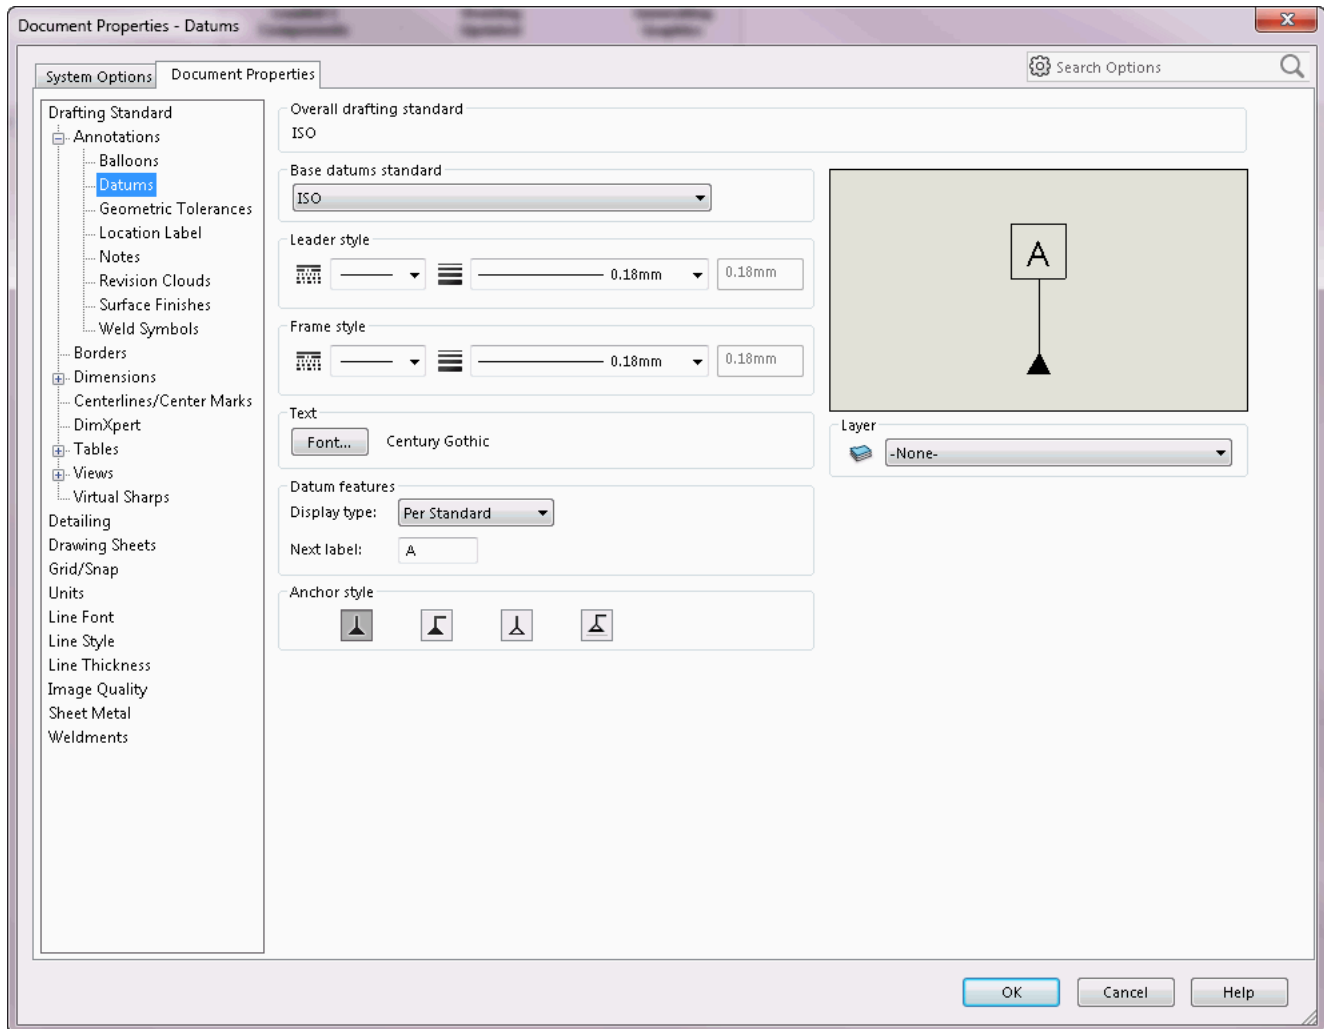


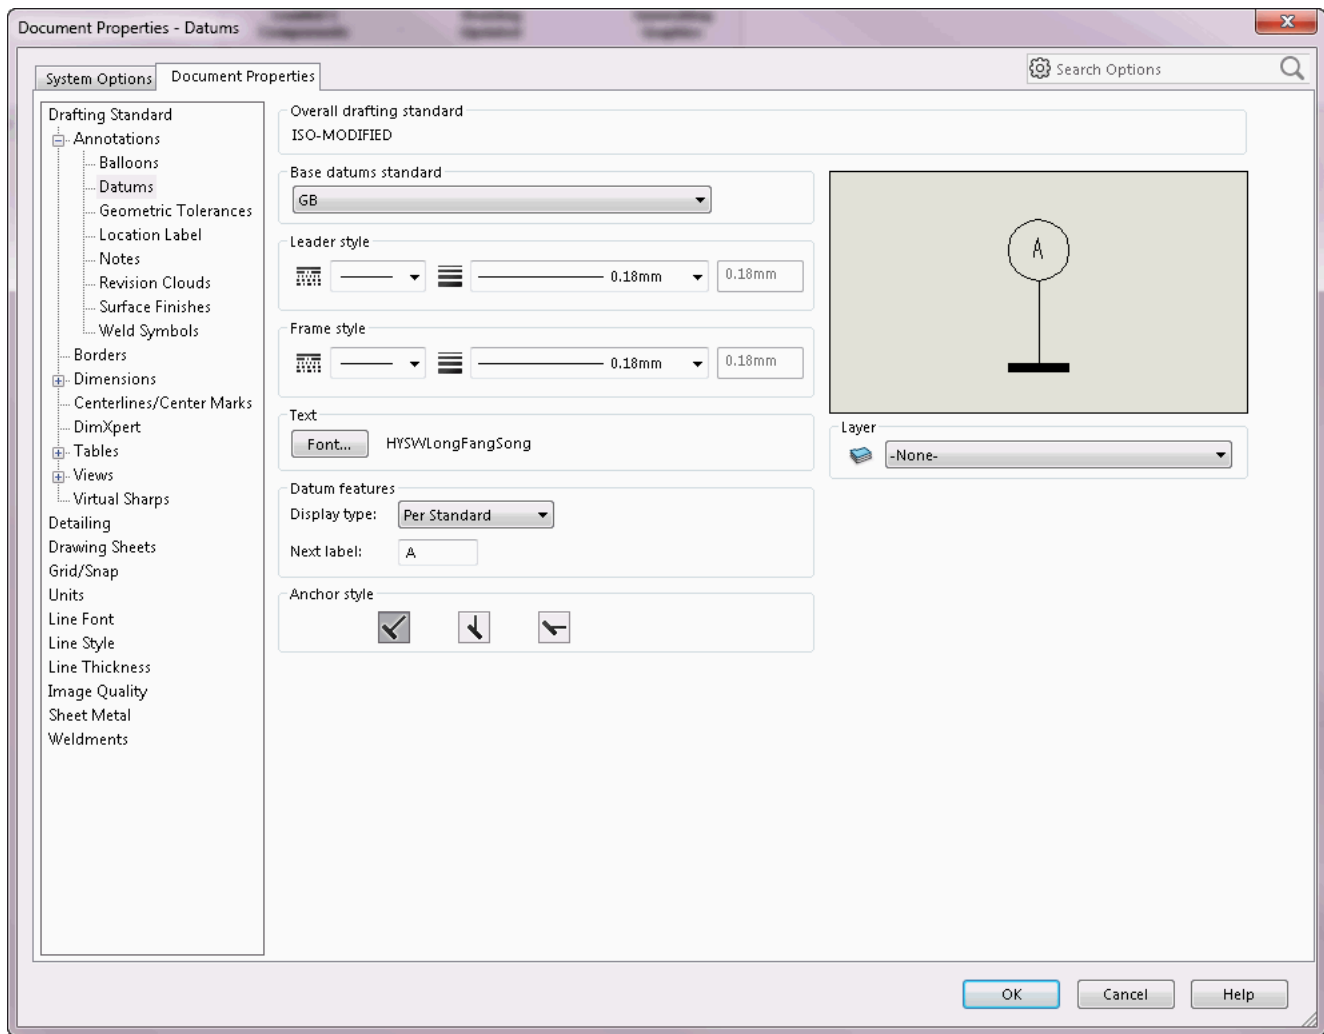

Setting	Get/Set Methods	Return Value or <Value>	Comments
Base datums standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingDatum) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingDatum, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base datums standard to use. For base datums standard, "GB", use anchor styles as defined in swDatumGbLeaderStyle_e .
Leader style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	
Leader style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Leader style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDatumLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDatumLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom thickness of datum leader lines; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Frame style - Frame Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumFrameLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumFrameLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	
Frame style - Frame Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumFrameLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumFrameLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Frame style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDatumFrameLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingDatumFrameLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom thickness of datum frame lines; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDatumTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDatumTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method
Datum features -	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumDisplayType, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	See swDatumDisplayType_e for	Specifies type of display of datums. When the type of

Display type	IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumDisplayType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDatumDisplayType_e.<Value>)	valid options	datum display is "GB", use anchor styles as defined in swDatumGbLeaderStyle_e .
Datum features - Next label	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingNextDatumFeatureLabel, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingNextDatumFeatureLabel, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	String value	Specifies the label for the next datum symbol created
Anchor style - Filled	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDatumsAnchorFilled, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDatumsAnchorFilled, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to fill triangle datum symbols
Anchor style - With shoulder	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDatumsAnchorShoulder, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDatumsAnchorShoulder, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to add shoulders to triangle datum symbols
Anchor style - GB	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumGbLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDatumGbLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDatumGbLeaderStyle_e.<Value>)	See swDatumGbLeaderStyle_e for valid options	Specifies the anchor style for round datum symbols
Display datums per 1982	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDisplayDatumsPer1982, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDisplayDatumsPer1982, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use 1982 standard to display datums; a document property only visible for the ANSI drafting standard
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingDatum) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingDatum, <Value>)	String value	Specifies the name of the layer to apply settings to; this setting is available only on drawings


Document Properties > Annotations > Geometric Tolerances

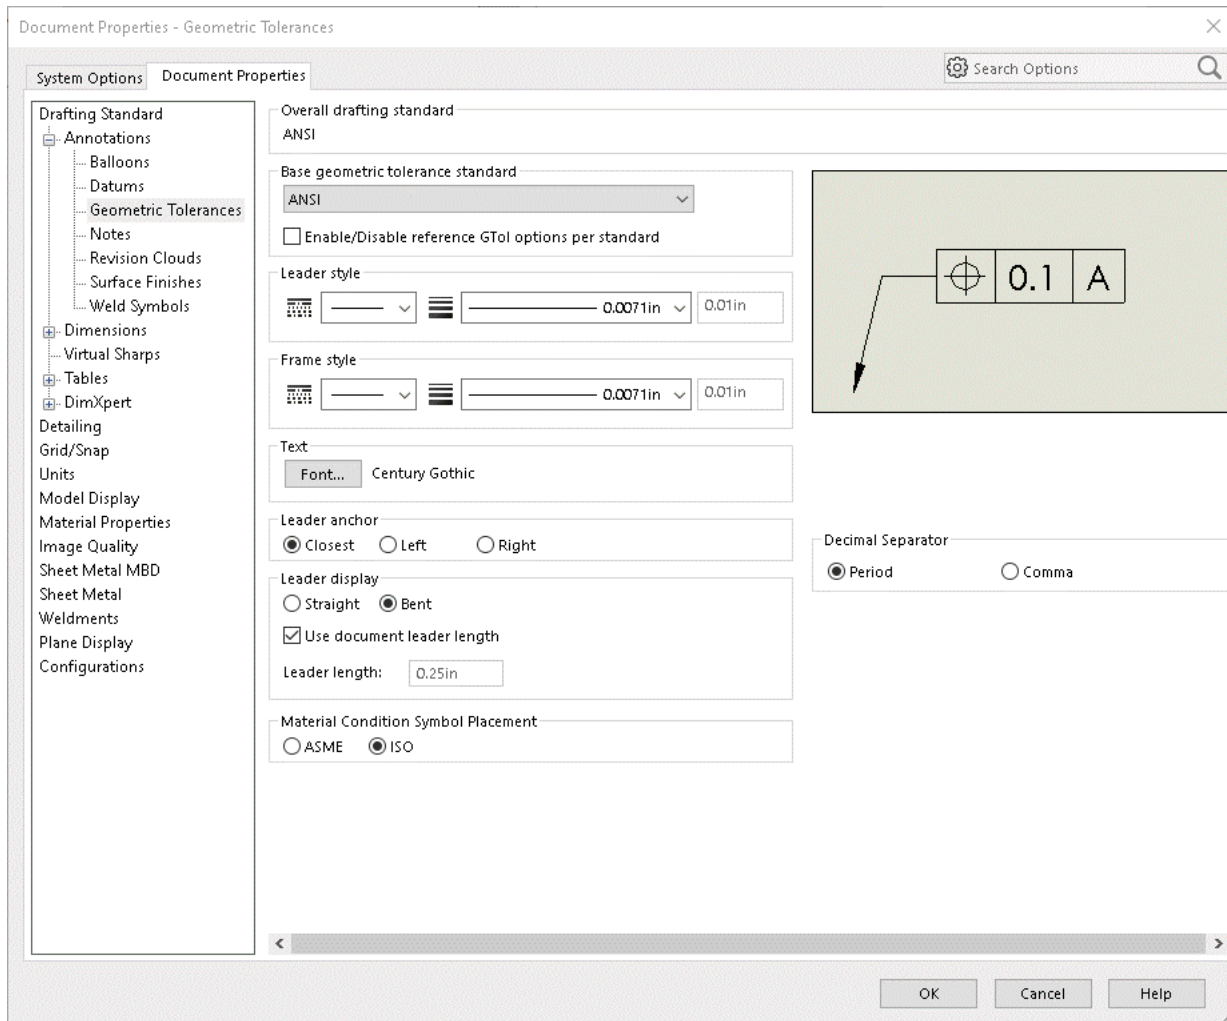

Setting	Get/Set Methods	Return Value or <Value>	Comments
Base geometric tolerance standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingGeometricTolerance) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingGeometricTolerance, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the geometric tolerance standard used.
Leader style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	
Leader style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Leader style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingGtolLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingGtolLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom thickness for leader lines; see Custom Thickness to the specific thickness and Leader Thickness to Custom Size.
Frame style - Frame Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolFrameLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolFrameLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	

Frame style - Frame Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolFrameLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolFrameLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See swLineWeights_e for valid options	
Frame style - custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingGtolFrameLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingGtolFrameLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specify custom thickness Gtol for lines; see Custom Thickness to the specific thickness and Leader Thickness to Custom Size
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingGeometricToleranceTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingGeometricToleranceTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set proper values, implement ITextFormat set the appropriate ITextFormat member values, pass the ITextFormat object in API set method
Leader anchor - Closest, Left, or Right	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolLeaderSide, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolLeaderSide, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderSide_e.<Value>)	See swLeaderSide_e for valid options	
Leader display - Straight or Bent	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderStyle_e.<Value>)	See swLeaderStyle_e for valid options	
Leader display - Use document leader length	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingGtolUseDocBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingGtolUseDocBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specify whether use document leader length geometric tolerance annotation
Leader display - Leader length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingGtolBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingGtolBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specify the length Gtol for leaders drawing document
Material Condition Symbol Placement - ASME or ISO	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolMaterialConditionSymbolPlacement, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGtolMaterialConditionSymbolPlacement, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingGtolMaterialConditionSymbolPlacement_e.<Value>)	See swDetailingGtolMaterialConditionSymbolPlacement_e for valid options	
Decimal Separator	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swGtolDecimalSeparatorType, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swGtolDecimalSeparatorType, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swGtolDecimalSeparatorType_e.<Value>)	See swGtolDecimalSeparatorType_e for valid options	
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingGeometricTolerance) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingGeometricTolerance, <Value>)	String value	Specify the name of the layer apply setting; this setting is available only on drawing

Document Properties > Annotations > Location Label

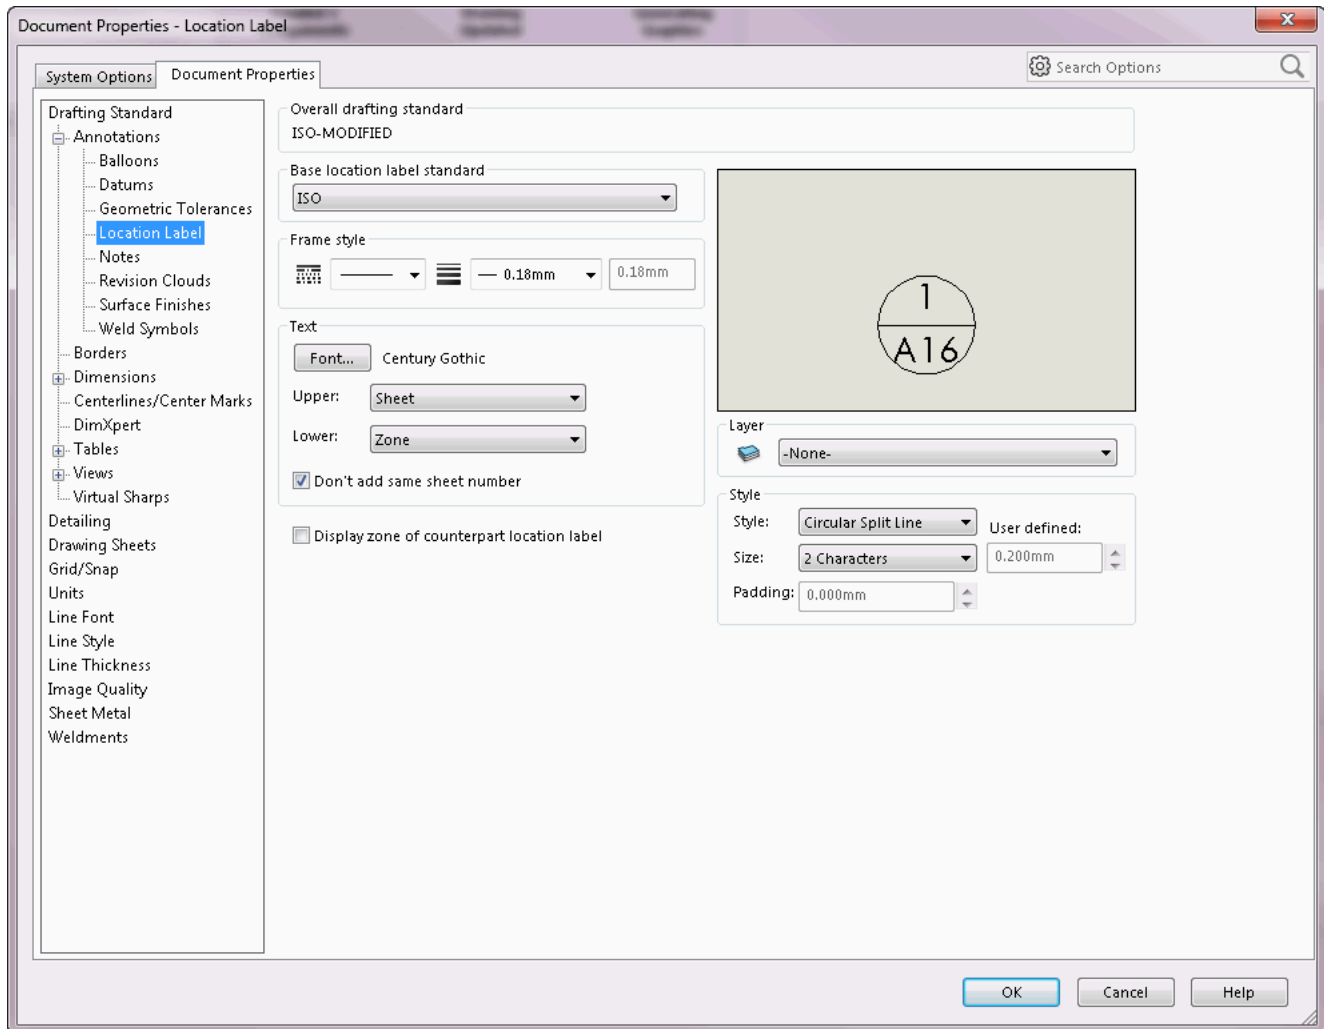


Setting	Get/Set Methods	Return Value or <Value>	Comments
Base location label standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingLocationLabel, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the standard to use for a location label
Frame style - Frame Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelFrameLineStyle, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelFrameLineStyle, swUserPreferenceOption_e.swDetailingLocationLabel, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies the style of the frame of a location label
Frame style - Frame Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelFrameLineThickness, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelFrameLineThickness, swUserPreferenceOption_e.swDetailingLocationLabel, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies the thickness of the frame of a location label
Frame style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingLocationLabelFrameLineThicknessCustom, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingLocationLabelFrameLineThicknessCustom, swUserPreferenceOption_e.swDetailingLocationLabel, <Value>)	Double value	Specifies the custom thickness of the lines of a location label frame
Text - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingLocationLabelTextFormat, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingLocationLabelTextFormat, swUserPreferenceOption_e.swDetailingLocationLabel, <Value>)	See ITextFormat for valid font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the set method

Text - Upper	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelUpperText, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelUpperText, swUserPreferenceOption_e.swDetailingLocationLabel, swLocationLabelText_e.<Value>)	See swLocationLabelText_e for valid options	Specifies the text for the upper section of a location label
Text - Lower	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelLowerText, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelLowerText, swUserPreferenceOption_e.swDetailingLocationLabel, swLocationLabelText_e.<Value>)	See swLocationLabelText_e for valid options	Specifies the text for the lower section of a location label
Text - Don't add same sheet number	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingLocationLabelAddSameSheetNumber, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingLocationLabelAddSameSheetNumber, swUserPreferenceOption_e.swDetailingLocationLabel, <Value>)	Boolean value	Specifies whether to add the same sheet number to a location label
Display zone of counterpart location label	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayCounterpartLocationLabel, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayCounterpartLocationLabel, swUserPreferenceOption_e.swDetailingLocationLabel, <Value>)	Boolean value	Specifies whether to display the zone of the counterpart location label
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingLocationLabel, <Value>)	String value	Specifies the name of the layer to which to apply these settings; this setting is available only in drawings
Style - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelStyle, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelStyle, swUserPreferenceOption_e.swDetailingLocationLabel, swBalloonStyle_e.<Value>)	See swBalloonStyle_e for valid options	Specifies the style of a location label
Style - Size	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelFit, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLocationLabelFit, swUserPreferenceOption_e.swDetailingLocationLabel, swBalloonFit_e.<Value>)	See swBalloonFit_e for valid options	Specifies the size of a location label
Style - User defined	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingLocationLabelStyleCustomSize, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingLocationLabelStyleCustomSize, swUserPreferenceOption_e.swDetailingLocationLabel, <Value>)	Double value	Specifies a user-defined size of a location label
Style - Padding	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingLocationLabelPadding, swUserPreferenceOption_e.swDetailingLocationLabel) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingLocationLabelPadding, swUserPreferenceOption_e.swDetailingLocationLabel, <Value>)	Double value	Specifies the size of the extra padding inside tight-fit borders for a location label

Document Properties > Annotations > Notes

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the Document Properties - Notes dialog corresponds to the settings on that dialog.
- titled **Obsolete Enumerators** contains enumerators that previously appeared on the Document Properties - Notes dialog, but are now obsolete and no longer appear on that dialog.

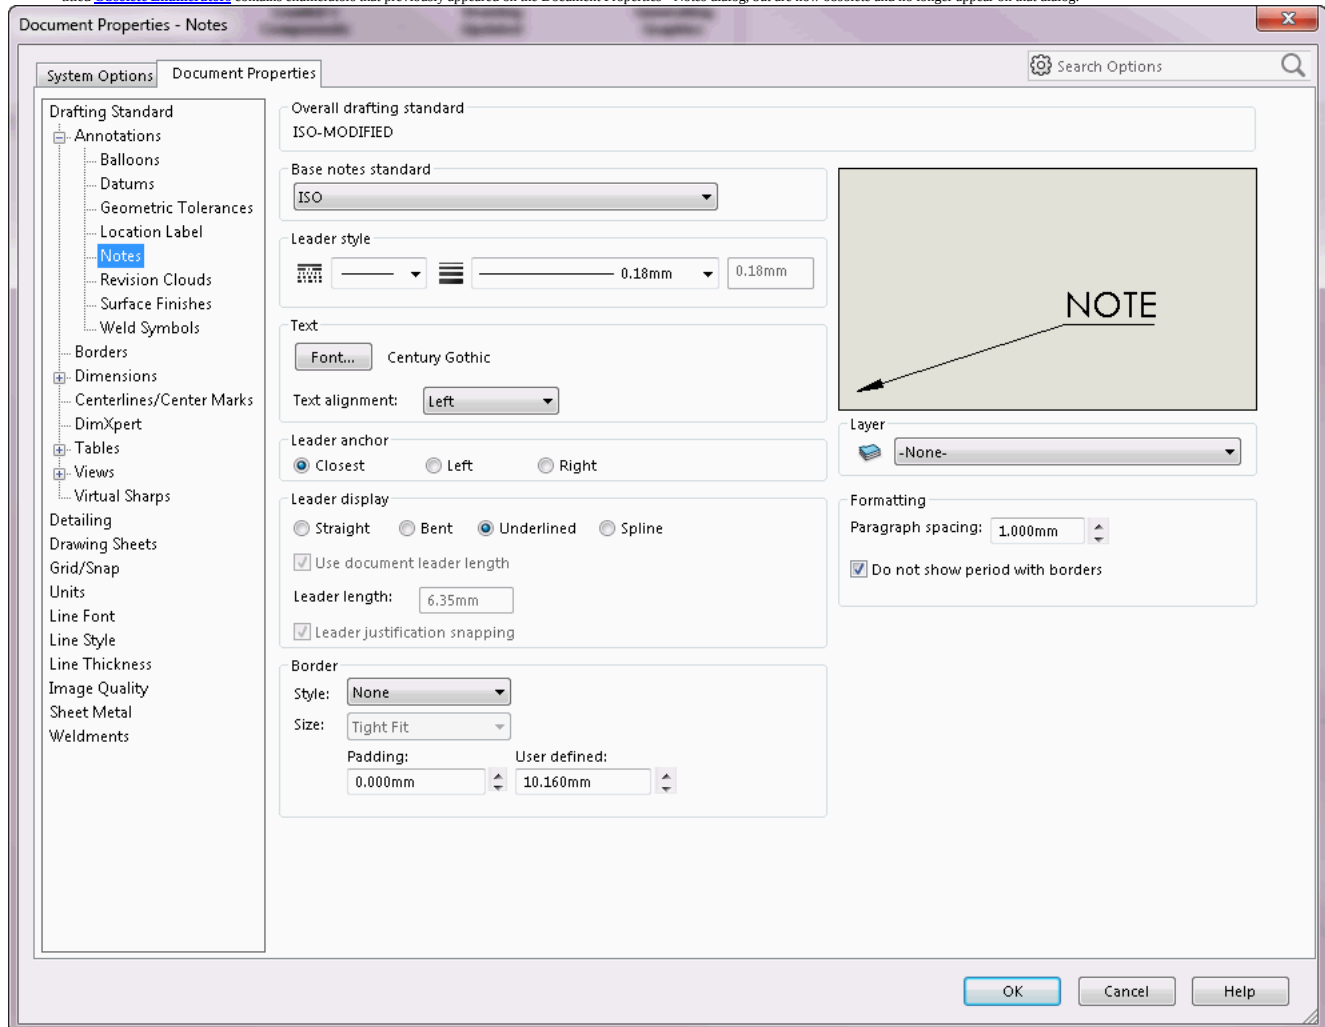


Setting	Get/Set Methods	Return Value or <Value>	Comments
Base notes standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingNote) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingNote, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base notes standard to use
Leader style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNoteLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNoteLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	
Leader style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNoteLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNoteLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Leader style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingNoteLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingNoteLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom thickness of note leader lines; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingNoteTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingNoteTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the

			ITextFormat object in the API set method
Text - Text alignment	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNoteTextAlignment, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNoteTextAlignment, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swTextJustification_e.<Value>)	See swTextJustification_e for valid options	Specifies text alignment for notes
Leader anchor - Closest, Left, or Right	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNoteLeaderSide, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNoteLeaderSide, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderStyle_e.<Value>)	See swLeaderStyle_e for valid options	Specifies leader side for notes
Leader display - Straight, Bent, or Underlined, or Spline	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNotesLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingNotesLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderStyle_e.<Value>)	See swLeaderStyle_e for valid options	Specifies notes leader style
Leader display - Use document leader length	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingNoteUseDocBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingNoteUseDocBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use document bent leader lengths for annotations
Leader display - Leader length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingNoteBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingNoteBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies distance between leader bend and text of the note
Leader display - Leader justification snapping	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingNotesLeaderJustificationSnapping, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingNotesLeaderJustificationSnapping, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether leaders snap along grid lines
Border - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBalloonStyle_e.<Value>)	See swBalloonStyle_e for valid options	Specifies the style of the border
Border - Size	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonFit, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBalloonFit, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBalloonFit_e.<Value>)	See swBalloonFit_e for valid options	Specifies the size of the border
Border - Padding	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderAddPadding, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderAddPadding, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	0.2 <= Size of the border padding <= 1000000.0; valid only when Border - Style is not None and Border - Size is Tight Fit
Border - User defined	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderUserDefined, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderUserDefined, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	User-defined values for border size; valid only when Border - Style is not None and Border - Size is Custom Size
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingNote) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingNote, <Value>)	String value	Specifies the name of the layer to apply settings to; this setting is available only on drawings
Formatting - Paragraph spacing	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingParaSpacing, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingParaSpacing, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the space between adjacent paragraphs
Formatting - Do not show period with borders	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowPeriodWithBorders, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowPeriodWithBorders, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to show period with borders

Obsolete Enumerators


Enumerator	Comment
swDetailingBalloonCustomSize	Obsolete

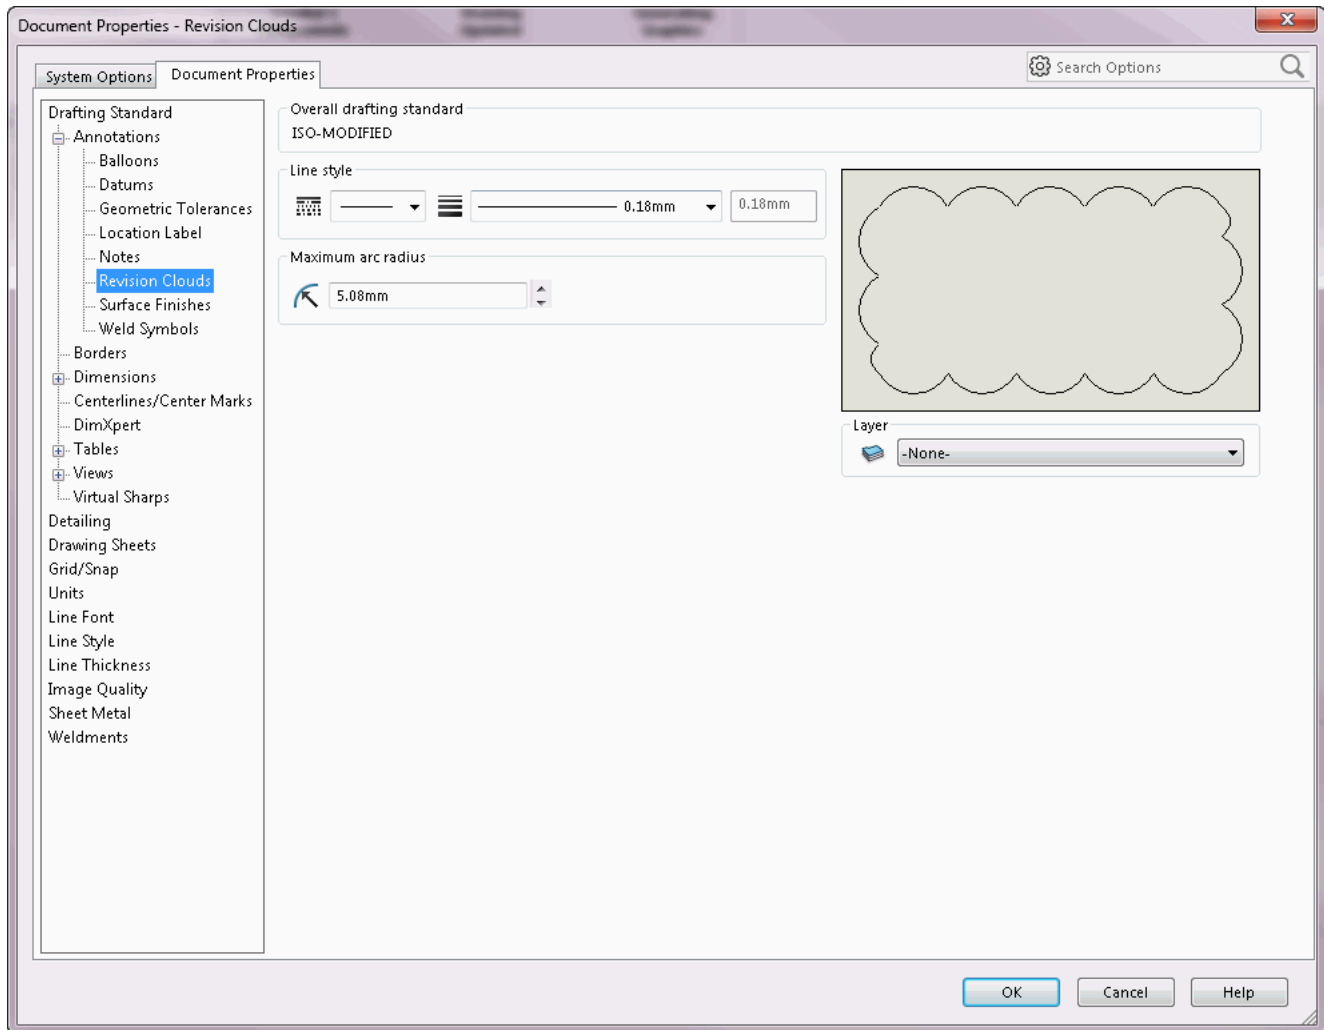

Setting	Get/Set Methods	Return Value or <Value>	Comments
Overall drafting standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingRevisionCloud) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingRevisionCloud, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the overall drafting standard
Line style - Frame Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRevisionCloudLineStyle, swUserPreferenceOption_e.swDetailingRevisionCloud) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRevisionCloudLineStyle, swUserPreferenceOption_e.swDetailingRevisionCloud, swLineStyle_e.<Value>)	See swLineStyle_e for valid options	Specifies the style of the frames of revision clouds
Line style - Frame Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRevisionCloudLineThickness, swUserPreferenceOption_e.swDetailingRevisionCloud) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRevisionCloudLineThickness, swUserPreferenceOption_e.swDetailingRevisionCloud, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies the thickness of the frames of revision clouds
Line style - Custom Thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingRevisionCloudLineThicknessCustom, swUserPreferenceOption_e.swDetailingRevisionCloud) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingRevisionCloudLineThicknessCustom, swUserPreferenceOption_e.swDetailingRevisionCloud, <Value>)	Double value	Specifies a custom thickness for the frames of revision clouds; sets Custom Thickness to the specified thickness and Frame Thickness to Custom Size
Maximum arc radius	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingRevisionCloudMaxArcRadius, swUserPreferenceOption_e.swDetailingRevisionCloud) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingRevisionCloudMaxArcRadius, swUserPreferenceOption_e.swDetailingRevisionCloud, <Value>)	Double value	Specifies the maximum radius of each frame arc
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingRevisionCloud)	Valid Options: "Border"	This setting is available only on drawings; depending on

	IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingRevisionCloud, <Value>)	• "Dimensions" • "Notes" • "BOM" • "FORMAT"	drawing, some options may not apply
--	--	---	-------------------------------------


Document Properties > Annotations > Surface Finishes

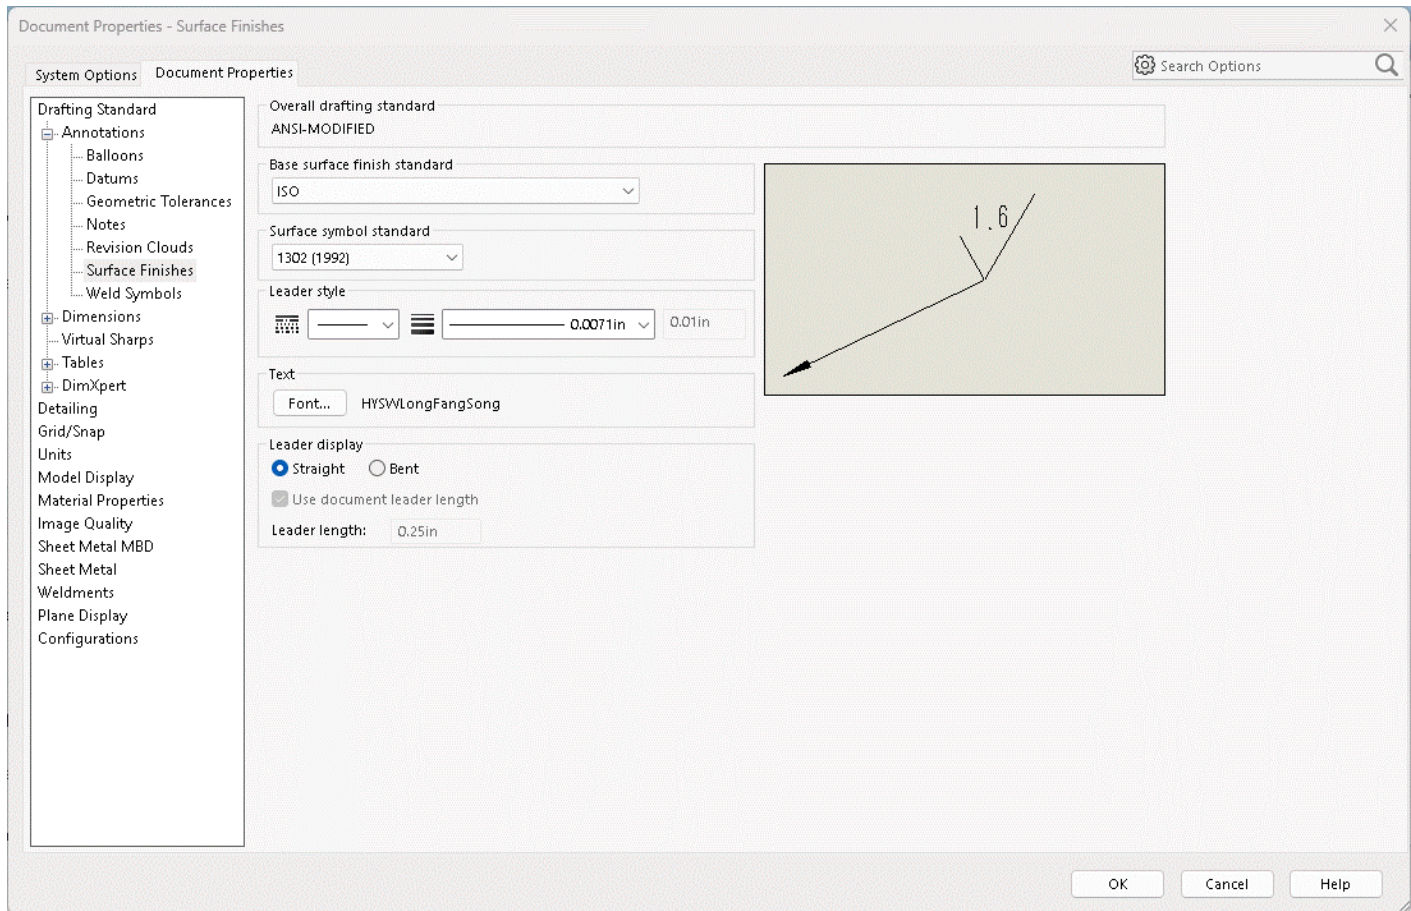

Setting	Get/Set Methods	Return Value or <Value>	Comments
Base surface finish standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingSurfaceFinishSymbol) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingSurfaceFinishSymbol, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base surface finish standard to use
Surface symbol standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSFSymbolStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSFSymbolStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingSFSymbolStandard_e.<Value>)	See swDetailingSFSymbolStandard_e for valid options	
Leader style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSFSymbolLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSFSymbolLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	
Leader style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSFSymbolLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSFSymbolLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Leader style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSFSymbolLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSFSymbolLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom thickness of surface finish symbol leader lines; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSurfaceFinishTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingSurfaceFinishTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and

			pass the ITextFormat object in the API set method
Leader display - Straight or Bent	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSFSymbolLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingSFSymbolLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderStyle_e.<Value>)	See swLeaderStyle_e for valid options	Specifies notes leader style
Leader display - Use document leader length	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSFSymbolUseDocBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingSFSymbolUseDocBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use document bent leader lengths for annotations
Leader display - Leader length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSFSymbolBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingSFSymbolBentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the length of surface finish symbol leader lines in a drawing document
Display symbols per 2002	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDisplaySFSymbolsPer2002, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDisplaySFSymbolsPer2002, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use 2002 standard to display surface finish symbols
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingSurfaceFinishSymbol) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingSurfaceFinishSymbol, <Value>)	String value	Specifies the name of the layer to apply settings to; this setting is available only on drawings


Document Properties > Annotations > Weld Symbols

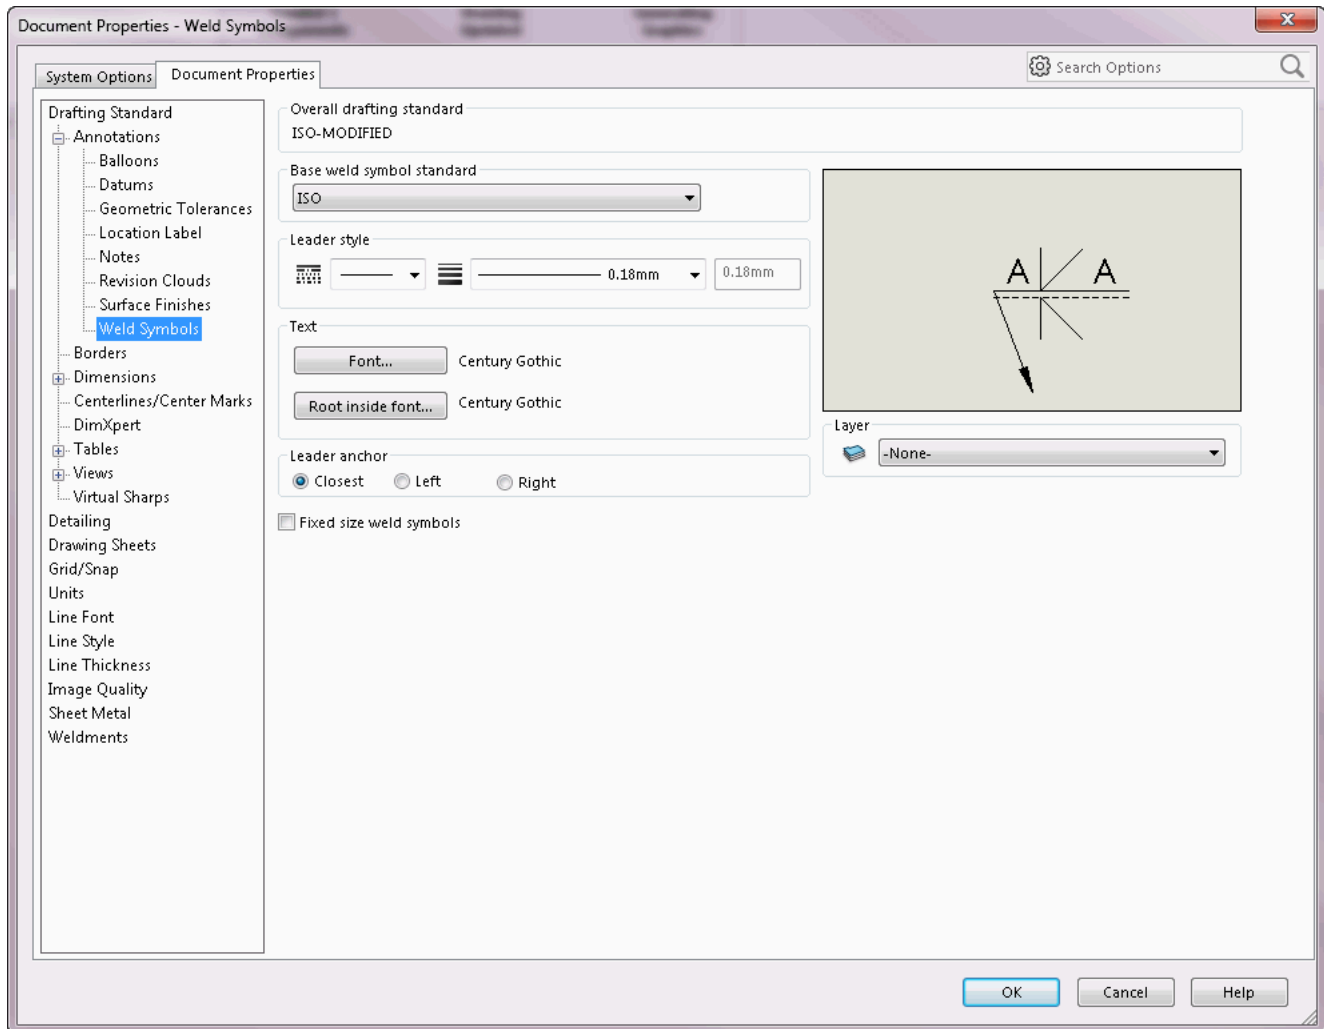

Setting	Get/Set Methods	Return Value or <Value>	Comments
Base weld symbol standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingWeldSymbol) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingWeldSymbol, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base weld symbol standard to use
Leader style - Leader Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldSymbolLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldSymbolLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyle_e.<Value>)	See swLineStyle_e for valid options	
Leader style - Leader Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldSymbolLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldSymbolLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Leader style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingWeldSymbolLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingWeldSymbolLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom thickness of weld symbol leader lines; sets Custom Thickness to the specified thickness and Leader Thickness to Custom Size
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingWeldSymbolTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingWeldSymbolTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat

			object in the API set method
Text - Root inside font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingWeldSymbolTextRootInsideFont, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingWeldSymbolTextRootInsideFont, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	Font for the weld symbol text fitting inside root gap; to set font property values, implement ITextFormat, set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method
Leader anchor - Closest, Left, or Right	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldSymbolLeaderSide, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldSymbolLeaderSide, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderSide_e.<Value>)	See swLeaderSide_e for valid options	
Fixed size weld symbols	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingFixedSizeWeldSymbol, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingFixedSizeWeldSymbol, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether size of weld symbol is scaled according to dimension font size, or size of weld symbol is dependent on selected dimensioning standard
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingWeldSymbol) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingWeldSymbol, <Value>)	String value	Specifies the name of the layer to apply settings to; this setting is available only on drawings


Document Properties > Borders (drawings only)

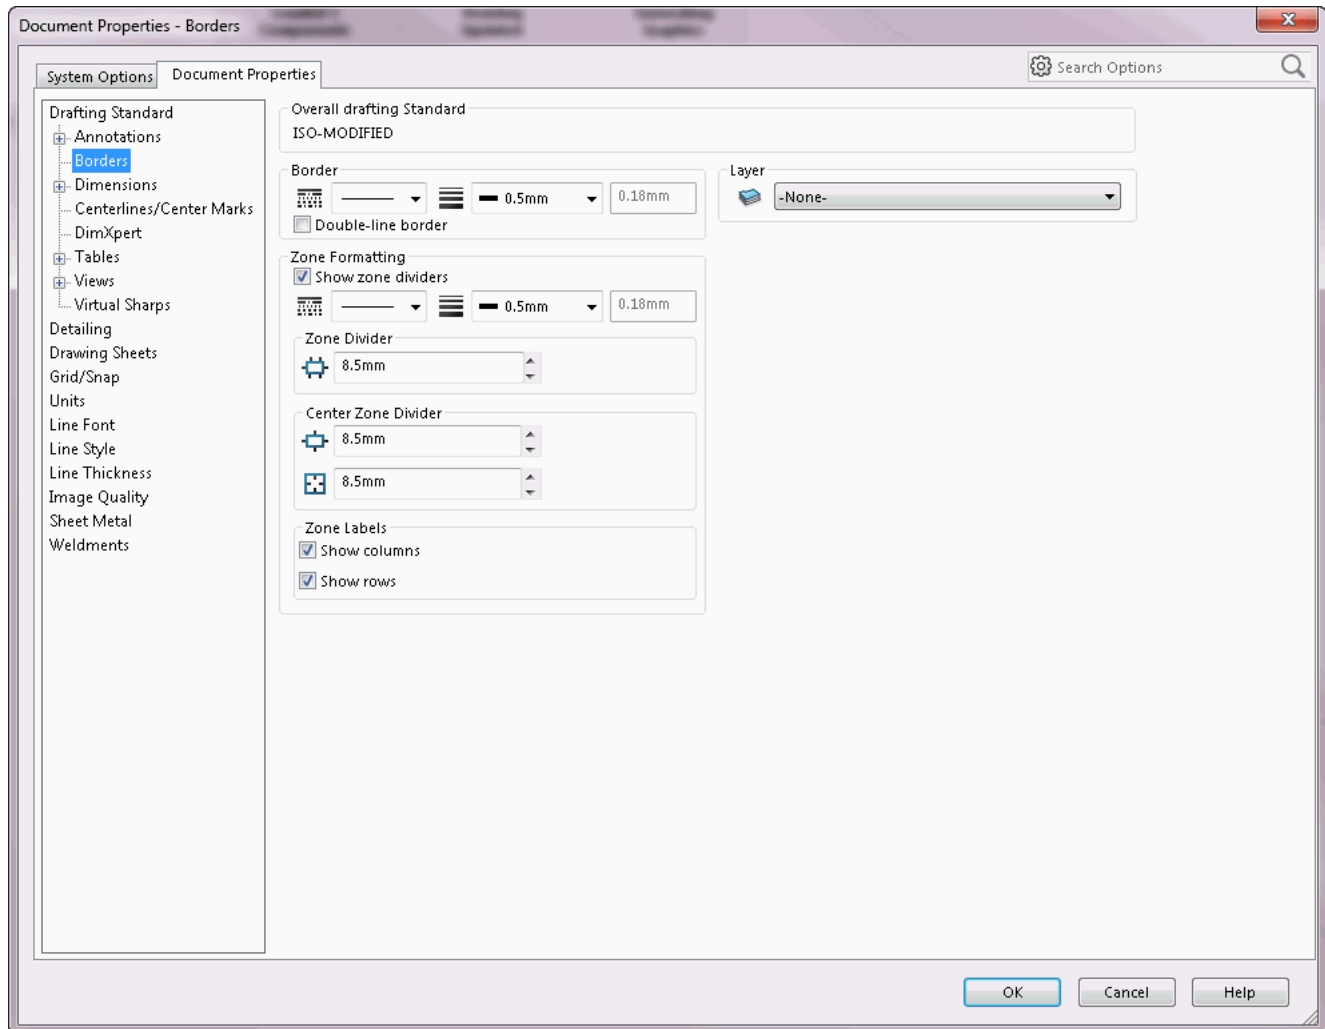

Setting	Get/Set Methods	Return Value or <Value>	Comments
Border - Line Style of Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBorderLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBorderLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies the style of border lines
Border - Line Width of Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBorderLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBorderLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies the thickness of border lines
Border - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderLeaderCustomLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderLeaderCustomLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom thickness of border lines; sets Custom Thickness to the specified thickness and Line Width of Border to Custom Size
Border - Double-line border	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBorderDoubleLine, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBorderDoubleLine, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use double-line borders
Zone Formatting - Show zone dividers	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBorderShowZoneDividers, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBorderShowZoneDividers, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to show zone dividers

Zone Formatting - Line Style of Zone Divider	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBorderZoneDividerLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBorderZoneDividerLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies the style of zone divider lines
Zone Formatting - Line Width of Zone Divider	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBorderZoneDividerLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBorderZoneDividerLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies the thickness of zone divider lines
Zone Formatting - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderZoneDividerCustomLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderZoneDividerCustomLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom thickness of zone divider lines; sets Custom Thickness to the specified thickness and Line Width of Zone Divider to Custom Size
Zone Divider - Length of Zone Divider	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderZoneDividerLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderZoneDividerLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the length of zone dividers
Center Zone Divider - Length of outer Center Zone Divider	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderOuterCenterZoneDividerLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderOuterCenterZoneDividerLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the length of outer center zone dividers
Center Zone Divider - Length of inner Center Zone Divider	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderInnerCenterZoneDividerLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBorderInnerCenterZoneDividerLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the length of inner center zone dividers
Zone Labels - Show columns	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBorderShowColumns, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBorderShowColumns, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to show column zone labels
Zone Labels - Show rows	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBorderShowRows, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingBorderShowRows, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to show row zone labels
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swBorderLayer, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swBorderLayer, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Valid Options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT"	Depending on the drawing, some options may not apply


Document Properties > Centerlines/Center Marks

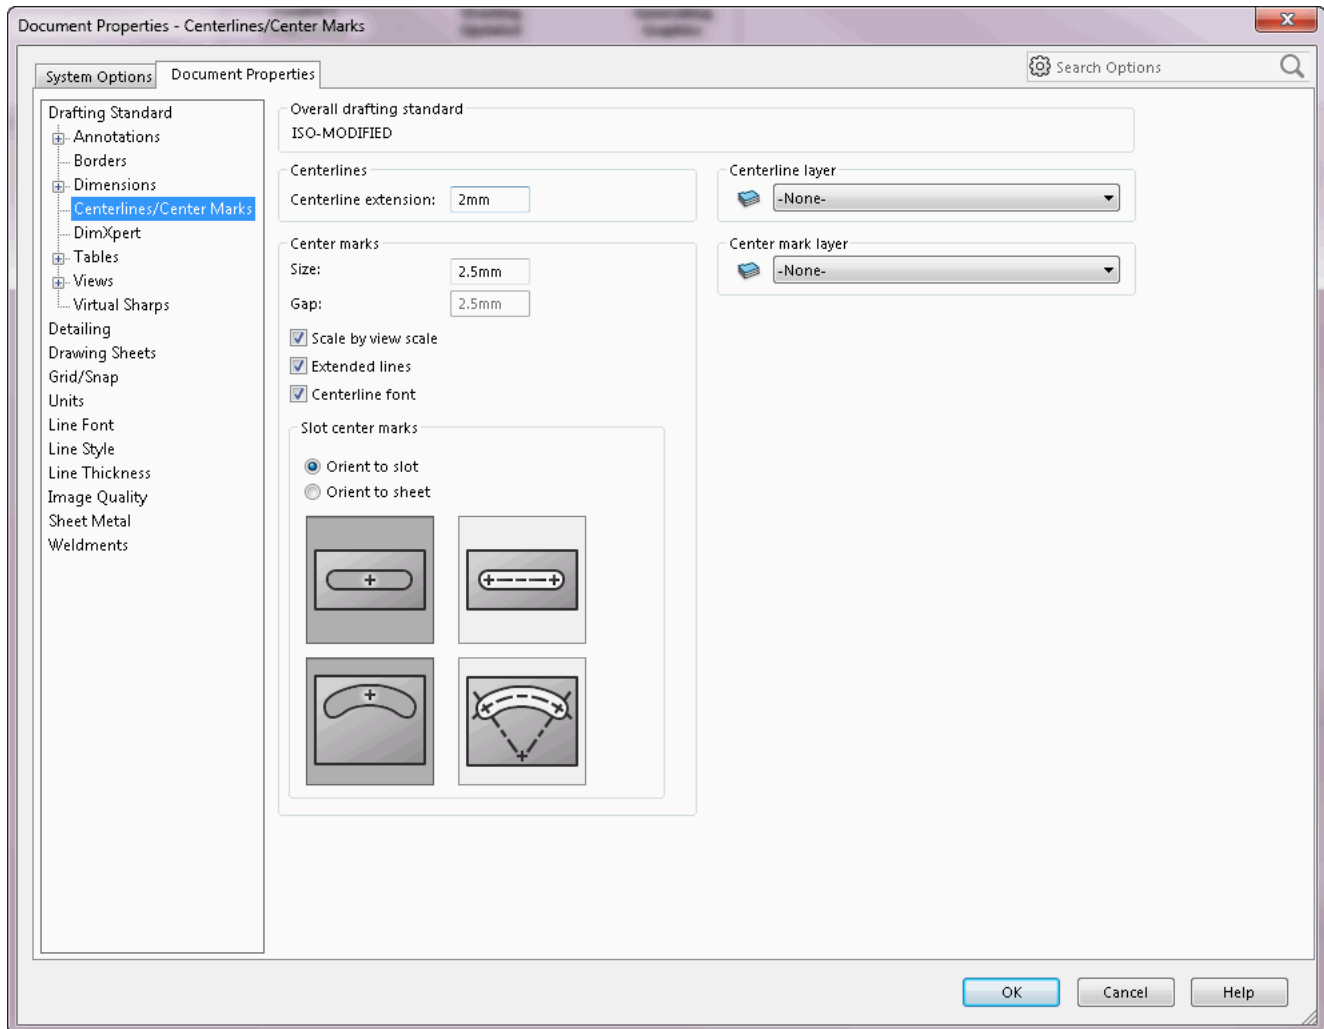

Setting	Get/Set Methods	Return Value or <Value>	Comments
Centerlines - Centerline extension	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingCenterlineExtension, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingCenterlineExtension, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies length to extend the centerline beyond section geometry when in a drawing view
Center marks - Size	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingCenterMarkSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingCenterMarkSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies the size of center marks in drawings
Center marks - Gap	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingCenterMarkGap, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingCenterMarkGap, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies the center mark gap size
Center marks - Scale by view scale	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkScaleByViewScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkScaleByViewScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to scale center marks by the view scale
Center marks - Extended lines	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkShowLines, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkShowLines, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display center mark extension lines

Center marks - Centerline font	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkUseCenterLine, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterMarkUseCenterLine, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether lines in center marks use font specified for centerlines
Slot center marks - Orient to slot or Orient to sheet	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swCenterLineMarkOrient, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swCenterLineMarkOrient, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swCenterLineMarkOrient_e.<Value>)	See swCenterLineMarkOrient_e for valid options	Specifies the orientation of the centerline marks
Slot center marks - Place mark at centers of straight slots	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCenterLineMarkLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCenterLineMarkLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies placement of marks at centers of straight slots
Slot center marks - Place mark at ends of straight slots	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCenterLineMarkEndsOnlyLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCenterLineMarkEndsOnlyLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies placement of marks at ends of straight slots; only available with Slot center marks - Orient to slot option
Slot center marks - Place mark at centers of arc slots	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCenterLineMarkCircular, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCenterLineMarkCircular, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies placement of marks at centers of arc slots
Slot center marks - Place mark at ends of arc slots	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCenterLineMarkEndsOnlyCircular, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCenterLineMarkEndsOnlyCircular, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies placement of marks at ends of arc slots; only available with Slot center marks - Orient to slot option
Centerline layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swCenterLineLayer, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swCenterLineLayer, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Valid Options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT"	Depending on the drawing, some options may not apply
Center mark layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swCenterMarkLayer, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swCenterMarkLayer, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Valid Options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT"	Depending on drawing, some options may not apply

Document Properties > Model Display

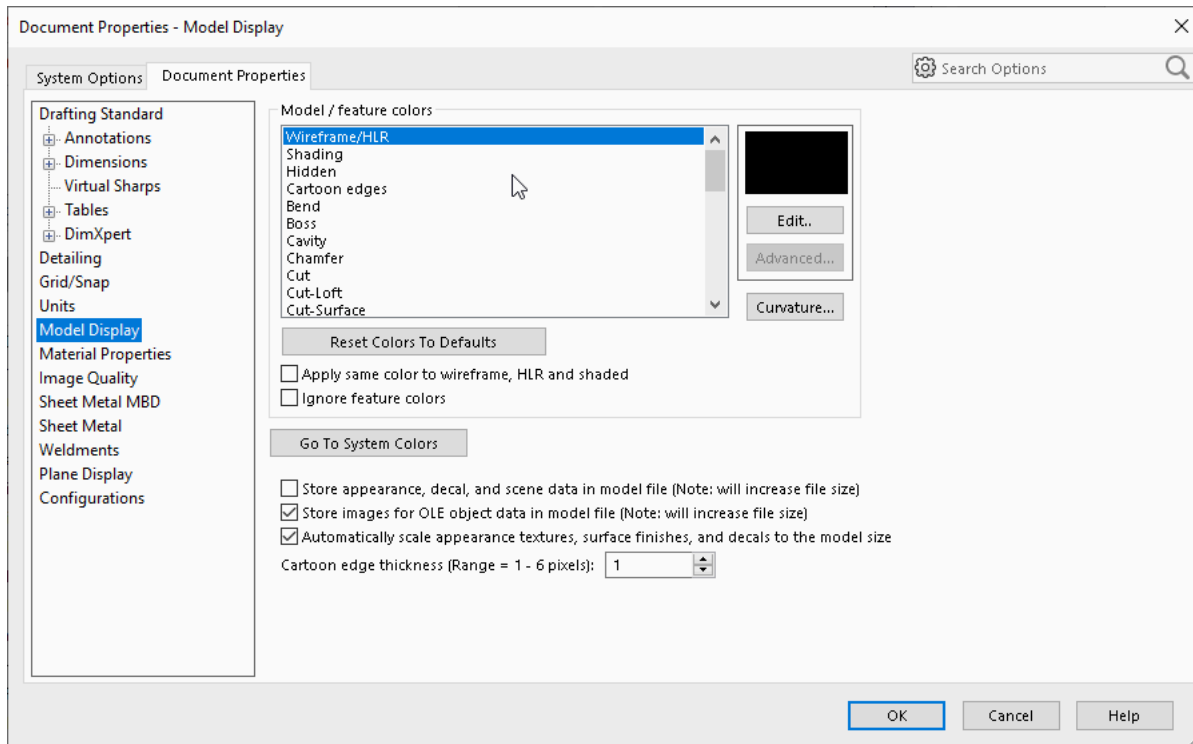


Setting	Get/Set Methods	Return Value or <Value>	Comments
Model/Feature colors - Wireframe/HLR	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorWireFrame, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorWireFrame, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Shading	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorShading, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorShading, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Hidden	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorHidden, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorHidden, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Bend	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatBend, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatBend, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Boss	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatBoss, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatBoss, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Cavity	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatCavity, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatCavity, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Chamfer	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatChamfer, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatChamfer, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Cut	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatCut, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatCut, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Cut-Loft	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatLoftCut, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatLoftCut, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Cut-Surface	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatSurfCut, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatSurfCut, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	

Model/Feature colors - Gusset	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatGusset, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatGusset, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - End cap	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatEndCap, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatEndCap, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Wrap	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatWrap, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDocumentColorFeatWrap, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See IColorTable for valid options	
Model/Feature colors - Apply same color to wireframe, HLR, and shaded	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swColorsWireframeHLRShadedSame, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swColorsWireframeHLRShadedSame, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to apply same color to wireframe, HLR, and shaded
Model/Feature colors - Ignore feature colors	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swIgnoreFeatureColors, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swIgnoreFeatureColors, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only; specifies whether to ignore feature colors
Store appearance, decal, and scene data in model file (Note: will increase file size)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStoreImagesWithModel, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStoreImagesWithModel, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to store images with model
Store images for OLE object data in model file (Note: will increase file size)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swStoreOLEImagesWithModel, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swStoreOLEImagesWithModel, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts and assemblies only; Default value is true
Automatically scale appearance textures, surface finishes, and decals to the model size	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoScaleTextureSFD decalsToModelSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAutoScaleTextureSFD decalsToModelSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	
Cartoon edge thickness (Range = 1 - 6 pixels)	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swCartoonEdgeThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swCartoonEdgeThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	1 <= Integral number of pixels <= 6	For parts and assemblies only

Document Properties > Colors > Advanced Properties


The Advanced Properties dialog appears when you click **Advanced...** in Document Properties > Colors. The **Advanced...** button is enabled only when Shading is selected in the **Model/feature colors** combo box.

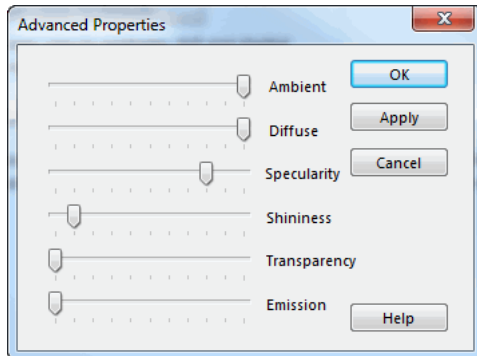

Setting	Get/Set Methods	Return Value or <Value>	Comments
Ambient	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedAmbient, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedAmbient, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0 and 1	Specifies how light is reflected and scattered by other objects
Diffuse	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedDiffuse, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedDiffuse, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0 and 1	Specifies how light is scattered equally in all directions on the surface
Specularity	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedSpecularity, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedSpecularity, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0 and 1	Specifies how surfaces exhibit highlights
Shininess	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedShininess, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedShininess, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0 and 1	Specifies how solid objects alternate between a glossy, reflective surface and a dull, matte surface
Transparency	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedTransparency, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedTransparency, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0 and 1	Specifies how much light passes through the surface
Emission	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedEmission, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDocumentColorAdvancedEmission, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0 and 1	Specifies how light projects from the surface

Document Properties > Colors > Curvature


The Curvature dialog appears when you click **Curvature...** in Document Properties > Colors. Click **Help** on the Curvature dialog to learn more about Curvature settings.

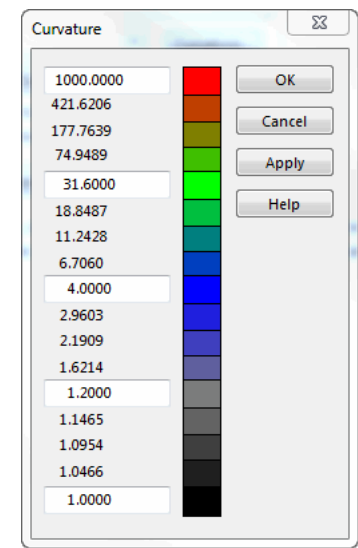

Setting	Get/Set Methods	Return Value or <Value>	Comments
Curvature value 1	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue1, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue1, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0.0005 and 1000, inclusive	Maps the greatest curvature value to red
Curvature value 2	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue2, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue2, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0.0005 and 1000, inclusive	Maps the second greatest curvature value to green
Curvature value 3	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue3, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue3, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0.0005 and 1000, inclusive	Maps the third greatest curvature value to blue
Curvature value 4	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue4, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue4, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0.0005 and 1000, inclusive	Maps the fourth greatest curvature value to gray
Curvature value 5	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue5, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swCurvatureValue5, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value between 0.0005 and 1000, inclusive	Maps the least curvature value to black

Document Properties > Configurations

Configurations settings are not supported in SOLIDWORKS Design connected to the 3DEXPERIENCE platform.

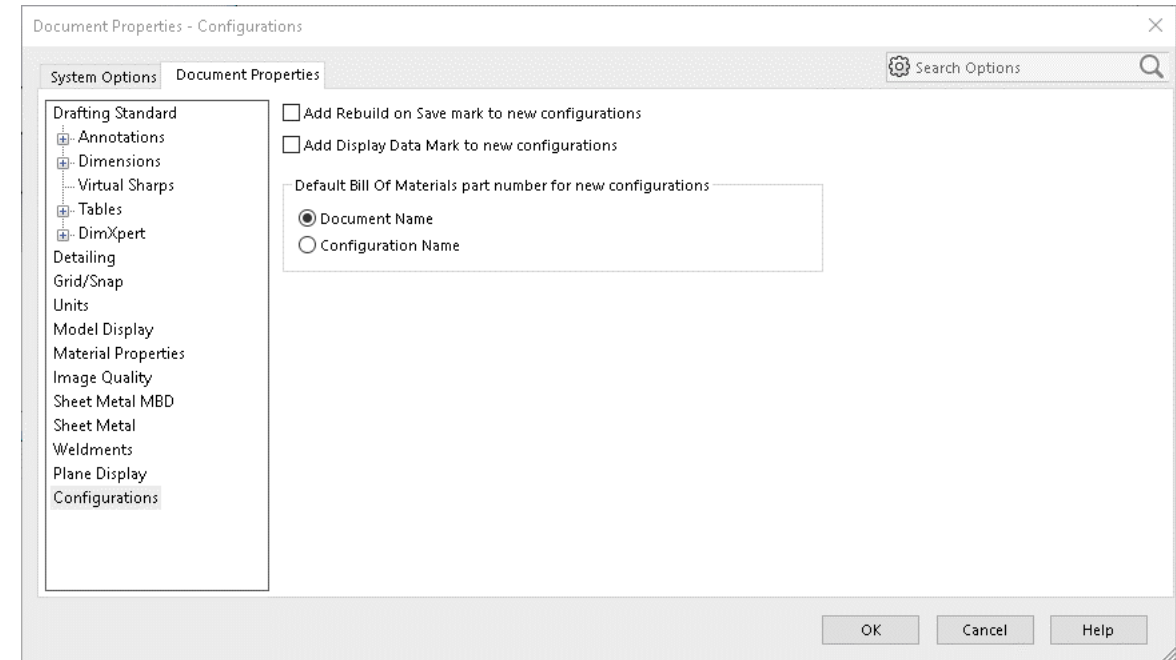

Setting	Get/Set Methods	Return Value or <Value>
Add Rebuild/Save mark to new configurations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swRebuildSaveNewConfig, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swRebuildSaveNewConfig, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value
Add Display Data Mark to new configurations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDataMarkNewConfig, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDataMarkNewConfig, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value
Default Bill Of Materials part number for new configurations	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDefaultBOMPartNumberForNewConfig, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDefaultBOMPartNumberForNewConfig, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDefaultBOMPartNumberSource_e.<Value>)	swDefaultBOMPartNumberSource_e .swDefaultBOMPartNumberSource - or - swDefaultBOMPartNumberSource_e.swDefaultBOMPartNumberSource

For drawings:

Document Properties - Detailing

System OptionsDocument PropertiesSearch Options

Drafting Standard

Annotations

Borders

Dimensions

Centerlines/Center Marks

DimXpert

Tables

Views

Virtual Sharps

Detailing

Drawing Sheets

Grid/Snap

Units

Line Font

Line Style

Line Thickness

Image Quality

Sheet Metal

Weldments

Performance

Display filter

☒Cosmetic threads

☐Shaded cosmetic threads

☒Datums

☒Geometric tolerances

☒Datum targets

☒Notes

☒Feature dimensions

☒Surface finish

☒Reference dimensions

☒Welds

☒DimXpert dimensions

☐Display all types

Text scale: 1:1

☐Always display text at the same size

☐Display items only in the view in which they are created

☒Display annotations

☐Use assembly setting for all components

☐Hide dangling dimensions and annotations

☐Use model color for HLR/HLV in drawings

☐Use model color for HLR/HLV with SpeedPak configurations

☒See through transparent components in HLR/HLV

☐Link child view to parent view configuration

Hatch density limit: 5000

☒Highlight associated elements on reference dimension selection

Comment background colors

Description

High Priority

Low Priority

Complete

Reminder

Reset To Default Name

Import annotations

☐From entire assembly

Auto insert on view creation

☒Center marks-holes -part

☐Center marks-fillets -part

☐Center marks-slots -part

☒Dowel symbols -part

☐Center marks-holes -assembly

☐Center marks-fillets -assembly

☐Center marks-slots -assembly

☐Cosmetic Threads - assembly (may affect performance)

☐Dowel symbols -assembly

☒Connection Lines to hole patterns with center marks

☐Centerlines

☐Balloons

☐Dimensions marked for drawing

Cosmetic thread display

☐High quality

Area hatch display

☒Show halo around annotations

View break lines

Gap: 10mm

Extension: 3.18mm

☐Scale by view scale for Jagged Style

Center of mass

Symbol size: 8mm


☐Scale by view scale

OK

Cancel

Help

For parts and assemblies:

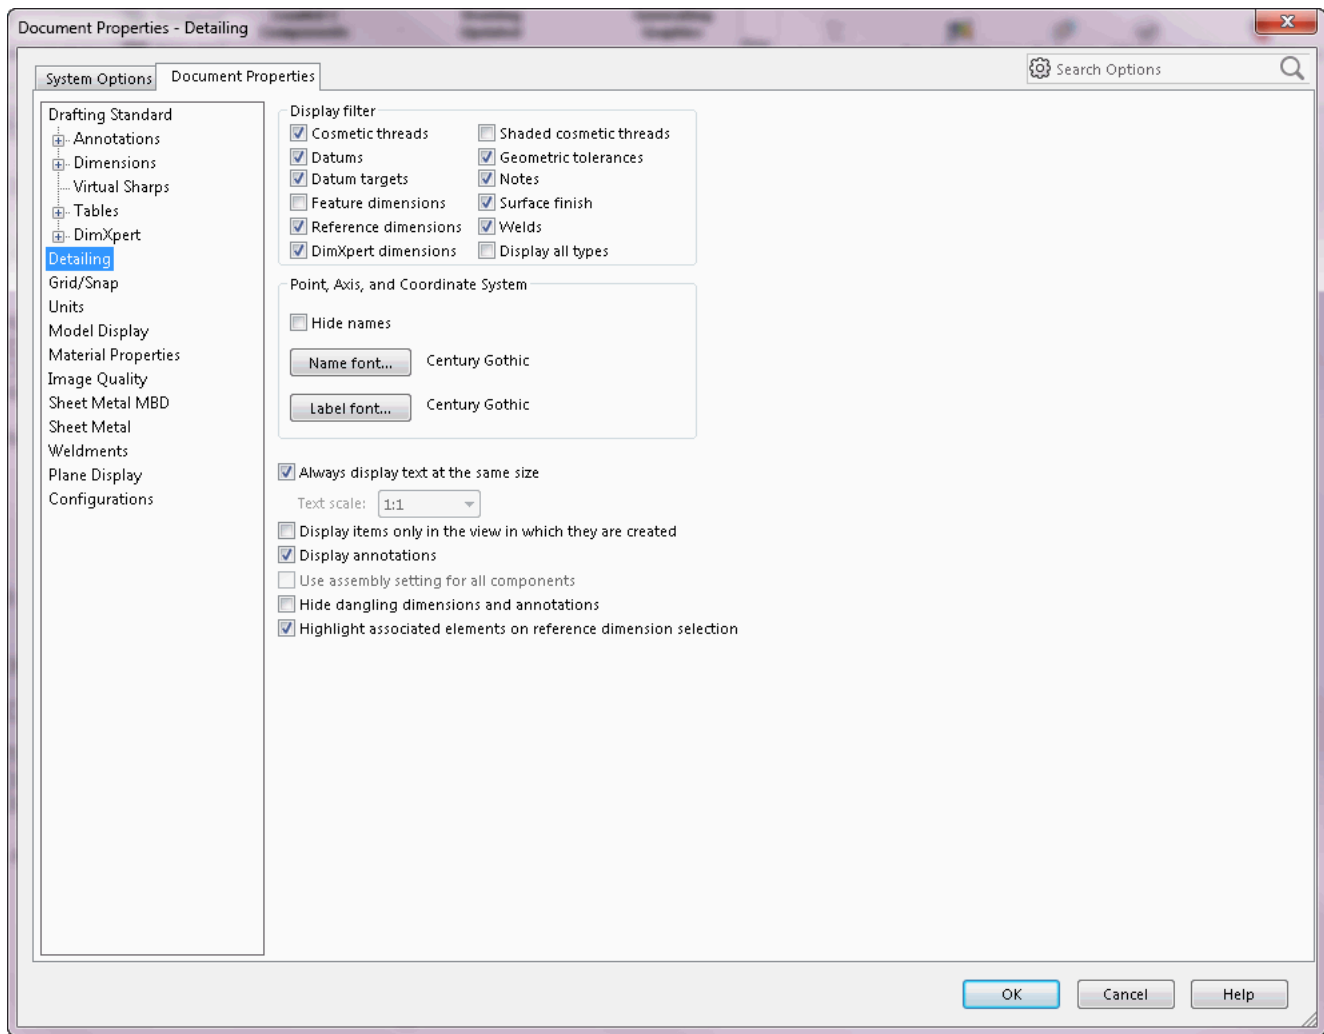

Setting	Get/Set Methods	Return Value or <Value>	Comments
Display filter - Cosmetic threads	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayCosmeticThreads, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayCosmeticThreads, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display cosmetic threads. Depends on swDisplayAnnotations setting
Display filter - Datums	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDatums, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDatums, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display datums. Depends on swDisplayAnnotations setting
Display filter - Datum targets	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDatumTargets, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDatumTargets, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display datum targets. Depends on swDisplayAnnotations setting
Display filter - Feature dimensions	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayFeatureDimensions, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayFeatureDimensions, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display feature dimensions. Depends on swDisplayAnnotations setting
Display filter - Reference dimensions	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayReferenceDimensions, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayReferenceDimensions, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display reference dimensions. Depends on swDisplayAnnotations setting
Display filter - DimXpert dimensions	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDimXpertDimensions, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayDimXpertDimensions, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to show DimXpert dimensions
Display filter - Shaded cosmetic threads	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayShadedCosmeticThreads, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayShadedCosmeticThreads, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display cosmetic threads shaded or not
Display filter - Geometric tolerances	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayGeometricTolerances, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayGeometricTolerances, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display geometric tolerances. Depends on swDisplayAnnotations setting

Display filter - Notes	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayNotes, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayNotes, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display notes. Depends on swDisplayAnnotations setting
Display filter - Surface finish	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplaySurfaceFinishSymbols, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplaySurfaceFinishSymbols, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display surface-finish symbols. Depends on swDisplayAnnotations setting
Display filter - Welds	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayWeldSymbols, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayWeldSymbols, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display weld symbols. Depends on swDisplayAnnotations setting
Display filter - Display all types	See Comments	See Comments	Not currently available in SOLIDWORKS API
Point, Axis, and Coordinate System - Hide names	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPointAxisCoordSystemHideNames, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPointAxisCoordSystemHideNames, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to hide names of points, axes, and coordinate systems (parts and assemblies only)
Point, Axis, and Coordinate System - Name font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swPointAxisCoordSystemNameFontTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swPointAxisCoordSystemNameFontTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for valid font options	To set font property values, implement ITextFormat, set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method (parts and assemblies only)
Point, Axis, and Coordinate System - Label font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swPointAxisCoordSystemLabelFontTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swPointAxisCoordSystemLabelFontTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for valid font options	To set font property values, implement ITextFormat, set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method (parts and assemblies only)
Text scale - numerator	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swAnnotationTextScaleNumerator, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swAnnotationTextScaleNumerator, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies numerator for annotation text scale
Text scale - denominator	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swAnnotationTextScaleDenominator, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swAnnotationTextScaleDenominator, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies denominator for annotation text scale
Always display text at the same size	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayTextAtSameSizeAlways, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayTextAtSameSizeAlways, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display all annotations and dimensions at same size regardless of zoom. Drawings have this option disabled and always zoom the text height
Display items only in the view in which they are created	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayOnlyInViewOfCreation, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayOnlyInViewOfCreation, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to only display an annotation when model is viewed in same orientation as when annotation was added
Display annotations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAnnotations, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAnnotations, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display annotations
Use assembly setting for all components	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAnnotationsUseAssemblySettings, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDisplayAnnotationsUseAssemblySettings, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies only. Specifies whether to display all annotations for the assembly document, regardless of the setting in the individual part documents
Hide dangling dimensions and annotations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swAnnotationDisplayHideDanglingDim, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swAnnotationDisplayHideDanglingDim, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to hide dangling dimensions and annotations in drawings
Highlight associated elements on reference dimension selection	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingHighlightElements, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingHighlightElements, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to highlight elements associated with selected reference dimensions (for parts and assemblies only)
Use model color for HLR/HLV in drawings	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseModelColorInDrawings, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseModelColorInDrawings, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use model color for hidden lines that are removed/visible
Use model color for HLR/HLV with SpeedPak configurations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUseSpeedpakModelColorInDrawings, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUseSpeedpakModelColorInDrawings, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to use model color for HLR/HLV with SpeedPak configurations; only available when a drawing of an assembly is open
See through transparent components in HRL/HLV	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSeeThroughTransparentComponents, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSeeThroughTransparentComponents, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For drawings only

Link child view to parent view configuration	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingLinkParentViewConfiguration, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingLinkParentViewConfiguration, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to link the child view to parent view configurations
Hatch density limit	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingHatchDensityLimit, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingHatchDensityLimit, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	For drawings only
Import annotations - From entire assembly	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingImportEntireAssemblyAnnotations, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingImportEntireAssemblyAnnotations, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to import annotations from the entire assembly
Auto insert on view creation - Center marks-holes -part	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForHoles, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForHoles, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert center marks for holes in parts
Auto insert on view creation - Center marks-fillets -part	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForFillets, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForFillets, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert center marks for fillets in parts
Auto insert on view creation - Center marks-slots -part	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForSlots, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForSlots, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert center marks for slots in parts
Auto insert on view creation - Cosmetic Threads - assembly (may affect performance)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCosmeticThreadForHolesAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCosmeticThreadForHolesAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies, specifies whether to automatically insert cosmetic threads
Auto insert on view creation - Dowel symbols - part	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertDowelSymbols, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertDowelSymbols, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert dowel symbols in parts
Auto insert on view creation - Center marks-holes -assembly	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForHolesAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForHolesAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert center marks for holes in assemblies
Auto insert on view creation - Center marks-fillets -assembly	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForFilletsAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForFilletsAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert center marks for fillets in assemblies
Auto insert on view creation - Center marks-slots -assembly	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForSlotsAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterMarksForSlotsAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert center marks for slots in assemblies
Auto insert on view creation - Dowel Symbols - assembly	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertDowelSymbolsAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertDowelSymbolsAsm, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert dowel symbols in assemblies
Auto insert on view creation - Connection Lines to hole patterns with center marks	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingConnectionLinesHolePatternsCenterMarks, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingConnectionLinesHolePatternsCenterMarks, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert connection lines to hole patterns with center marks
Auto insert on view creation - Centerlines	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterLines, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertCenterLines, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically add centerlines to model faces with parallel edges
Auto insert on view creation - Balloons	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertBalloons, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertBalloons, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to automatically insert balloons in new drawing views
Auto insert on view creation - Dimensions marked for drawing	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertDimsMarkedForDrawing, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoInsertDimsMarkedForDrawing, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to add dimensions to models, without duplicates in multiple views
Cosmetic thread display - High quality	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCThreadDisplayHighQuality, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCThreadDisplayHighQuality, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to hide or show cosmetic threads
Area hatch display - Show halo around annotations	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowHaloAroundAnnotation, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingShowHaloAroundAnnotation, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display a halo of space around dimensions or annotations that belong to the drawing view or a sketch and are on top of an area hatch
View break lines - Gap	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBreakLineGap, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBreakLineGap, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies size of the gap between break lines in a broken view in a drawing
View break lines - Extension	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBreakLineExtension, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingBreakLineExtension, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value in meters	Specifies length of the break lines beyond the model geometry
View break lines - Scale by view	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingScaleForJaggedStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	Boolean value	Specifies whether to scale the view break

scale for Jagged Style	IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingScaleForJaggedStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)		lines by the view scale for the Jagged Style
Center of mass - Symbol size	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingCenterOfMassSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingCenterOfMassSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies size of center of mass
Center of mass - Scale by view scale	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterOfMassScaleByView, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingCenterOfMassScaleByView, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to to scale the center of mass symbol by the view scale