


SOLIDWORKS Enumerations (swconst) — Examples (4/8):


DP_SheetMetal-DP_ViewLabels-Other

SOLIDWORKS API Documentation (converted from CHM)


For drawings:

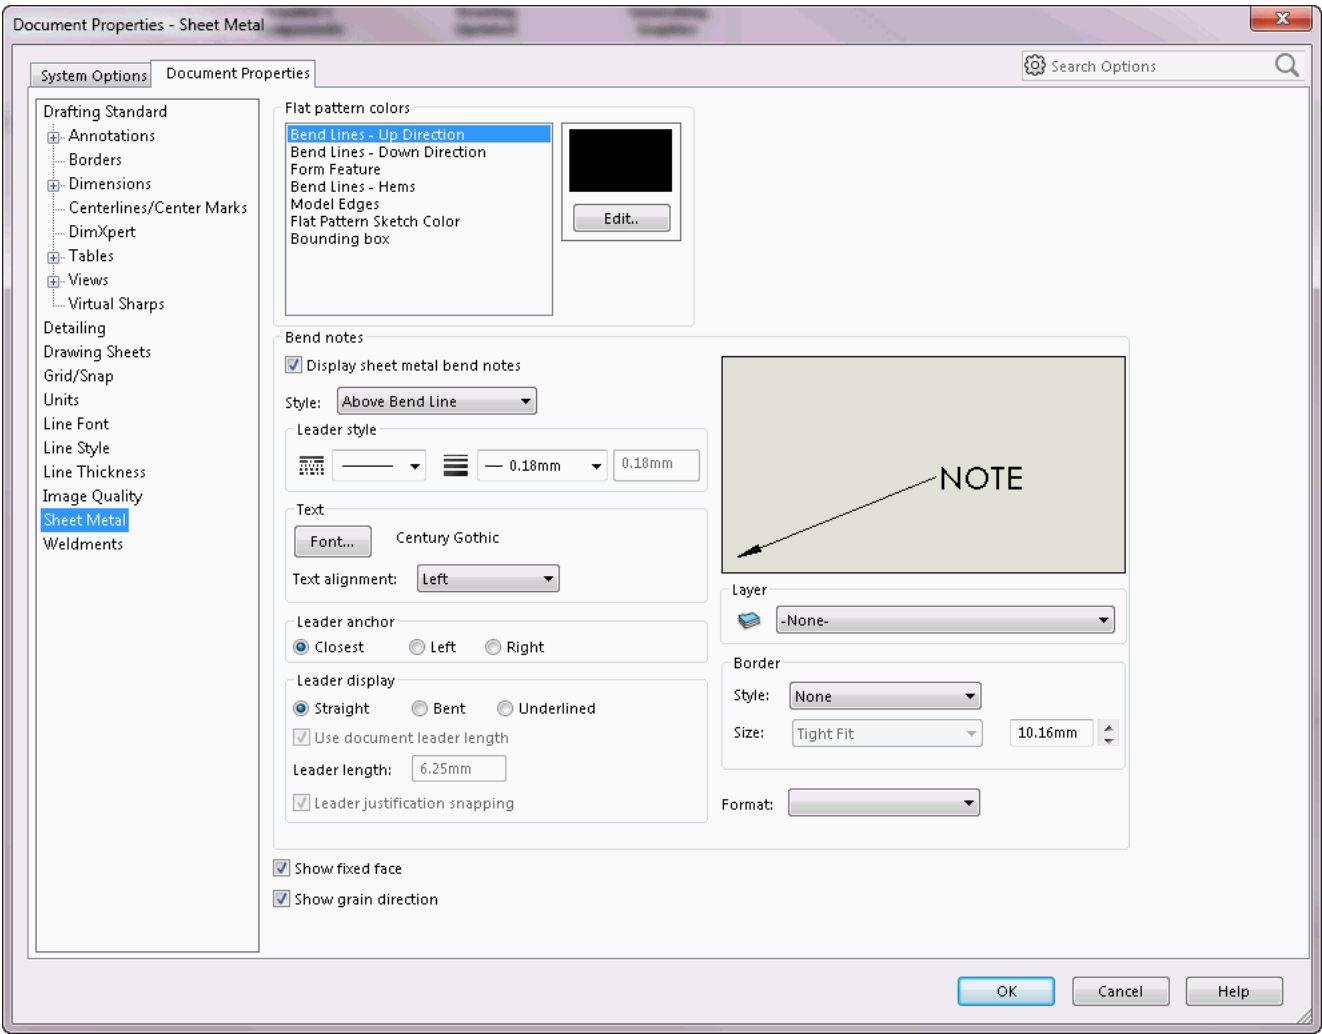

For assemblies:

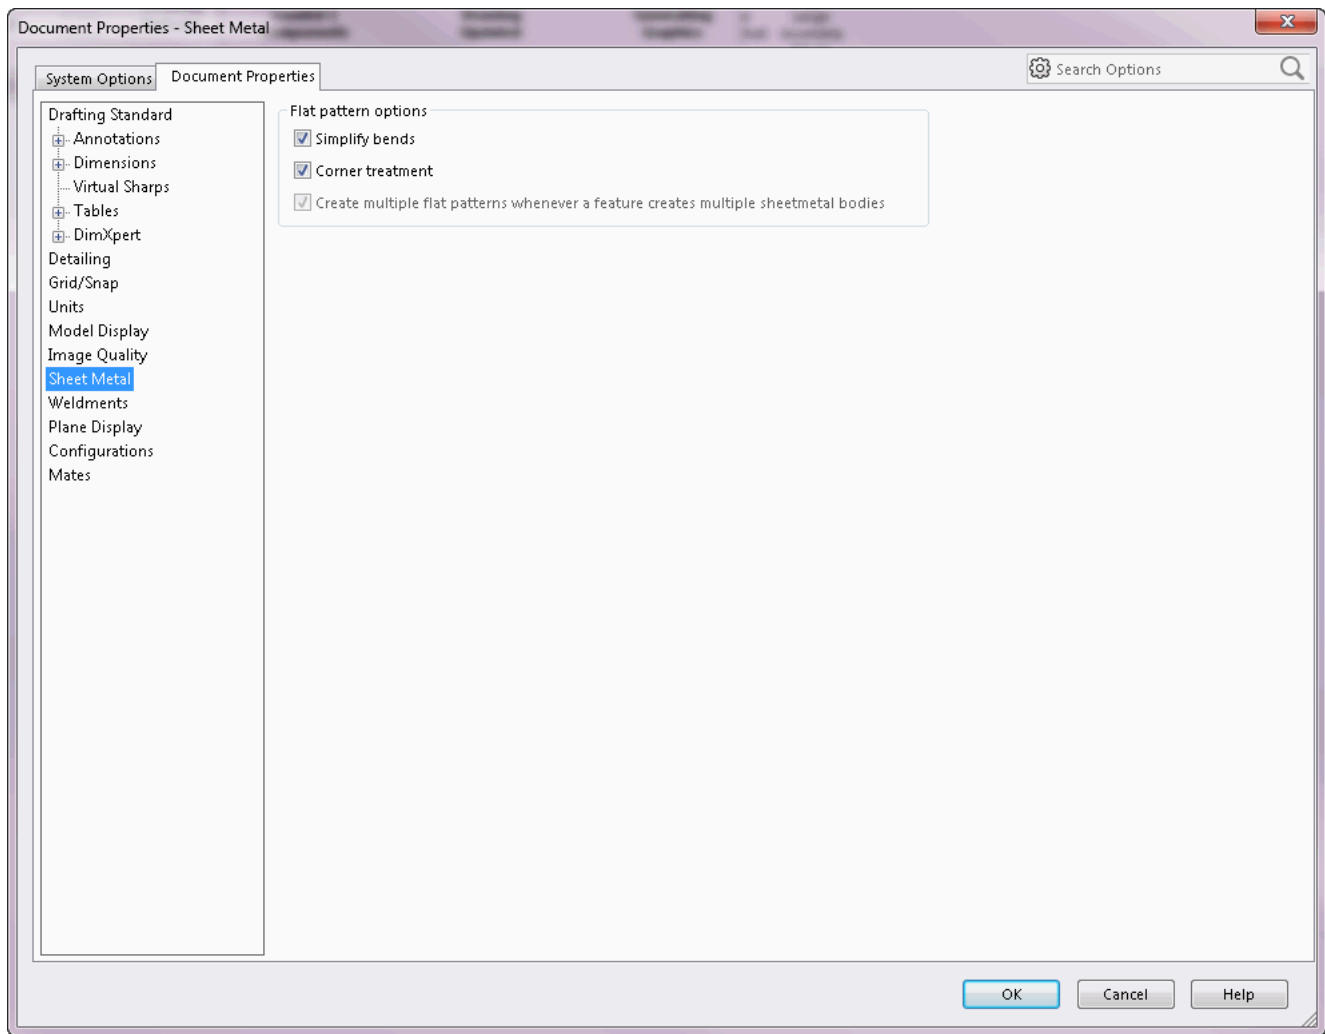


For parts:

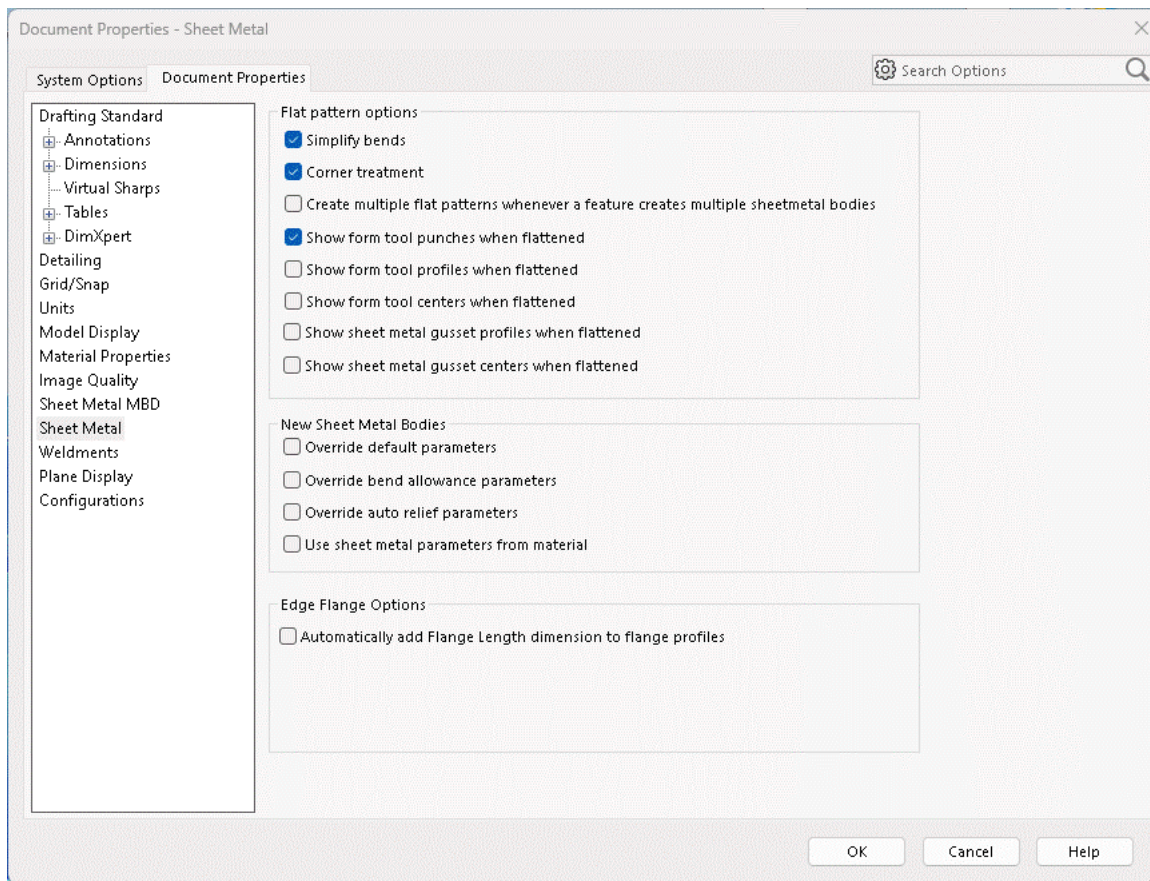

Setting	Get/Set Methods	Return Value or <Value>	
Flat pattern colors - Bend Lines - Up Direction	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBendLinesUp, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBendLinesUp, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	For drawings or
Flat pattern colors - Bend Lines - Down Direction	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBendLinesDown, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBendLinesDown, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	For drawings or
Flat pattern colors - Form Feature	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorFormFeature, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorFormFeature, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	For drawings or
Flat pattern colors - Bend Lines - Hems	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBendLinesHems, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBendLinesHems, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	For drawings or
Flat pattern colors - Model Edges	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorModelEdges, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorModelEdges, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	For drawings or
Flat pattern colors - Flat Pattern Sketch Color	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorFlatPatternSketch, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorFlatPatternSketch, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	For drawings or
Flat pattern colors - Bounding box	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBoundingBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBoundingBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	For drawings or
Bend notes - Display sheet metal bend notes	IModelDocExtension.GetUserPreferenceToggle (swUserPreferenceToggle_e.swShowSheetMetalBendNotes, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceToggle (swUserPreferenceToggle_e.swShowSheetMetalBendNotes, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For drawings or Specifies wheth
Bend notes - Style	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendNoteStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendNoteStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBendNoteStyle_e.<Value>)	See swBendNoteStyle_e for valid options	For drawings or Specifies where lines
Bend notes - Leader style - Line style	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension.SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesLeaderLineStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	For drawings or
Bend notes - Leader style	IModelDocExtension.GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	See swLineWeights_e for valid options	For drawings or

- Line thickness	IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)		If set to Custom style - Line thick
Bend notes - Leader style - Line thickness - Custom Size	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalBendNotesLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalBendNotesLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	For drawings or Specifies a cust sheet metal dra
Bend notes - Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swSheetMetalBendNotesTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swSheetMetalBendNotesTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	For drawings or To set font prop set the appropri pass the ITextF
Bend notes - Text - Text alignment	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesTextAlignment, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesTextAlignment, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swTextJustification_e.<Value>)	See swTextJustification_e for valid options; None is not a valid option	For drawings or
Bend notes - Leader anchor	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesLeaderAnchor, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesLeaderAnchor, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderSide_e.<Value>)	See swLeaderSide_e for valid options	For drawings or
Bend notes - Leader display	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesLeaderDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesLeaderDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderStyle_e.<Value>)	See swLeaderStyle_e for valid options	For drawings or
Bend notes - Leader display - Use document leader length	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalBendNotesUseDocLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalBendNotesUseDocLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For drawings or
Bend notes - Leader display - Leader length	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalBendNotesLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalBendNotesLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	For drawings or
Bend notes - Leader display - Leader justification snapping	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalBendNotesLeaderJustificationSnapping, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalBendNotesLeaderJustificationSnapping, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For drawings or
Bend notes - Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swSheetMetalBendNotesLayer, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swSheetMetalBendNotesLayer, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Valid Options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT"	For drawings or
Bend notes - Border - Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesBorderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesBorderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBalloonStyle_e.<Value>)	See swBalloonStyle_e for valid options; swBS_SplitCir and swBS_Underline are not valid options	For drawings or
Bend notes - Border - Size	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesBorderSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalBendNotesBorderSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swSheetMetalBendNotesBorderSize_e.<Value>)	See swSheetMetalBendNotesBorderSize_e for valid options	For drawings or If set to swSheetMetal you must also s Custom Size
Bend notes - Border - Size - Custom Size	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalBendNotesBorderSizeCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalBendNotesBorderSizeCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	For drawings or
Show fixed face	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowFixedFace, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowFixedFace, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For drawings onl
Show grain direction	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowGrainDirection, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowGrainDirection, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For drawings onl
Flat pattern options - Simplify bends	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_SimplifyBends, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_SimplifyBends, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies
Flat pattern options - Corner treatment	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_CornerTreatment, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_CornerTreatment, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies
Flat pattern options - Create multiple flat patterns whenever a feature creates multiple sheet metal bodies	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_DisableSplitters, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_DisableSplitters, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For assemblies or
Flat pattern options - Show form tool punches when flattened	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowPunches, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowPunches, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only
Flat pattern options - Show form tool profiles when flattened	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowProfiles, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowProfiles, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only
Flat pattern options -	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swFlatPatternOpt_ShowCenters, swUserPreferenceOption_e.swDetailingNoOptionSpecified)	Boolean value	For parts only

Show form tool centers when flattened	[ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swFlatPatternOpt_ShowCenters, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)		
Flat pattern options - Show sheet metal gusset profiles when flattened	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swFlatPatternOpt_WhenFlattenedShowGussetProfiles, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swFlatPatternOpt_WhenFlattenedShowGussetProfiles, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only
Flat pattern options - Show sheet metal gusset centers when flattened	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swFlatPatternOpt_WhenFlattenedShowGussetCenters, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swFlatPatternOpt_WhenFlattenedShowGussetCenters, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only
New Sheet Metal Bodies - Override default parameters	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetMetalOverrideTemplateParam, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetMetalOverrideTemplateParam, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only
New Sheet Metal Bodies - Override bend allowance parameters	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetMetalOverrideTemplateAllowance, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetMetalOverrideTemplateAllowance, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only
New Sheet Metal Bodies - Override auto relief parameters	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetMetalOverrideTemplateRelief, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetMetalOverrideTemplateRelief, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only
New Sheet Metal Bodies - Use sheet metal parameters from material	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetMetalUseMaterial, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetMetalUseMaterial, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only
Edge Flange Options - Automatically add Flange Length dimension to flange profiles	[ModelDocExtension::GetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetDimensionFlangeSketch, swUserPreferenceOption_e.swDetailingNoOptionSpecified) [ModelDocExtension::SetUserPreferenceToggle](swUserPreferenceToggle_e.swSheetDimensionFlangeSketch, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	For parts only

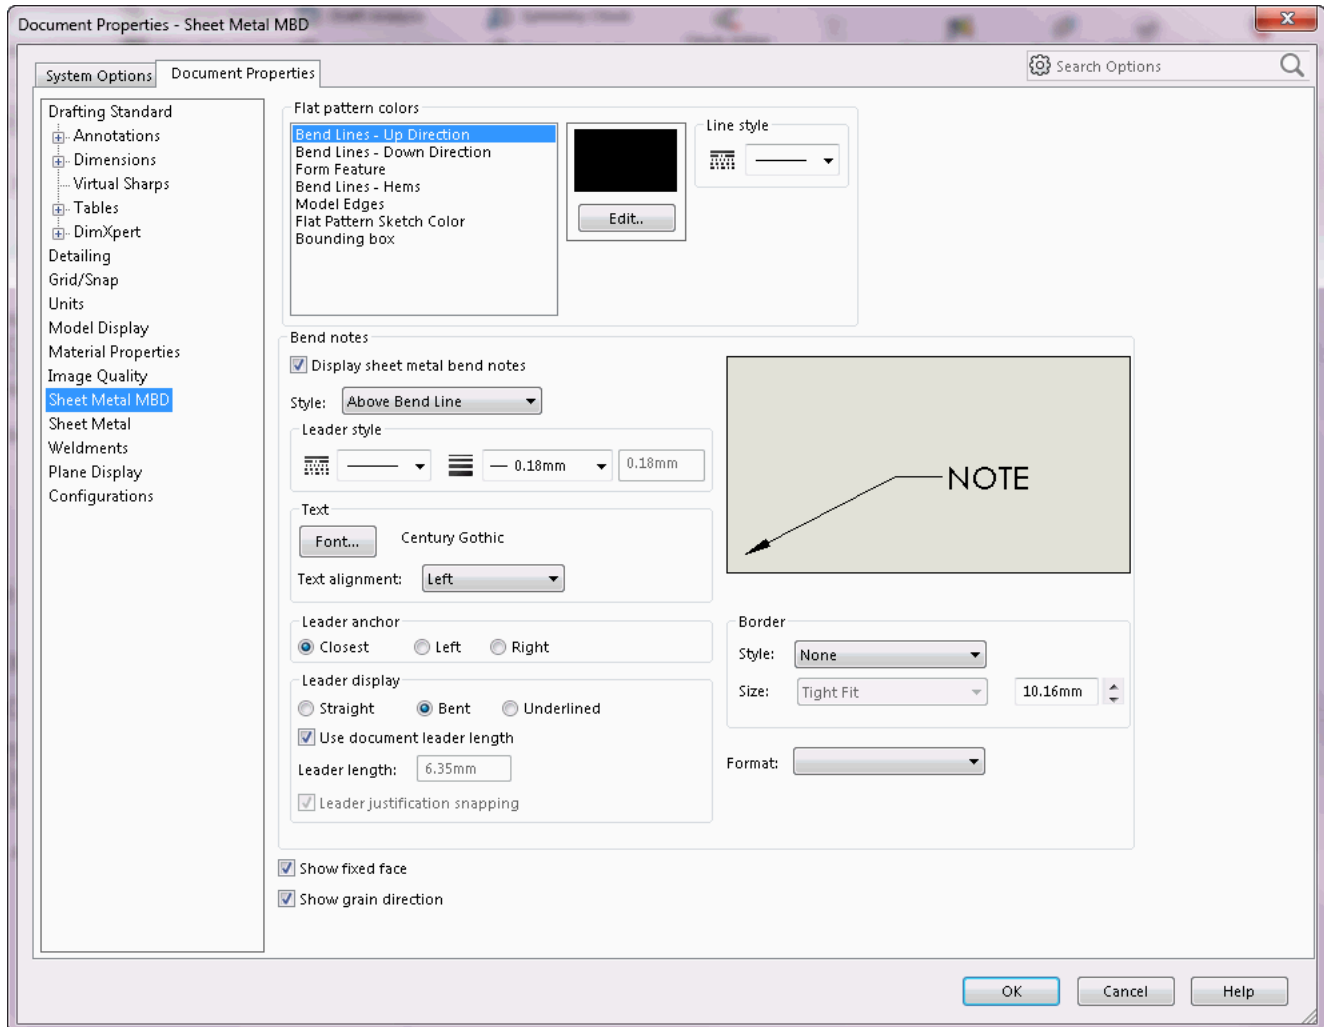


Setting	Get/Set Methods	Return Value or <Value>	
Flat pattern colors - Bend Lines - Up Direction	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsBendLinesUpDirection, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsBendLinesUpDirection, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	
Flat pattern colors - Bend Lines - Up Direction - Line style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLineStyle_BendLinesUp, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLineStyle_BendLinesUp, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	Any line style as defined in swLineStyles_e except swLineDEFAULT	
Flat pattern colors - Bend Lines - Down Direction	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsBendLinesDownDirection, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsBendLinesDownDirection, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	
Flat pattern colors - Bend Lines - Down Direction - Line style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLineStyle_BendLinesDown, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLineStyle_BendLinesDown, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	Any line style as defined in swLineStyles_e except swLineDEFAULT	

Flat pattern colors - Form Feature	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsFromFeature, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsFromFeature, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	
Flat pattern colors - Bend Lines - Hems	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBendLinesHems, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalColorBendLinesHems, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	
Flat pattern colors - Model Edges	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsModelEdges, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsModelEdges, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	
Flat pattern colors - Flat Pattern Sketch Color	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsFlatPatternSketchColor, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsFlatPatternSketchColor, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	
Flat pattern colors - Bounding box	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsBoundingBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swFlatPatternColorsBoundingBox, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer RGB value	
Bend notes - Display sheet metal bend notes	ModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDDisplaySheetMetalBendNotes, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDDisplaySheetMetalBendNotes, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	
Bend notes - Style	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDBendNotesStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDBendNotesStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swSheetMetalMBDBendNotesStyle_e.<Value>)	See swSheetMetalMBDBendNotesStyle_e for valid options	
Bend notes - Leader style - Leader style	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLeaderStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	
Bend notes - Leader style - Leader thickness	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLeaderLineThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	If set to swLW_CUSTOM
Bend notes - Leader style - Leader thickness - Custom Thickness	ModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalMBDLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalMBDLeaderLineThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	0.00018 <= Double value in meters <= 0.004	Valid only if Leader thick
Bend notes - Text - Font...	ModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swSheetMetalMBDTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swSheetMetalMBDTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property value ITextFormat object in this
Bend notes - Text - Text alignment	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDTextAlignment, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDTextAlignment, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swTextJustification_e.<Value>)	See swTextJustification_e for valid options; None is not a valid option	
Bend notes - Leader anchor	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLeaderAnchor, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLeaderAnchor, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderSide_e.<Value>)	See swLeaderSide_e for valid options	
Bend notes - Leader display	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLeaderDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDLeaderDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLeaderStyle_e.<Value>)	See swLeaderStyle_e for valid options	
Bend notes - Leader display - Use document leader length	ModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDUseDocumentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDUseDocumentLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Valid only if Leader displ
Bend notes - Leader display - Leader length	ModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalMBDLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalMBDLeaderLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	1.0E-7 <= Double value in meters <= 1000.0	Valid only if Use docume
Bend notes - Leader display - Leader justification snapping	ModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDLeaderJustificationSnapping, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDLeaderJustificationSnapping, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	
Bend notes - Border - Style	ModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDBalloonStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) ModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDBalloonStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBalloonStyle_e.<Value>)	See swBalloonStyle_e for valid options; swBS_SplitCir and swBS_Underline are not valid options	

Bend notes - Border - Size	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDFit, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swSheetMetalMBDFit, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBalloonFit_e.<Value>)	See swBalloonFit_e for valid options	If set to swBF_UserDef ,
Bend notes - Border - Size - Custom Size	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalMBDBorderSizeCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swSheetMetalMBDBorderSizeCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	0.0002 <= Double value in meters <= 1000.0	Valid only if Border Size
Bend notes - Format	IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	True value only	This property is write-true To exchange the current l 1. Specify a new bend or set it using ISldWorks::SetU<Value> See System Onl 2. Set this property to t
Show fixed face	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDShowFixedFace, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDShowFixedFace, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	
Show grain direction	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDShowGrainDirection, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swSheetMetalMBDShowGrainDirection, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	


Document Properties > Tables

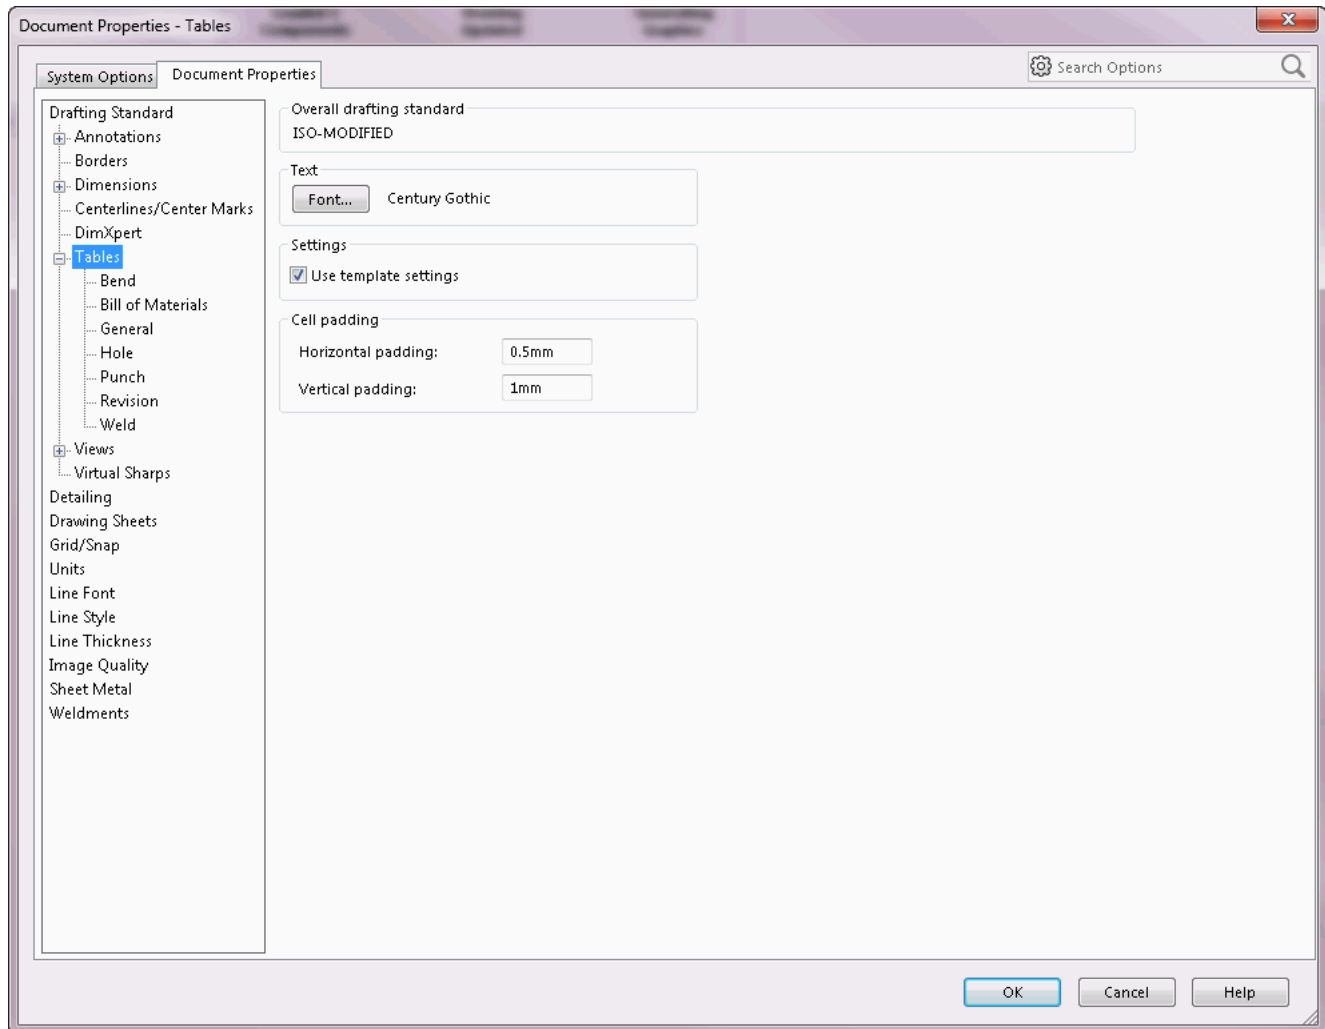

Setting	Get/Set Methods	Return Value or <Value>	Comments
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method
Use template settings	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingTablesUseTemplateSettings, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingTablesUseTemplateSettings, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to override a table's document properties with the settings of an imported template
Cell paddings - Horizontal padding	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingTablesHorizontalPadding, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingTablesHorizontalPadding, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the horizontal padding for table cells
Cell paddings - Vertical padding	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingTablesVerticalPadding, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swDetailingTablesVerticalPadding, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies the vertical padding for table cells

Document Properties > Tables > Bend

Valid for drawings only:

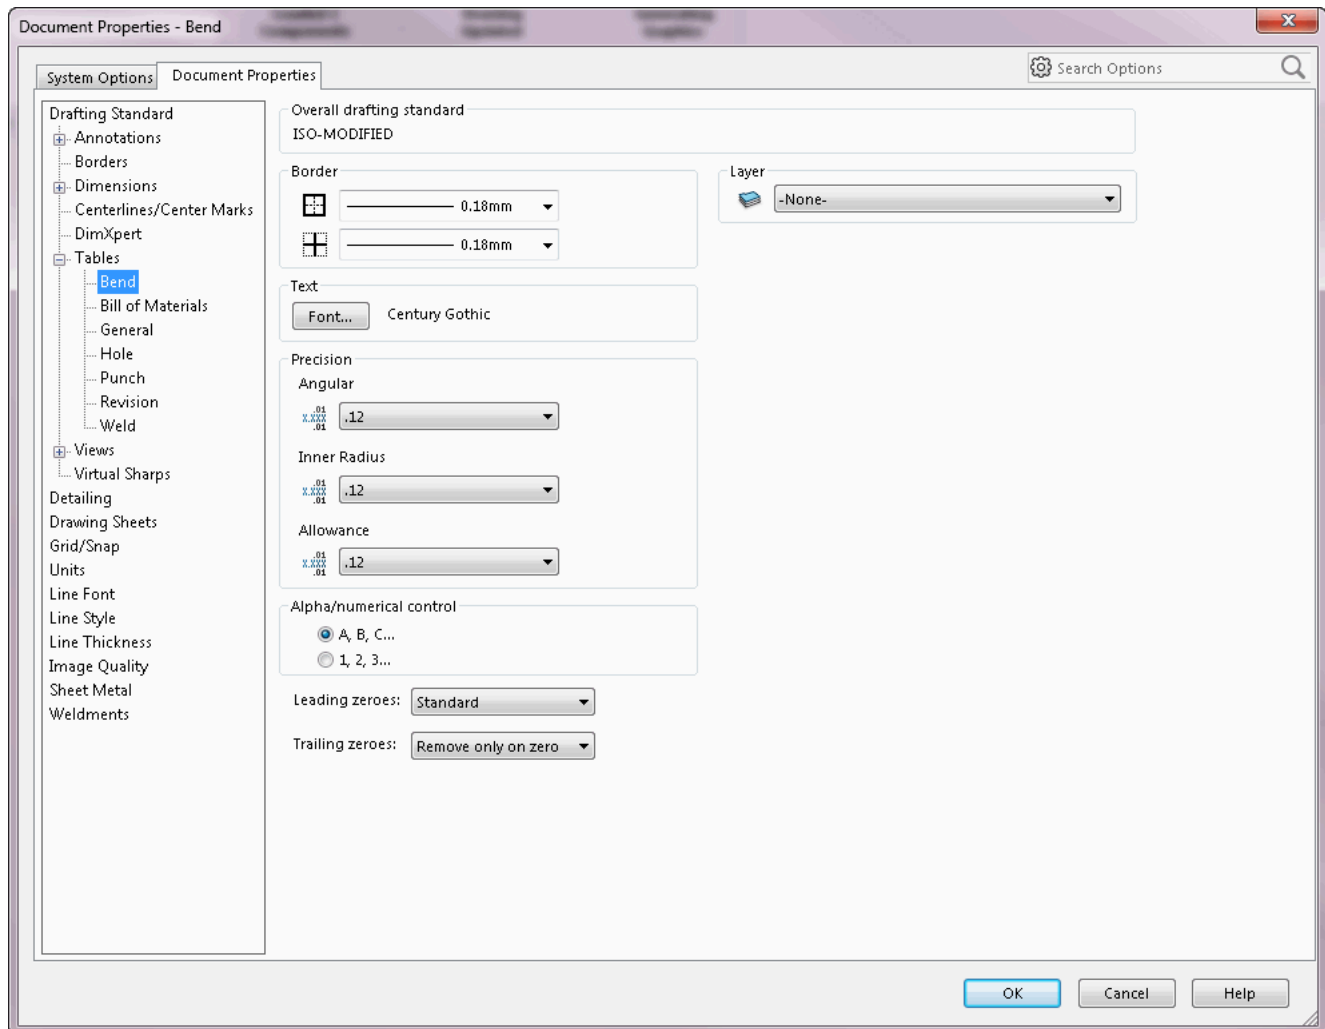

NOTE: Setting any of the following bend table values means that new bend tables added to the drawing use these default values. However, a bend table that uses a template table for insertion might not use these default values because the template table contains certain properties that take precedence over these default values.


Setting	Get/Set Methods	Return Value or <Value>	Comments
Border - Box Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBendTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBendTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Border - Grid Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBendTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBendTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingBendTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingBendTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the set method
Precision - Angular	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendAngularPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendAngularPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the number of digits of precision to display in the bend table for bend angles; specify a value from 0 through 8
Precision - Inner Radius	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendInnerRadiusPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendInnerRadiusPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the number of digits of precision to display in the bend table for the inner radii of bends; specify a

			value from 0 through 8
Precision - Allowance	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendAllowancePrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendAllowancePrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the number of digits of precision to display in the bend table for the bend allowance of bends; specify a value from 0 through 8
Alpha/numerical control	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendTableTagStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendTableTagStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swBendTableTagStyle_e.<Value>)	See swBendTableTagStyle_e for valid options	Specifies whether the bend tags are alphanumeric or numeric
Leading zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendLeadingZero, swUserPreferenceOption_e.swDetailingBendTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBendLeadingZero, swUserPreferenceOption_e.swDetailingBendTable, swDetailingLeadingZero_e.<Value>)	See swDetailingLeadingZero_e for valid options	
Trailing zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingBendTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingBendTable, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : • swDimShowTrailingZeroes • swDimRemoveTrailingZeroes • swDimRemoveOnlyOnZero • swDimSameAsSource	
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingBendTable) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingBendTable, <Value>)	Valid options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT" • "None"	This setting is available only on drawings; depending on drawing, some options may not apply

Document Properties > Tables > Bill of Materials

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the dialog but are now obsolete.

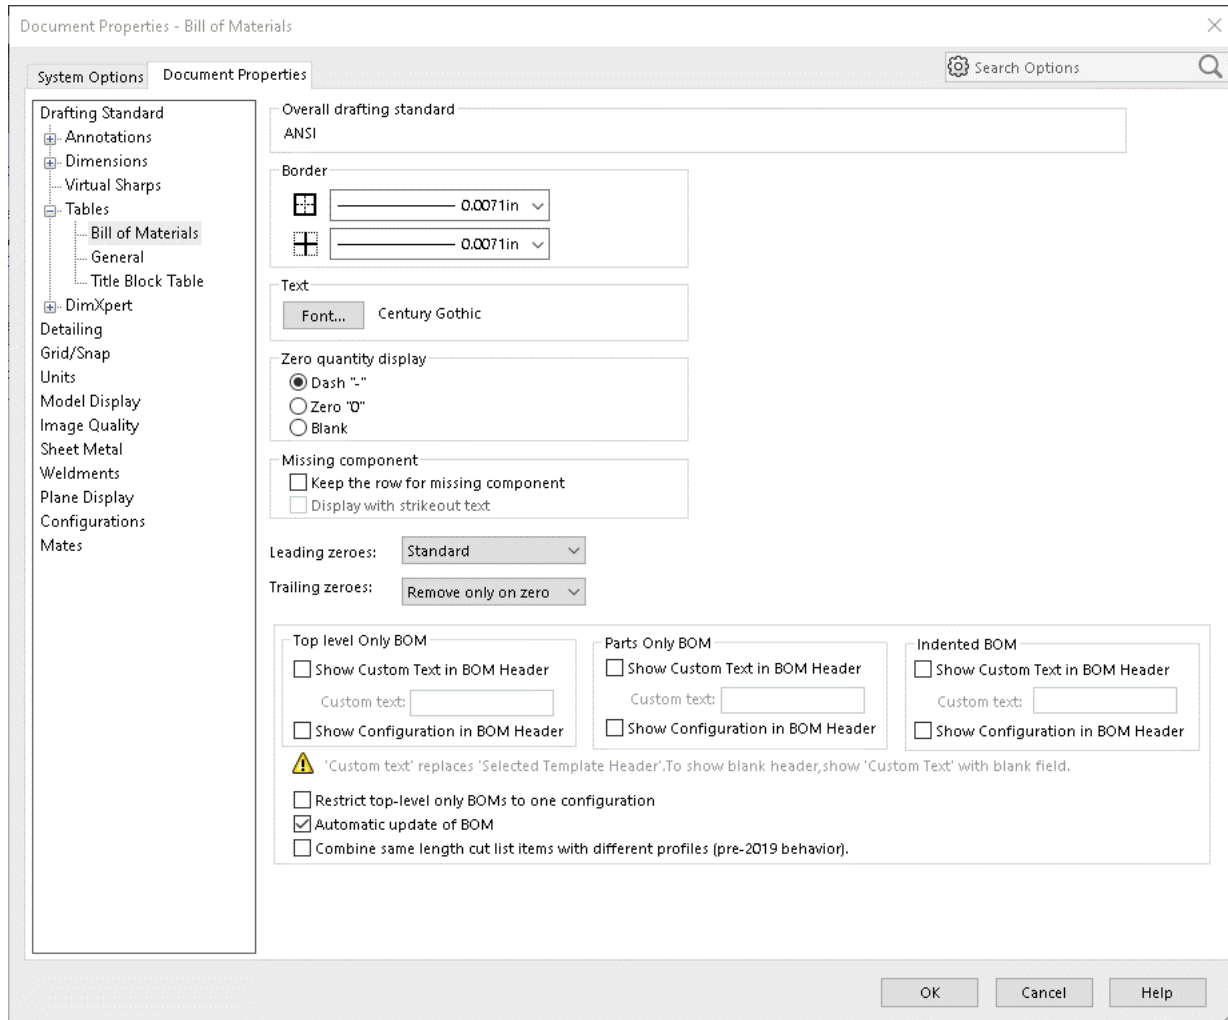


Setting	Get/Set Methods	Return Value or <Value> or <OnFlag>	
Border - Box Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBillOfMaterialBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBillOfMaterialBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Border - Grid Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBillOfMaterialGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingBillOfMaterialGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingBillOfMaterialTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingBillOfMaterialTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See TextFormat for font options	To set font pr appropriate I object in the
Zero quantity display	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBomTableZeroQuantityDisplay, swUserPreferenceOption_e.swDetailingBillOfMaterial) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swBomTableZeroQuantityDisplay, swUserPreferenceOption_e.swDetailingBillOfMaterial, swZeroQuantityDisplay_e.<Value>)	See swZeroQuantityDisplay_e for valid options	
Missing component - Keep the row for missing component	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableKeepMissingItems, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableKeepMissingItems, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies whe

Missing component - Display with strikeout text	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableStrikeThroughMissingItems, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableStrikeThroughMissingItems, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies wh
Leading zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingBillOfMaterial) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingBillOfMaterial, swDetailingLeadingZero_e.<Value>)	See swDetailingLeadingZero_e for valid options	
Trailing zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingBillOfMaterial) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingBillOfMaterial, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : • swDimShowTrailingZeroes • swDimRemoveTrailingZeroes • swDimRemoveOnlyOnZero • swDimSameAsSource	
Top level Only BOM - Show Custom Text in BOM Header	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowCustomTextinBOMHeader_ForTopLevelOnlyBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowCustomTextinBOMHeader_ForTopLevelOnlyBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Top level Only BOM - Custom text:	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swBomTableBOMHeaderCustomText_ForTopLevelOnlyBOM, swUserPreferenceOption_e.swDetailingBillOfMaterial) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swBomTableBOMHeaderCustomText_ForTopLevelOnlyBOM, swUserPreferenceOption_e.swDetailingBillOfMaterial, <Value>)	String value	Valid only if swBomTable! is set to true
Top level Only BOM - Show Configuration in BOM Header	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowConfigurationInBOMHeader_ForTopLevelOnlyBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowConfigurationInBOMHeader_ForTopLevelOnlyBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Parts Only BOM - Show Custom Text in BOM Header	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowCustomTextinBOMHeader_ForPartOnlyBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowCustomTextinBOMHeader_ForPartOnlyBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Parts Only BOM - Custom text:	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swBomTableBOMHeaderCustomText_ForPartOnlyBOM, swUserPreferenceOption_e.swDetailingBillOfMaterial) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swBomTableBOMHeaderCustomText_ForPartOnlyBOM, swUserPreferenceOption_e.swDetailingBillOfMaterial, <Value>)	String value	Valid only if swBomTable! set to true
Parts Only BOM - Show Configuration in BOM Header	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowConfigurationInBOMHeader_ForPartOnlyBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowConfigurationInBOMHeader_ForPartOnlyBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Indented BOM - Show Custom Text in BOM Header	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowCustomTextinBOMHeader_ForIndentedBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowCustomTextinBOMHeader_ForIndentedBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Indented BOM - Custom text:	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swBomTableBOMHeaderCustomText_ForIndentedBOM, swUserPreferenceOption_e.swDetailingBillOfMaterial) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swBomTableBOMHeaderCustomText_ForIndentedBOM, swUserPreferenceOption_e.swDetailingBillOfMaterial, <Value>)	String value	Valid only if swBomTable! set to true
Indented BOM - Show Configuration in BOM Header	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowConfigurationInBOMHeader_ForIndentedBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swBomTableShowConfigurationInBOMHeader_ForIndentedBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Restrict top-level only BOMs to one configuration	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swOneConfigOnlyTopLevelBom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swOneConfigOnlyTopLevelBom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies wht configuration
Automatic update of BOM	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoUpdateBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAutoUpdateBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	Specifies wht made to mod
Combine same length cut list items with different profiles (pre-2019 behavior)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swCombineCutlistItemsinBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swCombineCutlistItemsinBOM, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <OnFlag>)	Boolean value	
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingBillOfMaterial) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingBillOfMaterial, <Value>)	Valid options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT" • "None"	This setting is some options

Obsolete Enumerators

Enumerator	Comment
swBomTableDontAddQTYNextToConfigName	Obsolete
swDontCopyQTYColumnNameFromTemplate	Obsolete


Document Properties > Tables > General

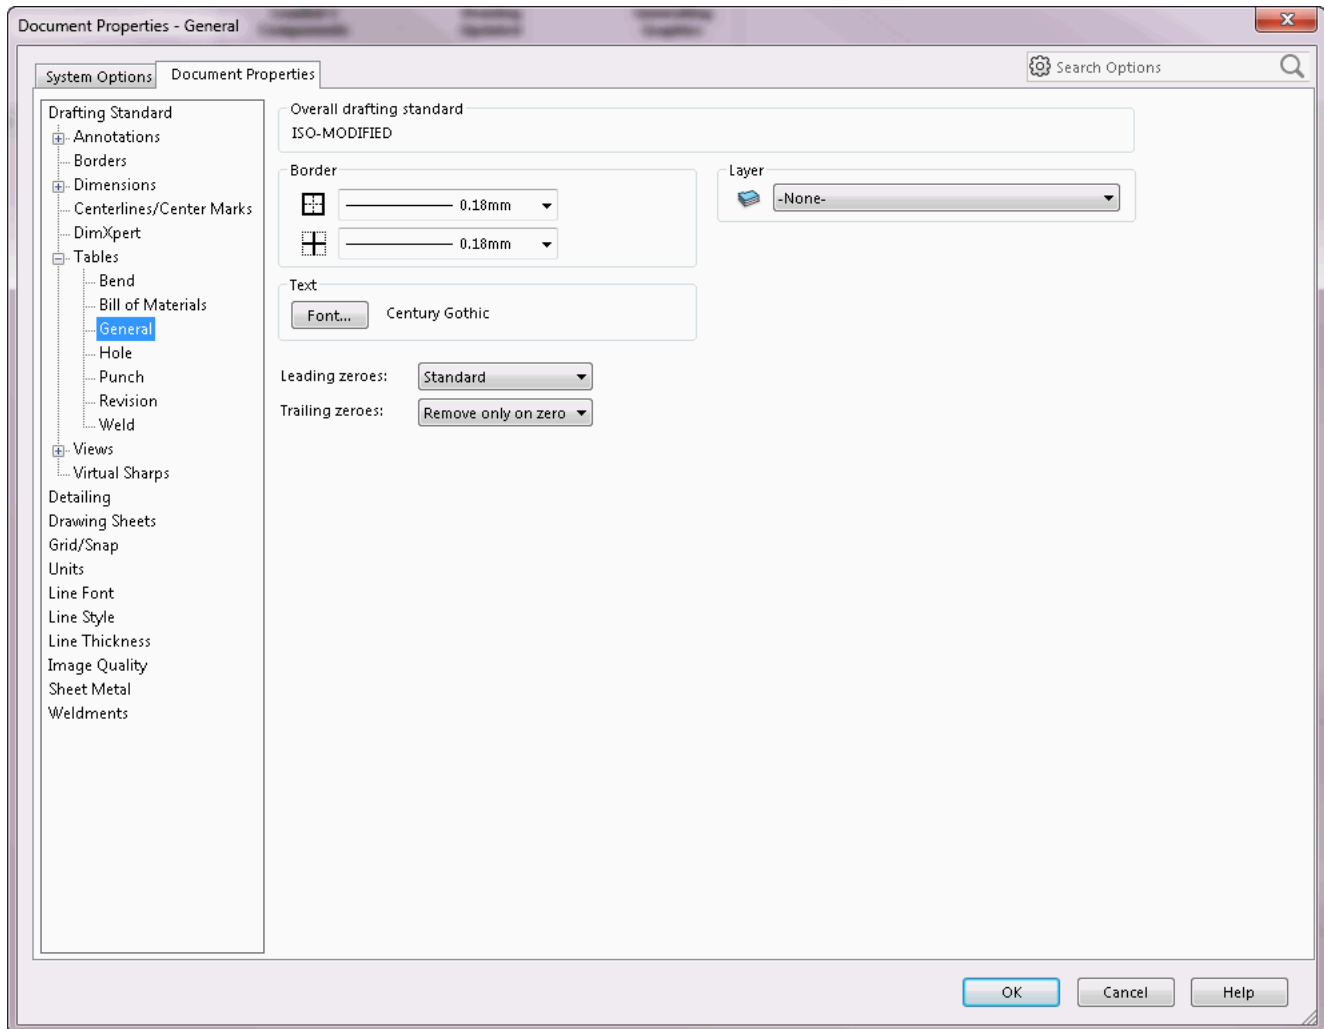

Setting	Get/Set Methods	Return Value or <Value>	Comments
Border - Box Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGeneralTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGeneralTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Border - Grid Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGeneralTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingGeneralTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingGeneralTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingGeneralTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method
Leading zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingGeneralTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingGeneralTable, swDetailingLeadingZero_e.<Value>)	See swDetailingLeadingZero_e for valid options	
Trailing zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingGeneralTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingGeneralTable, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : - swDimShowTrailingZeroes - swDimRemoveTrailingZeroes - swDimRemoveOnlyOnZero	
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingGeneralTable)	Valid options: "Border"	This setting is available only on drawings;

	IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingGeneralTable, <Value>)	• "Dimensions" • "Notes" • "BOM" • "FORMAT" • "None"	depending on drawing, some options may not apply
--	---	--	--

Document Properties > Tables > Hole

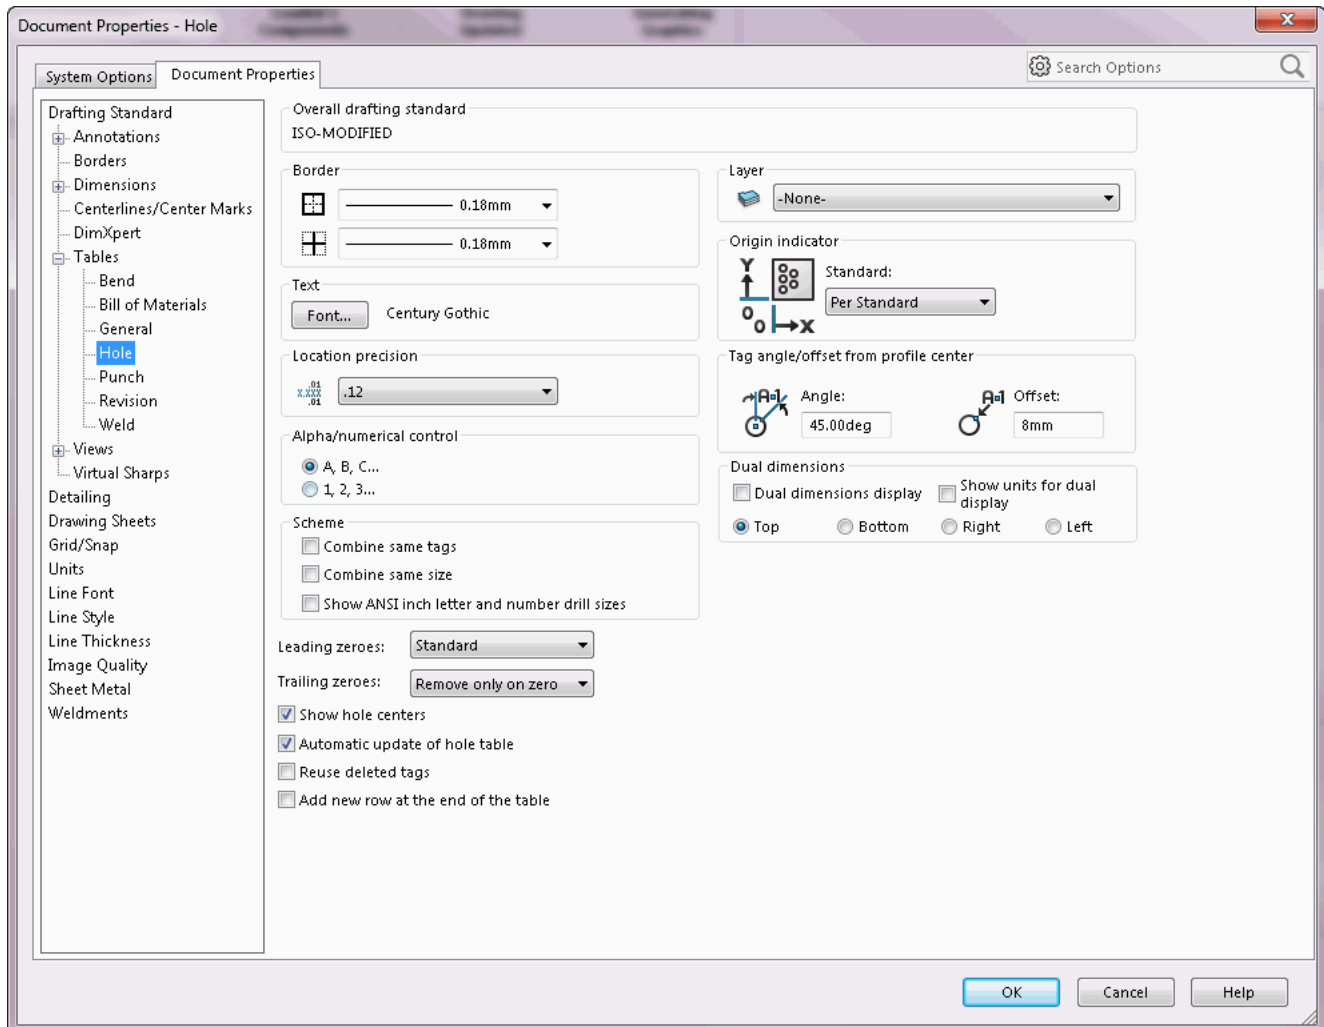


NOTE: Setting any of the following hole table values means that new holes tables added to the drawing use these default values. However, a hole table that uses a template table for insertion might not use these default values because the template table contains certain properties that take precedence over these default values. These properties include the tag style, precision values, combine tag, combine same size, and hole centers visible values.

Setting	Get/Set Methods	Return Value or <Value>	Comments
Border - Box Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingHoleTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingHoleTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Border - Grid Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingHoleTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingHoleTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingHoleTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingHoleTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method
Location precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swHoleTableHoleLocationPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swHoleTableHoleLocationPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the number of digits of precision to display in the X and Y hole location columns in the hole table; specify a value from 0 through 8 When setting this value, existing hole tables in the drawing are updated to use this precision
Alpha/numerical control	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swHoleTableTagStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swHoleTableTagStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swHoleTableTagStyle_e.<Value>)	See swHoleTableTagStyle_e for valid options	Specifies whether or not the hole tags are alphanumeric or numeric

Scheme - Combine same tags	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableCombineTags, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableCombineTags, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then holes of the same size are assigned the same tag, and the hole table contains a Quantity column, which indicates multiple holes of the same size exist
Scheme - Combine same size	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableCombineSameSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableCombineSameSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then holes are the same size, and their cells in the Size column are merged and appear as a single cell
Scheme - Show ANSI inch letter and number drill sizes	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableShowAnsiInchSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableShowAnsiInchSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then display ANSI inch hole sizes in hole tables using letters or numbers
Leading zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingHoleTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingHoleTable, swDetailingLeadingZero_e.<Value>)	See swDetailingLeadingZero_e for valid options	
Trailing zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingHoleTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingHoleTable, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : • swDimShowTrailingZeroes • swDimRemoveTrailingZeroes • swDimRemoveOnlyOnZero • swDimSameAsSource	
Show hole centers	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableHoleCentersVisible, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableHoleCentersVisible, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then the hole centers are indicated by points
Automatic update of hole table	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableAutomaticUpdate, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableAutomaticUpdate, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then the hole table is automatically updated when the model changes; when you set this value, existing holes tables in the drawing are updated
Reuse deleted tags	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableReuseDeleted, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableReuseDeleted, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then deleted tags can be reused
Add new row at the end of the table	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableAddNewAtEnd, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swHoleTableAddNewAtEnd, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then new rows are added to the end of the table
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingHoleTable) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingHoleTable, <Value>)	Valid options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT" • "None"	This setting is available only on drawings; depending on drawing, some options may not apply
Origin indicator	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swHoleTableOriginStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swHoleTableOriginStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the detailing standard to use for displaying the hole table's origin symbol If you specify -1 or 0, then the origin symbol is displayed according to the default document detailing standard; otherwise, the value is from swDetailingStandard_e and the hole table's origin is displayed according to that standard When setting this value, any existing hole tables in the drawing are updated to use this dimensioning standard To determine the default document detailing standard, get the value of the document's integer user preference swDetailingDimensionStandard
Tag angle/offset from profile center - Angle	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swHoleTableTagAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swHoleTableTagAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	The origin of the hole tag text is at this angle, in radians, clockwise from the Y axis at the distance specified by swHoleTableTagOffset (see the next enumeration); the angle must be between -360° and 360°
Tag angle/offset from profile center - Offset	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swHoleTableTagOffset, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swHoleTableTagOffset, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	The origin of the hole tag text is this distance from the hole at the angle specified by swHoleTableTagAngle (see previous enumeration); the offset must be > 0
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTableHoleDualDimensionDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTableHoleDualDimensionDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display dual dimensions
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTableHoleShowUnitsForDualDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTableHoleShowUnitsForDualDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display units for dual dimensions

Dual dimensions - Position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swTableHoleDualDimensionPos, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swTableHoleDualDimensionPos, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See swDetailingDualDimPosition_e for valid options	Specifies the position of hole table dual dimensions
----------------------------	---	--	--


Document Properties > Tables > Punch

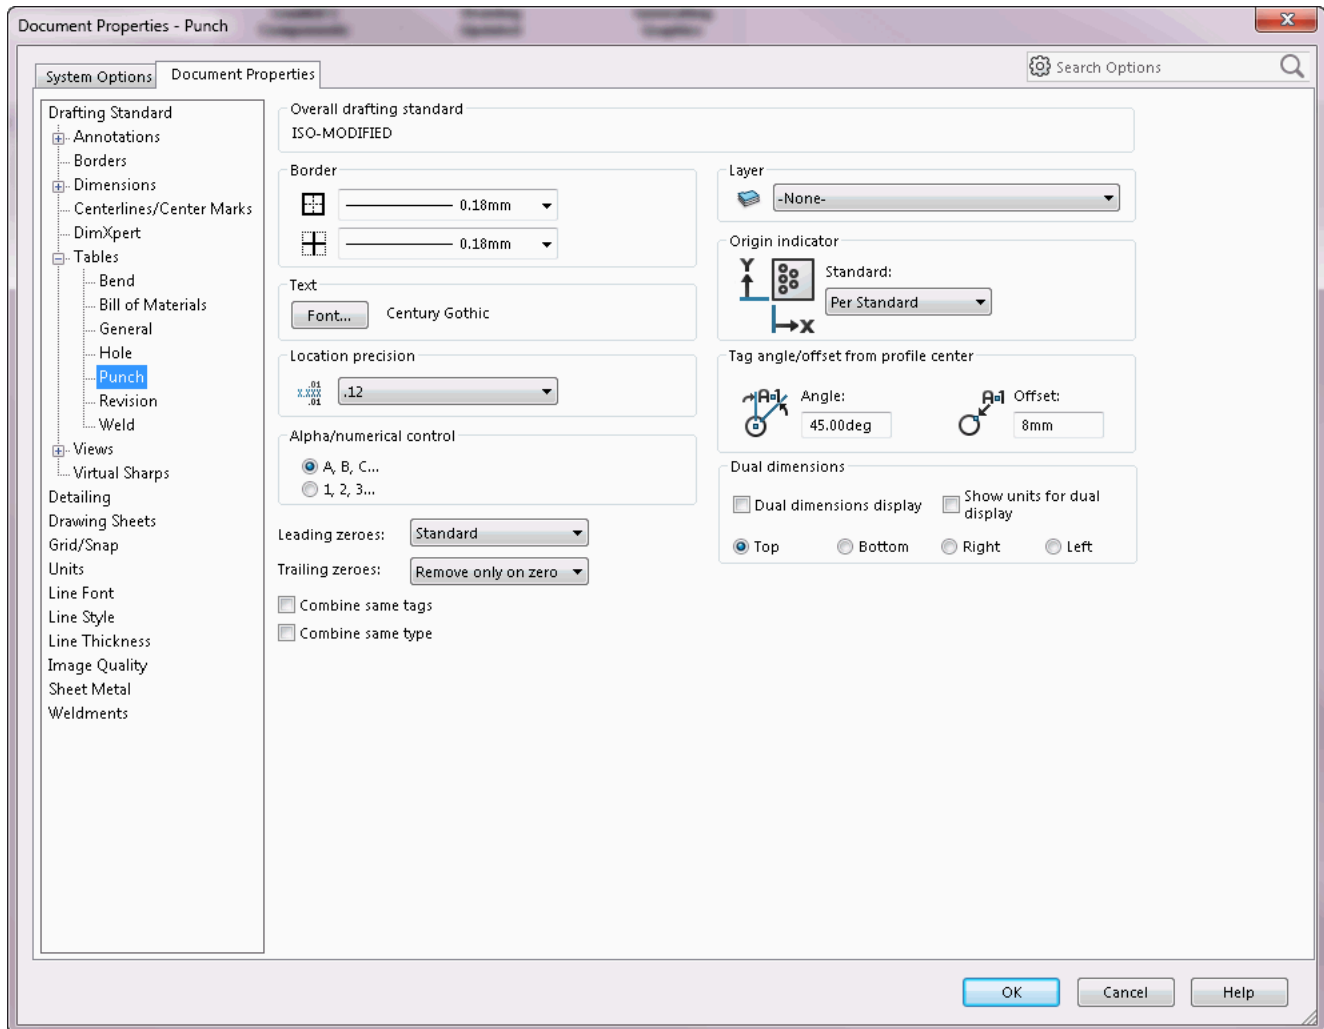

NOTE: Setting any of the following punch table values means that new punch tables added to the drawing use these default values. However, a punch table that uses a template table for insertion might not use these default values because the template table contains certain properties that take precedence over these default values. These properties include the tag style, precision values, combine tag, and combine same size.


Setting	Get/Set Methods	Return Value or <Value>	Comments
Border - Box Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingPunchTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingPunchTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Border - Grid Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingPunchTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingPunchTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingPunchTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingPunchTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the set method
Location precision - Unit Precision	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPunchTableLocationPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPunchTableLocationPrecision, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the number of digits of precision to display in the punch table; specify a value from 0 through 8 When setting this value, existing punch tables in the drawing are updated to use this precision
Alpha/numerical control	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPunchTableTagStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPunchTableTagStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swPunchTableTagStyle_e.<Value>)	See swPunchTableTagStyle_e for valid options	Specifies whether the punch tags are alphanumeric or numeric
Leading zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingHoleTable)	See swDetailingLeadingZero_e for valid options	

	IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingLeadingZero, swUserPreferenceOption_e.swDetailingPunchTable, swDetailingLeadingZero_e.<Value>)		
Trailing zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingHoleTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingPunchTable, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : - swDimShowTrailingZeroes - swDimRemoveTrailingZeroes - swDimRemoveOnlyOnZero - swDimSameAsSource	
Combine same tags	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPunchTableCombineTags, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPunchTableCombineTags, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then punches of the same size are assigned the same tag, and the punch table contains a Quantity column, which indicates multiple punches of the same size exist
Combine same tags	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swPunchTableCombineSameSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swPunchTableCombineSameSize, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	If true, then punches are the same size, and their cells in the Size column are merged and appear as a single cell
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingPunchTable) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingPunchTable, <Value>)	Valid options: "Border" "Dimensions" "Notes" "BOM" "FORMAT" "None"	This setting is available only on drawings; depending on drawing, some options may not apply
Origin indicator	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPunchTableOriginStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swPunchTableOriginStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the detailing standard to use for displaying the punch table's origin symbol If you specify -1 or 0, then the origin symbol is displayed according to the default document detailing standard; otherwise, the value is from swDetailingStandard_e and the punch table's origin is displayed according to that standard When setting this value, any existing punch tables in the drawing are updated to use this dimensioning standard To determine the default document detailing standard, get the value of the document's integer user preference swDetailingDimensionStandard
Tag angle/offset from profile center - Angle	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPunchTableTagAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPunchTableTagAngle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	The origin of the punch tag text is at this angle, in radians, clockwise from the Y axis at the distance specified by swPunchTableTagOffset (see the next enumeration); the angle must be between -360° and 360°
Tag angle/offset from profile center - Offset	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPunchTableTagOffset, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swPunchTableTagOffset, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	The origin of the punch tag text is this distance from the punch at the angle specified by swPunchTableTagAngle (see previous enumeration); the offset must be > 0
Dual dimensions - Dual dimensions display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTablePunchDualDimensionDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTablePunchDualDimensionDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display dual dimensions
Dual dimensions - Show units for dual display	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swTablePunchShowUnitsForDualDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swTablePunchShowUnitsForDualDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display units for dual dimensions
Dual dimensions - Position	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swTablePunchDualDimensionPos, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swTablePunchDualDimensionPos, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See swDetailingDualDimPosition_e for valid options	Specifies the position of punch table dual dimensions

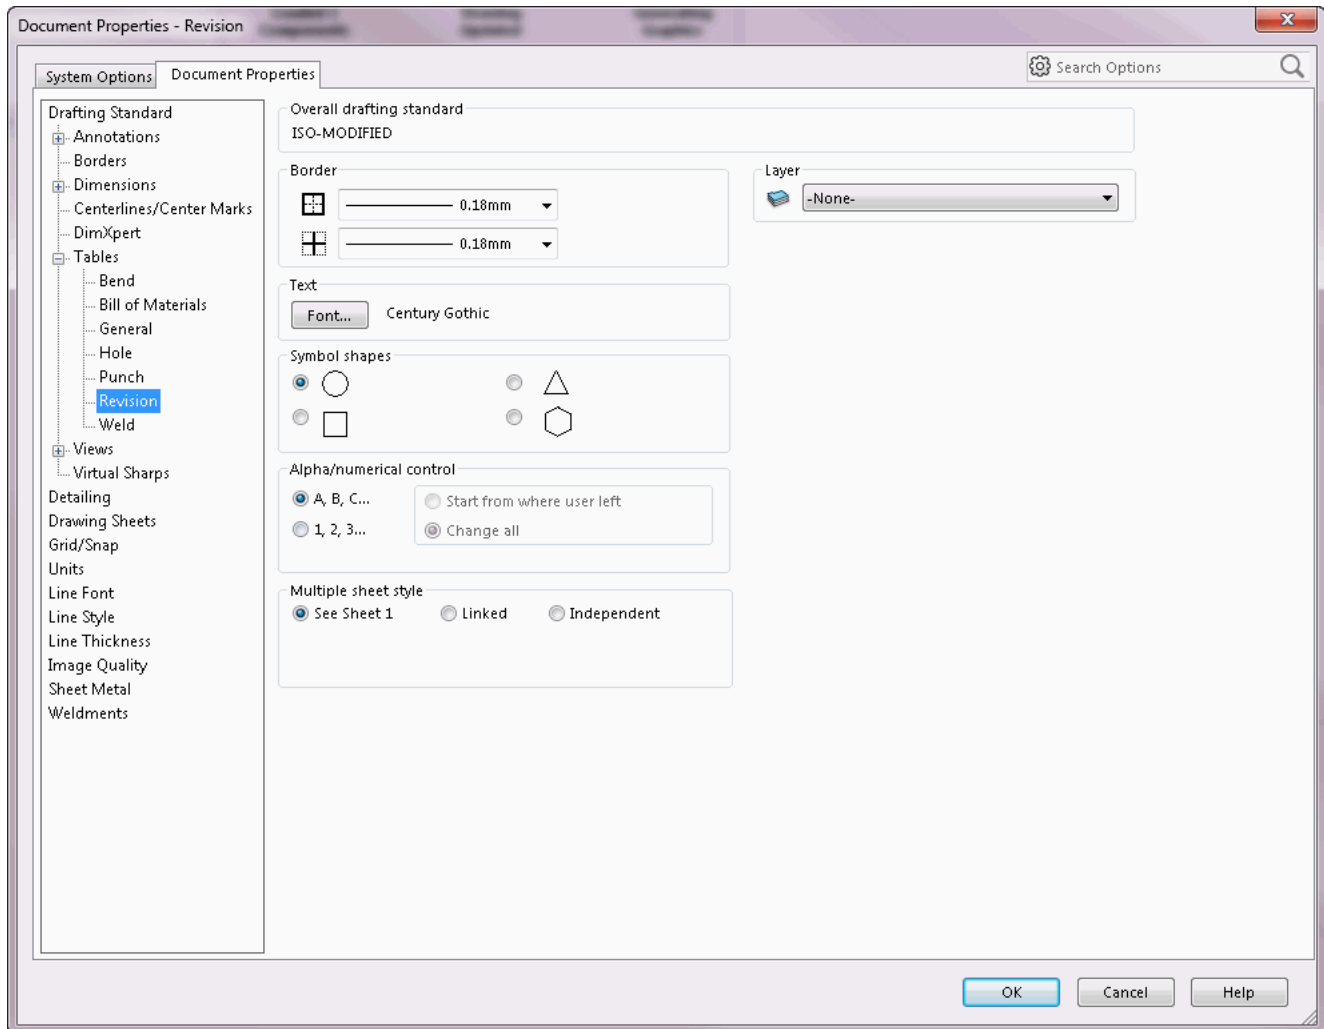


Setting	Get/Set Methods	Return Value or <Value>	Comments
Border - Box Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRevisionTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRevisionTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Border - Grid Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRevisionTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingRevisionTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingRevisionTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingRevisionTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method
Symbol shapes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swRevisionTableSymbolShape, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swRevisionTableSymbolShape, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swRevisionTableSymbolShape_e.<Value>)	See swRevisionTableSymbolShape_e for valid options	
Alpha/numerical control	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swRevisionTableTagStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swRevisionTableTagStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swRevisionTableTagStyle_e.<Value>)	See swRevisionTableTagStyle_e for valid options	

Alpha/numerical control - Start from where user left or Change all	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swRevisionTableUpdateAllLabels, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swRevisionTableUpdateAllLabels, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value: • True to apply format of all revisions, previous and future • False to apply format only to revisions from now on	
Multiple sheet style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swRevisionTableMultipleSheetStyle, swUserPreferenceOption_e.swDetailingRevisionTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swRevisionTableMultipleSheetStyle, swUserPreferenceOption_e.swDetailingRevisionTable, swRevisionTableMultipleSheetStyle_e.<Value>)	See swRevisionTableMultipleSheetStyle_e for valid options	
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingRevisionTable) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingRevisionTable, <Value>)	Valid options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT" • "None"	This setting is available only on drawings; depending on drawing, some options may not apply

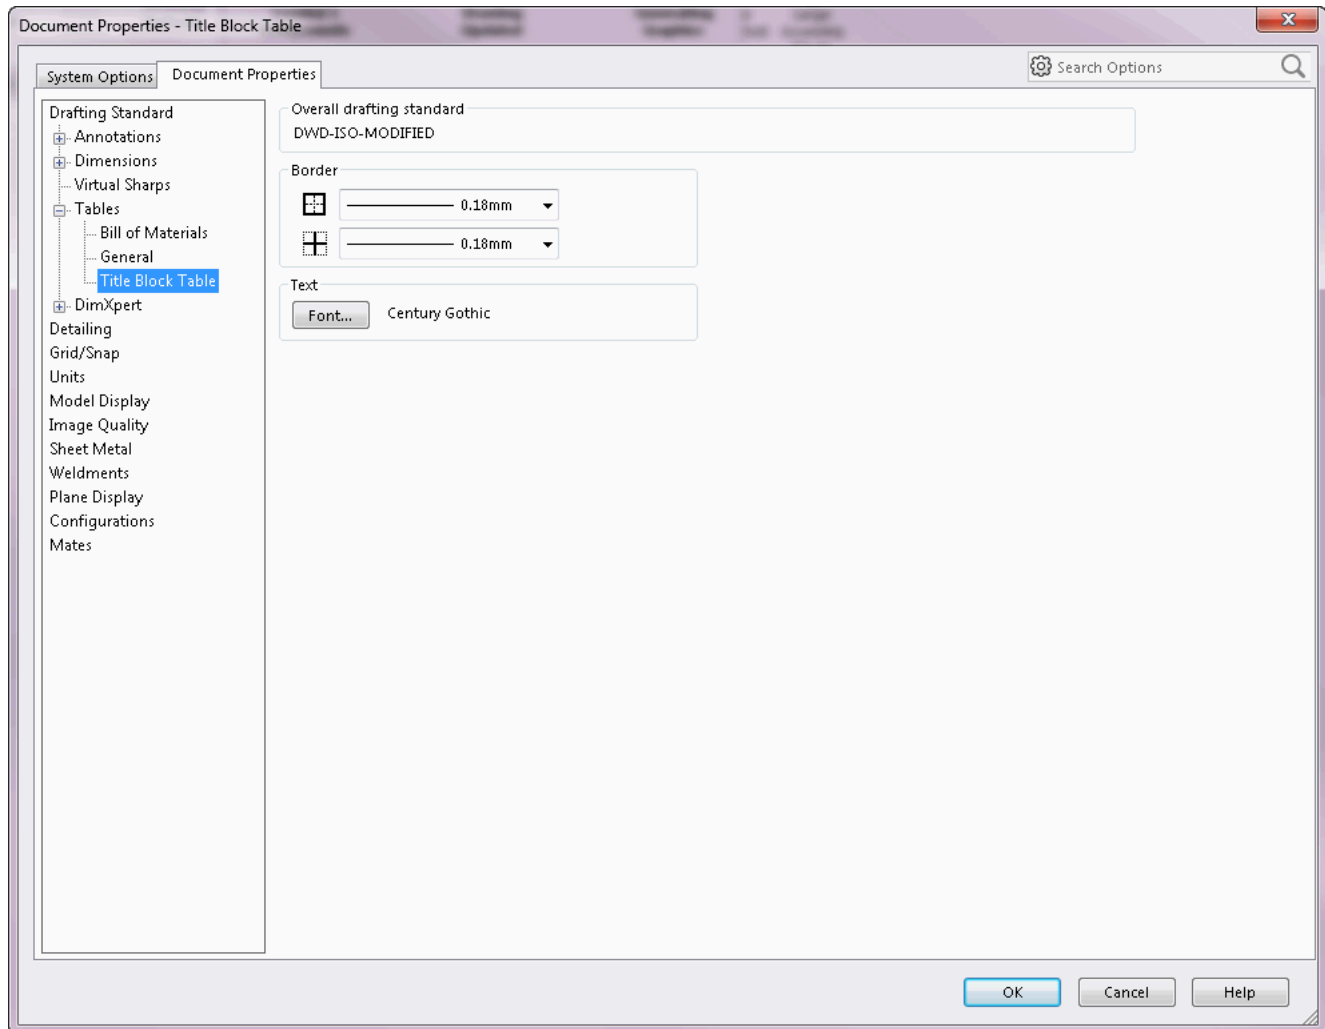

Setting	Get/Set Methods	Return Value or <Value>	Comments
Border - Box Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingTitleBlockTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingTitleBlockTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	For assemblies and parts only.
Border - Grid Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingTitleBlockTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingTitleBlockTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	For assemblies and parts only.
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingTitleBlockTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingTitleBlockTableTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method. For assemblies and parts only.

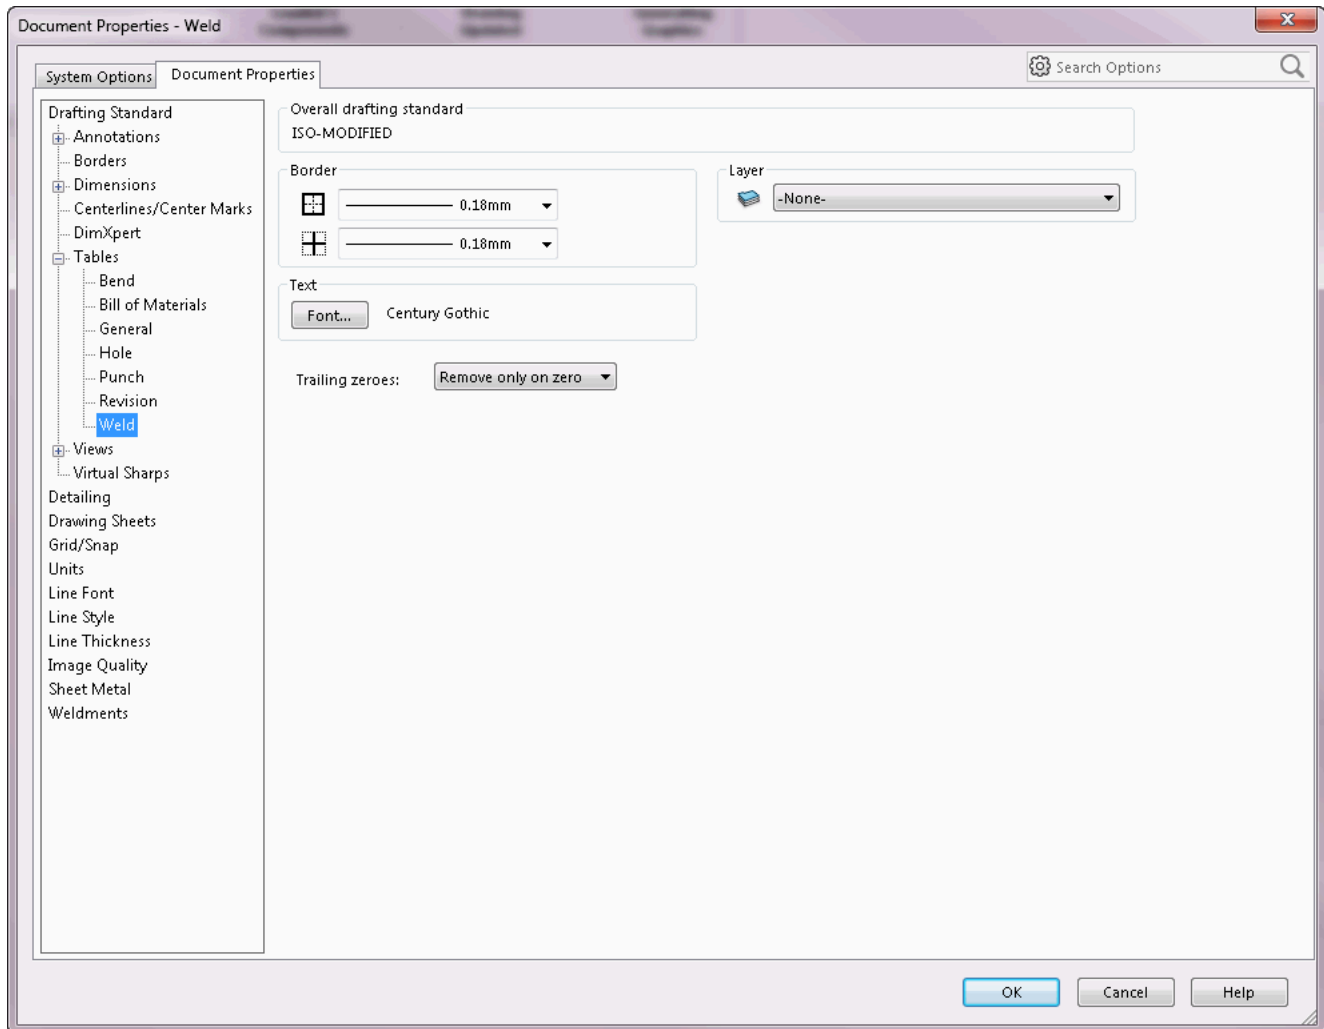


NOTE: Setting any of the following weld table values means that new weld tables added to the drawing use these default values. However, a weld table that uses a template table for insertion might not use these default values because the template table contains certain properties that take precedence over these default values.

Setting	Get/Set Methods	Return Value or <Value>	Comments
Border - Box Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldTableBorderLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Border - Grid Border	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingWeldTableGridLineWeight, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingWeldSymbolTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingWeldSymbolTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat , set the appropriate ITextFormat member values, and pass the ITextFormat object in the set method
Trailing zeroes	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingWeldTable) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimTrailingZero, swUserPreferenceOption_e.swDetailingWeldTable, swDetailingDimTrailingZero_e.<Value>)	Valid options in swDetailingDimTrailingZero_e : - swDimShowTrailingZeroes - swDimRemoveTrailingZeroes - swDimRemoveOnlyOnZero - swDimSameAsSource	

Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingWeldTable) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingWeldTable, <Value>)	Valid options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT" • "None"	This setting is available only on drawings; depending on drawing, some options may not apply
-------	---	--	--


Document Properties > Units

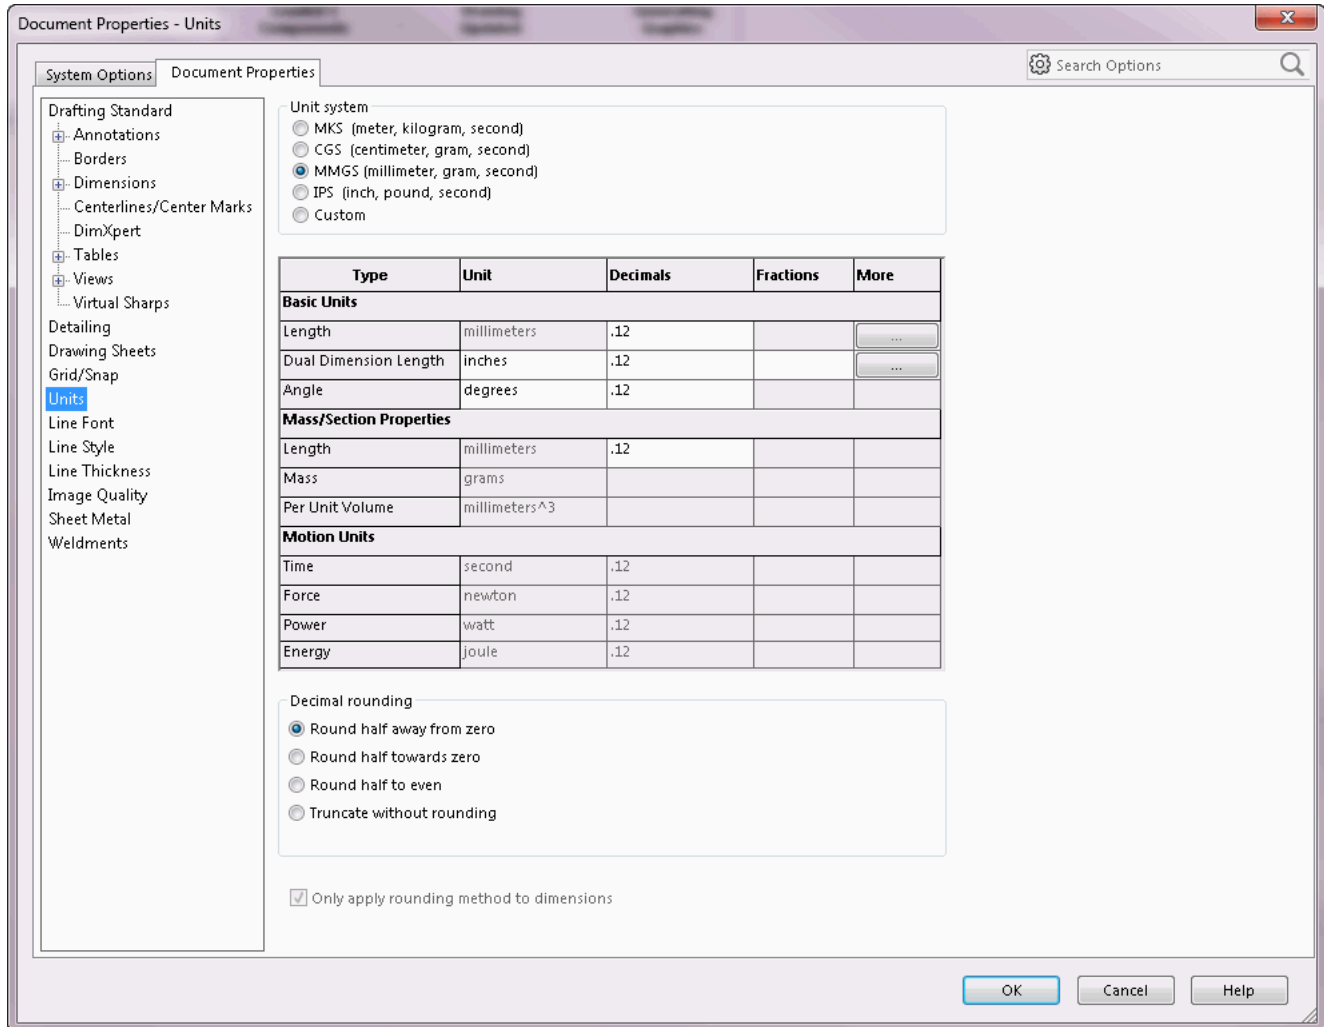

Setting	Get/Set Methods	Return Value or <Value>	Comments
Unit system	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitSystem, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitSystem, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swUnitSystem_e.<Value>)	See swUnitSystem_e for valid options	Specifies type of system unit
Basic Units - Length - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLengthUnit_e.<Value>)	See swLengthUnit_e for valid options	Specifies the type of linear length units
Basic Units - Length - Decimals or fractions?	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsLinearDecimalDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsLinearDecimalDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swFractionDisplay_e.<Value>)	See swFractionDisplay_e for valid options	Specifies decimal or fraction display for linear units
Basic Units - Length - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsLinearDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsLinearDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (0 - 8)	Specifies the number of decimal places for linear units
Basic Units - Length - Fractions	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsLinearFractionDenominator, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsLinearFractionDenominator, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the default denominator for linear fractions
Basic Units - Length - More - Convert feet and inches format	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsLinearFeetAndInchesFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsLinearFeetAndInchesFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to change format of linear feet and inches
Basic Units - Length - More - Round to nearest fraction	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsLinearRoundToNearestFraction, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsLinearRoundToNearestFraction, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to round linear units to the nearest fraction


Basic Units - Dual Dimension Length - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDualLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDualLinear, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLengthUnit_e.<Value>)	See swLengthUnit_e for valid options	Specifies type of dual linear length units
Basic Units - Dual Dimension Length - Decimals or fractions?	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDualLinearDecimalDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDualLinearDecimalDisplay, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swFractionDisplay_e.<Value>)	See swFractionDisplay_e for valid options	Specifies decimal or fraction display for dual linear units
Basic Units - Dual Dimension Length - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDualLinearDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDualLinearDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (0 - 8)	Specifies the number of decimal places for dual linear units
Basic Units - Dual Dimension Length - Fractions	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDualLinearFractionDenominator, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDualLinearFractionDenominator, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value	Specifies the default denominator for dual linear fractions
Basic Units - Dual Dimension Length - More - Round to nearest fraction	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsDualLinearRoundToNearestFraction, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsDualLinearRoundToNearestFraction, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to round dual linear units to the nearest fraction
Basic Units - Dual Dimension Length - More - Convert feet and inches format	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsDualLinearFeetAndInchesFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsDualLinearFeetAndInchesFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to change format of dual linear feet and inches
Basic Units - Angle - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsAngular, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsAngular, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swAngleUnit_e.<Value>)	See swAngleUnit_e for valid options	Specifies angular units
Basic Units - Angle - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsAngularDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsAngularDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (0 - 8)	Specifies the number of decimal places for angular units
Mass/Section Properties - Length - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsMassPropLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsMassPropLength, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLengthUnit_e.<Value>)	See swLengthUnit_e for valid options	Specifies type of length unit to use for mass property units NOTE: You can only set this option when swUnitSystem_e is swUnitSystem_Custom; Otherwise, FALSE is returned
Mass/Section Properties - Length - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsMassPropDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsMassPropDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (0 - 8)	Specifies number of decimal places for mass property units
Mass/Section Properties - Mass - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsMassPropMass, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsMassPropMass, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swUnitsMassPropMass_e.<Value>)	See swUnitsMassPropMass_e for valid options	Specifies type of mass unit to use for mass property units NOTE: You can only set this option when swUnitSystem_e is swUnitSystem_Custom; Otherwise, FALSE is returned
Mass/Section Properties - Per Unit Volume - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsMassPropVolume, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsMassPropVolume, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swUnitsMassPropVolume_e.<Value>)	See swUnitsMassPropVolume_e for valid options	Specifies type of volume unit to use for mass property units NOTE: You can only set this option when swUnitSystem_e is swUnitSystem_Custom; Otherwise, FALSE is returned
Motion Analysis - Time - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsTimeUnits, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsTimeUnits, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swUnitsTimeUnit_e.<Value>)	See swUnitsTimeUnit_e for valid options	Specifies the type of time unit. NOTE: You can only set this option when swUnitSystem_e is swUnitSystem_Custom; Otherwise, FALSE is returned
Motion Analysis - Time - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsTimeDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsTimeDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (0 - 8)	Specifies the number of decimal places for swUnitsTime
Motion Analysis - Force - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsForce, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsForce, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swUnitsForce_e.<Value>)	See swUnitsForce_e for valid options	Specifies the type of force units. NOTE: You can only set this option when swUnitSystem_e is swUnitSystem_Custom; Otherwise, FALSE is returned
Motion Analysis - Force - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsForceDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsForceDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (0 - 8)	Specifies the number of decimal places for swUnitsForce
Motion Analysis - Power - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsPowerUnits, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsPowerUnits, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swUnitsPowerUnit_e.<Value>)	See swUnitsPowerUnit_e for valid options	Specifies type of power unit. NOTE: You can only set this option when swUnitSystem_e is swUnitSystem_Custom;

			Otherwise, FALSE is returned
Motion Analysis - Power - Decimals	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsPowerDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsPowerDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (0 - 8)	Specifies the number of decimal places for swUnitsPower
Motion Analysis - Energy - Unit	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsEnergyUnits, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsEnergyUnits, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swUnitsEnergyUnit_e.<Value>)	See swUnitsEnergyUnit_e for valid options	Specifies the type of energy units. NOTE: You can only set this option when swUnitSystem_e is swUnitSystem_Custom; Otherwise, FALSE is returned
Motion Analysis - Energy - Decimals	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsEnergyDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swUnitsEnergyDecimalPlaces, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Integer value (0 - 8)	Specifies the number of decimal places for swUnitsEnergy
Decimal rounding - - Round half away from zero - Round half towards zero - Round half to even - Truncate without rounding	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDecimalRounding, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swUnitsDecimalRounding, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swUnitsDecimalRounding_e.<Value>)	See swUnitsDecimalRounding_e for valid options	Specifies decimal rounding method
Only apply rounding method to dimensions	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingNoDimSpecificOptionSpecified, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingNoDimSpecificOptionSpecified, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to apply the specified decimal rounding method to: - any numeric display where rounding occurs, including dialogs. - or - - dimensions on their tolerances, including dimensions whose values are derived from equations. NOTE: Check box is not available if Round half away from zero is selected.

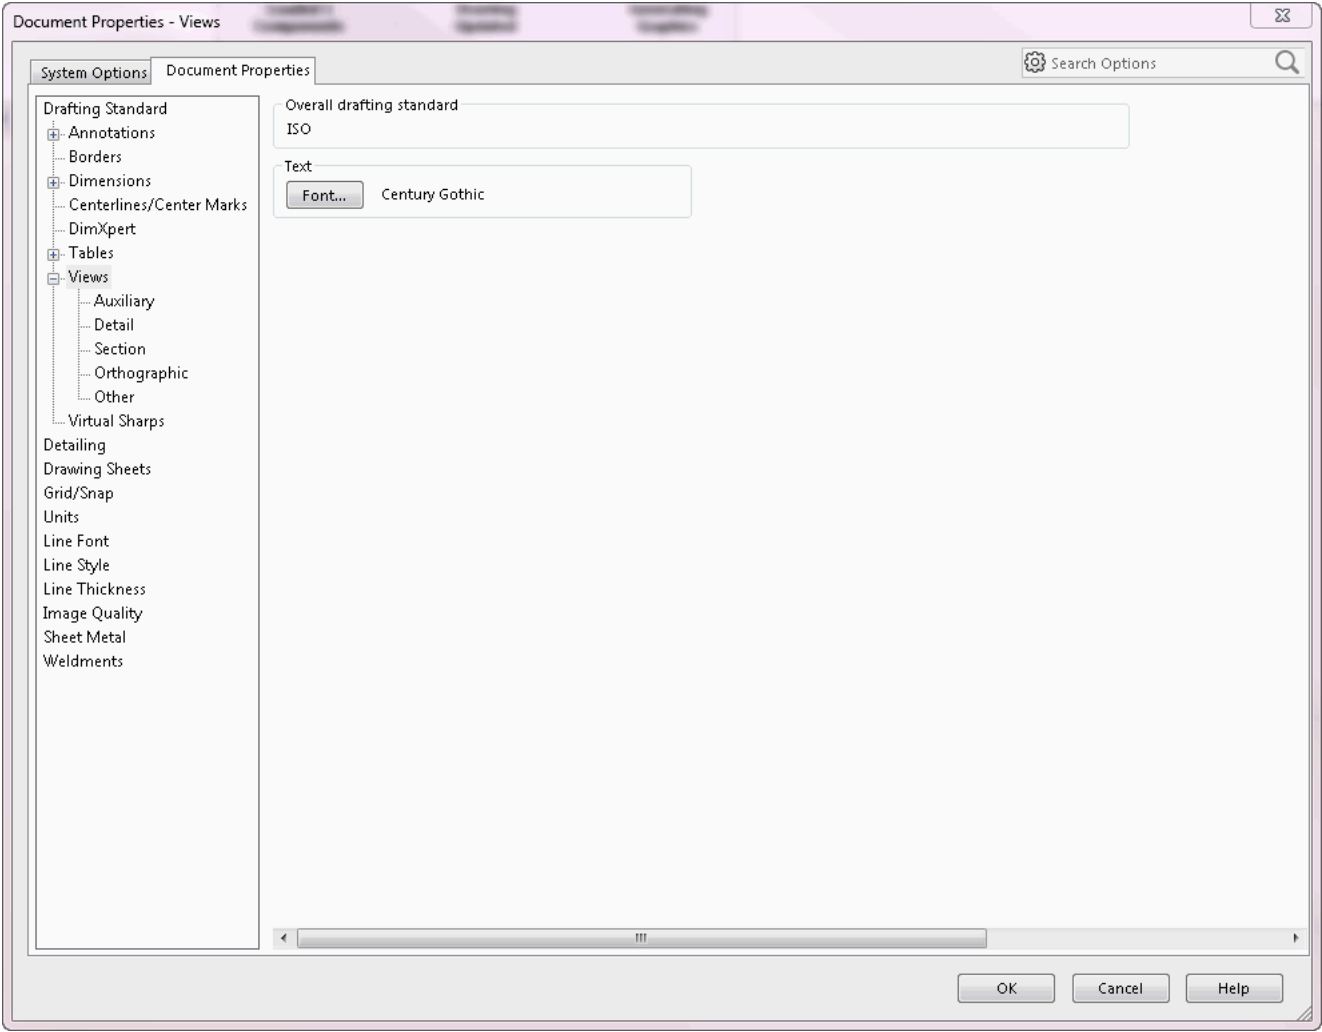

Setting	Get/Set Methods	Return Value or <Value>	Comments
Text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingViewTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingViewTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, implement ITextFormat, set the appropriate ITextFormat member values, and pass the ITextFormat object in the API set method


Document Properties > Views > Auxiliary

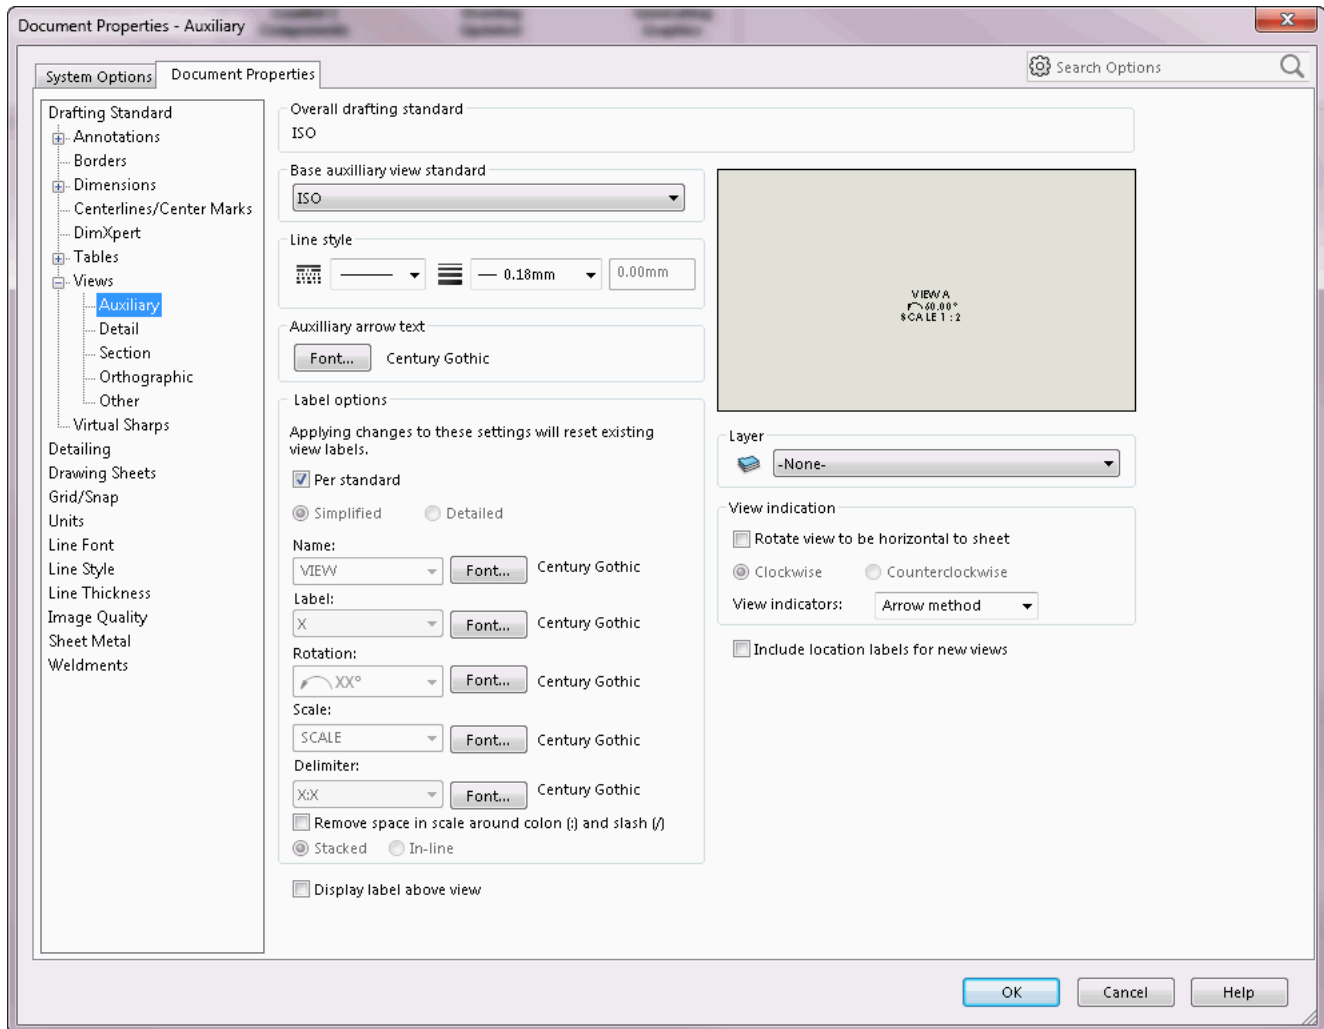

Setting	Get/Set Methods	Return Value or <Value>				
Base auxiliary view standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingAuxiliaryView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingAuxiliaryView, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base			
Line style - Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontViewArrowStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontViewArrowStyle, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of vi			
Line style - Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontViewArrowThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontViewArrowThickness, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness			
Line style - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineViewArrowThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineViewArrowThicknessCustom, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Double value	Specifies custom th Thickness to the s Size			
Auxiliary arrow text - Font...	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingViewArrowTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingViewArrowTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property ITextFormat membe method			
Label options - Per standard	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxViewLabels_PerStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxViewLabels_PerStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	<table><tr><th>If...</th></tr><tr><td>True</td></tr><tr><td>False</td></tr></table>	If...	True	False
If...						
True						
False						

Label options - Simplified or Detailed	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_SimplifiedDetailed, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_SimplifiedDetailed, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	True sets the stand			
Label options - Name	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxViewLabels_Name, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxViewLabels_Name, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsName_e.<Value>)	See swDetailingViewLabelsName_e for valid options	Specifies the label i swDetailingViewLal set Label options -			
Label options - Name (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingAuxViewLabels_CustomName, swUserPreferenceOption_e.swDetailingAuxiliaryView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingAuxViewLabels_CustomName, swUserPreferenceOption_e.swDetailingAuxiliaryView, <Value>)	String value	Specifies the custo Label options - Na swDetailingViewLal			
Label options - Name - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_NameTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_NameTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property ITextFormat membe method			
Label options - Label	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxViewLabels_Label, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxViewLabels_Label, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsLabel_e.<Value>)	See swDetailingViewLabelsLabel_e for valid options	Specifies the forma			
Label options - Label - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_LabelTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_LabelTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property ITextFormat membe method			
Label options - Rotation	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxView_Rotation, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxView_Rotation, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewRotation_e.<Value>)	See swDetailingViewRotation_e for valid options				
Label options - Rotation - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_RotationTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_RotationTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property ITextFormat membe method			
Label options - Scale	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxViewLabels_Scale, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxViewLabels_Scale, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsScale_e.<Value>)	See swDetailingViewLabelsScale_e for valid options	Specifies the label i swDetailingViewLal then set Label opti			
Label options - Scale (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingAuxViewLabels_CustomScale, swUserPreferenceOption_e.swDetailingAuxiliaryView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingAuxViewLabels_CustomScale, swUserPreferenceOption_e.swDetailingAuxiliaryView, <Value>)	String value	Specifies the custo Label options - Sc swDetailingViewLal			
Label options - Scale - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_ScaleTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_ScaleTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property ITextFormat membe method			
Label options - Delimiter	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxViewLabels_Delimiter, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxViewLabels_Delimiter, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsDelimiter_e.<Value>)	See swDetailingViewLabelsDelimiter_e for valid options	Specifies the forma			
Label options - Delimiter - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_DelimiterTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingAuxView_DelimiterTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property ITextFormat membe method			
Label options - Remove space in scale around colon (:) and slash (/)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether t			
Label options - Stacked or In-line	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxViewLabels_Stacked, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxViewLabels_Stacked, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	<table><tr><td>If...</td></tr><tr><td>True</td></tr><tr><td>False</td></tr></table>	If...	True	False
If...						
True						
False						
Display label above view	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxViewLabels_AboveView, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxViewLabels_AboveView, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether t			
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingAuxiliaryView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingAuxiliaryView, <Value>)	Valid Options: • "Border" • "Dimensions" • "Notes" • "BOM" • "FORMAT"	This setting is avail options may not ap			
View indication - Rotate view to be horizontal to sheet	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_RotateViewToHorizontalSheet, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_RotateViewToHorizontalSheet, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether t			
View indication - Clockwise or Counterclockwise	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_RotateClockwiseCounterclockwise, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_RotateClockwiseCounterclockwise, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	True rotates the vie			

View indication - View indicators	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxView_ViewIndication, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingAuxView_ViewIndication, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swViewIndication_e.<Value>)	See swViewIndication_e for valid options	Specifies the view i
Include location labels for new views	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_IncludeLocationLabelsForNewViews, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingAuxView_IncludeLocationLabelsForNewViews, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to i

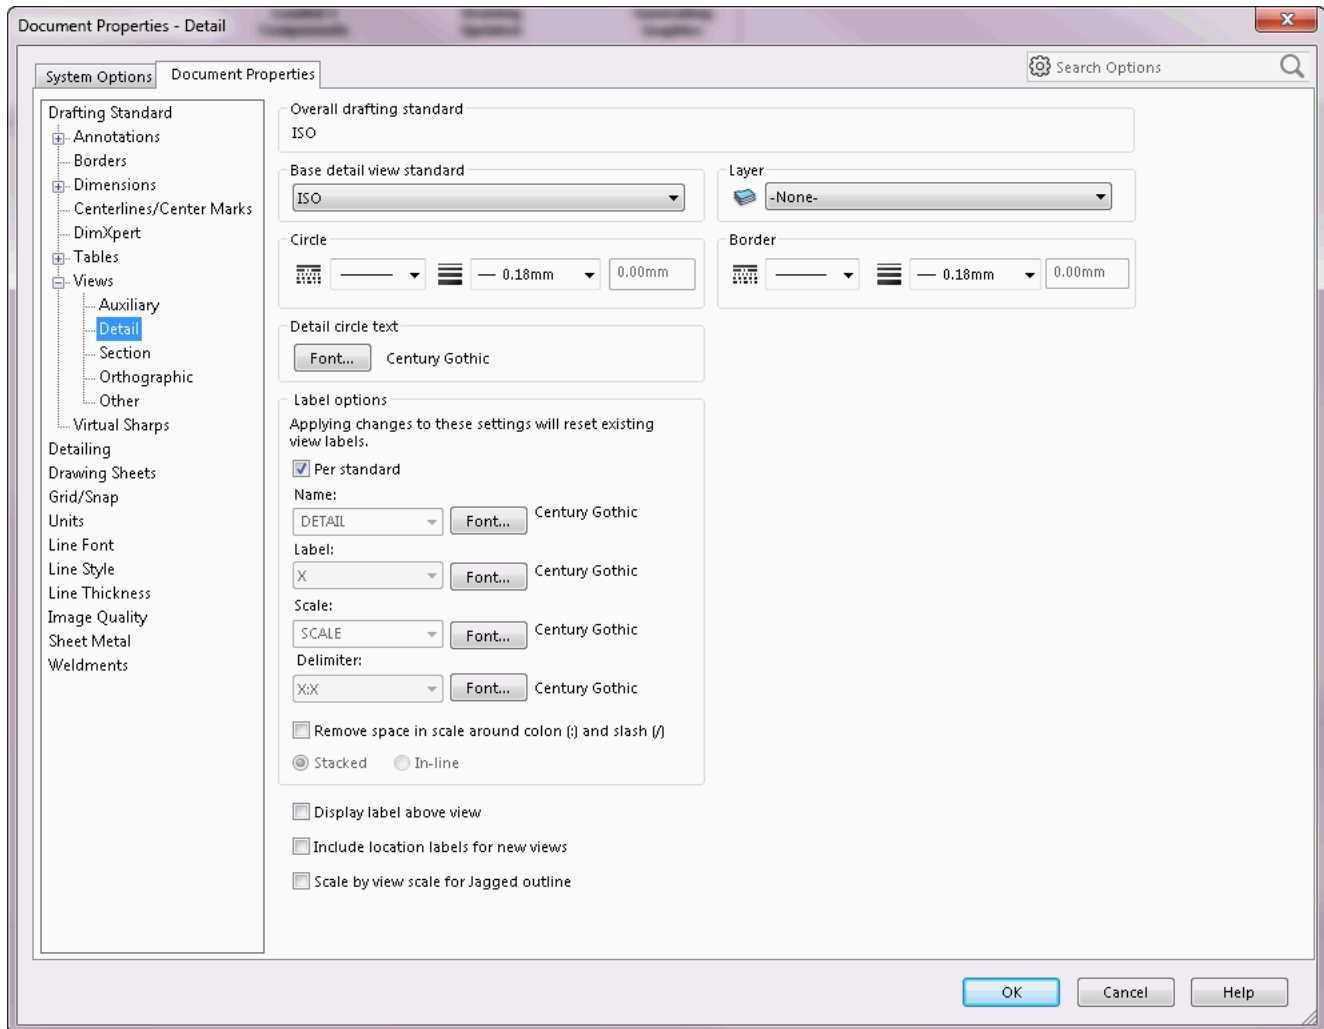

Setting	Get/Set Methods	Return Value or <Value>	
Base detail view standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingDetailView, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base detail
Circle - Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDetailCircleStyle, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDetailCircleStyle, swUserPreferenceOption_e.swDetailingDetailView, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies the line style c
Circle - Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDetailCircleThickness, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDetailCircleThickness, swUserPreferenceOption_e.swDetailingDetailView, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies the line thickn
Circle - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDetailCircleThicknessCustom, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDetailCircleThicknessCustom, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Double value	Specifies custom thickn Thickness to the specif Size
Border - Line Style	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDetailBorderStyle, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDetailBorderStyle, swUserPreferenceOption_e.swDetailingDetailView, swLineStyles_e.<Value>)	See swLineStyles_e for valid options	Specifies style of detail
Border - Line Thickness	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDetailBorderThickness, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swLineFontDetailBorderThickness, swUserPreferenceOption_e.swDetailingDetailView, swLineWeights_e.<Value>)	See swLineWeights_e for valid options	Specifies thickness of d
Border - Custom thickness	IModelDocExtension::GetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDetailBorderThicknessCustom, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceDouble (swUserPreferenceDoubleValue_e.swLineFontDetailBorderThicknessCustom, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Double value	Specifies custom thickn Thickness to the specif Size


Detail circle text - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailTextFormat, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailTextFormat, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	See ITextFormat for font options	To set font property value ITextFormat member value method						
Label options - Per standard	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailViewLabels_PerStandard, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailViewLabels_PerStandard, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Boolean value	<table><tr><th>If...</th></tr><tr><td>True</td></tr><tr><td>False</td></tr></table>	If...	True	False			
If...									
True									
False									
Label options - Name	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDetailViewLabels_Name, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDetailViewLabels_Name, swUserPreferenceOption_e.swDetailingDetailView, swDetailingViewLabelsName_e.<Value>)	See swDetailingViewLabelsName_e for valid options	Specifies the label to use swDetailingViewLabelsName set Label options - Name						
Label options - Name (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingDetailViewLabels_CustomName, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingDetailViewLabels_CustomName, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	String value	Specifies the custom label Label options - Name is set to swDetailingViewLabelsName						
Label options - Name - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailView_NameTextFormat, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailView_NameTextFormat, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	See ITextFormat for font options	To set font property value ITextFormat member value method						
Label options - Label	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDetailViewLabels_Label, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDetailViewLabels_Label, swUserPreferenceOption_e.swDetailingDetailView, swDetailingViewLabelsLabel_e.<Value>)	See swDetailingViewLabelsLabel_e for valid options	Specifies the format of the label						
Label options - Label - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailView_LabelTextFormat, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailView_LabelTextFormat, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	See ITextFormat for font options	To set font property value ITextFormat member value method						
Label options - Scale	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDetailViewLabels_Scale, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDetailViewLabels_Scale, swUserPreferenceOption_e.swDetailingDetailView, swDetailingViewLabelsScale_e.<Value>)	See swDetailingViewLabelsScale_e for valid options	Specifies the label to use swDetailingViewLabelsScale then set Label options						
Label options - Scale (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingDetailViewLabels_CustomScale, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingDetailViewLabels_CustomScale, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	String value	Specifies the custom label Label options - Scale is swDetailingViewLabelsScale						
Label options - Scale - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailView_ScaleTextFormat, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailView_ScaleTextFormat, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	See ITextFormat for font options	To set font property value ITextFormat member value method						
Label options - Delimiter	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDetailViewLabels_Delimiter, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDetailViewLabels_Delimiter, swUserPreferenceOption_e.swDetailingDetailView, swDetailingViewLabelsDelimiter_e.<Value>)	See swDetailingViewLabelsDelimiter_e for valid options	Specifies the format of the label						
Label options - Delimiter - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailView_DelimiterTextFormat, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingDetailView_DelimiterTextFormat, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	See ITextFormat for font options	To set font property value ITextFormat member value method						
Label options - Remove space in scale around colon (:) and slash (/)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Boolean value	Specifies whether to remove space in scale around colon (:) and slash (/)						
Stacked or In-line	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailViewLabels_Stacked, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailViewLabels_Stacked, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Boolean value	<table><tr><th>If...</th><th>Then</th></tr><tr><td>True</td><td>2 lines</td></tr><tr><td>False</td><td>1 line</td></tr></table>	If...	Then	True	2 lines	False	1 line
If...	Then								
True	2 lines								
False	1 line								
Display label above view	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailViewLabels_AboveView, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailViewLabels_AboveView, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Boolean value	Specifies whether to show label above view						
Include location labels for new views	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailView_IncludeLocationLabelsForNewViews, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailView_IncludeLocationLabelsForNewViews, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Boolean value	Specifies whether to include location labels for new views						
Scale by view scale for Jagged outline	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailViewLabels_ScaleForJaggedOutline, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingDetailViewLabels_ScaleForJaggedOutline, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Boolean value	Specifies whether to scale by view scale for Jagged outline						
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingDetailView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingDetailView, <Value>)	Valid Options: • "Border" • "Dimensions" • "Notes" • "BOM"	This setting is available only for 2D views options may not apply						

		• "FORMAT"	
--	--	------------	--

Document Properties > Views > Orthographic

This topic contains two tables. The information in the table:

- appearing immediately after the screen capture of the Document Properties - Orthographic dialog corresponds to the settings on that dialog.
- titled [Obsolete Enumerators](#) contains enumerators that previously appeared on the Document Properties - Orthographic dialog, but are now obsolete and no longer appear on that dialog.

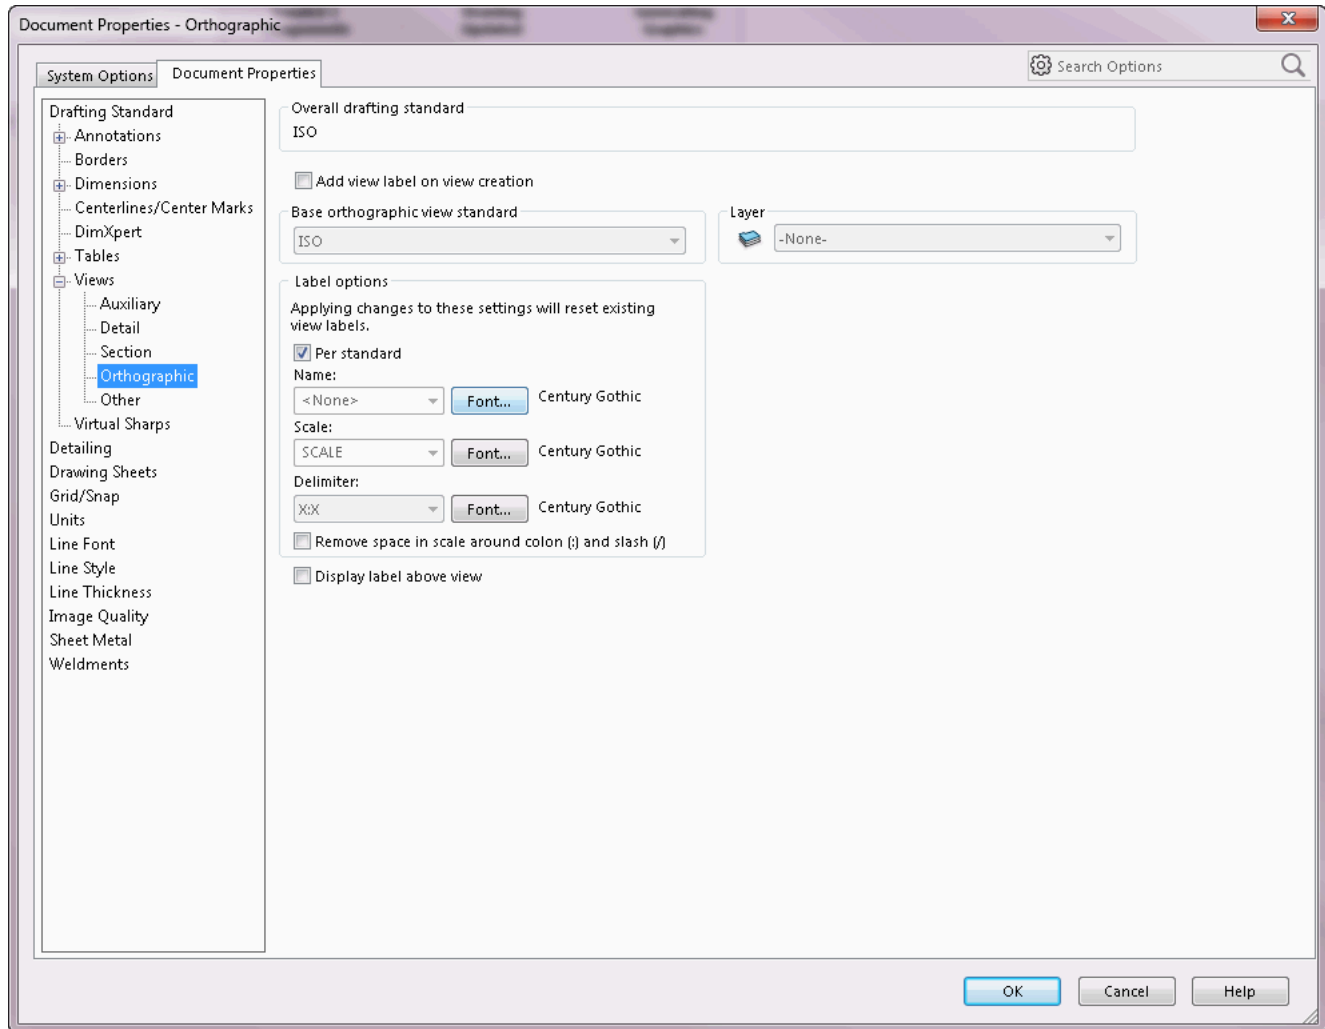


Setting	Get/Set Methods	Return Value or <Value>				
Add view label on creation	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrthoView_AddViewLabelOnViewCreation, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrthoView_AddViewLabelOnViewCreation, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to add a v			
Base orthographic view standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingOrthoView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingOrthoView, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base orthograp			
Label options - Per standard	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrthoViewLabels_PerStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrthoViewLabels_PerStandard, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	<table><tr><td>If...</td></tr><tr><td>True</td></tr><tr><td>False</td></tr></table>	If...	True	False
If...						
True						
False						
Label options - Name	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingOrthoView_Name, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingOrthoView_Name, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsName_e.<Value>)	See swDetailingViewLabelsName_e for valid options	Specifies the label to use in swDetailingViewLabelsName set Label options - Name (t			

Label options - Name (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingOrthoView_CustomName, swUserPreferenceOption_e.swDetailingSectionView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingOrthoView_CustomName, swUserPreferenceOption_e.swDetailingSectionView, <Value>)	String value	Specifies the custom label to use if Label options - Name is set. The default is swDetailingViewLabelsName .
Label options - Name - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingOrthoView_NameTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingOrthoView_NameTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, use the ITextFormat member values, method
Label options - Scale	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingOrthoViewLabels_Scale, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingOrthoViewLabels_Scale, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsScale_e.<Value>)	See swDetailingViewLabelsScale_e for valid options	Specifies the label to use in the orthographic view. The default is swDetailingViewLabelsScale . Then set Label options - Scale .
Label options - Scale (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingOrthoView_CustomScale, swUserPreferenceOption_e.swDetailingSectionView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingOrthoView_CustomScale, swUserPreferenceOption_e.swDetailingSectionView, <Value>)	String value	Specifies the custom label to use if Label options - Scale is set. The default is swDetailingViewLabelsScale .
Label options - Scale - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingOrthoView_ScaleTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingOrthoView_ScaleTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, use the ITextFormat member values, method
Label options - Delimiter	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingOrthoViewLabels_Delimiter, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingOrthoViewLabels_Delimiter, swUserPreferenceOption_e.swDetailingNoOptionSpecified, swDetailingViewLabelsDelimiter_e.<Value>)	See swDetailingViewLabelsDelimiter_e for valid options	Specifies the format of the scale label. The default is swDetailingViewLabelsDelimiter .
Label options - Delimiter - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingOrthoView_DelimiterTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingOrthoView_DelimiterTextFormat, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	See ITextFormat for font options	To set font property values, use the ITextFormat member values, method
Label options - Remove space in scale around colon (:) and slash (/)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrthoView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrthoView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to remove space in scale around colon (:) and slash (/).
Display label above view	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrthoView_DisplayLabelAboveView, swUserPreferenceOption_e.swDetailingNoOptionSpecified) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingOrthoView_DisplayLabelAboveView, swUserPreferenceOption_e.swDetailingNoOptionSpecified, <Value>)	Boolean value	Specifies whether to display label above view.
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingOrthoView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingOrthoView, <Value>)	Valid Options: "BORDER" "CENTER" "CONTINUOUS" "DIM" "FORMAT" "HIDDEN" "RED" "TEXT" "THIN"	This setting is available only if the view scale differs from the sheet scale. Options may not apply.

Obsolete Enumerators

Enumerator	Comment
swDetailingOrthoViewLabelsEnableShow	Obsolete ; specified whether to display the scale label in the orthographic view if the view scale differs from the sheet scale

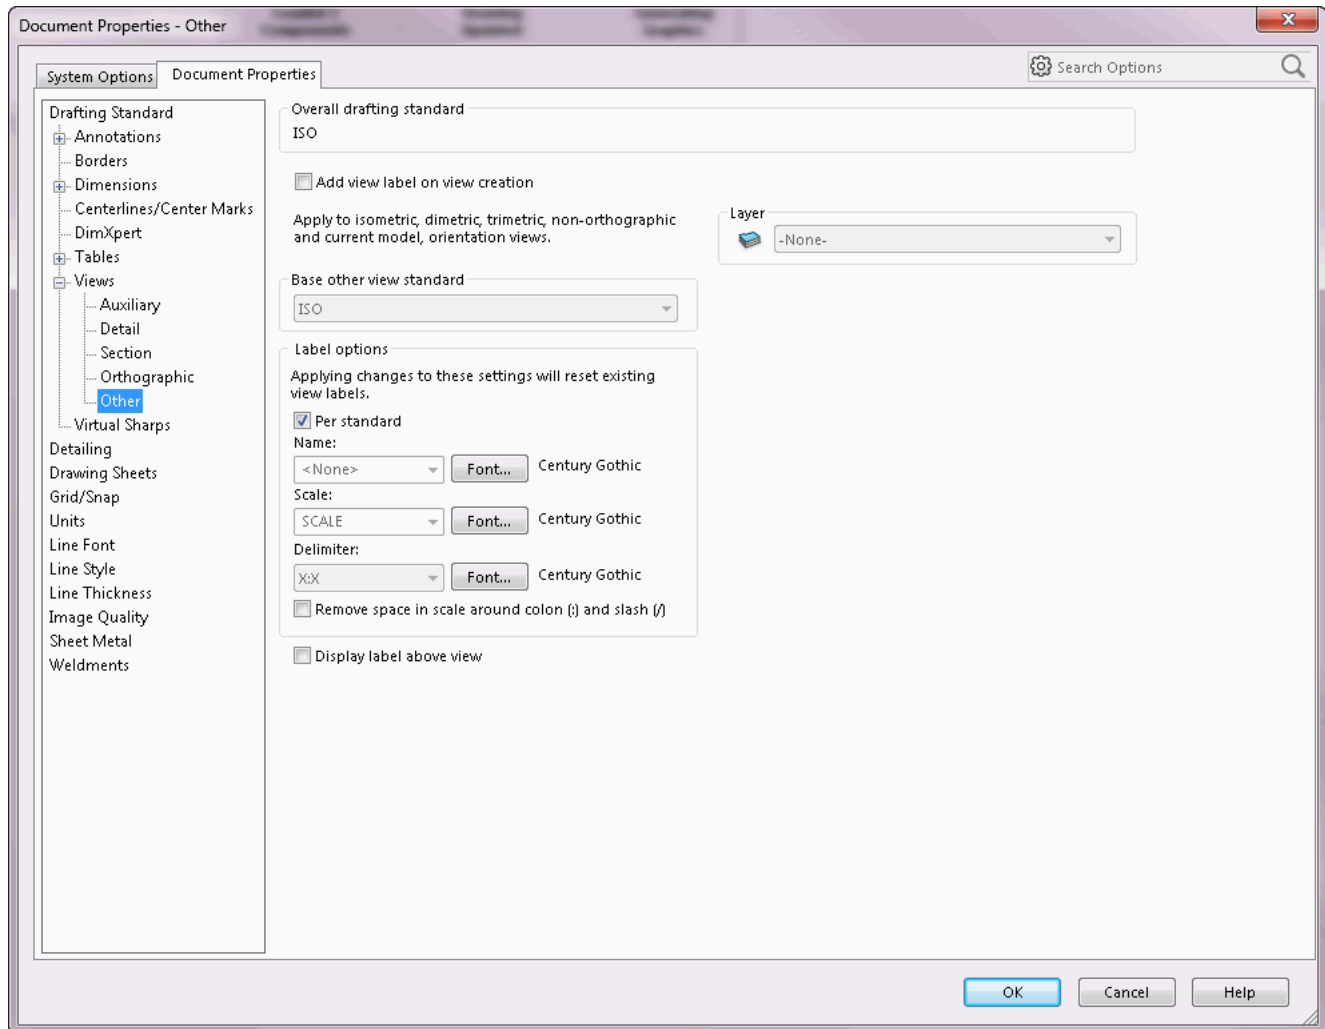

Setting	Get/Set Methods	Return Value or <Value>				
Add view label on view creation	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingMiscView_AddViewLabelOnViewCreation, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingMiscView_AddViewLabelOnViewCreation, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	Boolean value	Specifies whether to add a view label on view creation.			
Base other view standard	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingDimensionStandard, swUserPreferenceOption_e.swDetailingMiscView, swDetailingStandard_e.<Value>)	See swDetailingStandard_e for valid options	Specifies the base miscellaneous view standard.			
Label options - Per standard	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingMiscView_PerStandard, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingMiscView_PerStandard, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	Boolean value	<table><tr><th>If...</th></tr><tr><td>True</td></tr><tr><td>False</td></tr></table>	If...	True	False
If...						
True						
False						
Label options - Name	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingMiscView_Name, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingMiscView_Name, swUserPreferenceOption_e.swDetailingMiscView, swDetailingViewLabelsName_e.<Value>)	See swDetailingViewLabelsName_e for valid options	Specifies the label to use in from swDetailingViewLabelsName_e, set Label options - Name (CUSTOM) .			
Label options - Name (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingMiscView_CustomName, swUserPreferenceOption_e.swDetailingSectionView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingMiscView_CustomName, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	String value	Specifies the custom label to use only if Label options - Name is set to CUSTOM.			

Label options - Name - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingMiscView_NameTextFormat, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingMiscView_NameTextFormat, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	See ITextFormat for font options	To set font property values, implement member values, and pass the ITex
Label options - Scale	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingMiscView_Scale, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingMiscView_Scale, swUserPreferenceOption_e.swDetailingMiscView, swDetailingViewLabelsScale_e.<Value>)	See swDetailingViewLabelsScale_e for valid options	Specifies the label to use in from swDetailingViewLabelsScale_e then set Label options - Scale
Label options - Scale (CUSTOM)	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingMiscView_CustomScale, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingMiscView_CustomScale, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	String value	Specifies the custom label to use. If Label options - Scale is set to CUSTOM, then set Label options - Scale to the custom label.
Label options - Scale - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingMiscView_ScaleTextFormat, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingMiscView_ScaleTextFormat, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	See ITextFormat for font options	To set font property values, implement member values, and pass the ITex
Label options - Delimiter	IModelDocExtension::GetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingMiscView_Delimiter, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceInteger (swUserPreferenceIntegerValue_e.swDetailingMiscView_Delimiter, swUserPreferenceOption_e.swDetailingMiscView, swDetailingViewLabelsDelimiter_e.<Value>)	See swDetailingViewLabelsDelimiter_e for valid options	Specifies the format of the scale label.
Label options - Delimiter - Font	IModelDocExtension::GetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingMiscView_DelimiterTextFormat, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceTextFormat (swUserPreferenceTextFormat_e.swDetailingMiscView_DelimiterTextFormat, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	See ITextFormat for font options	To set font property values, implement member values, and pass the ITex
Label options - Remove space in scale around colon (:) and slash (/)	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingMiscView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingMiscView_RemoveSpaceInScale, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	Boolean value	Specifies whether to remove extra space around the colon and slash.
Display label above view	IModelDocExtension::GetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingMiscView_DisplayLabelAboveView, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceToggle (swUserPreferenceToggle_e.swDetailingMiscView_DisplayLabelAboveView, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	Boolean value	Specifies whether to show the label above the view.
Layer	IModelDocExtension::GetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingMiscView) IModelDocExtension::SetUserPreferenceString (swUserPreferenceStringValue_e.swDetailingLayer, swUserPreferenceOption_e.swDetailingMiscView, <Value>)	Valid Options: "Border" "Dimensions" "Notes" "BOM" "FORMAT"	This setting is available only for 2D views. Options may not apply.