PIC64GX1000 Curiosity Kit User Guide




Introduction

The PIC64GX1000 Curiosity kit (CURIOSITY-PIC64GX1000-KIT-ES) is an RoHS-compliant, cost-optimized kit that enables you to evaluate features of the PIC64GX1000 device. The low-cost PIC64GX1000 Curiosity kit is a minimalistic board design that is directed to provide boards with the lowest possible cost to customers.


The following image highlights the top-view of the PIC64GX1000 Curiosity kit.

Figure 1. Board Callout (Top-View)

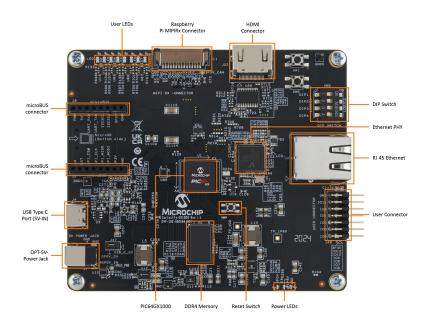

The following image highlights the bottom-view of the PIC64GX1000 Curiosity kit.

Figure 2. Board Callout (Bottom-View)

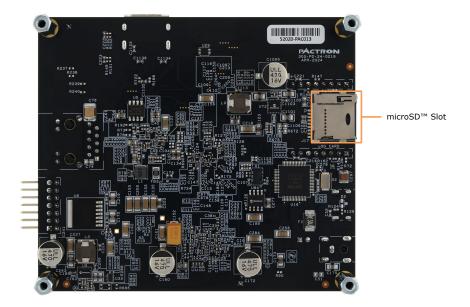

For more information about the PIC64GX1000 Curiosity kit, see the CURIOSITY-PIC64GX1000-KIT-ES page.



Table of Contents

Inti	oducti	ion	1	
1.	Gettir	Getting Started		
	1.1.	Kit Contents	4	
	1.2.	Block Diagram	4	
	1.3.	Board Overview	4	
	1.4.	Handling the Board	5	
	1.5.	Operating Temperature	5	
	1.6.	Powering Up the Board	6	
2.	Instal	llation and Settings	7	
	2.1.	Software and Licensing	7	
	2.2.	Hardware Settings	7	
3.	Board	d Components and Operation	10	
	3.1.	DDR4 Memory Interface	10	
	3.2.	microSD Interface	10	
	3.3.	Display Interface	10	
	3.4.	Communications Interfaces	10	
	3.5.	Expansion Capabilities	10	
	3.6.	Debug Circuitry	11	
	3.7.	Programming Scheme		
	3.8.	Form Factor		
	3.9.	System Reset		
		50 MHz Oscillator		
	3.11.	125 MHz Oscillator	12	
	3.12.	Pin List	12	
4.	Board	d Components Placement	13	
Rev	ision l	History	14	
Mic	rochip	o Information	15	
	The N	Aicrochip Website	15	
	Produ	uct Change Notification Service	15	
	Customer Support			
	Microchip Devices Code Protection Feature			
	Legal	Notice	15	
	Trade	emarks	16	
	Quali	ty Management System	17	
	World	dwide Sales and Service	18	



1. Getting Started

The PIC64GX1000 Curiosity kit supports the following interfaces:

- microSD[™] card
- DDR4[™]
- SGMII
- USB-UART
- mikroBUS[™]
- HDMI

The PIC64GX device is programmed using the on-board FlashPro5 programmer.

1.1. Kit Contents

The following table lists the contents of the PIC64GX1000 Curiosity kit.


Table 1.1. Kit Contents

Item	Quantity
PIC64GX1000 Curiosity kit board with a PIC64GX1000 device	1
USB 2.0 Cable C Male to C Male 3.28' (1.00m) Shielded	1
SanDisk Ultra microSD [™] UHS-I Card 32GB, 120MB/s R	1
Quickstart card	1

1.2. Block Diagram

The following block diagram shows the key components of the PIC64GX1000 Curiosity kit.

Figure 1.1. Block Diagram

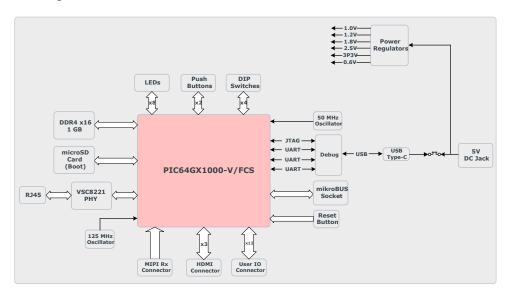

1.3. Board Overview

The PIC64GX1000 Curiosity kit features a PIC64GX1000-V/FCS device. The kit supports the following capabilities:

VSC8221 with an RJ45 connector for 10/100/1000 Mbps Ethernet



- DDR4 memory
- microSD card interface
- HDMI 1.4 interface
- · mikroBUS expansion port
- User IO connector

The following table lists the key components of the PIC64GX1000 Curiosity kit.

Table 1.2. Board Components

Component	Label on Board	Description
Featured Device		
PIC64GX1000-V/FCS	U1	See <i>DS50003724, PIC64GX1000 64-bit Microprocessor Datasheet</i> on the PIC64GX1000 page.
Power Supply		
5V/3A power supply (USB Type-C)	J4	The PIC64GX1000 Curiosity kit receives power from the USB Type-C port (J4) or the 5V DC Jack (J7). The J47 jumper setting determines which power
5V DC Jack	J7	source is used. See the 2.2.1. Jumper Settings section.
Clocks		
50 MHz oscillator	Х3	50 MHz clock oscillator with single-ended output.
125 MHz Oscillator	X1	125 MHz oscillator (differential LVDS output) which is the input to the SGMII Reference clock.
Programming and Debugging		
Embedded FlashPro5 (eFP5)	U16	On-board FlashPro5 to program and debug the device through USB-to- JTAG channel
Communication Interfaces		
Gigabit Ethernet	J3	Ethernet (RJ45) jack with built-in magnetics interfacing with VSC8221 in SGMII mode.
USB-UART	U16	FT4232HL is a USB to quad UART bridge controller. This device supports 3 UART interfaces on the PIC64GX1000 Curiosity board.
HDMI Interface	J22	Supports the HDMI 1.4 data rate.
Memory Chips		
DDR4	U2	MT40A512M16TB-062E: R is used for DDR4 interface.
microSD [™] card	J17	microSD connector
General Purpose I/O		
Debug push-buttons	SW1 to SW2	For debugging
Reset push-button	SW9	For system reset
Dip Switches	SW8	Four dip switches for debugging
Light Emitting Diodes (LEDs)	LED1 to LED8	Eight active-high LEDs are available for debugging.
Expansion Interfaces		
mikroBUS [™]	J5 and J6	mikroBus connector.
Raspberry Pi MIPI RX Connector	J11	Facilitates interfacing with the MIPI CSI-2 camera module
User IO Connector	J49	A 14-pin User IO Connector (x12 IOs)

1.4. Handling the Board

To avoid damage, handle the PIC64GX1000 Curiosity board with Electrostatic Discharge (ESD) precautions. For information about handling the board with ESD precautions, see <u>Understanding Product Handling and ESD Precautions</u>.

1.5. Operating Temperature

To be updated in a future revision.



1.6. Powering Up the Board

The PIC64GX1000 Curiosity kit receives power from the Type-C Port (J4) or the 5V DC Jack (J7). The J47 jumper setting determines which power source is used, see 2.2.1. Jumper Settings. The board receives the power from Type-C port J4 (as the J47 jumper 1 and 2 pins are closed) by default. To use the 5V DC Jack (J7) for turning on the board, the pins 1 and 2 of the J47 jumper must be open.

To power up the board, connect the Cable C Male to C Male cable from the USB Type-C port (J4) on the kit to the Type-C compatible (5V, 3A) port on the Host PC. The power status LEDs 5P0V, VDD, and 1P8V glow indicating that the board is turned on.



Important: It is recommended to use a laptop or PC USB port to power up the PIC64GX1000 Curiosity kit. By limiting the power input to laptop or PC USB ports, we can ensure that the kit operates optimally without causing any compatibility issues. The power is not tested using different docking station USB ports.



2. Installation and Settings

This section provides information about the software and hardware settings required to run the pre-programmed demo design on the PIC64GX1000 Curiosity kit.

2.1. Software and Licensing

The development tools, which you need to work with the PIC64GX1000 Curiosity kit are free.

The following list provides the tools needed for all platforms:

Visual Studio Code (VSCode)

The following extensions are needed:

- C/C++ VSCode extension. Search for ms-vscode.cpptools in the VSCode extension marketplace.
- Embedded Tools VSCode extension. Search for ms-vscode.vscode-embeddedtools in the VSCode extension marketplace.
- CMake VSCode extension. Search for twxs.cmake in the VSCode extension marketplace.
- Git
 - Version 2.32.0.windows.1 or later if using Windows
 - Version 2.34.1 or later if using Linux
- Pvthon 3.8 or later
- CMake 3.27.1 or later
- Windows specific tools:
 - Download and install UsbDriverTool from USB driver installer for FTDI and Libusb drivers page
- Linux specific tools:
 - libusb-1.0

To install libusb-1.0, use sudo apt install libusb-1.0-0-dev command.

- libftdi

To install libftdi, use the sudo apt install libftdi* command.

- libhidapi

To install libhidapi, use the sudo apt install libhidapi-* command.

- unzip

To install unzip, use the sudo apt install unzip command.

2.2. Hardware Settings

This section provides information about jumper settings, test points, and Power LEDs available on the PIC64GX1000 Curiosity kit.

2.2.1. Jumper Settings

Connect the jumpers according to the settings specified in the following table.



Table 2.1. Jumper Settings

Jumper	Description	Pin	Default Setting
J47	Jumper to select the power source for the board	• Close pins 1 and 2 to receive power from the USB Type-C port (J4).	1 and 2 closed
		• Open pins 1 and 2 to receive power from the 5V DC Jack (J7).	

2.2.2. Power Supply LEDs

The following table lists the power supply LEDs available on the PIC64GX1000 Curiosity kit.

Table 2.2. Power Supply LEDs

LED	Description
VDD	1V rail (Core voltage)
1P8V	1.8V rail
5P0V	5V rail

2.2.3. Test Points

The following table lists the test points available on the PIC64GX1000 Curiosity kit.

Table 2.3. Test Points

Test Point	Description
GND1	Test point for GND
GND4	Test point for GND
GND5	Test point for GND
TP_VDD	Test point for 1V (core voltage rail)
TP_1P8V	Test point for 1.8V

2.2.4. Power Sources

The PIC64GX1000 Curiosity kit uses Microchip power supply devices. For more information about these power supply devices, see Microchip's Power Management Devices. The following table lists the key voltage rails required for a normal operation of the kit.


Table 2.4. I/O Voltage Rails

Bank	I/O Rail	Voltage
Bank 1	VDDI1	3.3V
Bank 2	3P3V	3.3V
Bank 3 (JTAG)	3P3V	3.3V
Bank 4 (SD)	1P8V	1.8V
Bank 5 (SGMII)	VDDI5	3.3V
Bank 6 (DDR)	1P2V_DDR4	1.2V

The following figure shows 5V, 3.3V, 2.5V, 1.8V, 1.2V, and 1.0V (VDD) voltage rails available on the PIC64GX1000 Curiosity kit.



Figure 2.1. Power Supply Topology

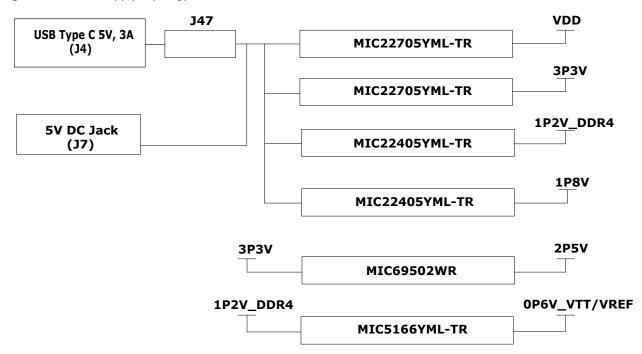

The following table lists the power regulators recommended for the voltage rails on the PIC64GX1000 Curiosity kit.

Table 2.5. Power Regulators

Voltage Rail	Part Number	Description	Current
VDD (1.0V)	MIC22705YML-TR	IC REG BUCK ADJUSTABLE 7A	7A
1P2V_DDR4	MIC22405YML-TR	IC REG BUCK ADJUSTABLE 3A	4A
1P8V	MIC22405YML-TR	IC REG BUCK ADJUSTABLE 3A	4A
2P5V	MIC69502WR	IC REG LINEAR POS ADJ 5A	5A
3P3V	MIC22705YML-TR	IC REG BUCK ADJUSTABLE 7A	7A
VTT/VREF	MIC5166YML-TR	IC PWR SUP 3A HS DDR TERM 10MLF	3A



3. Board Components and Operation

This section describes the key components of the PIC64GX1000 Curiosity kit and provides information about important board operations.

3.1. DDR4 Memory Interface

The PIC64GX1000 Curiosity kit has a DDR4 memory connected to Bank 6. The following list provides the DDR4 memory specifications:

Part number: MT40A512M16TB-062E: R

Manufacturer: Micron®
Frequency range: 800 MHz

• Memory size: 1 GB

3.2. microSD Interface

The PIC64GX1000 Curiosity kit has a microSD card connected to Bank 4. The following are the microSD card connector specifications:

Part number: MEM2075-00-140-01-A

· Manufacturer: GCT

The microSD interface is connected using a voltage translator between the SD card connector and silicon.

3.3. Display Interface

The PIC64GX1000 Curiosity kit has an HDMI Interface connector. This connector allows the user to view simple overlays and the image from the MIPI camera. This interface supports the HDMI 1.4 data rate.

3.4. Communications Interfaces

The PIC64GX1000 Curiosity kit supports the following interfaces for communication:

- Ethernet-SGMII interface: The kit supports a low-power single-port Ethernet 10/100/1000BASE-T PHY device and the part number of the PHY device is VSC8221. The PHY SGMII signals connected to SGMII Bank.
- USB-to-UART interface: The kit supports a USB-to-quad UART bridge controller device, which supports three UART interfaces. The following are the specifications:

Important: To detect and view the UART COM ports in your **Host PC > Device**

- Part number: FT4232HL

- Manufacturer: FTDI

- The UART_B interface is connected to Bank 2
- UART_C and UART_D are connected to Bank 1

Manager, install the FT4232H drivers.

3.5. Expansion Capabilities

The PIC64GX1000 Curiosity kit has the following expansion capabilities.



3.5.1. mikroBUS Connector

The PIC64GX1000 Curiosity kit has a 16-pin mikroBUS interface connector. It supports interfaces like UART, SPI, and I2C. The mikroBUS signals are connected to Bank 2. For more information on available Click Boards, see mikroe website.

3.5.2. User IO Connector

The PIC64GX1000 Curiosity kit has a 14-pin connector. Through this connector 12 user IOs are interfaced to GPIO Bank 1.

3.6. Debug Circuitry

The PIC64GX1000 Curiosity kit is equipped with two push-button switches, four dip switches, and eight debug LEDs. Switches are connected to Bank 1 and Debug LEDs are connected to Bank 2. Three LEDs are for power indication and eight LEDs are for debugging purposes.

The following table lists the debug LED to pin connection.

Table 3.1. Debug LED Connections

LED Number	Pin
LED1	H4
LED2	G5
LED3	G1
LED4	F2
LED5	F4
LED6	E5
LED7	E2
LED8	E1

3.7. Programming Scheme

The PIC64GX1000 Curiosity kit supports JTAG programming through an on-board FlashPro5 programmer.


3.8. Form Factor

The form factor of the PIC64GX1000 Curiosity kit is 4.145 × 3.595 inches, approximately.

3.9. System Reset

RESET_IN# is an input-only reset pad connected to Bank 1. This system reset push-button allows a full reset of the chip to be asserted. The following figure shows a sample reset circuit that uses a Microchip MCP121T-315E/TT device.

Figure 3.1. Reset Circuit






3.10. 50 MHz Oscillator

A 50 MHz clock oscillator with an accuracy of ± 10 ppm is available on the PIC64GX1000 Curiosity board. This clock oscillator is connected to the E12 pin to provide a system reference clock as shown in the following figure.


Figure 3.2. 50 MHz Oscillator



3.11. 125 MHz Oscillator

A 125 MHz clock oscillator with an accuracy of ± 10 ppm is available on the PIC64GX1000 Curiosity board. This clock oscillator is connected to the Bank 5 through P5 and P4 pins to provide SGMII reference clock as shown in the following figure.

Figure 3.3. 125 MHz Oscillator



For more information, see the board-level schematics on the CURIOSITY-PIC64GX1000-KIT-ES page.

3.12. Pin List


For more information about all package pins, see *DS50003724, PIC64GX1000 64-bit Microprocessor Datasheet* on the PIC64GX1000 page.



4. Board Components Placement


The following silkscreen shows the top-view of the placement of various components on the board.

Figure 4.1. Silkscreen (Top-View)

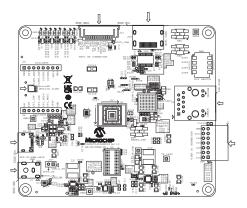

The following silkscreen shows the bottom-view of the placement of various components on the board.

Figure 4.2. Silkscreen (Bottom-View)

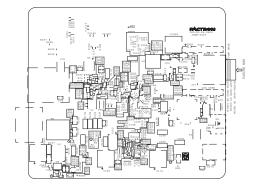



Revision History

The revision history describes the changes that were implemented in the document. The changes are listed by revision, starting with the most current publication.

Revision	Date	Description
A	07/2024	Initial Revision



Microchip Information

The Microchip Website

Microchip provides online support via our website at www.microchip.com/. This website is used to make files and information easily available to customers. Some of the content available includes:

- **Product Support** Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip design partner program member listing
- **Business of Microchip** Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Product Change Notification Service

Microchip's product change notification service helps keep customers current on Microchip products. Subscribers will receive email notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, go to www.microchip.com/pcn and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Embedded Solutions Engineer (ESE)
- Technical Support

Customers should contact their distributor, representative or ESE for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in this document.

Technical support is available through the website at: www.microchip.com/support

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip products:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
- Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code protection features of Microchip product is strictly prohibited and may violate the Digital Millennium Copyright Act.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is "unbreakable".
 Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.

Legal Notice

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure



that your application meets with your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at www.microchip.com/en-us/support/design-help/client-support-services.

THIS INFORMATION IS PROVIDED BY MICROCHIP "AS IS". MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL LOSS, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, CryptoMemory, CryptoRF, dsPIC, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Kleer, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AgileSwitch, ClockWorks, The Embedded Control Solutions Company, EtherSynch, Flashtec, Hyper Speed Control, HyperLight Load, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, TimeCesium, TimeHub, TimePictra, TimeProvider, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, Anyln, AnyOut, Augmented Switching, BlueSky, BodyCom, Clockstudio, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, Espresso T1S, EtherGREEN, EyeOpen, GridTime, IdealBridge, IGaT, In-Circuit Serial Programming, ICSP, INICnet, Intelligent Paralleling, IntelliMOS, Inter-Chip Connectivity, JitterBlocker, Knob-on-Display, MarginLink, maxCrypto, maxView, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, mSiC, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, Power MOS IV, Power MOS 7, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, RTAX, RTG4, SAM-ICE, Serial Quad I/O, simpleMAP, SimpliPHY, SmartBuffer, SmartHLS, SMART-I.S., storClad, SQI, SuperSwitcher, SuperSwitcher II, Switchtec, SynchroPHY, Total Endurance, Trusted Time, TSHARC, Turing, USBCheck, VariSense, VectorBlox, VeriPHY, ViewSpan, WiperLock, XpressConnect, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.



All other trademarks mentioned herein are property of their respective companies.

© 2024, Microchip Technology Incorporated and its subsidiaries. All Rights Reserved.

ISBN: 978-1-6683-4882-6

Quality Management System

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.



Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
Corporate Office	Australia - Sydney	India - Bangalore	Austria - Wels
355 West Chandler Blvd.	Tel: 61-2-9868-6733	Tel: 91-80-3090-4444	Tel: 43-7242-2244-39
Chandler, AZ 85224-6199	China - Beijing	India - New Delhi	Fax: 43-7242-2244-393
el: 480-792-7200	Tel: 86-10-8569-7000	Tel: 91-11-4160-8631	Denmark - Copenhagen
Fax: 480-792-7277	China - Chengdu	India - Pune	Tel: 45-4485-5910
echnical Support:	Tel: 86-28-8665-5511	Tel: 91-20-4121-0141	Fax: 45-4485-2829
www.microchip.com/support	China - Chongging	Japan - Osaka	Finland - Espoo
Web Address: www.microchip.com	Tel: 86-23-8980-9588	Tel: 81-6-6152-7160	Tel: 358-9-4520-820
Atlanta	China - Dongguan	Japan - Tokyo	France - Paris
	Tel: 86-769-8702-9880	Tel: 81-3-6880- 3770	Tel: 33-1-69-53-63-20
Duluth, GA Fel: 678-957-9614	China - Guangzhou	Korea - Daegu	Fax: 33-1-69-30-90-79
Fax: 678-957-1455	Tel: 86-20-8755-8029	Tel: 82-53-744-4301	Germany - Garching
Austin, TX	China - Hangzhou	Korea - Seoul	Tel: 49-8931-9700
Геl: 512-257-3370	Tel: 86-571-8792-8115	Tel: 82-2-554-7200	Germany - Haan
Boston			Tel: 49-2129-3766400
Westborough, MA	China - Hong Kong SAR	Malaysia - Kuala Lumpur	Germany - Heilbronn
Tel: 774-760-0087	Tel: 852-2943-5100	Tel: 60-3-7651-7906	Tel: 49-7131-72400
Fax: 774-760-0088	China - Nanjing	Malaysia - Penang	Germany - Karlsruhe
Chicago	Tel: 86-25-8473-2460	Tel: 60-4-227-8870	Tel: 49-721-625370
tasca, IL	China - Qingdao	Philippines - Manila	Germany - Munich
Tel: 630-285-0071	Tel: 86-532-8502-7355	Tel: 63-2-634-9065	Tel: 49-89-627-144-0
Fax: 630-285-0075	China - Shanghai	Singapore	Fax: 49-89-627-144-44
Dallas	Tel: 86-21-3326-8000	Tel: 65-6334-8870	Germany - Rosenheim
Addison, TX	China - Shenyang	Taiwan - Hsin Chu	Tel: 49-8031-354-560
Tel: 972-818-7423	Tel: 86-24-2334-2829	Tel: 886-3-577-8366	Israel - Hod Hasharon
Fax: 972-818-2924	China - Shenzhen	Taiwan - Kaohsiung	Tel: 972-9-775-5100
Detroit	Tel: 86-755-8864-2200	Tel: 886-7-213-7830	Italy - Milan
Novi, MI	China - Suzhou	Taiwan - Taipei	Tel: 39-0331-742611
Геl: 248-848-4000	Tel: 86-186-6233-1526	Tel: 886-2-2508-8600	Fax: 39-0331-466781
Houston, TX	China - Wuhan	Thailand - Bangkok	Italy - Padova
Гel: 281-894-5983	Tel: 86-27-5980-5300	Tel: 66-2-694-1351	Tel: 39-049-7625286
ndianapolis	China - Xian	Vietnam - Ho Chi Minh	Netherlands - Drunen
Noblesville, IN	Tel: 86-29-8833-7252	Tel: 84-28-5448-2100	Tel: 31-416-690399
Гel: 317-773-8323	China - Xiamen	16.76 7 26 5 7 16 2 7 6	Fax: 31-416-690340
Fax: 317-773-5453	Tel: 86-592-2388138		Norway - Trondheim
Геl: 317-536-2380	China - Zhuhai		Tel: 47-72884388
Los Angeles			
Mission Viejo, CA	Tel: 86-756-3210040		Poland - Warsaw
Fel: 949-462-9523 Fax: 949-462-9608			Tel: 48-22-3325737
-ах. 949-462-9608 Геl: 951-273-7800			Romania - Bucharest
Raleigh, NC			Tel: 40-21-407-87-50
rel: 919-844-7510			Spain - Madrid
			Tel: 34-91-708-08-90
New York, NY			Fax: 34-91-708-08-91
Tel: 631-435-6000			Sweden - Gothenberg
San Jose, CA			Tel: 46-31-704-60-40
Tel: 408-735-9110			Sweden - Stockholm
Tel: 408-436-4270			Tel: 46-8-5090-4654
Canada - Toronto			UK - Wokingham
Tel: 905-695-1980			Tel: 44-118-921-5800
Fax: 905-695-2078			Fax: 44-118-921-5820