



Lineux Toolchanger



LINEUX

- lee-knee-yurks
(noun)

toolchanger that print things you never know
you need in a way you never imagine

- see also wizardry, mesmerizing

Lineux Stealth Dock Build Guide

06/07/2026



<https://discord.gg/Xwqbjj4VjH>



<https://github.com/Bikin-Creative/Lineux-Toolchanger>

If you like what we do, support us to keep us going.



**A big thank you to everyone who
made this project possible.**



CAUTION



- Please take careful precautions with safety in mind when attempting to build Lineux.
- Only attempt the build if you are knowledgeable with 3d printer mechanics and electronics.
- Failure to follow safety precautions may result in things going against you, or even harm you.
- Magnets are extremely strong and may cause injuries. Please handle them with extra care.
- If things start to get confusing or you're stuck at some point during the build, do ask questions on our discord.
- We try to keep things as simple and as clear as possible for a fun and enjoyable build for everyone.
- We are humans and are prone to mistakes. If you encounter any issues/faults with the build guide, please raise them on our Discord.

<u>Introduction</u>	05	<u>Dock</u>	11
<u>Hardware</u>	07	<u>Spine Dock</u>	23
<u>Preparation</u>	09	<u>Completion</u>	38

Part Printing Recommendations

Recommended setting/material to print your parts.

Material	Infill
ABS	40% (Grid, Gyroid, Honeycomb, Triangle, Cubic)
Layer Height	Number of Walls
0.2mm	4
Extrusion Width	Number of Top/Bottom
0.4mm	5

Parts Filename Guide

Primary Colour

Eg. carriage_A.stl

These are to be printed with your primary/base colour.

Accent Colour

Eg. [a]_locking_plate.stl

Files with [a] in front are to be printed with your secondary/accent colour. Parts will be indicated with the Lineux Logo beside it in this guide.

Quantity Required

Eg. belt_tensioner_x2.stl

Files ending with x# indicate the quantity required to be printed

To make your build easier, we recommend you to download the cad from our github to enable you to visualize the whole assembly.



Button Head Cap Screw
(BHCS)



Socket Head Cap Screw
(SHCS)



Flat Head Cap Screw
(FHCS)




n52 Magnet




Heat Insert




Threaded Dowel Pin




T-Nut



Hex Nut



AA Battery Terminal



Washer





Compression Spring

Lineux is a derivative of 2 words, Linear and Flux.

It is recommended to install all heat inserts first on all the parts prior to starting the build.

Dock

m3 heat insert

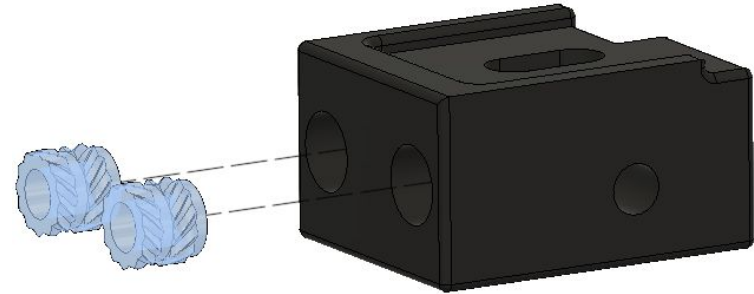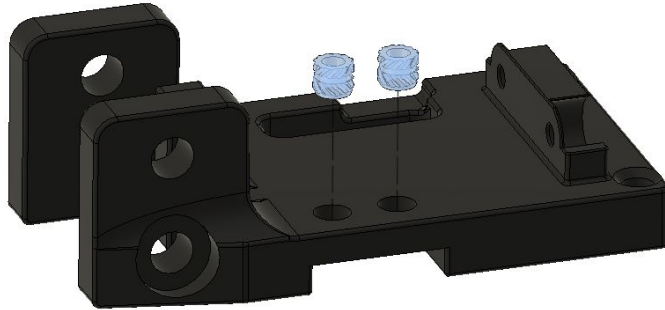


Preparation

Insert the heat insert to the Dock Body and Nozzle Blocker.

Spine Dock

m3 heat insert

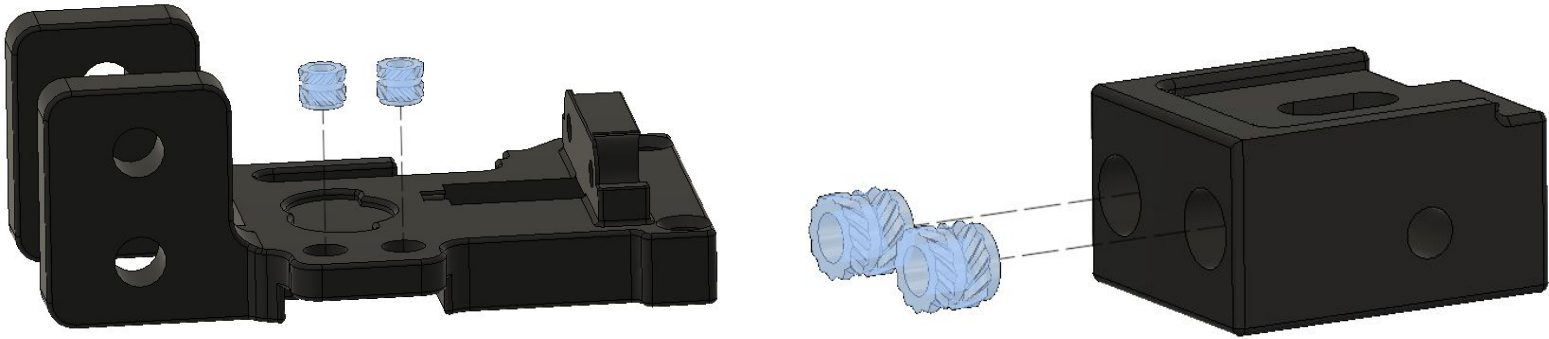


Preparation


Insert the heat insert to the Spine Dock Body and Nozzle Blocker.

Linux was first developed on a Vzbot 330 printer.



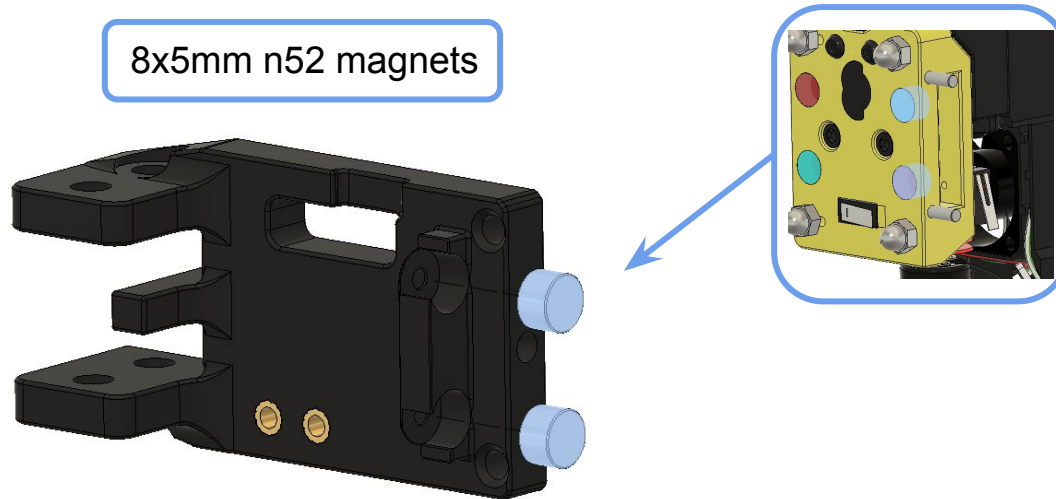


Apply a bit of glue/epoxy before inserting the magnets.
Ensure the polarity matches the magnet on the Backplate
that you install earlier. They should be attracted to each
other when the toolhead is on the dock.

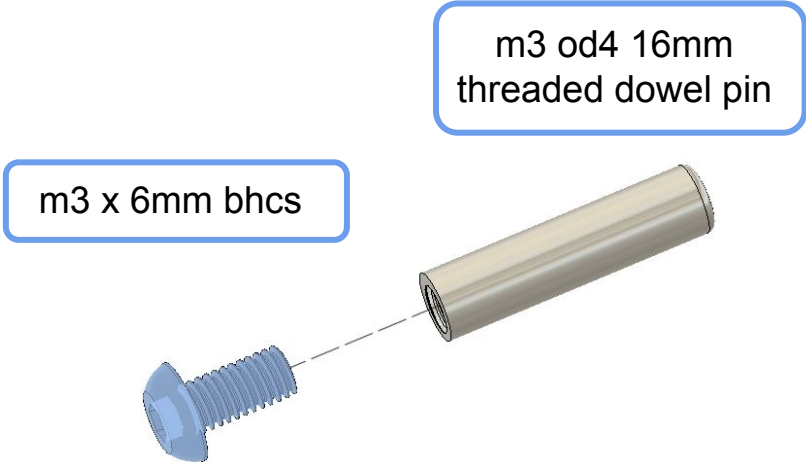


Preparation

Apply Loctite before screwing in fully.

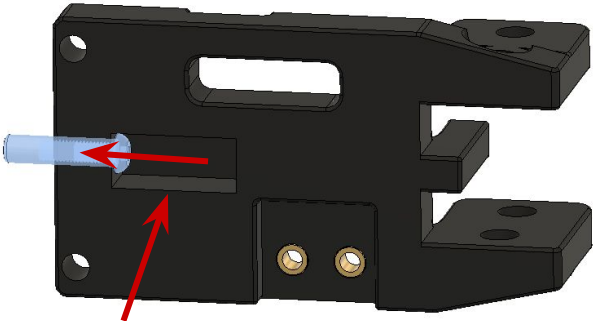


Slide the dowel pin in the slot and push it all the way to the front.


od6 id5 20mm spring

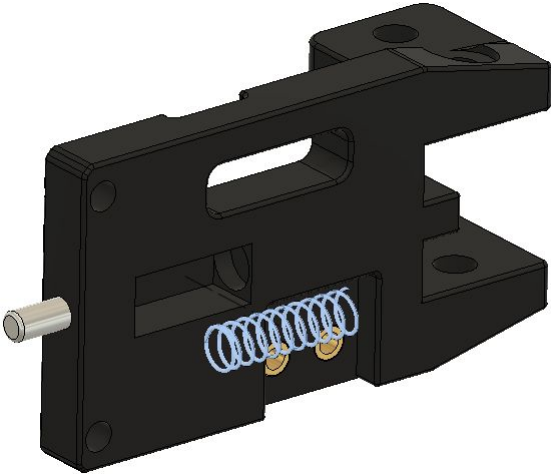

Slide the spring in the slot. **Ensure the spring is seated properly on the buttonhead screw and the spring cutout.**

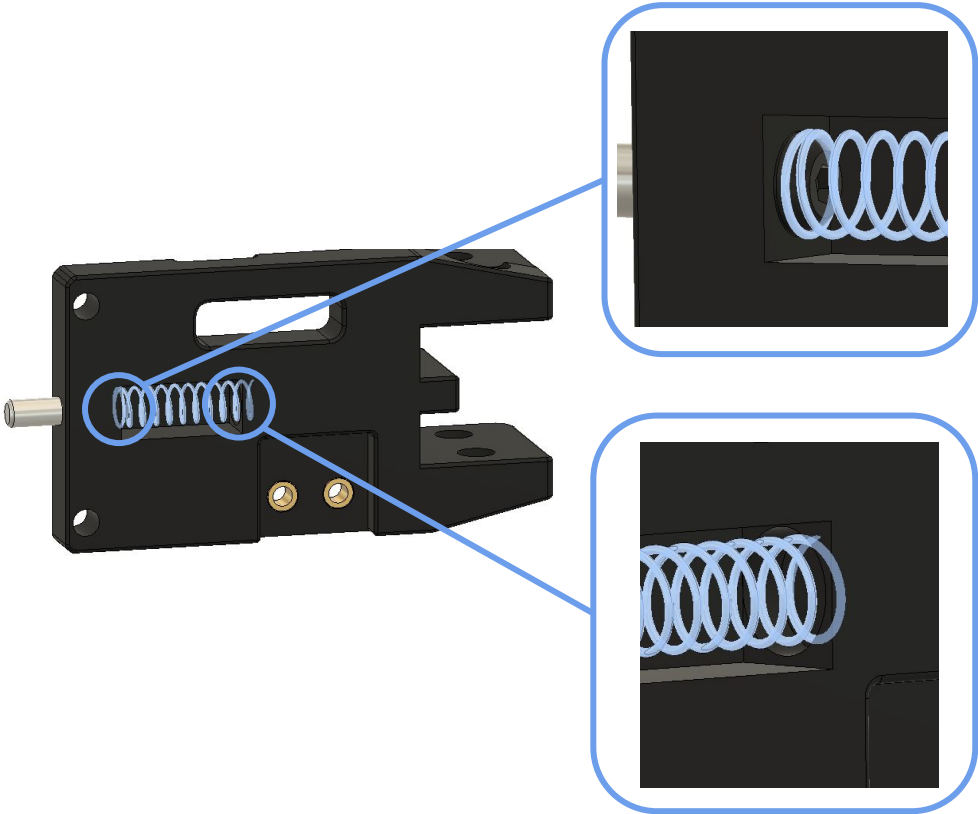


6x3mm n52 magnets

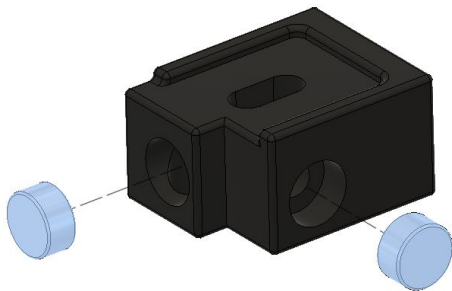


Apply a bit of glue/epoxy before inserting the magnets to the Nozzle Blocker. **Ensure they are flushed with the surface.**


6x3mm n52 magnets

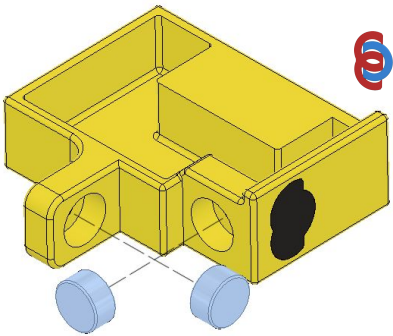


Apply a bit of glue/epoxy before inserting the magnets to the Drip Tray. **Ensure the polarity matches the magnet on the Nozzle Blocker that you have just installed. They should be attracted to each other.**

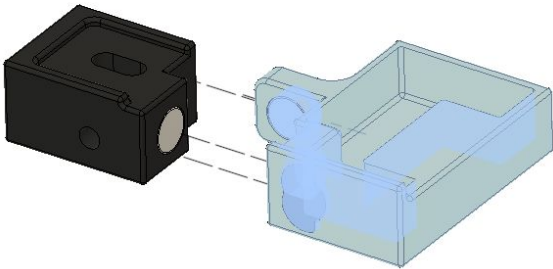


Attach the Drip Tray to the Nozzle Blocker.

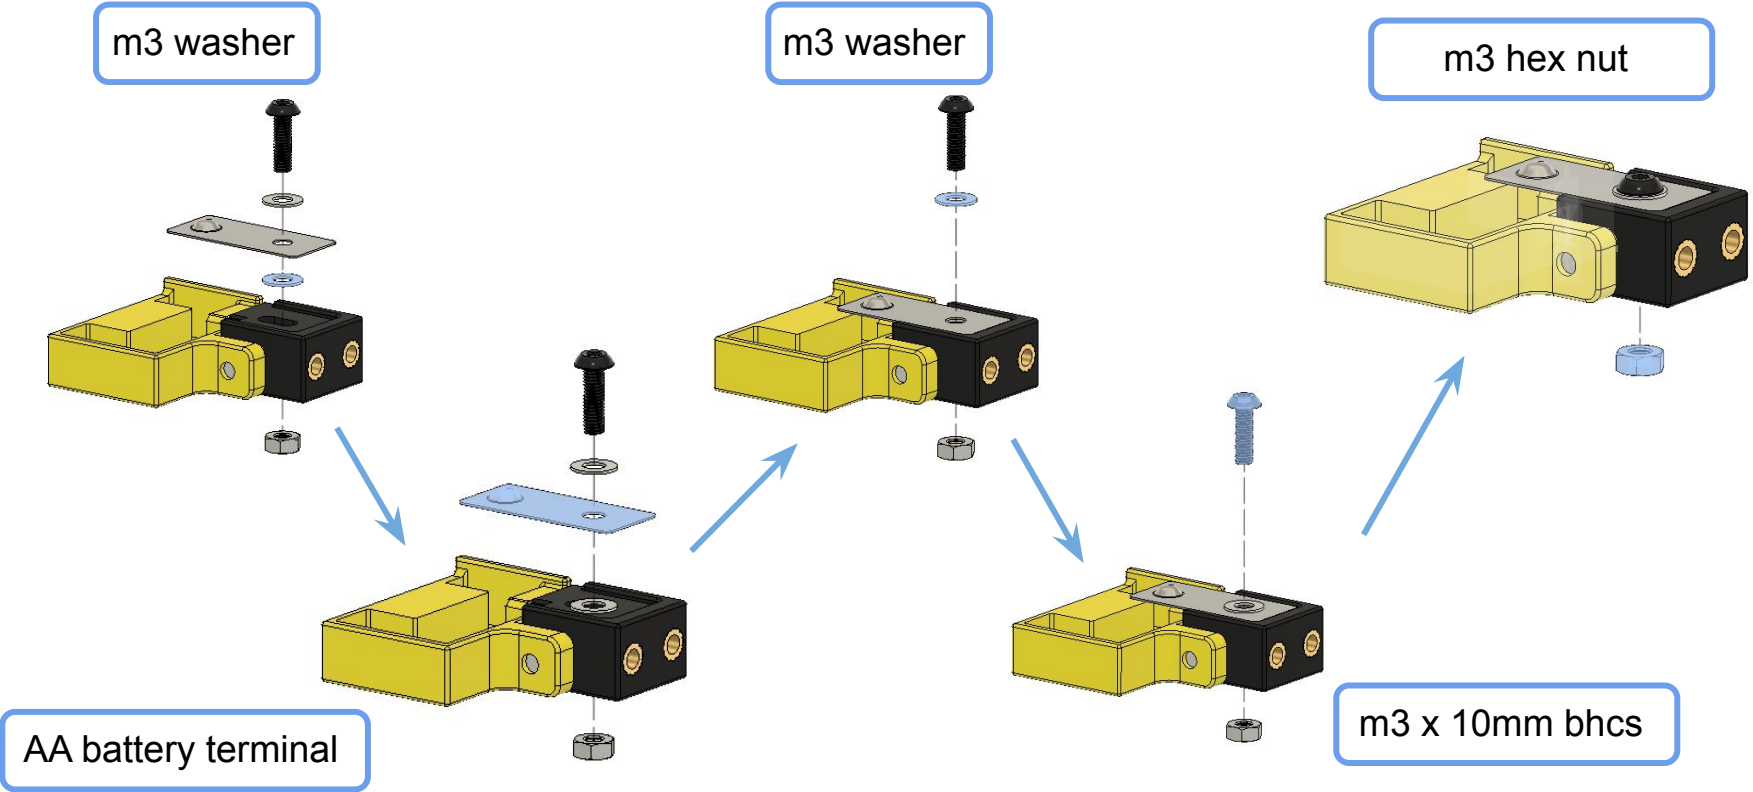


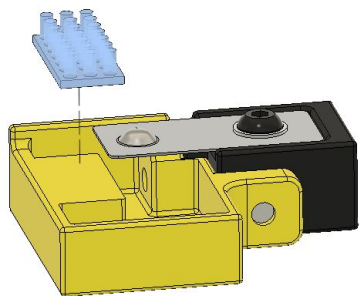

Attach the Silicone Brush.

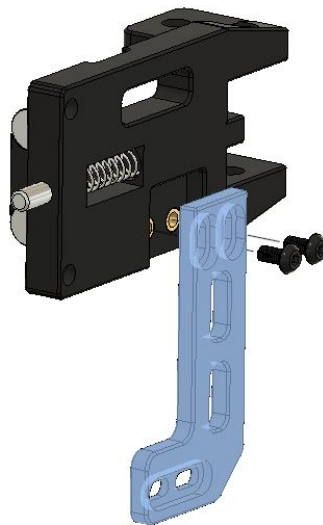


m3 x 6mm bhcs

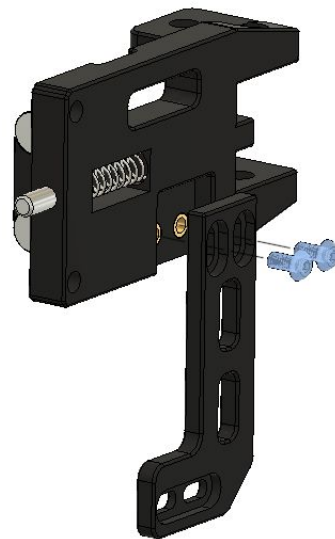


Attach the Nozzle Blocker Mount to the Dock.


m3 x 6mm bhcs

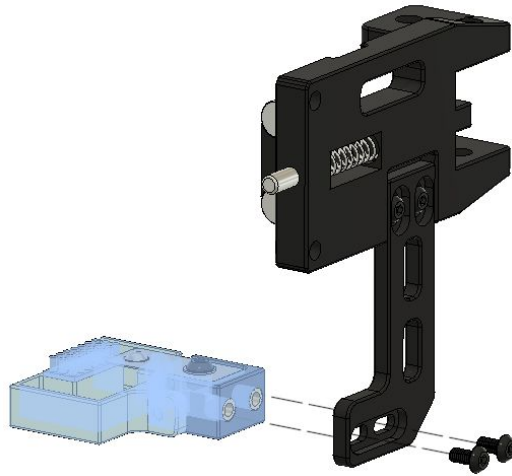


Attach the Nozzle Blocker assembly to the Dock.

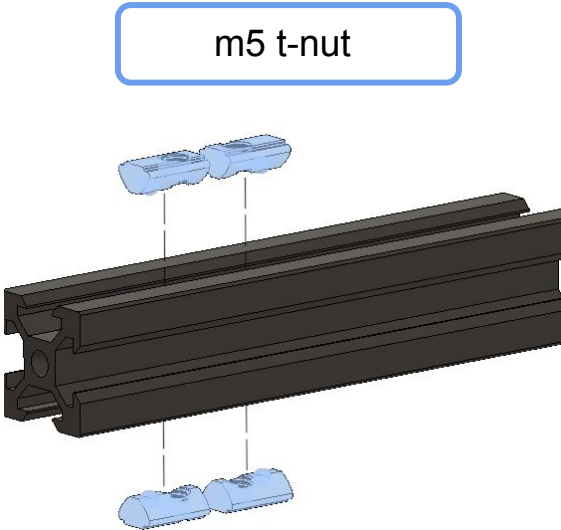

Slide in to both top and bottom of the dock extrusion.

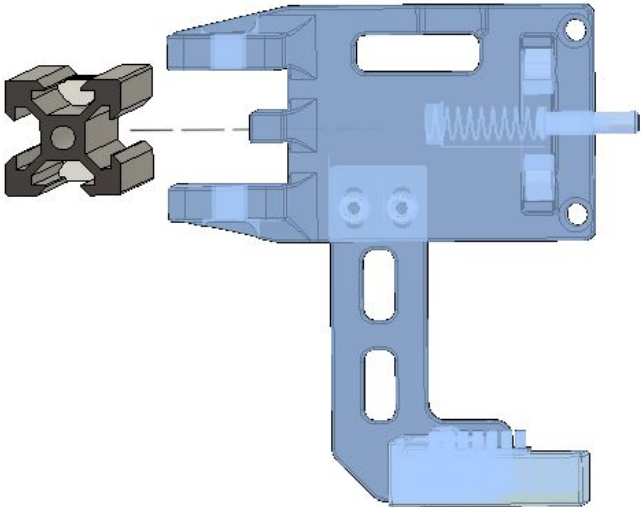

Slide in the complete Dock assembly to the dock extrusion.

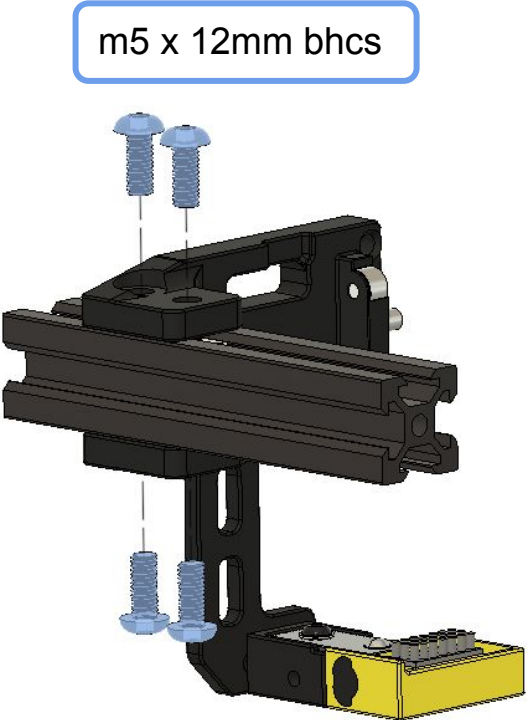


Secure the Dock to the dock extrusion.




Completed Dock Assembly.

Lineux Ecosystem includes Lineux (Toolchanger), Dockslide (Movable Dock),
BTC Klipper (Macros) and Tubby / Intai (Nozzle Offset Calibration Tool).



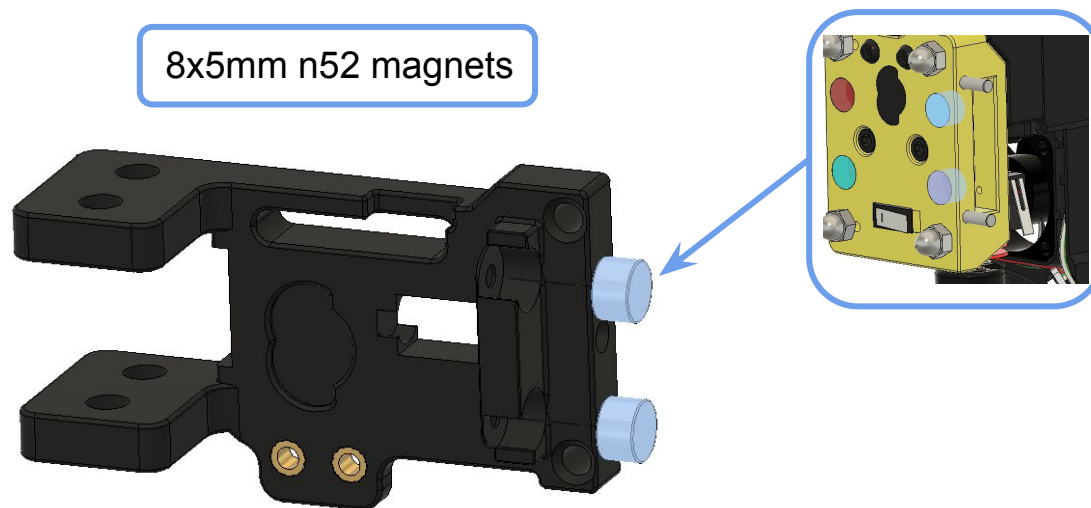


Apply a bit of glue/epoxy before inserting the magnets.
Ensure the polarity matches the magnet on the Backplate
that you install earlier. They should be attracted to each
other when the toolhead is on the dock.

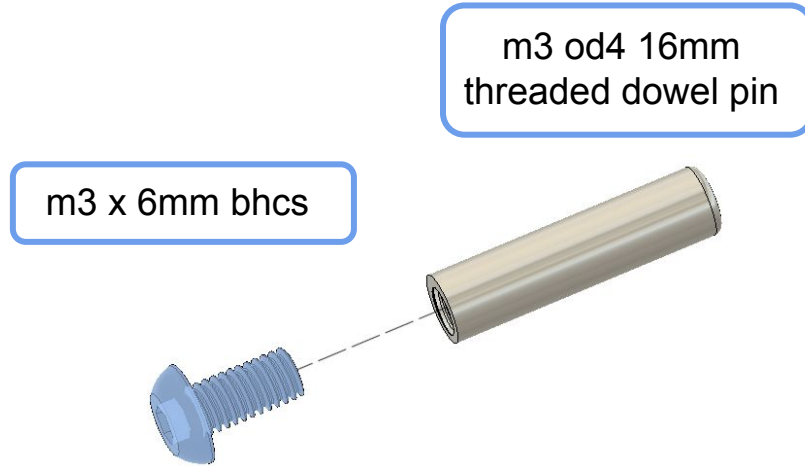


Preparation

Apply Loctite before screwing in fully.



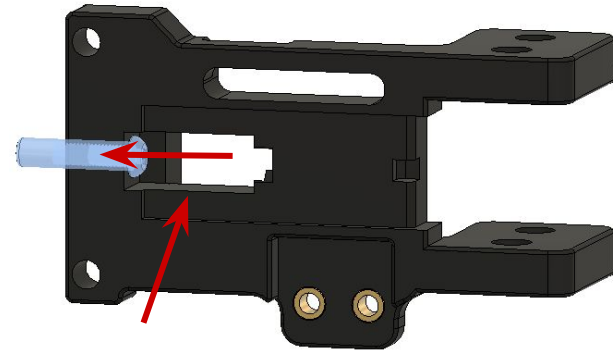


Slide the dowel pin in the slot and push it all the way to the front.


od6 id5 20mm spring

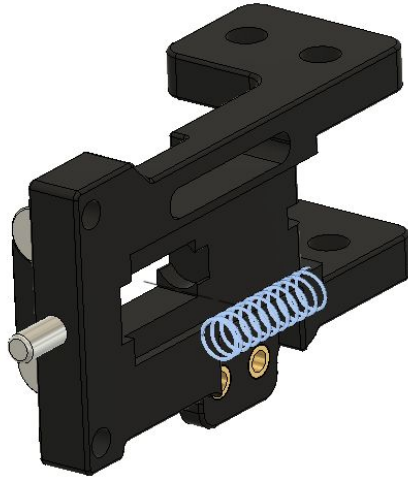

Slide the spring in the slot. **Ensure the spring is seated properly on the buttonhead screw and the spring cutout.**

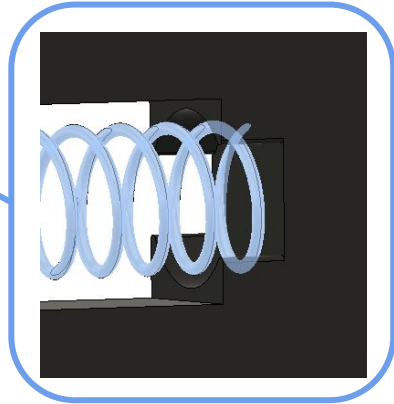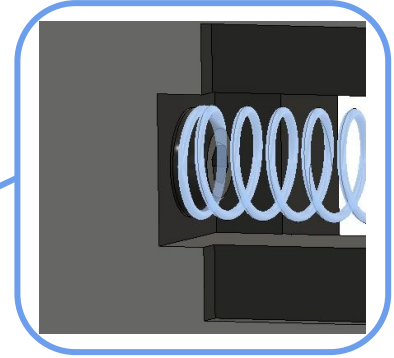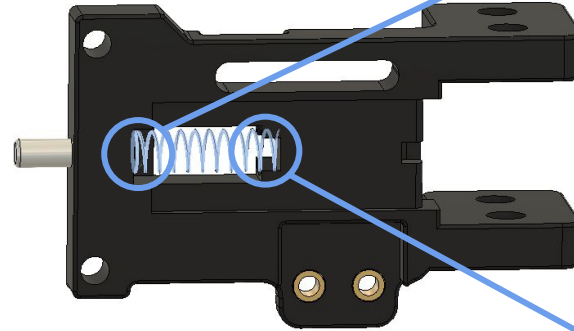


6x3mm n52 magnets

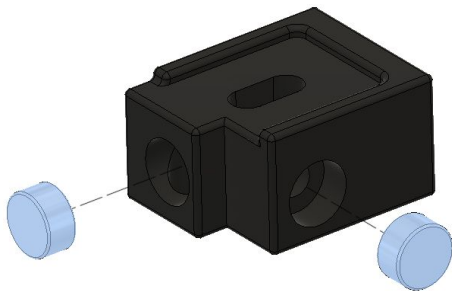


Apply a bit of glue/epoxy before inserting the magnets to the Nozzle Blocker. **Ensure they are flushed with the surface.**


6x3mm n52 magnets

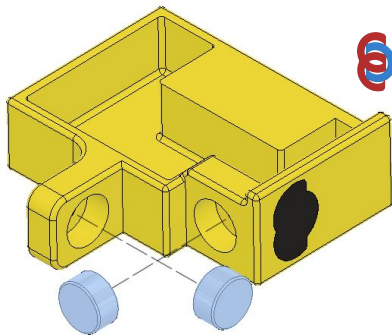


Apply a bit of glue/epoxy before inserting the magnets to the Drip Tray. **Ensure the polarity matches the magnet on the Nozzle Blocker that you have just installed. They should be attracted to each other.**

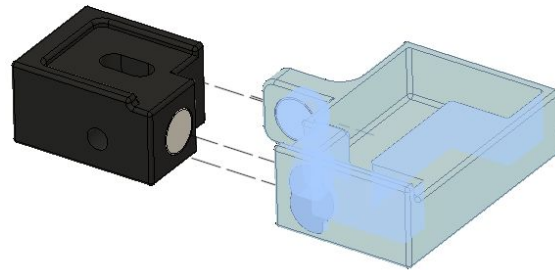


Attach the Drip Tray to the Nozzle Blocker.

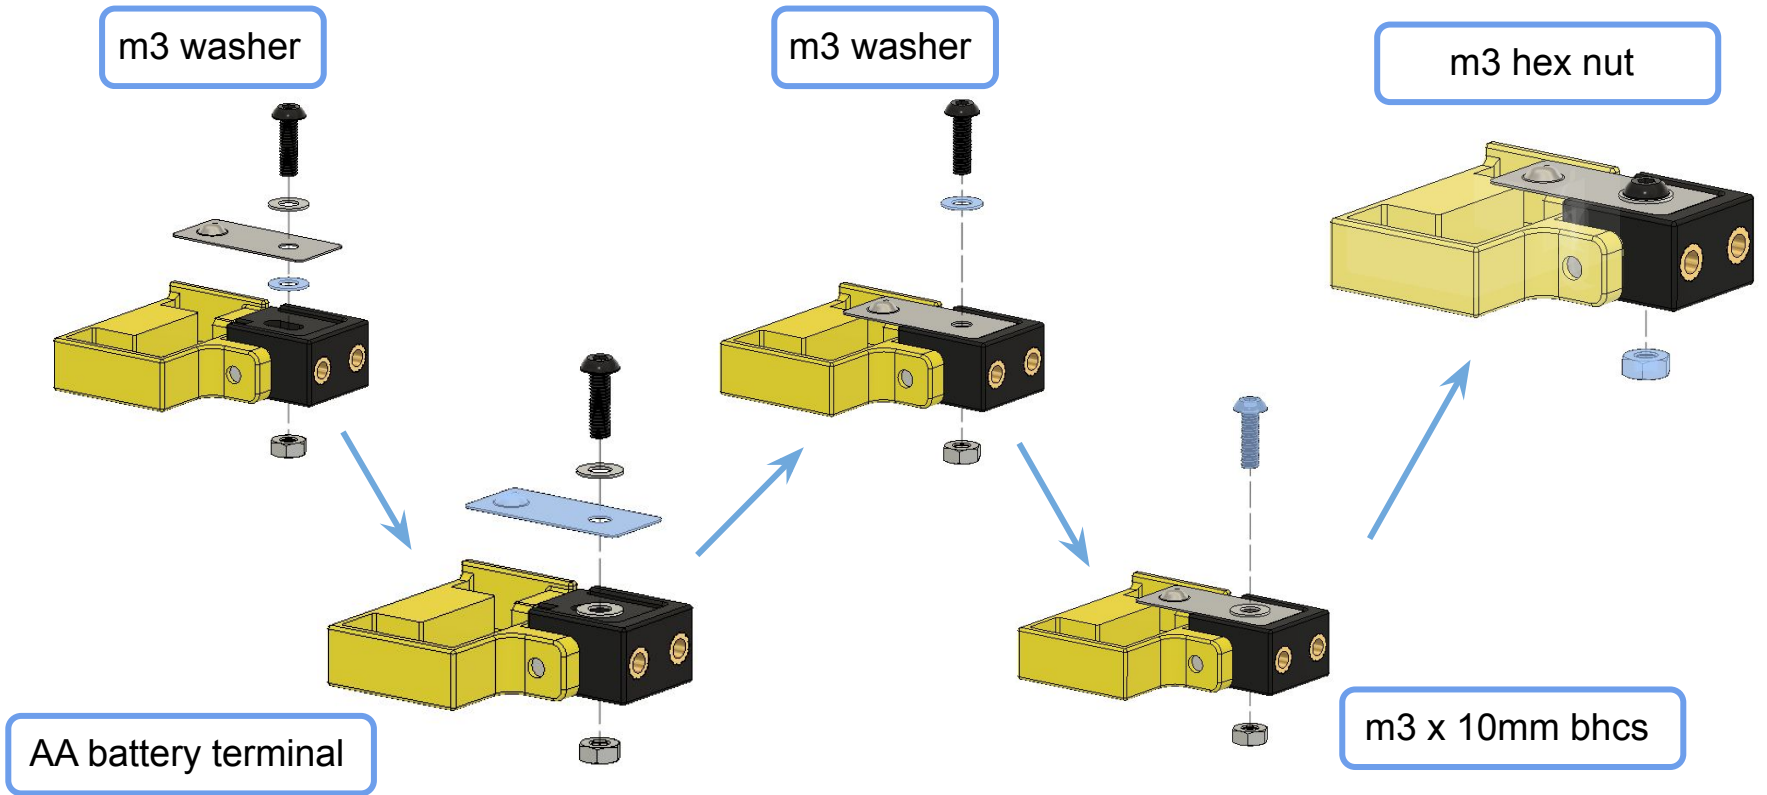


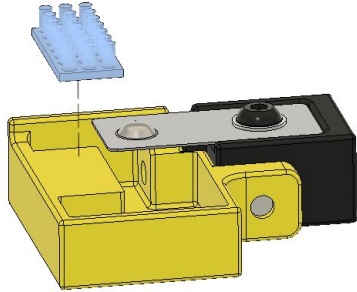


Attach the Silicone Brush.

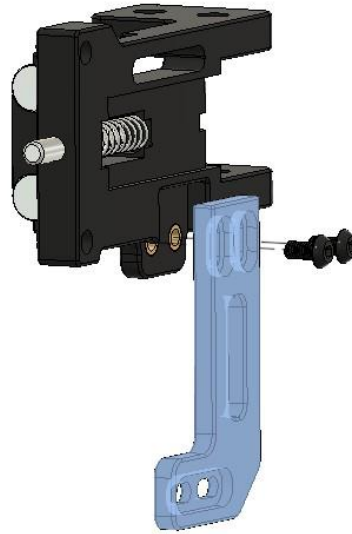


m3 x 6mm bhcs

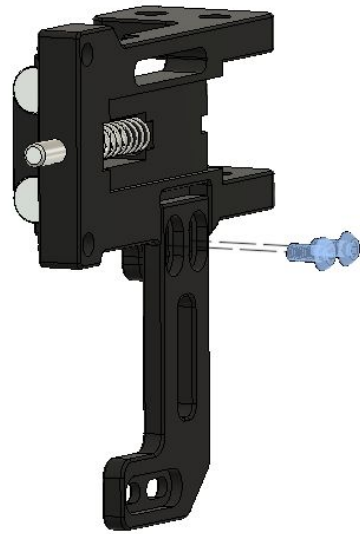

Attach the Nozzle Blocker Mount to the Dock.

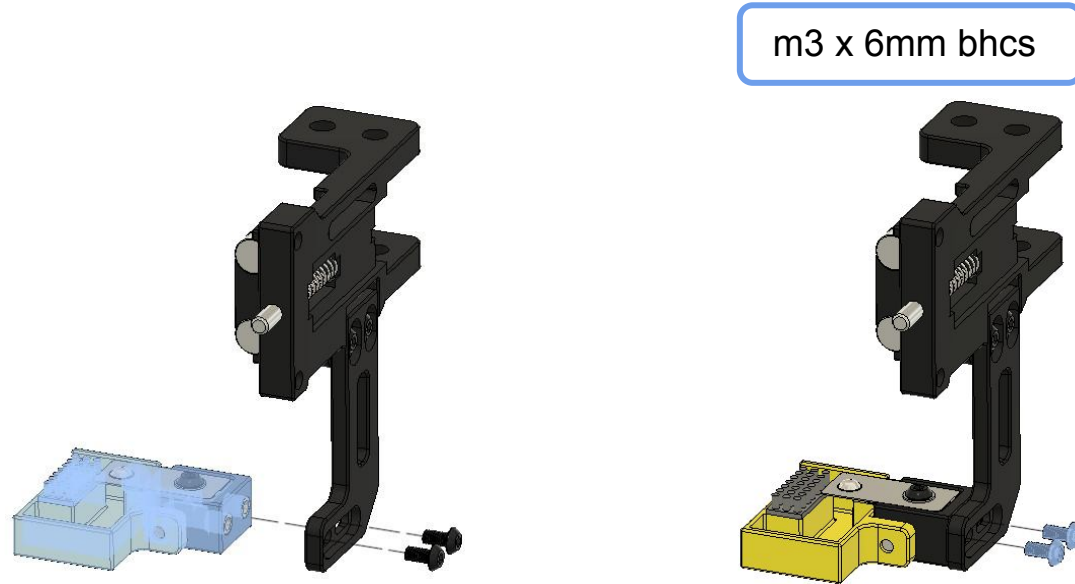


Attach the Nozzle Blocker assembly to the Dock.

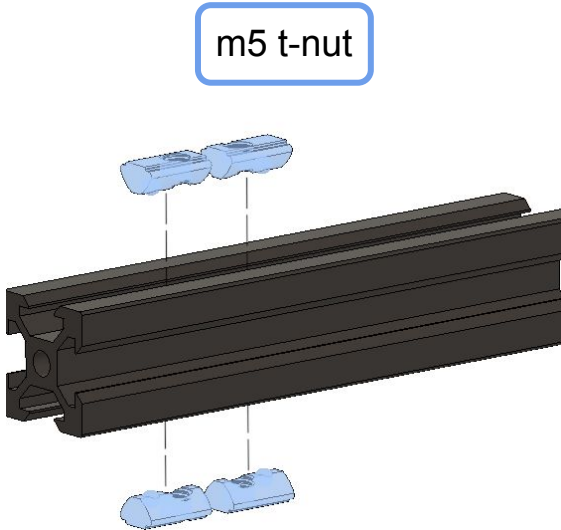


Slide in to both top and bottom of the dock extrusion.




Slide in to the dock side of the dock extrusion.

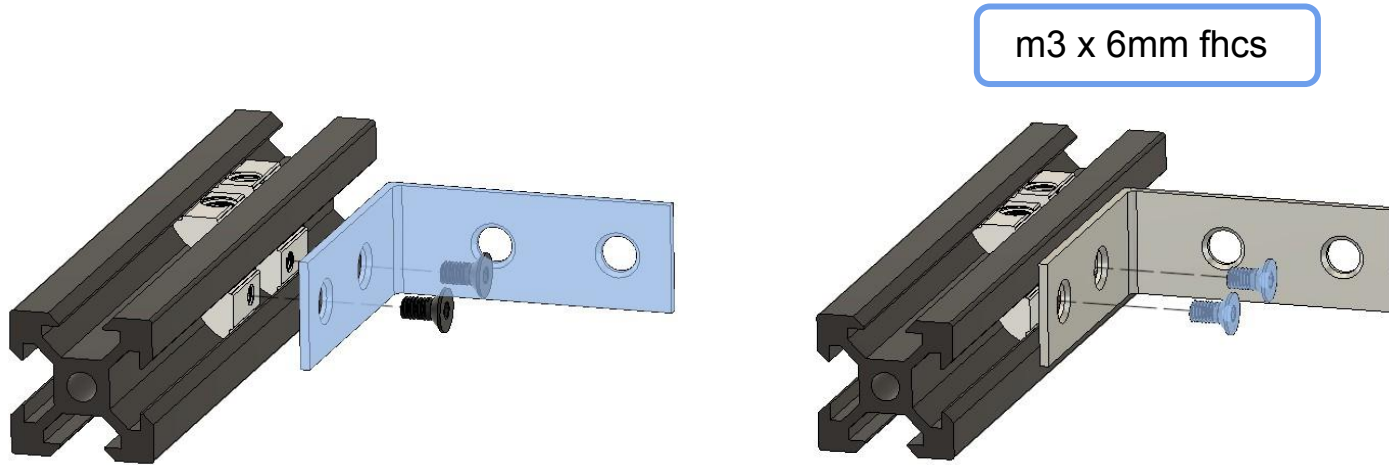




Attached the L-Bracket to the dock extrusion.
You can keep it loose for now.

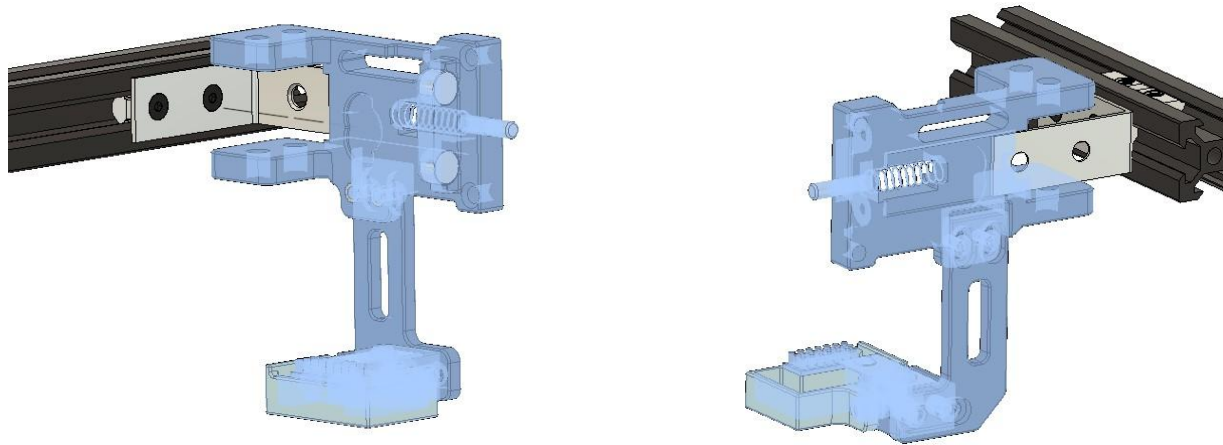

Slide the Dock assembly on the inside of the L-Bracket onto the dock extrusion.

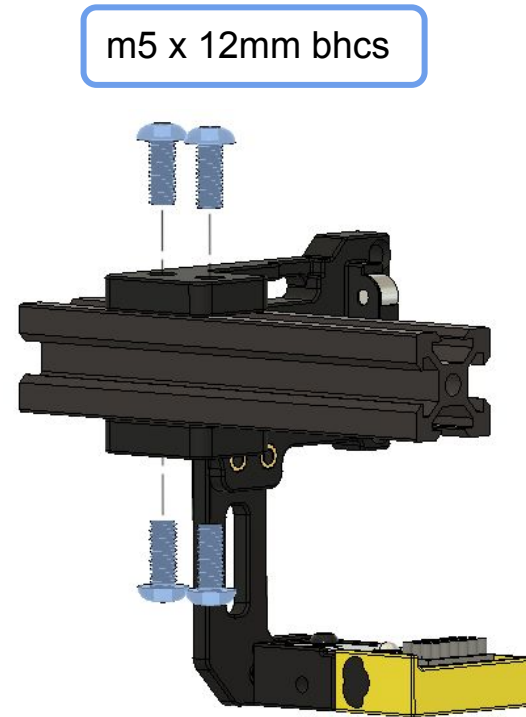

Secure the Dock to the dock extrusion.

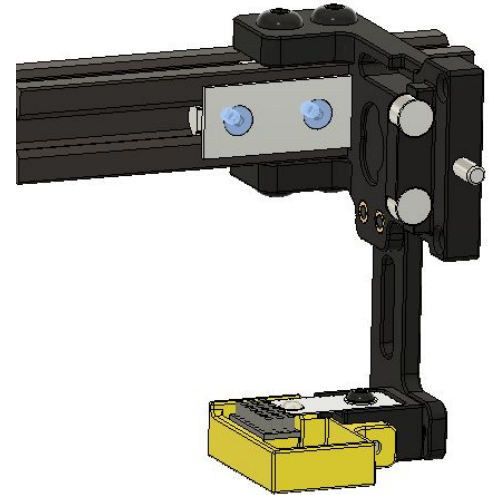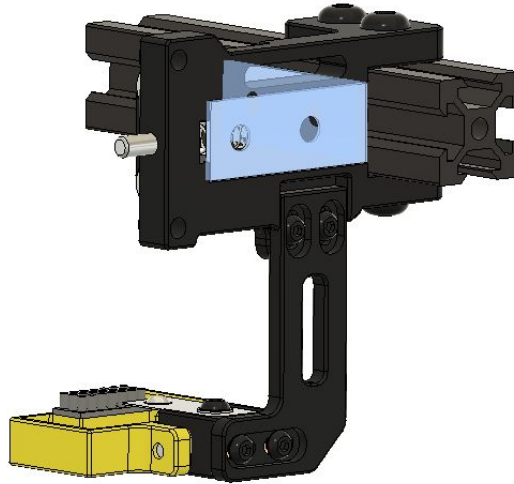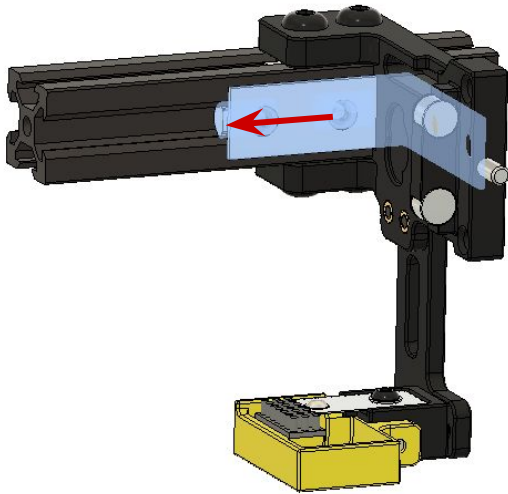

Shift the L-Bracket as close as possible to the Dock and ensure it is flush on the other side. You can now retighten the L-Bracket screws.



Completed Spine Dock Assembly.

We are humans and are prone to mistakes. If you encounter any issues/faults with the build guide, please raise them on our Discord with the relevant page number or a screenshot of the issues/fault.

This guide may be subjected to changes regularly based on feedbacks from the community.

Do join us on Discord if you need help or have any questions.



<https://discord.gg/Xwqbjj4VjH>



<https://github.com/Bikin-Creative/Lineux-Toolchanger>



Linux Toolchanger

