
# Kitchen Head (SMD)

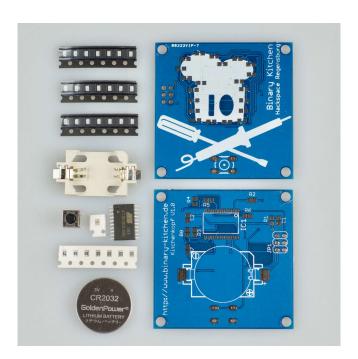


Quantity	Name	Description	Signing/Colorcode
1	C2	Ceramic Capacitor 100 nF	
1	IC1	Micro controller Atmel ATTiny 2313A	
21	LED1-LED21	LED SMD 0805	
7	R2-R8	Resistor 47 Ω	470
1	SW1	Button	
1	BAT1	Battery holder	
1	Battery CR2032	•	
1	Board		

Difficutly: ••••

Manual v1.0 CC-BY-SA 4.0 Binary Kitchen e.V. Board v1.1 CC-BY-SA 4.0 Binary Kitchen e.V.


## Schritt 1

a) Tape the board onto the soldering mat

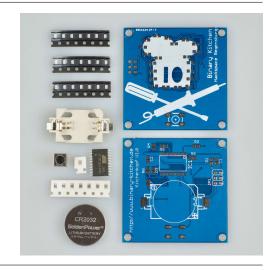

## Schritt 2


- a) Take IC1 up with a piece of tape. The tape should cover only half of the chip
- b) Arrange and fix the IC to the correct position on the board
- c) Careful Direction is important: The small dot on the IC has to match with the dot on the board
- d) Solder all pins of the IC to the Board
- e) Take away the tape and fix the pins on the other side

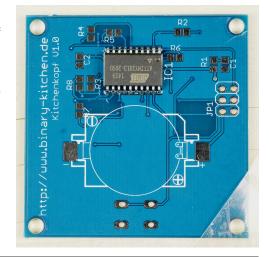

## Schritt 3

- a) Solder the resistors R2 to R8 on the board
- b) To do so


put some solder on ONE pad; Heat up the solder again and slip the resistor onto the pad with the solder; Solder the other side after that;

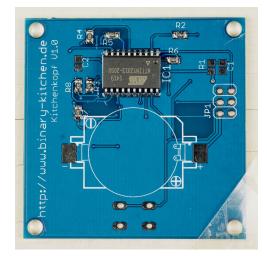




#### Schritt 4


a) Solder capacitor C2 with the technique showed before

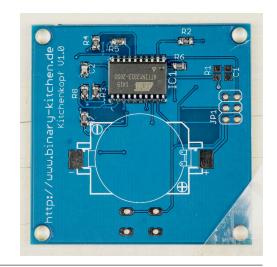

# Schritt 5


- a) BE CAREFUL! The direction of the LEDs is important
- b) Read everything first.
- c) Solder the LED with the technique showed before. On the board are marking points or arrows printed on. The arrows and ponts are marking the minus pole. Also an arrow or an T is printed on the backside of the LED. The vertical line of the T has to end at the point of the arrow. (See pictures)



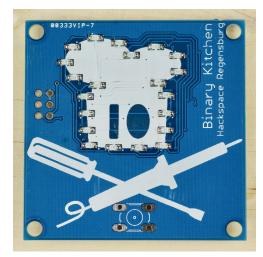

# Schritt 6

- a) Schalter S1 auflöten
- b) Tipp: Beinchen haben unterschiedliche Abstände. Es muss nichts verbogen werden. Schalter passt exakt

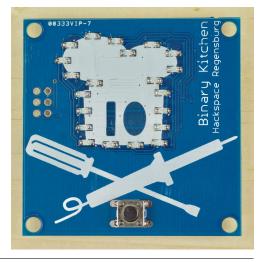



#### Schritt 7

- a) Batteriehalter auflöten
- b) Dazu Platine umdrehen
- c) Batteriehalter und Platine haben aufgedrucktes Plus und Minus Symbol. Dieses muss übereinstimmen
- d) Tipp: Beim Pluspol anfangen
- e) Zuletzt Batterie korrekt einsetzen und Schalter betätigen. Achtung: Ein Metallabnehmer der batterie (im Bild rechts) muss oben auf die Batterie greifen!

