Jackery

Model :JHP-5000C

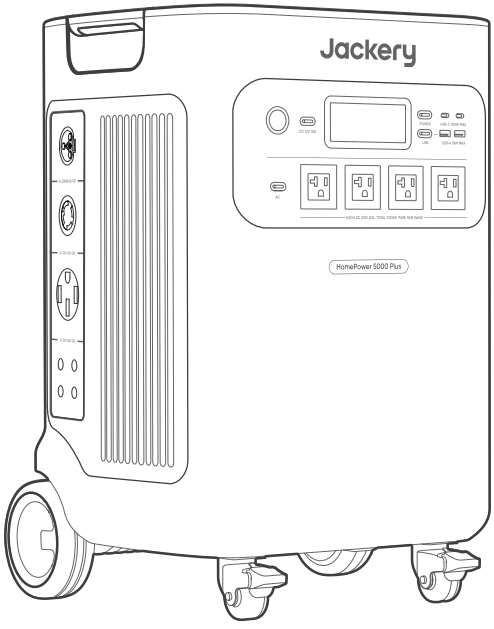

USER MANUAL

Jackery HomePower 5000 Plus

CONTACT US :

1-888-502-2236 (US)

hello@jackery.com

www.jackery.com

US IMPORTANT

Congratulations on your new Jackery HomePower 5000 Plus. Please read this manual carefully before using the product, particularly the relevant precautions to ensure proper use. Keep this manual in an accessible place for frequent reference.

In compliance with laws and regulations, the right of final interpretation of this document and all related documents of this product resides with the Company.

Please kindly notice that no further notifications will be given in case of any update, revision or termination.

TABLE OF CONTENTS

US English **01-24**

IMPORTANT SAFETY INFORMATION 01
WHAT'S IN THE BOX 03
PRODUCT OVERVIEW 03
LCD DISPLAY 05
OPERATIONS 07
TROUBLESHOOTING 09
UNINTERRUPTIBLE POWER SUPPLY (UPS) 10
CONNECTIONS 11
CHARGING 12
STORAGE 16
APP SETUP 17
WARRANTY 19
SPECIFICATIONS 20
SMART HOME BACKUP SYSTEM (AC ESS) INSTALLATION GUIDE 21

IMPORTANT SAFETY INFORMATION

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING

Always follow these basic precautions when using this product.

- Read all the instructions before using the product.
- Do not allow children to play on the product. Close supervision of children is necessary when the product is used near children.
- Avoid placing hands or fingers inside the product.
- Stop using the product immediately if it has been physically damaged or modified. Improper use of the product may cause unpredictable behavior, leading to fire, explosion, or injury.
- If any of the following are observed, including but not limited to overheats, emits unusual odors or smoking, leaks, or burns, stop using the product immediately and contact the dealer or our Customer Support.
- Never attempt to open, repair, or modify the product. Any tampering, reassembly, or modification of the product can result in electric shock, fire, or battery damage.
- Be aware that liquid ejected from the product may cause irritation or burns. Inappropriate or abusive use may lead to battery leakage. Avoid direct contact with leaking liquid. If the liquid contacts your eyes, seek medical help immediately. If it contacts other body parts, flush with running water and consult a medical professional without delay.
- Do not expose the product to fire or excessive temperatures. Doing so may result in an explosion if the temperature exceeds 130°C (265°F).
- Any use of unrecommended or non-supplied materials or parts with the product may result in a risk of fire, electric shock, or personal injury.
- Do not leave the battery charging unattended for long periods. Always monitor the charging process to ensure safe operation.
- To reduce the risk of electric shock, unplug the product from any power source before attempting any technical service or troubleshooting.

OPERATING INSTRUCTIONS

SAVE THESE INSTRUCTIONS

- Stop using the product immediately if it shows signs of damage. Discontinue use and contact customer support for assistance.
- Do not charge the battery in extremely hot or cold environments and strictly adhere to the product's specified operating temperature ranges:
  - Charging temperature: 32°F to 113°F (0°C to 45°C);
  - Discharging temperature: 5°F to 113°F (-15°C to 45°C);
- To ensure proper air circulation, keep the product vents uncovered. The area where the product is used must have adequate airflow in a cool, dry environment to prevent overheating.
  - Charging in damp or poorly ventilated spaces may cause safety hazards.
  - Water can cause short circuits or damage to the charger, leading to safety risks.
- Unplug the power cord from a power outlet during a storm.
- Immediately turn off the product by pressing the power button if it has fallen, been dropped, or exposed to vibrations.
- Ensure the device(s) are powered off before connecting it to the product.
- Do not charge the product using a damaged or broken charging cord or plug.
- Do not use the product to charge any device with a damaged or broken cable or plug.
- Always unplug the charging cord by pulling the plug, not the cord, to reduce the risk of damage.
- Ensure the product is properly secured when transporting it in a moving vehicle.
- DO NOT place the unit upside down or on its side during use or storage.
- DO NOT place the product on the floor or at a height less than 18 inches (457 mm) above the floor during operation in a workshop or repair facility.
- DO NOT use the product's accessories with other devices or equipment.
- Solar charge time depends on weather conditions, place your solar panel where it will get as much direct sunlight as possible.

DANGER

This device is intended for indoor use only (Please place this device in a similar indoor environment when using it outdoors，e.g. Home RVs, tents, cabins, etc.).
※ This device is not waterproof or dustproof. Keep away from rain and humid environments during use.

USER MAINTENANCE INSTRUCTIONS

During the lifecycle of energy storage products, a certain degree of capacity and energy degradation is expected. As the number of charge and discharge cycles increases and storage time extends, this degradation will gradually intensify, which is a normal phenomenon consistent with the natural aging of battery cells.

MEANING OF SYMBOLS

Symbol	Meaning
⚠ WARNING	Hazardous practices that may result in severe injury, death, and/or property damage.
⚠ CAUTION	Hazardous practices that may result in personal injury and/or property damage.
Note	Hazardous practices that may result in equipment damage, data loss, performance deterioration, or unanticipated results.

Symbol	Meaning
	Warning and Caution Symbols. Must read to alert individuals to potential hazards or risks.
	Electric Shock Hazard Symbol for electrical danger warning.
	Battery Charging Symbol indicates a battery is being charged.
	Explosive Material Symbol for explosion risk warning.

Symbol	Meaning
	Heavy Object Symbol for handling precautions.
	Non-smoking or Open Flame Symbol for fire hazards prevention.
	No Children Allowed Symbol for safety risk prevention.
	Read the Manual Symbol for safe operation.

FC

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

WHAT'S IN THE BOX

1

Jackery HomePower 5000 Plus

2



AC Charging Cable

3

MC4 Wrench

4

User Manual

Note The car charging cable is not included but is available for purchase separately on our website. For assistance, please contact Jackery customer service.

PRODUCT OVERVIEW

FRONT VIEW

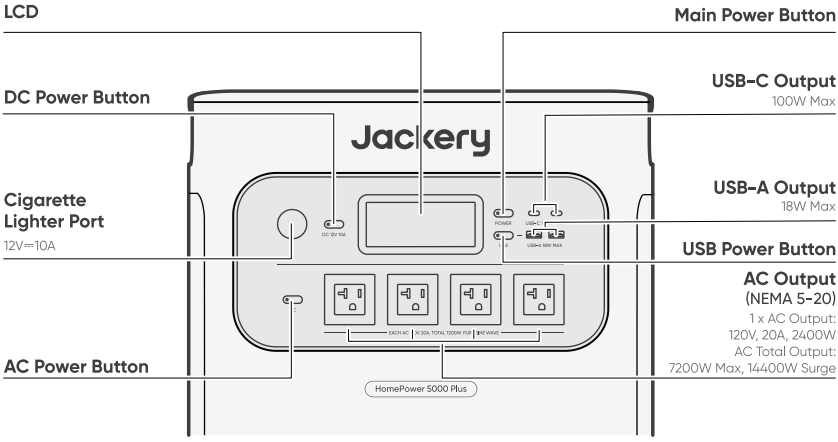

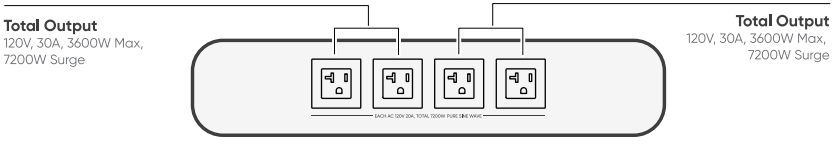

LEFT SIDE VIEW

Handle

AC Expansion Port
Connect to Smart Transfer Switch
Input: 240V, 16.7A Max, 4000W
Output: 240V, 30A, 7200W

NEMA L14-30R AC Output Port
120V/240V, 30A, 7200W Max
Powers high-power devices and connects to an inlet box or manual transfer switch for home electricity supply.

NEMA 14-50 AC Output Port
120V/240V, 30A, 7200W Max
Powers high-power devices and connects to an inlet box or manual transfer switch for home electricity supply.

AC Output Reset Button
When the Reset Button pops up, you need to remove the load and press the Reset Button to reset.

Wheel Brake

Wheels

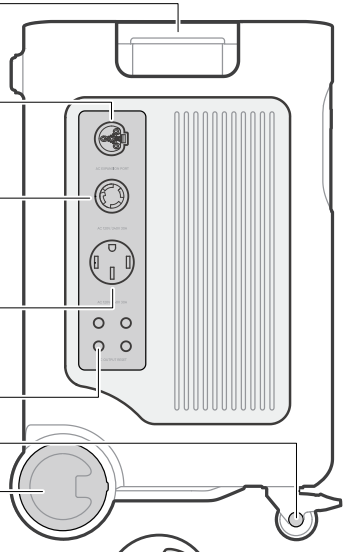

RIGHT SIDE VIEW

Retractable Handle
Press the button on the retractable handle and pull up to extend.

Low-PV Input (8020)
2 x DC 8mm Ports; 16V-60V⎓10.5A Max, Double to 21A/1200W Max
11V-16V(Working Voltage)⎓8A Max, Double to 8A Max

High-PV Input (MC4)
135V-450V⎓15A Max, 4000W Max

High-PV Switch
Turns on/off the switch to enable/disable high voltage solar charging

AC Input
120V, 15A Max

DC Expansion Port Terminal A
Connect to Battery Pack

Bottom Handle

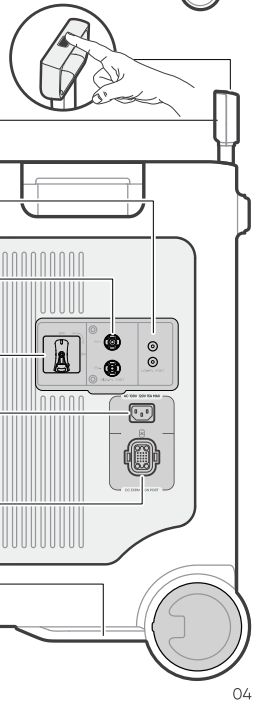

LCD DISPLAY

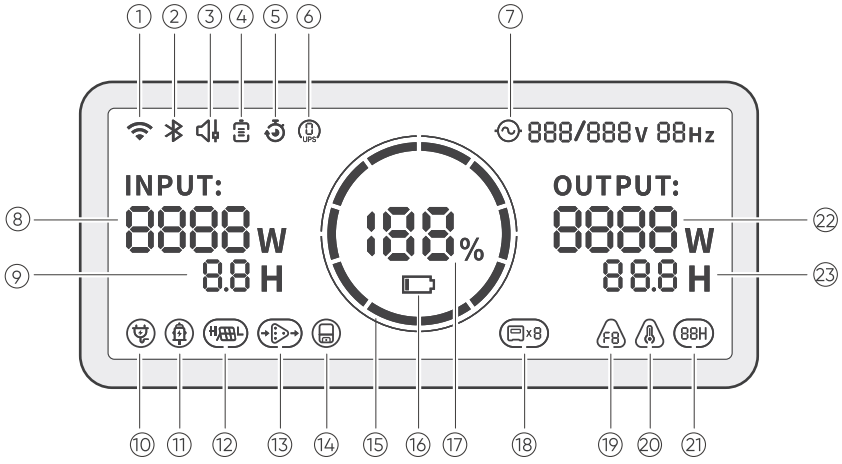

①		**Wi-Fi**	**On:** Wi-Fi connected. **Blink:** Ready to connect to Wi-Fi. **Off:** Wi-Fi disconnected.
②		**Bluetooth**	**On:** Bluetooth connected. **Blink:** Ready to connect to Bluetooth. **Off:** Bluetooth disconnected.
③		**Quiet Charging Mode** can be enabled / disabled in the Jackery APP	**On:** The noise during charging is significantly minimized, while the charging power is reduced and the charging speed slows down. **Off:** Quiet Charging Mode is disabled.
④		**Battery Saving Mode** can be enabled / disabled in the Jackery APP	**On:** Limits the maximum usable battery capacity to extend battery life. **Off:** Battery Saving Mode is disabled.
⑤		**Charging/Discharging Plan Indicator** can be set in the Jackery APP on STS	Indicates that the product is operating under the Smart Transfer Switch (STS) Charging/Discharging Plan. This occurs only when the product is successfully connected to the STS and the Charging/Discharging Plan is set in the STS App.
⑥	UPS	**Online UPS** can be set in the Jackery APP	**On:** The product is on online UPS mode (0 ms). **Off:** Backup UPS mode (Default).
⑦		**AC Power Indicator**	The AC output (pure sine wave) is on.
⑧	INPUT: 8888W	**Input Power**	Displays the input power in watts.
⑨	8.8H	**Remaining Charge Time**	Displays the remaining charging time.
⑩		**AC Wall Charging Indicator**	The product is charged via the AC input using grid power.

⑪		**Car Charging Indicator**	The product is charged via the Low-PV Input (8020) using DC 12V (car charging).
⑫		**High-PV Input Indicator**	The product is charged via the High-PV Input (MC4) using solar panel(s).
		Low-PV Input Indicator	The product is charged via the Low-PV Input (8020) using solar panel(s).
⑬		**AC Expansion Indicator (Charging)** Ensure the STS is successfully connected before proceeding.	The product is charged via the Smart Transfer Switch (STS) using grid power.
		AC Expansion Indicator (Discharging) Ensure the STS is successfully connected before proceeding.	The product is powering your home loads via the Smart Transfer Switch (STS).
⑭		**Smart Transfer Switch Indicator**	The product is successfully connected to the Smart Transfer Switch.
⑮		**Battery Power Indicator**	When the product is being charged, the orange circle around the battery percentage will light up in sequence. When charging other devices, the orange circle will stay on.
⑯		**Low Battery Indicator**	**On:** The battery level is below 20%. **Blink:** The battery level is below 5%. **Off:** The product is charging.
⑰		**Remaining Battery Percentage**	Displays the remaining battery percentage.
⑱		**Battery Pack Indicator and Number of Connected Batteries**	Indicates that the product is connected to the specified number of 5000 Plus Battery Pack(s).
⑲		**Fault Code**	A product error has occurred. Please refer to the Troubleshooting section for details.
⑳		**High Temperature Indicator**	High temperature protection is triggered. The product may stop functioning until its temperature returns to the normal operating range.
		Low Temperature Indicator	Low temperature protection is triggered. The product may stop functioning until its temperature returns to the normal operating range.
㉑		**Energy Saving Mode**	To prevent unnecessary battery consumption from forgetting to turn off the output, the product enables Energy Saving Mode by default. If no device is connected or the connected device's power consumption is below a certain threshold (AC output≤25W; USB output≤2W; Car output≤2W), the device will automatically turn off all outputs after 12 hours. **On/Off:** Press and hold both the AC Power Button and Main Power Button
㉒		**Output Power**	Displays the output power in watts.
㉓		**Remaining Discharge Time**	Displays the remaining discharging time.

OPERATIONS

Note When Energy Saving Mode is on, if the DC Output, AC Output, or USB Output Power Button is ON but the product is not charging or discharging, it will automatically shut down after 12 hours.

POWER ON/OFF

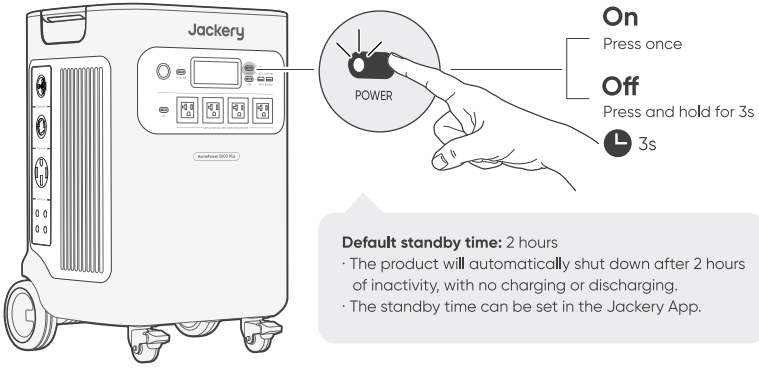

Default standby time: 2 hours
· The product will automatically shut down after 2 hours of inactivity, with no charging or discharging.
· The standby time can be set in the Jackery App.

AC OUTPUT ON/OFF

Prerequisite: Ensure the Main Power Button is on.

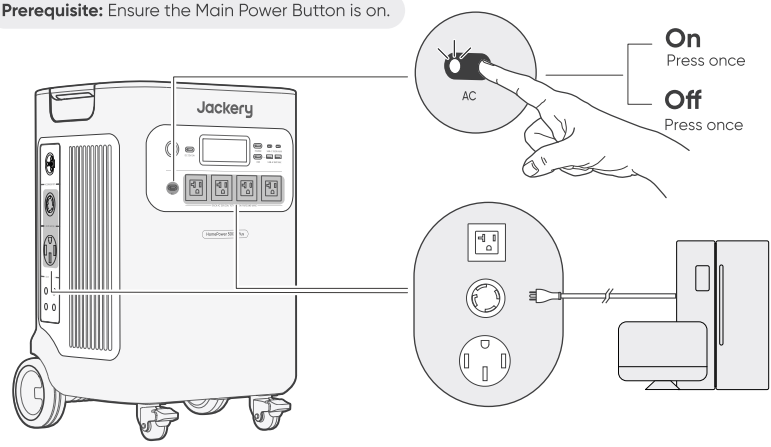

USB OUTPUT ON/OFF

Prerequisite: Ensure the Main Power Button is on.

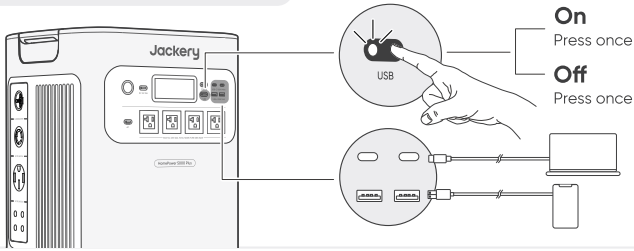

DC OUTPUT ON/OFF

Prerequisite: Ensure the Main Power Button is on.

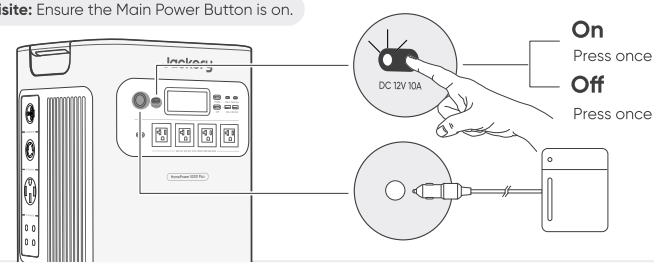

Note	The product can charge your car battery using the Jackery 12V automobile battery charging cable, which is sold separately and available on our website.

Caution	· The cigarette lighter port is only compatible with 12V car batteries and not suitable for 24V systems. · Do not start the car while the product is charging the car battery through the 12V DC output port (cigarette lighter port), as this may damage the product. · This feature is intended for emergency use only and cannot charge a dead or damaged car battery.

LCD SCREEN

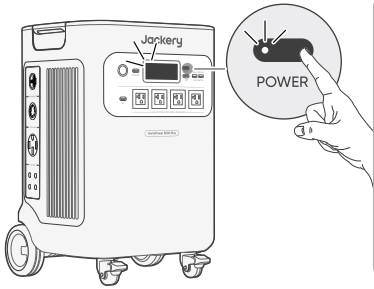

LCD Screen	**Turn on**	Press the Main Power Button or when the product is charging.
	Turn off	Press the Main Power Button.
	Auto-off	The LCD turns off automatically and enters sleep mode after 2 minutes of inactivity.
Always-on Display Mode (under charging or discharging state)	**Turn on**	Double-click the Main Power Button when the LCD screen is ON.
	Turn off	Press the Main Power Button.
	Auto-off	The Always-on Display Mode turns off automatically after 2 hours of inactivity.

KEY COMBINATIONS

Buttons	Operation	Function
Main Power Button + USB Power Button	3s Press and hold both for 3s	Reset Wi-Fi & Bluetooth
Main Power Button + AC Power Button	3s Press and hold both for 3s	Turn on/off the Energy Saving Mode
USB Power Button + AC Power Button	1s Press and hold both for 1s	Turn on/off Wi-Fi & Bluetooth
DC Power Button + AC Power Button	3s Press and hold both for 3s	Switch to online UPS or Backup UPS

TROUBLESHOOTING

Error Code	Name	Description (For Internal Fault Maintenance Only)
F0	BMS Data Communication Error	Data communication fault between the BMS and mainboard
F1	Inverter Data Communication Error	Data communication fault between the inverter and mainboard
F2	DC Input Data Communication Error	Data communication fault between the DC charging module and BMS
F3	BMS or Battery Failure	BMS or battery failuare
F4	Battery Overvoltage	Battery overvoltage
F5	Battery Undervoltage	Battery undervoltage
F6	Inverter Failure	AC output overcurrent / overload / short circuit; Grid input overvoltage / undervoltage / overfrequency / underfrequency; Inverter over-temperature protection on (triggered) Insulation detection failure
F7	DC Input Failure	PV input overvoltage; DC charging module overtemperature protection on/triggered; Output overcurrent protection of the DC charging module on/triggered
F8	Battery Charging / Discharging Overcurrent / Short Circuit	BMS overcurrent / short circuit protection on/triggered
F9	DC Output Overcurrent / Short Circuit	USB short circuit protection on/triggered
FA	Parallel Unit Communication Error	Data communication failure between two 5000 Plus failure caused by both units defective.
FC	Battery Pack Communication Error	Data communication failure between the 5000 Plus and battery pack(s)

UNINTERRUPTIBLE POWER SUPPLY (UPS)

An uninterruptible power supply (UPS) is a type of continual power system that provides automated backup electric power to a load when the mains grid power fails.

The HomePower 5000 Plus is equipped with two UPS modes: Backup UPS and Online UPS.

WARNING

Do not use this product for applications such as data servers or medical devices, where a malfunction could endanger life or cause significant property damage.

For the following equipment, a loss of power supply during use could cause serious harm to personal safety or property:

- Medical devices and other equipment closely related to life safety.
- Critical equipment such as social infrastructure and public services.
- Business-critical enterprise equipment, etc.

Individuals who wear a cardiac pacemaker (pacemaker implant recipients) must not use this product.

BACKUP UPS

The backup UPS function is enabled by default. In the event of a sudden loss of grid power, the HomePower 5000 Plus will automatically switch to stored power within 20 ms to keep your appliances running.

In Backup UPS mode, the unit's peak output reaches 1440W before power outages. As simultaneous charging/discharging is enabled in Bypass Mode, the actual output power is lower than the rated output power in this mode but returns to rated output power during outages.

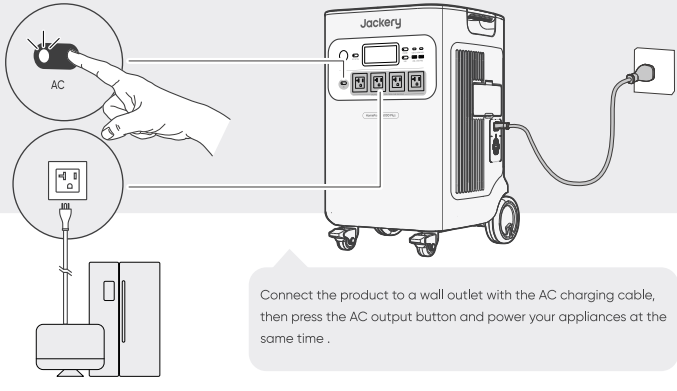

Connect the product to a wall outlet with the AC charging cable, then press the AC output button and power your appliances at the same time .

CAUTION

- The UPS function works only when a single unit is connected directly to a wall outlet.Do not connect multiple portable power stations in series (cascade connection). In a cascaded setup, the UPS function will not operate: the unit may fail to switch over during a power outage, causing connected devices to shut down.

ONLINE UPS

The online UPS mode, which enables 0 ms switching, can be activated in two ways:

1. Enable Online UPS in the Jackery App.
2. Press the DC and AC Power Buttons simultaneously on the HomePower 5000 Plus.

Note

1. The system settings will revert to Backup UPS mode when the product is in Online mode and is restarted. In Backup UPS mode, the output power is limited by the bypass power, with a maximum output power of 1440W.
2. In UPS mode, the NEMA L14-30R and NEMA 14-50 outlets each provide a 120V output when the product is connected to a wall outlet using the AC charging cable.
3. In Online UPS mode, it supports 0 ms switching with a maximum output power of 3600W.

CONNECTIONS

CONNECT TO BATTERY PACK(S) SOLD SEPARATELY

This product can support up to 5 battery packs to meet the need for large power capacity. For details on how to use it, please refer to the Jackery Battery Pack 5000 Plus User Manual.

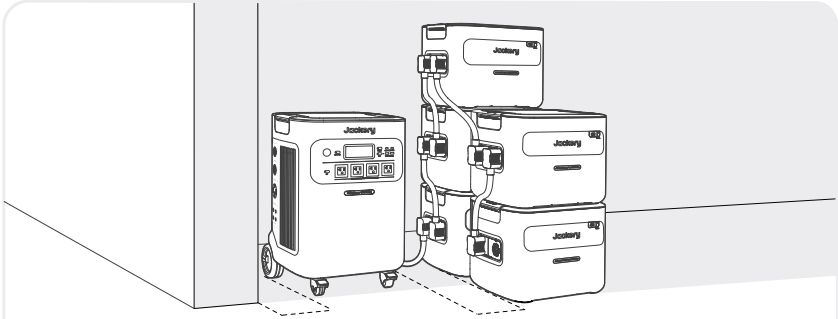

Caution

1. Ensure all products are powered off before connecting the HomePower 5000 Plus to the 5000 Plus Battery Pack(s).
2. To ensure proper operation of the product, make sure the air intake and exhaust vents on both sides are unobstructed. Leave at least 1 ft of space between the vents and any objects to allow for adequate air circulation and effective heat dissipation.

CONNECT TO A SMART TRANSFER SWITCH SOLD SEPARATELY

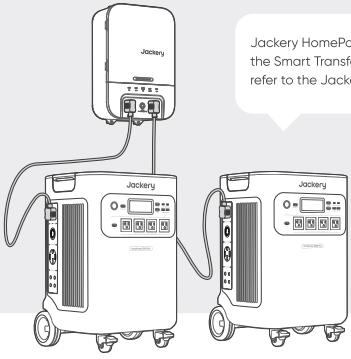

Jackery HomePower 5000 Plus can power your home loads via the Smart Transfer Switch. For details on how to use it, please refer to the Jackery Smart Transfer Switch user manual.

When UPS mode is enabled, the portable power station remains active and continuously consumes power. In the event of a power outage, the system will switch to battery power within 20 milliseconds.
When UPS mode is disabled, the system switches to battery power within 5 seconds during a power outage.

CHARGING

Green energy first: We advocate to use the green energy first. This product supports two modes of charging at the same time: solar charging and AC wall charging.
When AC wall charging and solar charging are turned on at the same time, the product will give priority to solar charging and both methods will be used to charge the battery at the maximum permissible power.

Fully charge the product before its first use.

Note

1. The recommended charging temperature for the product is between 0°C to 45°C (32°F to 113°F), and the discharging temperature is between -15°C to 45°C (5°F to 113°F). Operating the product outside this temperature range may restrict its charging and discharging capabilities, prevent it from charging or discharging.
2. The charging power and battery capacity of the product may vary due to temperature fluctuations. When the ambient temperature is between -15°C to -10°C (5°F to 14°F), the maximum output power decreases to 3600W.

CHARGING VIA AC WALL OUTLET

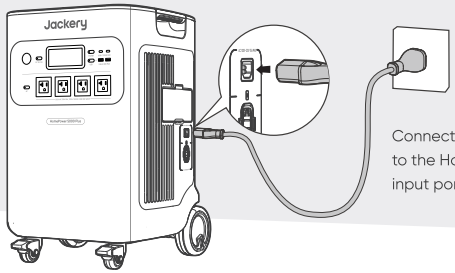

Connect the AC charging cable to the HomePower 5000 Plus AC input port and a wall outlet.

CHARGING WITH A SMART TRANSFER SWITCH

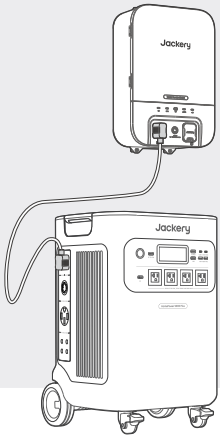

Connect your Jackery Smart Transfer Switch to the product to enable charging via the Jackery Smart Transfer Switch.

*The backup reserve setting works in all modes of the Smart Transfer Switch. Therefore, the Jackery HomePower 5000 Plus stops charging when its remaining capacity exceeds the backup reserve. To charge it immediately, follow the instructions below.

STEP 1

STEP 2

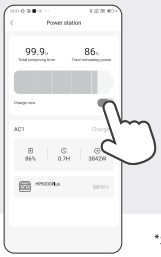

*STS App

Note

When the AC Expansion Port is successfully connected to the STS, the AC Input port will not be used for charging. In this case, the portable power station can be charged via the following ports: AC Expansion Port, High-PV, and Low-PV.

CHARGING WITH SOLAR PANELS

Caution

When connecting solar panels in series, ensure that the maximum voltage output of all panels is within 16V–60V for the low-PV input port, and 135V–450V for the high-PV input port.

- **Connect to Low-PV Input Port**

Low-PV input voltage range: 16V to 60V

The Jackery HomePower 5000 Plus has two low-PV input ports, each one supports direct connection of one 500W or three 200W solar panels. If one low-PV input port needs to connect two or more solar panels simultaneously, please refer to the figure below for charging through the solar panel connector (sold separately, not included as standard).

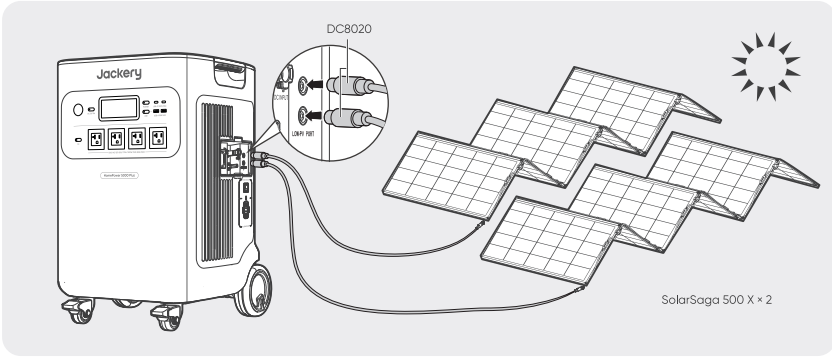

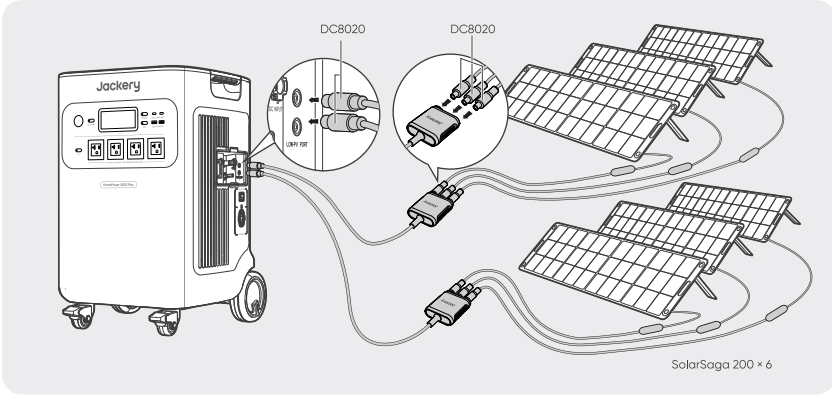

Caution

1. Ensure that the input voltage for both DC input ports is the same. Failure to do so may damage the product. For example:
   - It is recommended to use the same model of Jackery solar panels and the same number of panels when connecting solar panels to both DC8020 Input ports.
   - Do not charge the product using both a car charger and a solar panel simultaneously. Doing so may blow the car fuse or result in charging failure.
2. It is recommended to use the Jackery Solar Panel to charge the HomePower 5000 Plus. Jackery is not responsible for any losses caused by using solar panels from other brands.

- **Connect to High-PV Input Port**

  High-PV input voltage range: 135V to 450V

Caution	1. Make sure the High-PV switch is turned off before connecting the High-PV input or performing maintenance. 2. Before using the High-PV input ports, make sure the PV switch is turned on. 3. Make sure the High-PV switch is in the 'OFF' or 'LOCK' position before using the provided MC4 wrench to disconnect the MC4 connectors.

Disconnect MC4 connectors with the provided MC4 wrench.

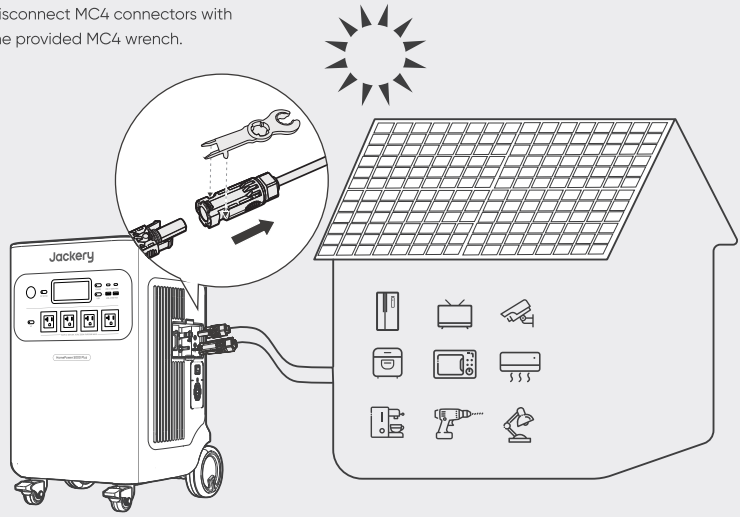

Lock

Turn the high-PV switch to the 'LOCK' position and press the locking mechanism.

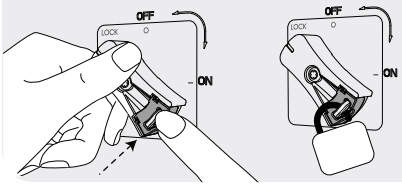

Unlock

Release the locking mechanism and the switch returns to the 'OFF' position.

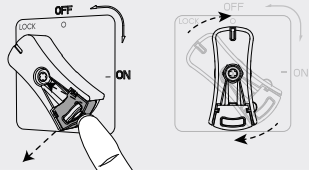

- **High-PV + Low-PV Input**
  Voltage range for low-PV input: 16V to 60V
  Voltage range for high-PV input: 135V to 450V

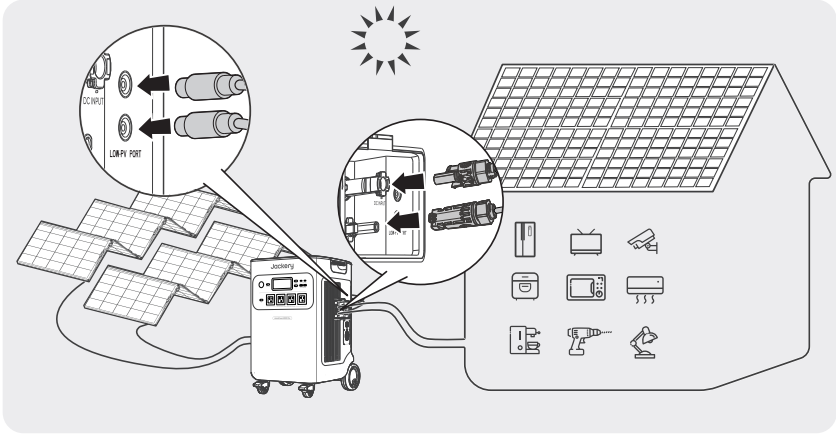

CHARGING WITH A CAR CHARGER

This product can be charged using a 12V car charger. Ensure that the car charger and the car cigarette lighter provide a good connection.

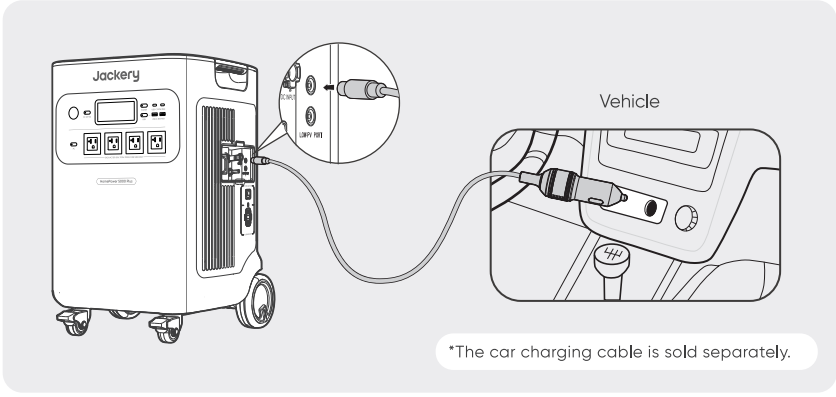

Caution

1. Please start the vehicle before charging your power station.
2. If the vehicle is running on bumpy roads, it is forbidden to use the car charger in case it burns due to a poor connection. The Company will not be responsible for any loss caused by non-standard operation.
3. Vehicle charging is only applicable to vehicles with 12V DC, not 24V DC. Please do not charge this product in 24V vehicle to avoid personal injury and property loss.

STORAGE

Store the product in a dry clean place with proper ventilation. Storage temperature and humidity:

- 1 month: -4°F to 113°F / -20°C to 45°C (0-60%RH)
- 3 months: 32°F to 113°F / 0°C to 45°C (0-60%RH)
- 12 months: 32°F to 77°F / 0°C to 25°C (0-60%RH)

If this product is stored for a long period of time (3 months - 6 months) with the power depleted, it may become unchargeable. To prevent this and maintain battery health, it is recommended to check and recharge the product every three months and perform a full charge and discharge cycle at least once every 6 to 12 months.

APP SETUP

1. To download the App and log in

Available on the App Store

GET IT ON Google Play

Search for "Jackery" in Google Play or App Store to install the App. After that, you can register and log in.

Alternatively, scan the QR code below to download and install the App.

2. To add device

2.1 Click the button ⊕ to add your device;

2.2 Turn on the product by long-pressing the Main Power Button. When the Wi-Fi and Bluetooth icons appear and flash on the product, your product enters the network configuring mode. Open Bluetooth permission and tap the Icon Flashed button on your APP to connect the product;

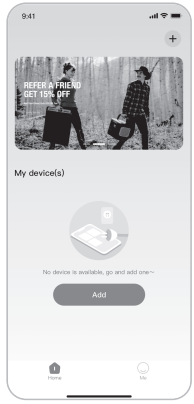

2.1

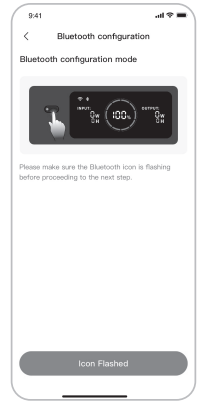

2.2

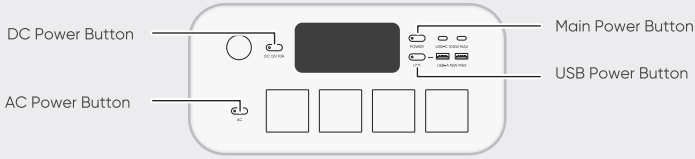

Remarks

After being turned on, if the APP is not connected within 2 hours, the device will automatically turn off Wi-Fi and Bluetooth. Now, it is required to press and hold USB Power Button and AC Power Button to turn on Wi-Fi and Bluetooth again.

2.3 After clicking the searched device icon, the App automatically connects the device via Bluetooth.

Remarks

If "the device has been bound" is prompted during the binding process, the following two ways can be used for connection:

- The device owner will share this device with other users through the App.
- Press and hold the Main Power Button and USB Power Button for 3 seconds to reset the device, and then re-bind the device.

2.4 After the device is successfully connected, it is necessary to enter your Wi-Fi password and tap the OK button;

Remarks

Please select a Wi-Fi network in 2.4GHz band. The device does not support a Wi-Fi network in 5GHz band.

2.5 After the device is successfully added on the home page of the device, the Wi-Fi icon on the device will be always on;

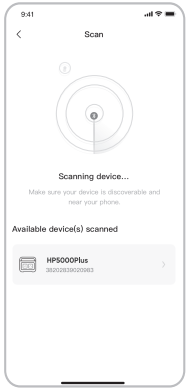

2.3

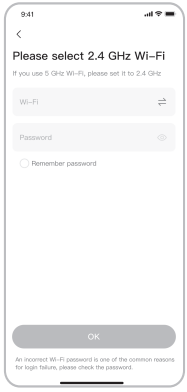

2.4

2.5

The above screenshots are for reference only.

3. To unbind the device

Click the Settings button in the upper right corner of the main interface of the device to enter the settings page, and click the Unbind button at the bottom of the page to unbind the device.

4. Notes

4.1 To turn on Wi-Fi & Bluetooth:

- Wi-Fi & Bluetooth are automatically turned on after the device is on, and the Wi-Fi & Bluetooth icons on the screen light up;
- Press the USB Power Button and the AC Power Button at the same time until the Wi-Fi & Bluetooth icons on the screen light up;

4.2 To turn off Wi-Fi & Bluetooth:

- Press the USB Power Button and AC Power Button at the same time until the Wi-Fi & Bluetooth icons on the screen are off;
- Wi-Fi & Bluetooth will be automatically turned off if no device is connected within 2 hours;

4.3 To reset Wi-Fi & Bluetooth:

- Press the Main Power Button and USB Power Button at the same time for 3 seconds to reset Wi-Fi & Bluetooth to factory settings and reboot the system. The connected App account will be unbound.

WARRANTY

We only provide our warranty to customers who purchase from the official Jackery website, Jackery-branded third-party platforms, or local authorized dealers.

* Warranty period and details may vary according to local laws, regulations, and authorized dealers.

Limited Warranty

Jackery Inc. warrants to the original consumer purchaser that the Jackery product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in the 'Warranty Period' section below, subject to the exclusions set forth below.

This warranty statement sets forth Jackery's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sale of our products.

Warranty Period

5 YEARS
Standard Warranty

The standard warranty period for Jackery HomePower 5000 Plus is 60 months. In each case, the warranty period is measured starting on the date of purchase by the original consumer purchaser. The sales receipt from the first consumer purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

2 YEARS
Extended Warranty

An additional fee is required for the extended warranty. For details on the extended warranty, please visit the Jackery website or contact Jackery customer service.

Repair or replacement

Jackery will repair or replace (at Jackery's expense) any Jackery product that fails to operate during the applicable warranty period due to a defect in workmanship or material. The repaired/replaced product assumes the remaining warranty of the original date of purchase.

Limited to Original Consumer Buyer

The warranty on Jackery's product is limited to the original consumer purchaser and is not transferable to any subsequent owner.

Exclusions

Jackery's warranty does not apply to:

Misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in Jackery's current product literature.

Attempted repair by anyone other than an authorized facility.

Any product purchased through an online auction house.

Jackery's warranty does not apply to the battery cell unless the battery cell is fully charged by you within seven days after you purchase the product and at least once every 6 months thereafter.

Interpretation Rights

Jackery Inc. reserves the right to final interpretation of the above customers' after-sales policy.

SPECIFICATIONS

GENERAL INFO

Product Name	Jackery HomePower 5000 Plus
Model No.	JHP-5000C
Capacity	45Ah/112Vdc (5040Wh)
Cell Chemistry	$LiFePO_4$
Weight	About 134.5 lbs/61 kg
Dimension	16.5×15.5×25 in/41.8×39.5×63.5 cm
Cycle Life	4000 cycles to 70%+ capacity
UPS	Backup UPS: ＜20ms Onine UPS: 0ms
Inverter Topology	Non-isolated
Power Factor	≥0.98
Entire Unit	Type 1

INPUT PORTS

Charge Mode AC Input	120V~60Hz, 15A Max (Duration time < 3h when current exceeds 12A)
Bypass Mode AC Input	120V~60Hz, 12A Max (Duration time < 3h when current exceeds 12A) 240V~60Hz, 16.7A Max
1 x AC Expansion Port (Input)	240V~60Hz, 16.7A Max
DC Input	
1 x DC Expansion Port (Input)	80.5V-126V⎓98A Max
High-PV	135V-450V⎓15A Max, 4000W Max
Low-PV	2 x DC 8mm Ports; 16V-60V⎓10.5A Max, Double to 21A/1200W Max 11V-16V (Working Voltage)⎓8A Max, Double to 8A Max

OUTPUT PORTS

AC Output (NEMA L14-30R/14-50)	120V/240V~60Hz, 30A, 7200W Max
Bypass Mode AC Output	120V~60Hz, 12A Max 240V~60Hz, 16.7A Max
4 × AC Output	120V~60Hz, 20A, 2400W
AC Total Output	7200W Max, 14400W Surge
2 × USB-C Output	100W Max, 5V⎓3A, 9V⎓3A, 12V⎓3A, 15V⎓3A, 20V⎓5A
2 × USB-A Output	18W Max, 5-6V⎓3A, 6-9V⎓2A, 9-12V⎓1.5A
Cigarette Lighter Port	12V⎓10A
1 × AC Expansion Port (Output)	240V~60Hz, 30A, 7200W
1 × DC Expansion Port (Output)	80.5V-126V⎓41A Max

ENVIRONMENTAL OPERATING TEMPERATURE

Charging Temperature	0°C~45°C (32°F~113°F)
Discharging Temperature	-15°C~45°C (5°F~113°F) -15°C~-10°C (5°F~14°F) Output Power: 3600W

INGESTION HAZARD: This product contains a button cell or coin battery.

※ USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

SMART HOME BACKUP SYSTEM (AC ESS) INSTALLATION GUIDE

System Model
HB5000C-TS02A

To connect the Jackery HomePower 5000 Plus to the Smart Transfer Switch (STS), use the expansion cable to link the Explorer 5000 Plus AC expansion port to the STS AC power input/output port.

To connect the Jackery HomePower 5000 Plus to the battery pack, use the expansion cable to connect its DC expansion port (A) to the battery pack's DC expansion port (B).

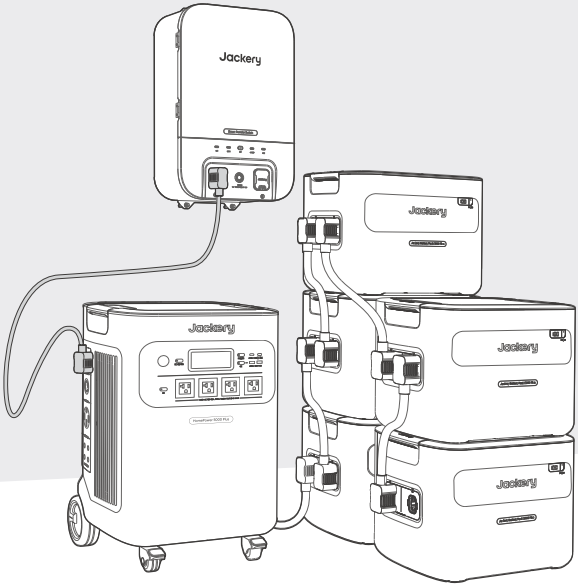

For detailed installation and connection instructions, refer to the user manuals for the STS and battery pack.

Caution

Smart home backup system (AC ESS) Installation Position
Indoor installation.
The area is completely water proof.
The wall is flat and level.
Ambient temperature range:-15°C~45°C.
The temperature and humidity are maintained at a constant level.
Install in a well-ventilated place.
Do not place at a children or pet touchable area.
The installation area shall avoid of direct sunlight.
No flammable or explosive materials close to inverter and battery.

Jackery HomePower 5000 Plus Model: JHP-5000C

SPECIFICATIONS

GENERAL INFO

Product Name	Jackery HomePower 5000 Plus
Model No.	JHP-5000C
Capacity	45Ah/112Vdc (5040Wh)
Cell Chemistry	$LiFePO_4$
Weight	About 134.5 lbs/61 kg
Dimension	16.5×15.5×25 in/41.8×39.5×63.5 cm
Cycle Life	4000 cycles to 70%+ capacity
UPS	Backup UPS: ＜20ms Onine UPS: 0ms
Inverter Topology	Non-isolated
Power Factor	≥0.98
Entire Unit	Type 1

INPUT PORTS

Charge Mode AC Input	120V~60Hz, 15A Max (Duration time < 3h when current exceeds 12A)
Bypass Mode AC Input	120V~60Hz, 12A Max (Duration time < 3h when current exceeds 12A) 240V~60Hz, 16.7A Max
1 x AC Expansion Port (Input)	240V~60Hz, 16.7A Max
DC Input	
1 x DC Expansion Port (Input)	80.5V-126V⎓98A Max
High-PV	135V-450V⎓15A Max, 4000W Max
Low-PV	2 x DC 8mm Ports; 16V-60V⎓10.5A Max, Double to 21A/1200W Max 11V-16V (Working Voltage)⎓8A Max, Double to 8A Max

OUTPUT PORTS

AC Output (NEMA L14-30R/14-50)	120V/240V~60Hz, 30A, 7200W Max
Bypass Mode AC Output	120V~60Hz, 12A Max 240V~60Hz, 16.7A Max
4 × AC Output	120V~60Hz, 20A, 2400W
AC Total Output	7200W Max, 14400W Surge
2 × USB-C Output	100W Max, 5V⎓3A, 9V⎓3A, 12V⎓3A, 15V⎓3A, 20V⎓5A
2 × USB-A Output	18W Max, 5-6V⎓3A, 6-9V⎓2A, 9-12V⎓1.5A
Cigarette Lighter Port	12V⎓10A
1 × AC Expansion Port (Output)	240V~60Hz, 30A, 7200W
1 × DC Expansion Port (Output)	80.5V-126V⎓41A Max

ENVIRONMENTAL OPERATING TEMPERATURE

Charging Temperature	0°C~45°C (32°F~113°F)
Discharging Temperature	-15°C~45°C (5°F~113°F) -15°C~-10°C (5°F~14°F) Output Power: 3600W

INGESTION HAZARD: This product contains a button cell or coin battery.

※ USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Jackery Battery Pack 5000 Plus

Model: JBP-5000A

SPECIFICATIONS

SOLD SEPARATELY

GENERAL INFO

Product Name	Jackery Battery Pack 5000 Plus
Model No.	JBP-5000A
Capacity	45Ah/112Vdc (5040Wh)
Cell Chemistry	$LiFePO_4$
Weight	About 81.57 lbs/37 kg
Dimension	16.5 x 13.5 x 13.2 in/41.8 x 34.4 x 33.6 cm
Cycle Life	4000 cycles to 70%+ capacity
Maximum Short Circuit Current and Duration	2600A/5ms
Ingress Protection	IP20

Only use together with Jackery Explorer 5000 Plus and Jackery HomePower 5000 Plus.

INPUT/OUTPUT PORTS

DC Expansion Port (Input)	80.5V-126V⎓41A Max
DC Expansion Port (Output)	80.5V-126V⎓98A Max

ENVIRONMENTAL OPERATING TEMPERATURE

Charging Temperature	0°C~45°C (32°F~113°F)
Discharging Temperature	-15°C~45°C (5°F~113°F)

INGESTION HAZARD: This product contains a button cell or coin battery.

Jackery Smart Transfer Switch

Model: JA-TS02A

SPECIFICATIONS

SOLD SEPARATELY

GENERAL INFO

Product Name	Jackery Smart Transfer Switch
Model No.	JA-TS02A
AC Voltage (Nominal)	120V/240V~ 60Hz
Feed-In Type	Split Phase
Maximum Input Current	100A Grid / 60A Power Station
Maximum Output Current	60A Home Load / 33.4A Power Station
Maximum Input Short-Circuit Current	10KA
Overvoltage Category	IV
UPS	≤20ms
Enclosure Type (Distribution Panel)	NEMA Type 1
Number of Load Branches	12
Main Circuit	2 AWG

Branch Circuit	14 AWG 12 AWG 10 AWG
Communication	Wi-Fi and Bluetooth
Operating Temperature	-20°C~40°C (-4°F~104°F)
Dimensions	22 x 14.7 x 7.87 in/56 x 37.4 x 20 cm
Weight	About 25.57 lbs/11.6 kg

When using the product, ensure it is connected to a 240V split phase mains voltage.

Note SMART HOME BACKUP SYSTEM (AC ESS) About 575.16 lbs/260.89kg

PACKAGE LIST

Jackery HomePower 5000 Plus


AC Charging Cable

MC4 Wrench

User Manual

Jackery Battery Pack 5000 Plus


Expansion Cable

User Manual

Sold separately

Jackery Smart Transfer Switch


Marking-off Template


Power Input/Output Cable

User Manual

Quick Guide


Circuit Label

2*Wall Bracket

4*M4 Phillips Flat Head Screw
(secure wall brackets to Smart Transfer Switch)

Sold separately

JACKERY INC.

5310 Bunche Dr., Fremont, CA 94538-8301

1-888-502-2236 (US)

hello@jackery.com

www.jackery.com