

PE-EC801A — Antennas and Propagation

Semester VIII • 3L:0T:0P • 3 Credits

Module 7 Exam Notes

CGEC | B.Tech ECE (2023–27) | *Biraj Sarkar*

Contents

1	Basic Concepts of Smart Antennas	2
1.1	Smart Antenna Architecture	2
1.2	Beamforming Basics	2
2	Radio Wave Propagation Modes	3
2.1	Ground Wave (Surface Wave) Propagation	3
2.2	Space Wave (Line-of-Sight) Propagation	3
2.3	Sky Wave Propagation	4
3	Ionospheric Parameters	4
3.1	Virtual Height	4
3.2	Lowest Usable Frequency (LUF)	5
3.3	Skip Zone and Dead Zone	5

1. Basic Concepts of Smart Antennas


Definition of Smart Antennas

A **smart antenna** (or adaptive array) system combines an antenna array with digital signal processing (DSP) algorithms to automatically optimize its radiation pattern in response to the signal environment, steering beams toward desired users and placing nulls toward interferers.

1.1 Smart Antenna Architecture

A typical smart antenna receiver consists of an antenna array, an RF downconverter, analog-to-digital converters (ADCs), and a digital signal processor (DSP).


Smart Antenna Receiver Block Diagram

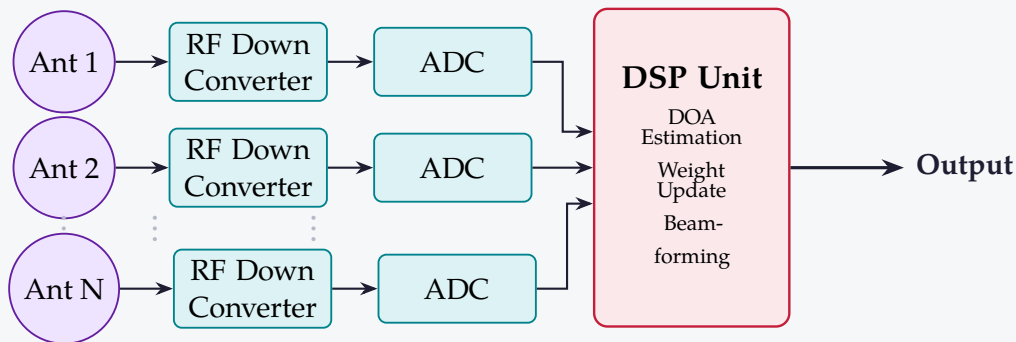


1.2 Beamforming Basics

- **Phased Array / Fixed-Weight Beamforming:** The weights (amplitudes and phases) are predefined or adjusted using analog phase shifters to steer the main beam in a specific fixed direction.
- **Adaptive Beamforming:** The weights are dynamically computed in real-time by a DSP processor using feedback algorithms to optimize the Signal-to-Interference-plus-Noise Ratio (SINR).
- **Algorithms:** Common adaptive weight-updating algorithms include:
 - **LMS (Least Mean Squares):** Low complexity, gradient descent.
 - **RLS (Recursive Least Squares):** Fast convergence, high complexity.
 - **MUSIC / ESPRIT:** High-resolution algorithms used to find the Direction of Arrival (DOA) of incoming signals.

Switched-Beam vs. Adaptive Array Patterns

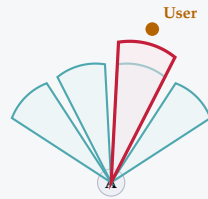

(a) Switched-Beam

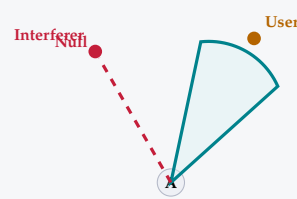


(b) Adaptive Array

2. Radio Wave Propagation Modes

Radio waves propagate from transmitter to receiver via three primary modes depending on their frequency.

Radio Wave Propagation Modes

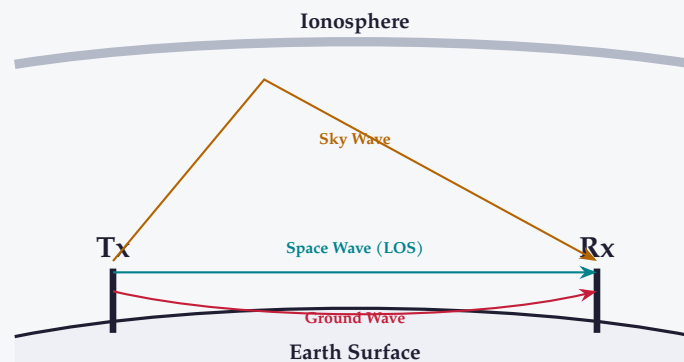

2.1 Ground Wave (Surface Wave) Propagation

Ground waves travel along the surface of the Earth, guided by the boundary between the atmosphere and the ground.

- **Frequency Range:** Very Low Frequency (VLF) to Medium Frequency (MF) (< 2 MHz).
- **Mechanism:** The wave induces currents in the ground, causing attenuation. Attenuation increases rapidly with frequency, limiting this mode to low frequencies.
- **Application:** AM radio broadcasting, maritime communications.

2.2 Space Wave (Line-of-Sight) Propagation

Space waves travel through the troposphere directly from transmitter to receiver, or via ground reflection.

- **Frequency Range:** Very High Frequency (VHF) and above (> 30 MHz).
- **Radio Horizon (d):** The maximum line-of-sight distance is limited by the curvature of

the Earth. Accounting for atmospheric refraction (effective Earth radius factor $k = 4/3$):

$$d \approx \sqrt{17h_t} + \sqrt{17h_r} \approx 4.12 (\sqrt{h_t} + \sqrt{h_r}) \text{ km}$$

where h_t and h_r are the heights of the transmitting and receiving towers in meters.

- **Other modes:** Tropospheric scatter, duct propagation.

2.3 Sky Wave Propagation

Sky waves travel upward and are reflected (refracted) back to Earth by the ionosphere.

- **Frequency Range:** High Frequency (HF) (3–30 MHz).
- **Ionospheric Layers:** Formed by solar UV/X-ray ionization.

Ionosphere Layers Properties:

Layer	Altitude	Day Behavior	Night Behavior
D Layer	50–90 km	Absorbs HF; reflects VLF/LF.	Disappears (recombines).
E Layer	90–140 km	Partially reflects HF.	Weakens significantly.
F1 Layer	140–250 km	Merges with F2 at night.	Disappears.
F2 Layer	250–400 km	Highest electron density; primary sky wave reflector.	Merges into a single F layer.

3. Ionospheric Parameters

The ionosphere acts as a refracting medium. Its refractive index n is:

$$n = \sqrt{1 - \frac{81N}{f^2}}$$

where N is the electron density (electrons/m³) and f is the wave frequency (Hz).

Physical Interpretation: When a sky wave enters the ionosphere at an oblique angle, successive layers of increasing electron density bend the wave progressively away from vertical (like Snell's law in optics). Eventually, at the height where $n = \cos \theta_i$, the wave is totally reflected and returns to Earth. If the frequency is too high, n never equals $\cos \theta_i$ and the wave escapes into space.

3.1 Virtual Height

The **virtual height** (h_{virt}) is the apparent height from which a short pulse of radio energy appears to be reflected, assuming the wave traveled at the speed of light in free space for the entire round trip. It is always greater than the actual reflection height because the wave slows down as electron density increases.

$$h_{virt} = \frac{c \cdot \Delta t}{2}$$

where Δt is the round-trip time for a vertically launched pulse.

3.2 Lowest Usable Frequency (LUF)

The LUF is the lowest frequency at which sky-wave communication is possible over a given path. Below the LUF, the D-layer absorption becomes so severe that the signal is absorbed before reaching the receiver. The LUF depends on:

- Solar activity (higher absorption during daytime and solar maxima).
- Path length and required signal level.
- Transmitter power (higher power lowers the effective LUF).

The **Optimum Working Frequency (OWF)** is typically chosen as 85% of the MUF to provide a safety margin against day-to-day variability:

$$f_{OWF} \approx 0.85 \times f_{MUF}$$

Key Sky-Wave Design Parameters

1. **Critical Frequency (f_c):** The highest frequency that is reflected back to Earth when launched vertically (90° elevation):

$$f_c = 9\sqrt{N_{max}}$$

where N_{max} is the maximum electron density in the reflecting layer (electrons/m³).

2. **Maximum Usable Frequency (MUF):** The highest frequency reflected back to Earth when launched at an oblique angle of incidence θ_i (measured from vertical):

$$f_{MUF} = f_c \sec \theta_i = \frac{f_c}{\cos \theta_i} \quad (\text{Secant Law})$$

For a flat Earth approximation with path length D and reflection height h :

$$\sec \theta_i = \sqrt{1 + \left(\frac{D}{2h}\right)^2}$$

3. **Skip Distance (D_{skip}):** The minimum distance from the transmitter where a sky wave of frequency f ($f > f_c$) returns to Earth. Within this distance, no sky-wave signal is received — this region is called the **skip zone**:

$$D_{skip} = 2h_{virt} \sqrt{\left(\frac{f_{MUF}}{f_c}\right)^2 - 1}$$

4. **Optimum Working Frequency (OWF):**

$$f_{OWF} \approx 0.85 \times f_{MUF}$$

3.3 Skip Zone and Dead Zone

- **Skip Zone (Dead Zone):** The annular region around the transmitter where neither the ground wave (which has died out) nor the sky wave (which overshoots) can be received. For a sky wave of frequency f , the inner edge of the skip zone is at the skip distance D_{skip} .

- **Effect of Frequency:** As frequency increases toward the MUF, the skip distance increases. As frequency decreases toward f_c , the skip distance decreases to zero (the wave returns almost vertically).
- **Multiple Hops:** Sky waves can undergo successive reflections between the ionosphere and the Earth's surface, allowing communication over very long distances ($> 10,000$ km).

Quick Revision — Module 7

Smart Antennas and Propagation | PE-EC801A

Key Formulas and Metrics at a Glance

Radio Horizon Distance (d) $d \approx 4.12(\sqrt{h_t} + \sqrt{h_r})$ (in km, h in meters)

Ionospheric Refractive Index (n) $n = \sqrt{1 - \frac{81N}{f^2}}$

Critical Frequency (f_c) $f_c = 9\sqrt{N_{max}}$ (vertical incidence)

Oblique Secant Law (MUF) $f_{MUF} = f_c \sec \theta_i$

Skip Distance (D_{skip}) $D_{skip} = 2h\sqrt{(f_{MUF}/f_c)^2 - 1}$

Smart Weight Vector ($\vec{w}$) $\vec{y}(t) = \vec{w}^H \vec{x}(t)$ (combining array outputs)

One-Line Definitions

- **DOA Estimation:** Direction of Arrival; calculating the angle from which a signal hits the antenna array.
- **Adaptive Beamforming:** Real-time DSP weight adjustment to maximize wanted signals and null out noise/interference.
- **Ground Wave:** A low-frequency electromagnetic wave that travels guided by the curvature and conductivity of the Earth.
- **Skip Distance:** The minimum distance from a transmitter where sky wave signals return to the Earth's surface.
- **Critical Frequency:** The limit frequency below which waves return to Earth at vertical incidence, and above which they escape to space.
- **Duct Propagation:** The trapping of VHF/UHF waves in a tropospheric layer due to temperature inversions, allowing long-range propagation.

Frequently Asked / Viva Questions

Q1. What are the benefits of using smart antennas in wireless networks?

Smart antennas increase system capacity (via Space Division Multiple Access - SDMA), extend coverage range (via directive beam gain), reduce co-channel interference (by steering nulls toward interferers), and mitigate multipath fading.

Q2. Compare switched-beam and adaptive array smart antennas.

Switched-beam systems select from a set of predefined, fixed beams. Adaptive arrays continuously track the user's location and steer the beam and nulls dynamically using DSP algorithms, offering higher performance but at a higher cost.

Frequently Asked / Viva Questions (contd.)

Q3. Explain the physical mechanism of ground wave propagation. Why is it limited to low frequencies?

As ground waves travel, they induce currents in the Earth's surface. Since the Earth acts as a lossy dielectric, it dissipates power. Ground attenuation increases rapidly with frequency, limiting this mode to frequencies below 2 MHz.

Q4. Define critical frequency, MUF, and skip zone.

- **Critical Frequency (f_c):** The maximum frequency reflected at vertical incidence.
- **MUF:** The maximum frequency reflected at oblique incidence ($f_{MUF} = f_c \sec \theta_i$).
- **Skip Zone:** The region between the limit of ground-wave coverage and the point where the first sky-wave returns to Earth. No signal is received in this zone.

Q5. Why does the D-layer of the ionosphere disappear at night?

The D-layer is the lowest layer (50–90 km) where atmospheric density is high. It is ionized during the day by solar radiation. At night, without solar rays, free electrons recombine rapidly with ions due to the high collision rate, causing the layer to disappear.

Q6. State the formula for the line-of-sight range of space waves. How does the earth's atmosphere affect it?

$d \approx 4.12(\sqrt{h_t} + \sqrt{h_r})$ km. The atmosphere has a refractive index that decreases with height, which bends waves slightly downward, extending the radio horizon about 15% beyond the geometric optical horizon. This is modeled using an effective Earth radius factor $k = 4/3$.

Comparison of Wave Propagation Modes

Parameter	Ground Wave	Space Wave	Sky Wave
Frequency Range	< 2 MHz (LF/MF)	> 30 MHz (VHF/UHF/SHF)	3–30 MHz (HF)
Propagation Path	Curves along Earth's surface	Direct line-of-sight path	Ionospheric reflection/refraction
Primary Limitation	High ground attenuation at higher frequencies	Earth curvature blockage (radio horizon)	Solar ionization variations (day/night/seasonal)
Typical Applications	AM radio, maritime navigation	FM, TV, cellular, satellite	Long-range amateur radio, SW broadcasting