
Programming Embedded Systems I

A 10-week course, using C

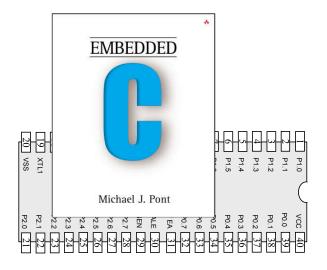

Michael J. Pont University of Leicester

[v1.2]

1

Copyright © Michael J. Pont, 2002-2003

This document may be freely distributed and copied, provided that copyright notice at the foot of each OHP page is clearly visible in all copies.

Ш

Seminar 1: "Hello, Embedded World"	1
Overview of this seminar	2
Overview of this course	3
By the end of the course	4
Main course textbook	5
Why use C?	6
Pre-requisites!	7
The 8051 microcontroller	8
The "super loop" software architecture	9
Strengths and weaknesseses of "super loops"	10
Example: Central-heating controller	11
Reading from (and writing to) port pins	12
SFRs and ports	13
SFRs and ports	14
Creating and using sbit variables	15
Example: Reading and writing bytes	16
Creating "software delays"	17
Using the performance analyzer to test software delays	18
Strengths and weaknesses of software-only delays	19
Preparation for the next seminar	20

Seminar 2: Basic hardware foundations (resets, oscillators and port I/O)	21
Review: The 8051 microcontroller	22
Review: Central-heating controller	23
Overview of this seminar	24
Oscillator Hardware	25
How to connect a crystal to a microcontroller	27
Oscillator frequency and machine cycle period	28
Keep the clock frequency as low as possible	29
Stability issues	30
Improving the stability of a crystal oscillator	31
Overall strengths and weaknesses	32
Reset Hardware	34
More robust reset circuits	35
Driving DC Loads	36
Use of pull-up resistors	38
Driving a low-power load without using a buffer	39
Using an IC Buffer	40
Example: Buffering three LEDs with a 74HC04	41
What is a multi-segment LED?	42
Driving a single digit	43
Preparation for the next seminar	44

IV

Seminar 3: Reading Switches	45
Introduction	46
Review: Basic techniques for reading from port pins	47
Example: Reading and writing bytes (review)	48
Example: Reading and writing bits (simple version)	49
Example: Reading and writing bits (generic version)	51
The need for pull-up resistors	56
The need for pull-up resistors	57
The need for pull-up resistors	58
Dealing with switch bounce	59
Example: Reading switch inputs (basic code)	61
Example: Counting goats	68
Conclusions	74
Preparation for the next seminar	75

Seminar 4: Adding Structure to Your Code	77
Introduction	78
Object-Oriented Programming with C	79
Example of "O-O C"	82
The Project Header (Main.H)	85
The Port Header (Port.H)	92
Re-structuring a "Hello World" example	96
Example: Re-structuring the Goat-Counting Example	104
Preparation for the next seminar	114

VI

Seminar 5: Meeting Real-Time Constraints	115
Introduction	116
Creating "hardware delays"	118
The TCON SFR	119
The TMOD SFR	120
Two further registers	121
Example: Generating a precise 50 ms delay	122
Example: Creating a portable hardware delay	126
The need for 'timeout' mechanisms - example	129
Creating loop timeouts	130
Example: Testing loop timeouts	132
Example: A more reliable switch interface	134
Creating hardware timeouts	135
Conclusions	137
Preparation for the next seminar	138

Seminar 6: Creating an Embedded Operating System	139
Introduction	140
Timer-based interrupts (the core of an embedded OS)	144
The interrupt service routine (ISR)	145
Automatic timer reloads	146
Introducing sEOS	147
Introducing sEOS	148
Tasks, functions and scheduling	153
Setting the tick interval	154
Saving power	157
Using sEOS in your own projects	158
Is this approach portable?	159
Example: Milk pasteurization	160
Conclusions	174
Preparation for the next seminar	175

VIII

Seminar 7: Multi-State Systems and Function Sequences	177
Introduction	178
Implementing a Multi-State (Timed) system	180
Example: Traffic light sequencing	181
Example: Animatronic dinosaur	189
Implementing a Multi-State (Input/Timed) system	195
Example: Controller for a washing machine	197
Conclusions	208
Preparation for the next seminar	209

Seminar 8: Using the Serial Interface	211
Overview of this seminar	212
What is 'RS-232'?	213
Basic RS-232 Protocol	214
Asynchronous data transmission and baud rates	215
RS-232 voltage levels	216
The software architecture	217
Overview	218
Using the on-chip U(S)ART for RS-232 communications	219
Serial port registers	220
Baud rate generation	221
Why use 11.0592 MHz crystals?	222
PC Software	223
What about printf()?	224
RS-232 and 8051: Overall strengths and weaknesses	225
Example: Displaying elapsed time on a PC	226
Example: Data acquisition	235
Conclusions	239
Preparation for the next seminar	240

Seminar 9: Case Study: Intruder Alarm System	241
Introduction	242
System Operation	243
Key software components used in this example	244
Running the program	245
The software	246
Extending and modifying the system	260
Conclusions	261


ΧI

Seminar 10: Case Study: Controlling a Mobile Robot	263
Overview	264
What can the robot do?	265
The robot brain	266
How does the robot move?	267
Pulse-width modulation	268
Software PWM	269
The resulting code	270
More about the robot	271
Conclusions	272

XII

Seminar 1:

"Hello, Embedded World"

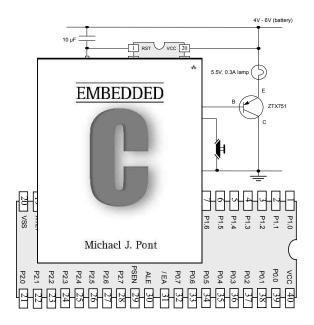

Overview of this seminar

This introductory seminar will:

- Provide an overview of this course
- Introduce the 8051 microcontroller
- Present the "Super Loop" software architecture
- Describe how to use port pins
- Consider how you can generate delays (and why you might need to).

Overview of this course

This course is concerned with the implementation of software (and a small amount of hardware) for embedded systems constructed using a single microcontroller.

The processors examined in detail are from the 8051 family (including both 'Standard' and 'Small' devices).

All programming is in the 'C' language.

By the end of the course ...

By the end of the course, you will be able to:


- 1. Design software for single-processor embedded applications based on small, industry standard, microcontrollers;
- 2. Implement the above designs using a modern, high-level programming language ('C'), and
- 3. Begin to understand issues of reliability and safety and how software design and programming decisions may have a positive or negative impact in this area.

Main course textbook

Throughout this course, we will be making heavy use of this book:

Embedded C by Michael J. Pont (2002)

Addison-Wesley [ISBN: 0-201-79523X]

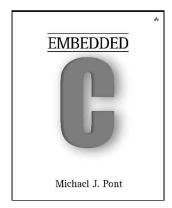

For further information about this book, please see:

http://www.engg.le.ac.uk/books/Pont/ec51.htm

Why use C?


- It is a 'mid-level', with 'high-level' features (such as support for functions and modules), and 'low-level' features (such as good access to hardware via pointers);
- It is very efficient;
- It is popular and well understood;
- Even desktop developers who have used only Java or C++ can soon understand C syntax;
- Good, well-proven compilers are available for every embedded processor (8-bit to 32-bit or more);
- Experienced staff are available;
- Books, training courses, code samples and WWW sites discussing the use of the language are all widely available.

Overall, C may not be an **perfect** language for developing embedded systems, but it is a good choice (and is unlikely that a 'perfect' language will ever be created).

Pre-requisites!

- Throughout this course, it will be assumed that you have had previous programming experience: this might be in for example Java or C++.
- For most people with such a background, "getting to grips" with C is straightforward.

The 8051 microcontroller

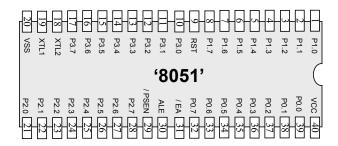

Typical features of a modern 8051:

- Thirty-two input / output lines.
- Internal data (RAM) memory 256 **bytes**.
- Up to 64 kbytes of ROM memory (usually flash)
- Three 16-bit timers / counters
- Nine interrupts (two external) with two priority levels.
- Low-power Idle and Power-down modes.

The different members of this family are suitable for everything from automotive and aerospace systems to TV "remotes".

The "super loop" software architecture

Problem

What is the minimum software environment you need to create an embedded C program?

Solution

```
void main(void)
{
  /* Prepare for task X */
  X_Init();

while(1) /* 'for ever' (Super Loop) */
  {
    X(); /* Perform the task */
  }
}
```

Crucially, the 'super loop', or 'endless loop', is required <u>because we have</u> <u>no operating system to return to</u>: our application will keep looping until the system power is removed.

Strengths and weaknesseses of "super loops"


- © The main strength of Super Loop systems is their simplicity. This makes them (comparatively) easy to build, debug, test and maintain.
- © Super Loops are highly efficient: they have minimal hardware resource implications.
- Super Loops are highly portable.

BUT:

- If your application requires accurate timing (for example, you need to acquire data precisely every 2 ms), then this framework will not provide the accuracy or flexibility you require.
- The basic Super Loop operates at 'full power' (normal operating mode) at all times. This may not be necessary in all applications, and can have a dramatic impact on system power consumption.

[As we will see in Seminar 6, a scheduler can address these problems.]

Example: Central-heating controller

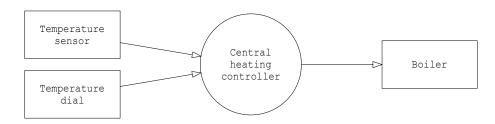

Reading from (and writing to) port pins

Problem

How do you write software to read from and /or write to the ports on an (8051) microcontroller?

Background

The Standard 8051s have four 8-bit ports.

All of the ports are bidirectional: that is, they may be used for both input and output.

SFRs and ports

Control of the 8051 ports through software is carried out using what are known as 'special function registers' (SFRs).

Physically, the SFR is a area of memory in internal RAM:

- P0 is at address 0x80
- P1 at address 0x90
- P2 at address 0xA0
- P3 at address 0xB0

NOTE: 0x means that the number format is HEXADECIMAL - see Embedded C, Chapter 2.

SFRs and ports

A typical SFR header file for an 8051 family device will contain the lines:

```
sfr P0 = 0x80;
sfr P1 = 0x90;
sfr P2 = 0xA0;
sfr P3 = 0xB0;
```

Having declared the SFR variables, we can write to the ports in a straightforward manner. For example, we can send some data to Port 1 as follows:

```
unsigned char Port_data;
Port_data = 0x0F;
P1 = Port_data;  /* Write 00001111 to Port 1 */
Similarly, we can read from (for example) Port 1 as follows:
unsigned char Port_data;
P1 = 0xFF;  /* Set the port to 'read mode' */
Port_data = P1;  /* Read from the port */
```


Note that, in order to read from a pin, we need to ensure that the last thing written to the pin was a '1'.

Creating and using sbit variables

To write to a single pin, we can make use of an sbit variable in the Keil (C51) compiler to provide a finer level of control.

Here's a clean way of doing this:

Example: Reading and writing bytes

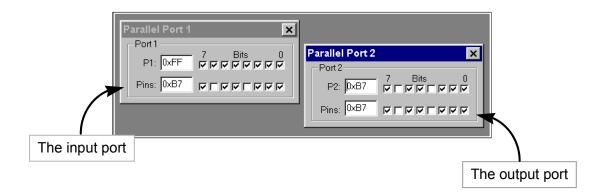

```
void main (void)
{
  unsigned char Port1_value;

/* Must set up P1 for reading */
P1 = 0xFF;

while(1)
  {
    /* Read the value of P1 */
    Port1_value = P1;

    /* Copy the value to P2 */
    P2 = Port1_value;
    }
}
```

Creating "software delays"

Problem

How do you create a simple delay without using any hardware (timer) resources?

Solution


```
Loop_Delay()
    {
    unsigned int x,y;

    for (x=0; x <= 65535; x++)
        {
        y++;
        }
    }
}

Longer_Loop_Delay()
    {
    unsigned int x, y, z;

    for (x=0; x<=65535; x++)
        {
        for (y=0; y<=65535; y++);
             {
            z++;
            }
        }
    }
}</pre>
```

Using the performance analyzer to test software delays

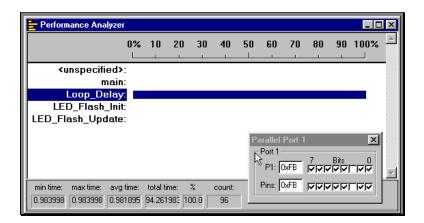

Strengths and weaknesses of software-only delays

- © SOFTWARE DELAY can be used to produce very short delays.
- **SOFTWARE DELAY requires no hardware timers.**
- SOFTWARE DELAY will work on any microcontroller.


BUT:

- **8** It is very difficult to produce precisely timed delays.
- The loops must be re-tuned if you decide to use a different processor, change the clock frequency, or even change the compiler optimisation settings.

Preparation for the next seminar

In the lab session associated with this seminar, you will use a hardware simulator to try out the techniques discussed here. This will give you a chance to focus on the software aspects of embedded systems, without dealing with hardware problems.


In the next seminar, we will prepare to create your first test systems on "real hardware".

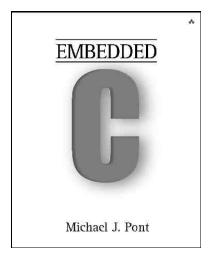


Please read Chapters 1, 2 and 3 before the next seminar

Seminar 2:

Basic hardware foundations (resets, oscillators and port I/O)

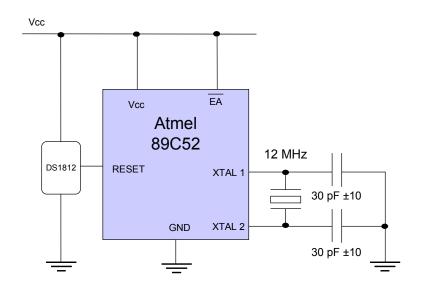

Review: The 8051 microcontroller

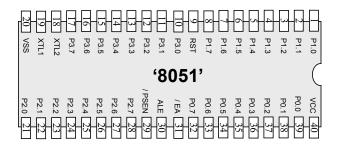


Typical features of a modern 8051:

- Thirty-two input / output lines.
- Internal data (RAM) memory 256 bytes.
- Up to 64 kbytes of ROM memory (usually flash)
- Three 16-bit timers / counters
- Nine interrupts (two external) with two priority levels.
- Low-power Idle and Power-down modes.

The different members of this family are suitable for everything from automotive and aerospace systems to TV "remotes".

Review: Central-heating controller

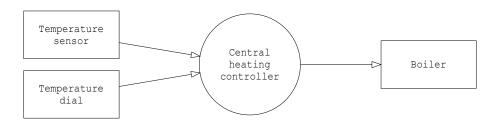

Overview of this seminar

This seminar will:

• Consider the techniques you need to construct your first "real" embedded system (on a breadboard).

Specifically, we'll look at:

- Oscillator circuits
- Reset circuits
- Controlling LEDs

Oscillator Hardware


- All digital computer systems are driven by some form of oscillator circuit.
- This circuit is the 'heartbeat' of the system and is crucial to correct operation.

For example:

- If the oscillator fails, the system will not function at all.
- If the oscillator runs irregularly, any timing calculations performed by the system will be inaccurate.


CRYSTAL OSCILLATOR

Crystals may be used to generate a popular form of oscillator circuit known as a Pierce oscillator.

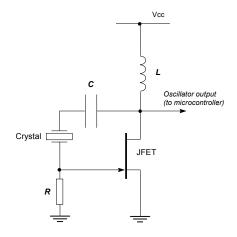

- A variant of the Pierce oscillator is common in the 8051 family. To create such an oscillator, most of the components are included on the microcontroller itself.
- The user of this device must generally only supply the crystal and two small capacitors to complete the oscillator implementation.

How to connect a crystal to a microcontroller

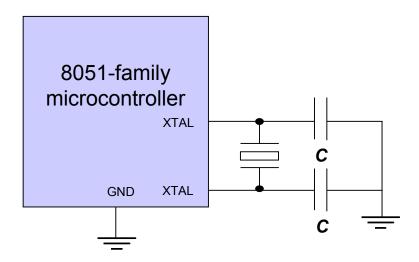

In the absence of specific information, a capacitor value of 30 pF will perform well in most circumstances.

Oscillator frequency and machine cycle period

- In the original members of the 8051 family, the machine cycle takes **twelve oscillator periods**.
- In later family members, such as the Infineon C515C, a machine cycle takes six oscillator periods; in more recent devices such as the Dallas 89C420, only one oscillator period is required per machine cycle.
- As a result, the later members of the family operating at the same clock frequency execute instructions much more rapidly.

Keep the clock frequency as low as possible

Many developers select an oscillator / resonator frequency that is at or near the maximum value supported by a particular device.

This can be a mistake:

- Many application do not require the levels of performance that a modern 8051 device can provide.
- The electromagnetic interference (EMI) generated by a circuit increases with clock frequency.
- In most modern (CMOS-based) 8051s, there is an almost linear relationship between the oscillator frequency and the power-supply current. As a result, by using the lowest frequency necessary it is possible to reduce the power requirement: this can be useful in many applications.
- When accessing low-speed peripherals (such as slow memory, or LCD displays), programming and hardware design can be greatly simplified - and the cost of peripheral components, such as memory latches, can be reduced - if the chip is operating more slowly.

In general, you should operate at the *lowest* possible oscillator frequency compatible with the performance needs of your application.

Stability issues

- A key factor in selecting an oscillator for your system is the issue of oscillator stability. In most cases, oscillator stability is expressed in figures such as '±20 ppm': '20 parts per million'.
- To see what this means in practice, consider that there are approximately 32 million seconds in a year. In every million seconds, your crystal may gain (or lose) 20 seconds. Over the year, a clock based on a 20 ppm crystal may therefore gain (or lose) about 32 x 20 seconds, or around 10 minutes.

Standard quartz crystals are typically rated from ±10 to ±100 ppm, and so may gain (or lose) from around 5 to 50 minutes per year.

Improving the stability of a crystal oscillator

- If you want a general crystal-controlled embedded system to keep accurate time, you can choose to keep the device in an oven (or fridge) at a fixed temperature, and fine-tune the software to keep accurate time. This is, however, rarely practical.
- 'Temperature Compensated Crystal Oscillators' (TCXOs) are available that provide in an easy-to-use package a crystal oscillator, and circuitry that compensates for changes in temperature. Such devices provide stability levels of up to ±0.1 ppm (or more): in a clock circuit, this should gain or lose no more than around 1 minute every 20 years.

TCXOs can cost in excess of \$100.00 per unit...

• One practical alternative is to determine the temperaturefrequency characteristics for your chosen crystal, and include this information in your application.

For the cost of a small temperature sensor (around \$2.00), you can keep track of the temperature and adjust the timing as required.

Overall strengths and weaknesses

- © Crystal oscillators are stable. Typically ±20-100 ppm = ±50 mins per year (up to ~1 minute / week).
- The great majority of 8051-based designs use a variant of the simple crystal-based oscillator circuit presented here: developers are therefore familiar with crystal-based designs.
- © Quartz crystals are available at reasonable cost for most common frequencies. The only additional components required are usually two small capacitors. Overall, crystal oscillators are more expensive than ceramic resonators.

BUT:

- **8** Crystal oscillators are susceptible to vibration.
- **8** The stability falls with age.

CERAMIC RESONATOR

Overall strengths and weaknesses

- © Cheaper than crystal oscillators.
- ② Physically robust: less easily damage by physical vibration (or dropped equipment, etc) than crystal oscillator.
- Many resonators contain in-built capacitors, and can be used without any external components.
- © Small size. About half the size of crystal oscillator.


BUT:

⊗ Comparatively low stability: not general appropriate for use where accurate timing (over an extended period) is required. Typically ±5000 ppm = ±2500 min per year (up to ~50 minutes / week).

Reset Hardware


- The process of starting any microcontroller is a non-trivial one.
- The underlying hardware is complex and a small, manufacturer-defined, 'reset routine' must be run to place this hardware into an appropriate state before it can begin executing the user program. Running this reset routine takes time, and requires that the microcontroller's oscillator is operating.
- An RC reset circuit is usually the simplest way of controlling the reset behaviour.

Example:

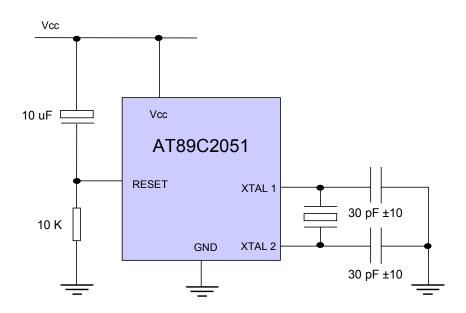

More robust reset circuits


Example:

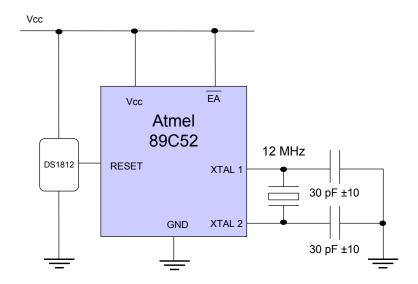

Driving DC Loads

- The port pins on a typical 8051 microcontroller can be set at values of either 0V or 5V (or, in a 3V system, 0V and 3V) under software control.
- Each pin can typically sink (or source) a current of around 10 mA.
- The total current we can source or sink per microcontroller (all 32 pins, where available) is typically 70 mA or less.

NAKED LED

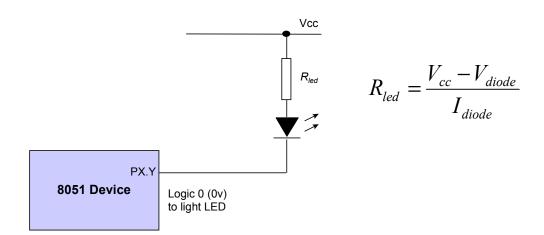


Connecting a <u>single LED</u> directly to a microcomputer port is usually possible.

- Supply voltage, $V_{cc} = 5V$,
- LED forward voltage, $V_{diode} = 2V$,
- Required diode current, $I_{diode} = 15$ mA (note that the data sheet for your chosen LED will provide this information).

This gives a required R value of 200_{Ω} .

Use of pull-up resistors

To adapt circuits for use on pins without internal pull-up resistors is straightforward: you simply need to add an external pull-up resistor:

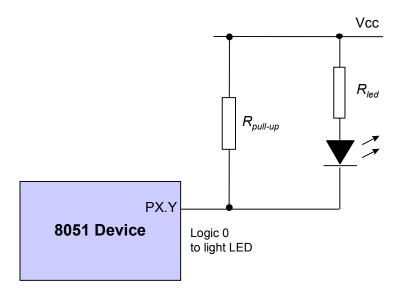


The value of the pull-up resistor should be between 1K and 10K. This requirement applies to all of the examples on this course.

NOTE:


This is usually only necessary on Port 0 (see Seminar 3 for further details).

Driving a low-power load without using a buffer

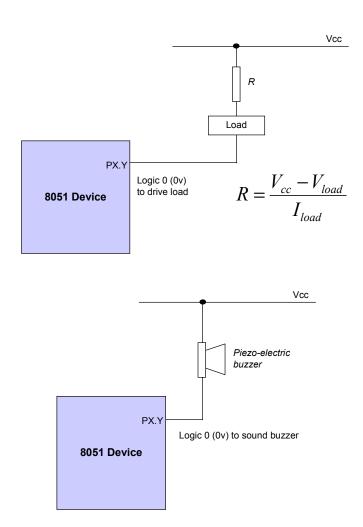


See "PATTERNS FOR TIME-TRIGGERED EMBEDDED SYSTEMS", p.115 (Naked Load)

Using an IC Buffer

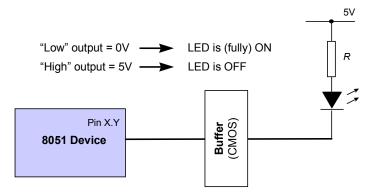

Using a CMOS buffer.

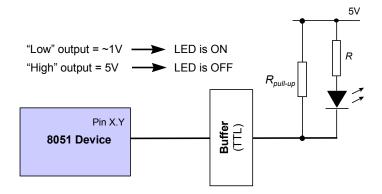

Using a TTL buffer.

It makes sense to use CMOS logic in your buffer designs wherever possible. You should also make it clear in the design documentation that CMOS logic is to be used.


See "PATTERNS FOR TIME-TRIGGERED EMBEDDED SYSTEMS", p.118 (<u>IC</u>
<u>Buffer</u>)

Example: Buffering three LEDs with a 74HC04

This example shows a 74HC04 buffering three LEDs. As discussed in Solution, we do not require pull-up resistors with the HC (CMOS) buffers

In this case, we assume that the LEDs are to be driven at 15 mA each, which is within the capabilities (50 mA total) of the buffer.


$$R_{led} = \frac{V_{cc} - V_{diode}}{I_{diode}} = \frac{5V - 2V}{0.015A} = 200\Omega$$

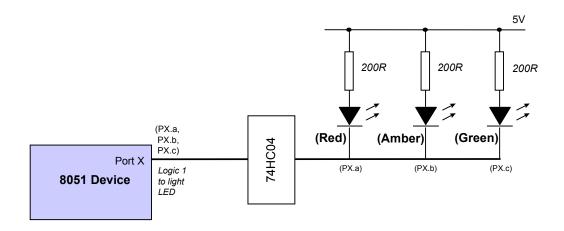


See "PATTERNS FOR TIME-TRIGGERED EMBEDDED SYSTEMS", p.123

What is a multi-segment LED?

Multiple LEDs are often arranged as multi-segment displays: combinations of eight segments and similar seven-segment displays (without a decimal point) are particularly common.



Such displays are arranged either as 'common cathode' or 'common anode' packages:

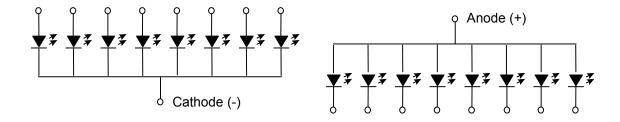


The required current per segment varies from about 2 mA (very small displays) to about 60 mA (very large displays, 100mm or more).

Driving a single digit


- In most cases, we require some form of buffer or driver IC between the port and the MS LED.
- For example, we can use UDN2585A.

Each of the (8) channels in this buffer can simultaneously source up to 120 mA of current (at up to 25V): this is enough, for example, for even very large LED displays.

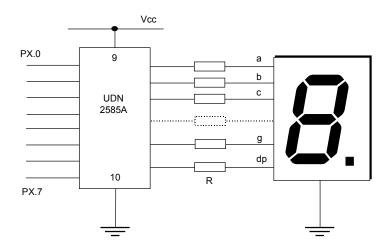


• Note that this is an inverting (current source) buffer. Logic 0 on the input line will light the corresponding LED segment.

Preparation for the next seminar

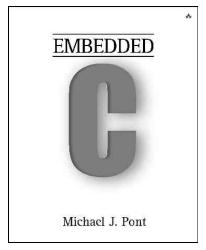


Please read Chapter 4 before the next seminar

Seminar 3: Reading Switches

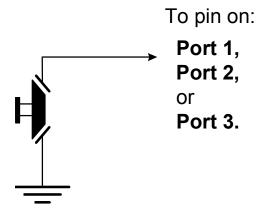

Introduction

- Embedded systems usually use switches as part of their user interface.
- This general rule applies from the most basic remote-control system for opening a garage door, right up to the most sophisticated aircraft autopilot system.
- Whatever the system you create, you need to be able to create a reliable switch interface.

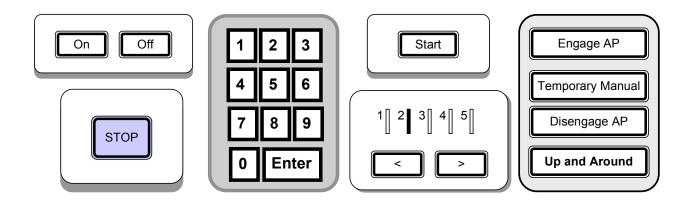

In this seminar, we consider how you can read inputs from mechanical switches in your embedded application.

Before considering switches themselves, we will consider the process of reading the state of port pins.


Review: Basic techniques for reading from port pins

We can send some data to Port 1 as follows:

```
sfr P1 = 0x90;  /* Usually in header file */
P1 = 0x0F;  /* Write 00001111 to Port 1 */
```

In exactly the same way, we can read from Port 1 as follows:

Example: Reading and writing bytes (review)

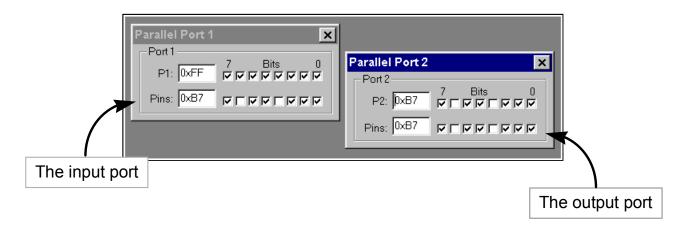

```
void main (void)
{
  unsigned char Port1_value;

/* Must set up P1 for reading */
P1 = 0xFF;

while(1)
  {
    /* Read the value of P1 */
    Port1_value = P1;

    /* Copy the value to P2 */
    P2 = Port1_value;
    }
}
```

Example: Reading and writing bits (simple version)

```
Bits1.C (v1.00)
#include <Reg52.H>
sbit Switch pin = P1^0;
sbit LED pin = P1^1;
void main (void)
 bit x;
 /* Set switch pin for reading */
 Switch pin = 1;
 while (1)
 }
--- END OF FILE ------
```

Experienced 'C' programmers please note these lines:

```
sbit Switch_pin = P1^0;
sbit LED pin = P1^1;
```

Here we gain access to two port pins through the use of an sbit variable declaration. The symbol '^' is used, but the XOR bitwise operator is NOT involved.

Example: Reading and writing bits (generic version)

The six bitwise operators:


Operator	Description
&	Bitwise AND
1	Bitwise OR (inclusive OR)
^	Bitwise XOR (exclusive OR)
<<	Left shift
>>	Right shift
~	One's complement

	A	В	A AND B	A OR B	A XOR B
_	0	0	0	0	0
	0	1	0	1	1
	1	0	0	1	1
	1	1	1	1	0

```
/* Desktop program - illustrating the use of bitwise operators */
#include <stdio.h>
void Display Byte(const unsigned char);
                        ......... */
int main()
   unsigned char x = 0xFE;
   unsigned int y = 0x0A0B;
   printf("%-35s","x");
   Display Byte(x);
   printf("%-35s","1s complement [~x]");
   Display Byte(~x);
   printf("%-35s","Bitwise AND [x & 0x0f]");
   Display Byte(x & 0x0f);
   printf("%-35s","Bitwise OR [x | 0x0f]");
   Display Byte(x | 0x0f);
   printf("%-35s","Bitwise XOR [x ^ 0x0f]");
   Display Byte(x ^ 0x0f);
   printf("%-35s","Left shift, 1 place [x <<= 1] ");</pre>
   Display Byte(x <<= 1);</pre>
   x = 0xfe; /* Return x to original value */
   printf("%-35s","Right shift, 4 places [x >>= 4]");
   Display Byte(x >>= 4);
   printf("\n\n");
   printf("%-35s", "Display MS byte of unsigned int y");
   Display Byte((unsigned char) (y >> 8));
   printf("%-35s", "Display LS byte of unsigned int y");
   Display Byte((unsigned char) (y & 0xFF));
   return 0;
   }
```

```
/*------
  Reading and writing individual port pins.
  NOTE: Both pins on the same port
_*----*/
#include <reg52.H>
void Write Bit P1(const unsigned char, const bit);
bit Read Bit P1(const unsigned char);
void main (void)
 bit x;
  while (1)
   Write_Bit_P1(1,x); /* Write to Port 1, Pin 1 */
   }
  }
/* ----- */
void Write Bit P1 (const unsigned char PIN, const bit VALUE)
  unsigned char p = 0x01; /* 00000001 */
  /* Left shift appropriate number of places */
  p \ll PIN;
  /* If we want 1 output at this pin */
  if (VALUE == 1)
    {
   return;
    }
  /* If we want 0 output at this pin */
  p = ~p; /* Complement */
  P1 &= p; /* Bitwise AND */
```

The need for pull-up resistors

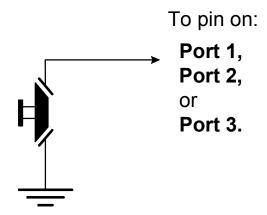

This hardware operates as follows:

- When the switch is open, it has no impact on the port pin. An internal resistor on the port 'pulls up' the pin to the supply voltage of the microcontroller (typically 5V). If we read the pin, we will see the value '1'.
- When the switch is closed (pressed), the pin voltage will be 0V. If we read the pin, we will see the value '0'.


The need for pull-up resistors

We briefly looked at pull-up resistors in Seminar 2.


With pull-ups:



Without pull-ups:

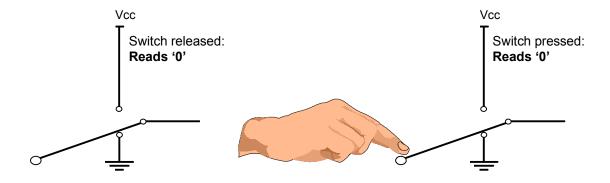


The need for pull-up resistors

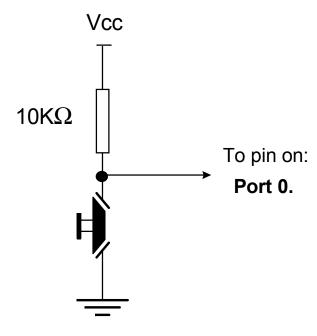

Dealing with switch bounce

In practice, all mechanical switch contacts *bounce* (that is, turn on and off, repeatedly, for a short period of time) after the switch is closed or opened.

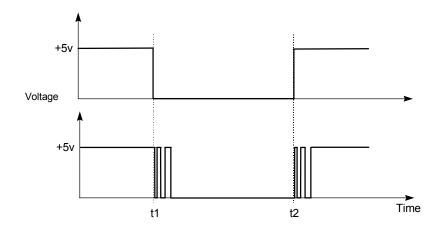

As far as the microcontroller is concerned, each 'bounce' is equivalent to one press and release of an 'ideal' switch. Without appropriate software design, this can give rise to a number of problems, not least:

- Rather than reading 'A' from a keypad, we may read 'AAAAA'
- Counting the number of times that a switch is pressed becomes extremely difficult.
- If a switch is depressed once, and then released some time later, the 'bounce' may make it appear as if the switch has been pressed again (at the time of release).

Creating some simple software to check for a valid switch input is straightforward:

- 1. We read the relevant port pin.
- 2. If we think we have detected a switch depression, we wait for 20 ms and then read the pin again.
- 3. If the second reading confirms the first reading, we assume the switch really has been depressed.

Note that the figure of '20 ms' will, of course, depend on the switch used.

Example: Reading switch inputs (basic code)

This switch-reading code is adequate if we want to perform operations such as:

- Drive a motor while a switch is pressed.
- Switch on a light while a switch is pressed.
- Activate a pump while a switch is pressed.


These operations could be implemented using an electrical switch, without using a microcontroller; however, use of a microcontroller may well be appropriate if we require more complex behaviour. For example:

- Drive a motor while a switch is pressed **Condition:** If the safety guard is not in place, don't turn the motor. Instead sound a buzzer for 2 seconds.
- Switch on a light while a switch is pressed **Condition:** To save power, ignore requests to turn on the light during daylight hours.
- Activate a pump while a switch is pressed
 Condition: If the main water reservoir is below 300 litres, do not start the main pump: instead, start the reserve pump and draw the water from the emergency tank.

```
Switch read.C (v1.00)
  A simple 'switch input' program for the 8051.
  - Reads (and debounces) switch input on Pin 1^0
  - If switch is pressed, changes Port 3 output
_*____*/
#include <Reg52.h>
/* Connect switch to this pin */
sbit Switch pin = P1^0;
/* Display switch status on this port */
#define Output port P3
/* Return values from Switch Get Input() */
#define SWITCH NOT PRESSED (bit) 0
#define SWITCH PRESSED (bit) 1
/* Function prototypes */
void SWITCH Init(void);
bit SWITCH Get Input(const unsigned char DEBOUNCE PERIOD);
void DISPLAY SWITCH STATUS Init(void);
void DISPLAY SWITCH STATUS Update(const bit);
void DELAY LOOP Wait(const unsigned int DELAY MS);
```

```
-----*-
 SWITCH Get Input()
 Reads and debounces a mechanical switch as follows:
 1. If switch is not pressed, return SWITCH NOT PRESSED.
 2. If switch is pressed, wait for the DEBOUNCE PERIOD (in ms).
    Then:
    a. If switch is no longer pressed, return SWITCH NOT PRESSED.
    b. If switch is still pressed, return SWITCH PRESSED
 See Switch Wait. H for details of return values.
-*----*/
bit SWITCH Get Input(const unsigned char DEBOUNCE PERIOD)
  bit Return value = SWITCH NOT PRESSED;
  if (Switch pin == 0)
     /* Switch is pressed */
     /* Debounce - just wait... */
     DELAY LOOP Wait (DEBOUNCE PERIOD);
     /* Check switch again */
     if (Switch pin == 0)
        Return value = SWITCH PRESSED;
     }
  /* Now return switch value */
  return Return value;
  }
```


```
/*------
 DISPLAY SWITCH STATUS Init()
 Initialization function for the DISPLAY SWITCH STATUS library.
_*----*/
void DISPLAY_SWITCH_STATUS_Init(void)
 Output port = 0xF0;
/*------
 DISPLAY SWITCH STATUS Update()
 Simple function to display data (SWITCH STATUS)
 on LEDs connected to port (Output Port)
-*----*/
void DISPLAY SWITCH STATUS Update (const bit SWITCH STATUS)
  if (SWITCH STATUS == SWITCH PRESSED)
    Output_port = 0x0F;
  else
    Output_port = 0xF0;
  }
```

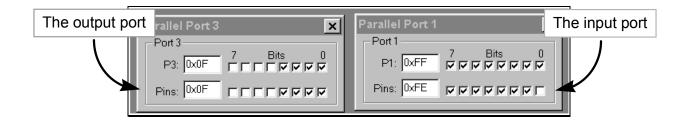

Example: Counting goats

- With the simple code in the previous example, problems can arise whenever a switch is pressed for a period longer than the debounce interval

One consequence is that this code is **not suitable** for applications where we need to count the number of times that a switch is pressed and then released.

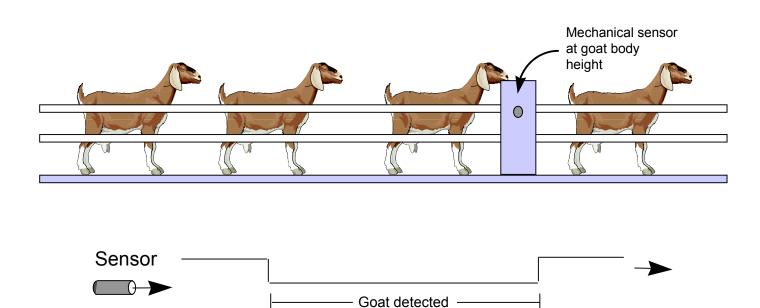


If we try to use the code in the previous example, the goat sensor will not allow us to count the number of goats but will instead provide an indication of the time taken for the goats to pass the sensor.

```
A 'goat counting' program for the 8051...
-*----*/
#include <Reg52.h>
/* Connect switch to this pin */
sbit Switch pin = P1^0;
/* Display count (binary) on this port */
#define Count port P3
/* Return values from Switch Get Input() */
#define SWITCH NOT PRESSED (bit) 0
#define SWITCH PRESSED (bit) 1
/* Function prototypes */
void SWITCH Init(void);
bit SWITCH Get Input(const unsigned char DEBOUNCE PERIOD);
void DISPLAY COUNT Init(void);
void DISPLAY COUNT Update(const unsigned char);
void DELAY LOOP Wait(const unsigned int DELAY MS);
/* ----- */
void main(void)
  unsigned char Switch presses = 0;
  /* Init functions */
  SWITCH Init();
  DISPLAY COUNT Init();
  while (1)
     if (SWITCH Get Input(30) == SWITCH PRESSED)
       Switch presses++;
    DISPLAY COUNT Update(Switch presses);
  }
```

```
/*-----/
void SWITCH Init(void)
  Switch pin = 1; /* Use this pin for input */
 SWITCH Get Input()
 Reads and debounces a mechanical switch as follows:
 1. If switch is not pressed, return SWITCH NOT PRESSED.
2. If switch is pressed, wait for the DEBOUNCE PERIOD (in ms).
    a. If switch is no longer pressed, return SWITCH NOT PRESSED.
    b. If switch is still pressed, wait (indefinitely) for
       switch to be released, *then* return SWITCH PRESSED
  See Switch Wait. H for details of return values.
-*----*/
bit SWITCH Get Input(const unsigned char DEBOUNCE PERIOD)
  bit Return value = SWITCH NOT PRESSED;
  if (Switch pin == 0)
     /* Switch is pressed */
     /* Debounce - just wait... */
     DELAY LOOP Wait (DEBOUNCE PERIOD);
     /* Check switch again */
     if (Switch pin == 0)
        /* Wait until the switch is released. */
        while (Switch pin == 0);
        Return value = SWITCH PRESSED;
        }
     }
  /* Now (finally) return switch value */
  return Return_value;
   }
```

```
DISPLAY COUNT Init()
 Initialisation function for the DISPLAY COUNT library.
-*----*/
void DISPLAY_COUNT_Init(void)
  Count port = 0 \times 00;
/*------
 DISPLAY COUNT Update()
 Simple function to display tByte data (COUNT)
 on LEDs connected to port (Count Port)
void DISPLAY COUNT Update(const unsigned char COUNT)
  Count port = COUNT;
DELAY LOOP Wait()
 Delay duration varies with parameter.
 Parameter is, *ROUGHLY*, the delay, in milliseconds,
 on 12MHz 8051 (12 osc cycles).
 You need to adjust the timing for your application!
void DELAY LOOP Wait(const unsigned int DELAY MS)
  unsigned int x, y;
  for (x = 0; x \le DELAY MS; x++)
    for (y = 0; y \le 120; y++);
  }
```

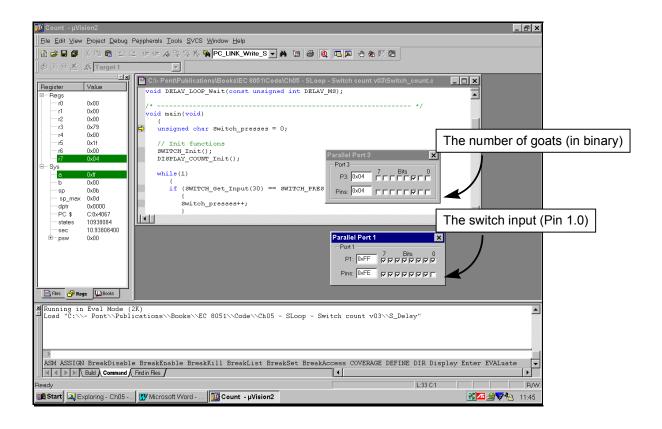

Conclusions


The switch interface code presented and discussed in this seminar has allowed us to do two things:

- To perform an activity while a switch is depressed;
- To respond to the fact that a user has pressed and then released a switch.

In both cases, we have illustrated how the switch may be 'debounced' in software.

Preparation for the next seminar


In the next seminar, we turn our attention to techniques that can help you re-use the code you develop in subsequent projects.

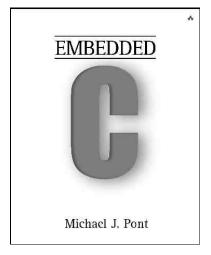

Please read <u>Chapter 5</u> before the next seminar

Seminar 4:

Adding Structure to Your Code

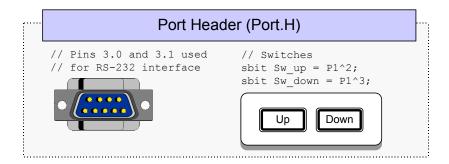

Introduction

We will do three things in this seminar:

- 1. We will describe how to use an object-oriented style of programming with C programs, allowing the creation of libraries of code that can be easily adapted for use in different embedded projects;
- 2. We will describe how to create and use a 'Project Header' file. This file encapsulates key aspects of the hardware environment, such as the type of processor to be used, the oscillator frequency and the number of oscillator cycles required to execute each instruction. This helps to document the system, and makes it easier to port the code to a different processor.
- 3. We will describe how to create and use a 'Port Header' file. This brings together all details of the port access from the whole system. Like the Project Header, this helps during porting and also serves as a means of documenting important system features.

We will use all three of these techniques in the code examples presented in subsequent seminars.

Object-Oriented Programming with C

Language generation	Example languages
-	Machine Code
First-Generation Language (1GL)	Assembly Language.
Second-Generation Languages (2GLs)	COBOL, FORTRAN
Third-Generation Languages (3GLs)	C, Pascal, Ada 83
Fourth-Generation Languages (4GLs)	C++, Java, Ada 95

Graham notes¹:

"[The phrase] 'object-oriented' has become almost synonymous with modernity, goodness and worth in information technology circles."

Jalote notes²:


"One main claimed advantage of using object orientation is that an OO model closely represents the problem domain, which makes it easier to produce and understand designs."

O-O languages are not readily available for small embedded systems, primarily because of the overheads that can result from the use of some of the features of these languages.

Graham, I. (1994) "Object-Oriented Methods," (2nd Ed.) Addison-Wesley. Page 1.

Jalote, P. (1997) "An Integrated Approach to Software Engineering", (2nd Ed.) Springer-Verlag. Page 273.

It is possible to create 'file-based-classes' in C without imposing a significant memory or CPU load.

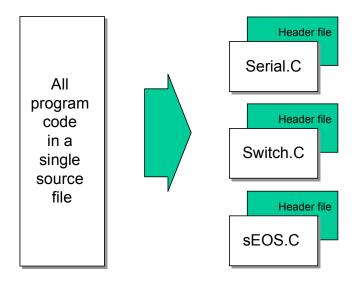


Example of "O-O C"

```
PC IO.H (v1.00)
 _____
  - see PC IO.C for details.
_*----*/
#ifndef PC IO H
#define PC IO H
/* ----- Public constants ----- */
/* Value returned by PC LINK Get Char From Buffer if no char is
  available in buffer */
#define PC LINK IO NO CHAR 127
/* ----- Public function prototypes ----- */
void PC LINK IO Write String To Buffer(const char* const);
void PC_LINK_IO_Write_Char_To_Buffer(const char);
char PC LINK IO Get Char From Buffer(void);
/* Must regularly call this function... */
void PC_LINK_IO_Update(void);
#endif
/*-----*-
 ---- END OF FILE ------
```

```
/*------
  PC IO.C (v1.00)
  [INCOMPLETE - STRUCTURE ONLY - see EC Chap 9 for complete library]
_*____*/
#include "Main.H"
#include "PC IO.H"
/* ----- Public variable definitions ----- */
tByte In read index G;
                 /* Data in buffer that has been read */
tByte In waiting index G; /* Data in buffer not yet read */
tByte Out written index G; /* Data in buffer that has been written */
tByte Out waiting index G; /* Data in buffer not yet written */
static void PC LINK IO Send Char(const char);
/* ----- Private constants ----- */
/* The receive buffer length */
#define RECV BUFFER LENGTH 8
/* The transmit buffer length */
#define TRAN BUFFER LENGTH 50
#define XON 0x11
#define XOFF 0x13
/* ----- Private variables ----- */
static tByte Recv buffer[RECV BUFFER LENGTH];
static tByte Tran buffer[TRAN BUFFER LENGTH];
/*----*/
void PC LINK IO Update(...)
  {
  . . .
  }
```

The Project Header (Main.H)

Project Header (Main.H)

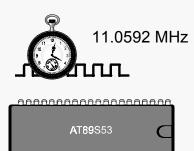

```
#include <AT89S53.H>
...
#define OSC_FREQ (11059200UL)
...
typedef unsigned char tByte;
...
```

```
/*-----*-
  Main.H (v1.00)
-*----*/
#ifndef MAIN H
#define MAIN H
/*-----
  WILL NEED TO EDIT THIS SECTION FOR EVERY PROJECT
/* Must include the appropriate microcontroller header file here */
#include <reg52.h>
/* Oscillator / resonator frequency (in Hz) e.g. (11059200UL) */
#define OSC FREQ (12000000UL)
/* Number of oscillations per instruction (12, etc)
  12 - Original 8051 / 8052 and numerous modern versions
   6 - Various Infineon and Philips devices, etc.
   4 - Dallas 320, 520 etc.
   1 - Dallas 420, etc. */
#define OSC PER INST (12)
  SHOULD NOT NEED TO EDIT THE SECTIONS BELOW
/* Typedefs (see Chap 5)
typedef unsigned char tByte;
typedef unsigned int tWord;
typedef unsigned long tLong;
/* Interrupts (see Chap 7) */
#define INTERRUPT Timer 0 Overflow 1
#define INTERRUPT Timer 1 Overflow 3
#define INTERRUPT Timer 2 Overflow 5
#endif
--- END OF FILE ------
_*____*/
```

The device header

```
REG515C.H
 Header file for the Infineon C515C
  Copyright (c) 1995-1999 Keil Elektronik GmbH All rights reserved.
-----*/
/* A/D Converter */
sfr 	 ADCON0 = 0xD8;
/* Interrupt System */
     IEN0 = 0xA8;
sfr
. . .
/* Ports */
     P0 = 0x80;
sfr
sfr P1 = 0x90;
sfr P2 = 0xA0;
sfr P3 = 0xB0;
sfr P4
           = 0xE8;
sfr P5 = 0xF8;
sfr P6 = 0xDB;
sfr P7 = 0xFA;
/* Serial Channel
                   */
    SCON = 0x98;
sfr
/*
   Timer0 / Timer1
                     */
     TCON = 0x88;
sfr
. . .
/* CAP/COM Unit / Timer2 */
sfr CCEN = 0xC1;
. . .
```

Oscillator frequency and oscillations per instruction

```
/* Oscillator / resonator frequency (in Hz) e.g. (11059200UL) */
#define OSC_FREQ (1200000UL)

/* Number of oscillations per instruction (12, etc)
    12 - Original 8051 / 8052 and numerous modern versions
    6 - Various Infineon and Philips devices, etc.
    4 - Dallas 320, 520 etc.
    1 - Dallas 420, etc. */
#define OSC PER INST (12)
```

We demonstrate how to use this information:

- For creating delays (Embedded C, Chapter 6),
- For controlling timing in an operating system (Chapter 7), and,
- For controlling the baud rate in a serial interface (Chapter 9).

Common data types

```
typedef unsigned char tByte;
typedef unsigned int tWord;
typedef unsigned long tLong;
```

In C, the typedef keyword allows us to provide aliases for data types: we can then use these aliases in place of the original types. Thus, in the projects you will see code like this:

```
tWord Temperature;

Rather than:
unsigned int Temperature;
```

The main reason for using these typedef statements is to simplify - and promote - the use of unsigned data types.

- The 8051 does not support signed arithmetic and extra code is required to manipulate signed data: this reduces your program speed and increases the program size.
- Use of bitwise operators generally makes sense only with unsigned data types: use of 'typedef' variables reduces the likelihood that programmers will inadvertently apply these operators to signed data.

Finally, as in desktop programming, use of the typedef keyword in this way can make it easier to adapt your code for use on a different processor.

Interrupts

As we noted in "Embedded C" Chapter 2, interrupts are a key component of most embedded systems.

The following lines in the Project Header are intended to make it easier for you to use (timer-based) interrupts in your projects:

```
#define INTERRUPT_Timer_0_Overflow 1
#define INTERRUPT_Timer_1_Overflow 3
#define INTERRUPT_Timer_2_Overflow 5
```

We discuss how to make use of this facility in Embedded C, Ch. 7.

Summary: Why use the Project Header?


Use of PROJECT HEADER can help to make your code more readable, not least because anyone using your projects knows where to find key information, such as the model of microcontroller and the oscillator frequency required to execute the software.

The use of a project header can help to make your code more easily portable, by placing some of the key microcontroller-dependent data in one place: if you change the processor or the oscillator used then in many cases - you will need to make changes only to the Project Header.

The Port Header (Port.H)

Port Header (Port.H)

// Pins 3.0 and 3.1 used
// for RS-232 interface



// Switches
sbit Sw_up = P1^2;
sbit Sw_down = P1^3;



The Port Header file is simple to understand and easy to apply.

Consider, for example, that we have three C files in a project (A, B, C), each of which require access to one or more port pins, or to a complete port.

File A may include the following:

```
/* File A */
sbit Pin_A = P3^2;
...
File B may include the following:
/* File B */
#define Port_B = P0;
...
File C may include the following:
/* File C */
```

```
/* File C */
sbit Pin_C = P2^7;
```

In this version of the code, all of the port access requirements are spread over multiple files.

There are many advantages obtained by integrating all port access in a single Port. H header file:

```
/* ---- Port.H ---- */
/* Port access for File B */
#define Port_B = P0;

/* Port access for File A */
sbit Pin_A = P3^2;

/* Port access for File C */
sbit Pin_C = P2^7;
...
```

```
/*------
 Port. H (v1.01)
 'Port Header' (see Chap 5) for project DATA ACQ (see Chap 9)
-*----*/
#ifndef _PORT_H
#define _PORT_H
#include "Main.H"
/* ----- Menu A.C ----- */
/* Uses whole of Port 1 and Port 2 for data acquisition */
#define Data Port1 P1
#define Data Port2 P2
/* ----- PC_IO.C ------ */
/* Pins 3.0 and 3.1 used for RS-232 interface */
#endif
--- END OF FILE -----
-*----*/
```

Re-structuring a "Hello World" example

```
Main.H (v1.00)
-*----*/
#ifndef MAIN H
#define MAIN H
/*----
  WILL NEED TO EDIT THIS SECTION FOR EVERY PROJECT
 ----- */
/* Must include the appropriate microcontroller header file here */
#include <reg52.h>
/* Oscillator / resonator frequency (in Hz) e.g. (11059200UL) */
#define OSC FREQ (1200000UL)
/* Number of oscillations per instruction (12, etc)
  12 - Original 8051 / 8052 and numerous modern versions
  6 - Various Infineon and Philips devices, etc.
  4 - Dallas 320, 520 etc.
  1 - Dallas 420, etc. */
#define OSC PER INST (12)
/* -----
  SHOULD NOT NEED TO EDIT THE SECTIONS BELOW
 ----- */
/* Typedefs (see Chap 5) */
typedef unsigned char tByte;
typedef unsigned int tWord;
typedef unsigned long tLong;
/* Interrupts (see Chap 7) */
#define INTERRUPT Timer 0 Overflow 1
#define INTERRUPT Timer 1 Overflow 3
#define INTERRUPT Timer 2 Overflow 5
#endif
```

/**-
Port.H (v1.00)
'Port Header' for project HELLO2 (see Chap 5)
#ifndef _PORT_H #define _PORT_H
/* LED_Flash.C */
<pre>/* Connect LED to this pin, via appropriate resistor */ sbit LED_pin = P1^5;</pre>
#endif
/** END OF FILE*/

```
/*------
  Main.C (v1.00)
  A "Hello Embedded World" test program for 8051.
  (Re-structured version - multiple source files)
#include "Main.H"
#include "Port.H"
#include "Delay Loop.h"
#include "LED Flash.h"
void main(void)
  LED FLASH Init();
  while (1)
    /* Change the LED state (OFF to ON, or vice versa) */
    LED_FLASH_Change_State();
    /* Delay for *approx* 1000 ms */
    DELAY LOOP Wait(1000);
    }
  }
/*-----*-
 --- END OF FILE ------
```

/*
LED_flash.H (v1.00)
- See LED_flash.C for details.
#ifndef _LED_FLASH_H #define _LED_FLASH_H
/* Public function prototypes */
<pre>void LED_FLASH_Init(void); void LED_FLASH_Change_State(void);</pre>
#endif
/** END OF FILE*/

```
/*------
 LED flash.C (v1.00)
 _____
 Simple 'Flash LED' test function.
-*----*/
#include "Main.H"
#include "Port.H"
#include "LED_flash.H"
/* ----- Private variable definitions ------ */
static bit LED_state_G;
/*-----*-
 LED FLASH Init()
 Prepare for LED_Change_State() function - see below.
-*----*/
void LED FLASH Init(void)
 LED_state_G = 0;
```

```
/*------
 LED FLASH Change State()
 Changes the state of an LED (or pulses a buzzer, etc) on a
 specified port pin.
 Must call at twice the required flash rate: thus, for 1 Hz
 flash (on for 0.5 seconds, off for 0.5 seconds) must call
 every 0.5 seconds.
-*----*/
void LED FLASH Change State (void)
  /* Change the LED from OFF to ON (or vice versa) */
  if (LED_state_G == 1)
    LED state G = 0;
    LED pin = 0;
  else
    LED state_G = 1;
    LED_pin = 1;
    }
  }
/*-----*-
 --- END OF FILE -----
```

/**-
Delay_Loop.H (v1.00)
<pre>#ifndef _DELAY_LOOP_H #define _DELAY_LOOP_H</pre>
<pre>/* Public function prototype */ void DELAY_LOOP_Wait(const tWord DELAY_MS);</pre>
#endif
/** END OF FILE*/

```
/*------
 Delay Loop.C (v1.00)
 _____
 Create a simple software delay using a loop.
#include "Main.H"
#include "Port.H"
#include "Delay_loop.h"
DELAY LOOP Wait()
 Delay duration varies with parameter.
 Parameter is, *ROUGHLY*, the delay, in milliseconds,
 on 12MHz 8051 (12 osc cycles).
 You need to adjust the timing for your application!
_*----*/
void DELAY_LOOP_Wait(const tWord DELAY_MS)
 tWord x, y;
 for (x = 0; x \le DELAY_MS; x++)
   for (y = 0; y \le 120; y++);
 }
/*------
 --- END OF FILE ------
```

Example: Re-structuring the Goat-Counting Example

```
Main.H (v1.00)
-*----*/
#ifndef MAIN H
#define MAIN H
/*----
  WILL NEED TO EDIT THIS SECTION FOR EVERY PROJECT
 ----- */
/* Must include the appropriate microcontroller header file here */
#include <reg52.h>
/* Oscillator / resonator frequency (in Hz) e.g. (11059200UL) */
#define OSC FREQ (1200000UL)
/* Number of oscillations per instruction (12, etc)
  12 - Original 8051 / 8052 and numerous modern versions
  6 - Various Infineon and Philips devices, etc.
  4 - Dallas 320, 520 etc.
  1 - Dallas 420, etc. */
#define OSC PER INST (12)
/* -----
  SHOULD NOT NEED TO EDIT THE SECTIONS BELOW
 ----- */
/* Typedefs (see Chap 5) */
typedef unsigned char tByte;
typedef unsigned int tWord;
typedef unsigned long tLong;
/* Interrupts (see Chap 7) */
#define INTERRUPT Timer 0 Overflow 1
#define INTERRUPT Timer 1 Overflow 3
#define INTERRUPT Timer 2 Overflow 5
#endif
```

/**-
Port.H (v1.00)
'Port Header' for project GOATS2 (see Chap 5)
-**/
<pre>#ifndef _PORT_H #define _PORT_H</pre>
<pre>/* Switch_Wait.C */ /* Connect switch to this pin */ sbit Switch_pin = P1^0;</pre>
<pre>/* Display_count.C */ /* Display count (binary) on this port */ #define Count_port P3</pre>
#endif
/** END OF FILE*/

```
/*------
  Main.C (v1.00)
  A 'switch count' program for the 8051.
#include "Main.H"
#include "Port.H"
#include "Switch wait.H"
#include "Display count.H"
/* ----- */
void main(void)
  tByte Switch presses = 0;
  /* Init functions */
  SWITCH Init();
  DISPLAY COUNT Init();
  while (1)
    if (SWITCH Get Input(30) == SWITCH PRESSED)
      Switch_presses++;
    DISPLAY COUNT Update(Switch presses);
    }
  }
 ---- END OF FILE ------
```

/**-
Switch_wait.H (v1.00)
- See Switch_wait.C for details.
-**/
<pre>#ifndef _SWITCH_WAIT_H #define _SWITCH_WAIT_H</pre>
<pre>/* Public constants */ /* Return values from Switch_Get_Input() */ #define SWITCH_NOT_PRESSED (bit) 0 #define SWITCH_PRESSED (bit) 1</pre>
<pre>/* Public function prototype */ void SWITCH_Init(void); bit SWITCH_Get_Input(const tByte DEBOUNCE_PERIOD);</pre>
#endif
/** END OF FILE*/

```
/*------
 Switch Wait.C (v1.00)
 Simple library for debouncing a switch input.
 NOTE: Duration of function is highly variable!
_*____*/
#include "Main.H"
#include "Port.H"
#include "Switch_wait.h"
#include "Delay loop.h"
SWITCH Init()
 Initialisation function for the switch library.
-*----*/
void SWITCH Init(void)
 Switch pin = 1; /* Use this pin for input */
```

```
SWITCH Get Input()
 Reads and debounces a mechanical switch as follows:
 1. If switch is not pressed, return SWITCH NOT PRESSED.
 2. If switch is pressed, wait for DEBOUNCE PERIOD (in ms).
    a. If switch is not pressed, return SWITCH NOT PRESSED.
    b. If switch is pressed, wait (indefinitely) for
      switch to be released, then return SWITCH PRESSED
 See Switch Wait. H for details of return values.
_*----*/
bit SWITCH Get Input(const tByte DEBOUNCE PERIOD)
  bit Return value = SWITCH NOT PRESSED;
  if (Switch pin == 0)
     /* Switch is pressed */
     /* Debounce - just wait... */
    DELAY LOOP Wait (DEBOUNCE PERIOD);
     /* Check switch again */
     if (Switch pin == 0)
       /* Wait until the switch is released. */
       while (Switch pin == 0);
       Return value = SWITCH PRESSED;
     }
  /* Now (finally) return switch value */
  return Return value;
  }
/*-----*-
 ---- END OF FILE ------
```


/*
Display_count.H (v1.00)
- See Display_count.C for details.
<pre>#ifndef _DISPLAY_COUNT_H #define _DISPLAY_COUNT_H</pre>
<pre>/* Public function prototypes */ void DISPLAY_COUNT_Init(void); void DISPLAY_COUNT_Update(const tByte);</pre>
#endif
/** END OF FILE***/

```
/*------
 Display count.C (v1.00)
 _____
 Display an unsigned char on a port.
-*-----*/
#include "Main.H"
#include "Port.H"
#include "Display_Count.H"
/*------
 DISPLAY COUNT Init()
 Initialisation function for the DISPLAY COUNT library.
_*____*/
void DISPLAY COUNT Init(void)
 Count port = 0x00;
 DISPLAY COUNT Update()
 Simple function to display tByte data (COUNT)
 on LEDs connected to port (Count Port)
-*----*/
void DISPLAY COUNT Update(const tByte COUNT)
 Count port = COUNT;
/*-----*-
 --- END OF FILE ------
```

/**-
Delay_Loop.H (v1.00)
<pre>#ifndef _DELAY_LOOP_H #define _DELAY_LOOP_H</pre>
<pre>/* Public function prototype */ void DELAY_LOOP_Wait(const tWord DELAY_MS);</pre>
#endif
/** END OF FILE*/

```
/*------
 Delay Loop.C (v1.00)
 _____
 Create a simple software delay using a loop.
#include "Main.H"
#include "Port.H"
#include "Delay_loop.h"
DELAY LOOP Wait()
 Delay duration varies with parameter.
 Parameter is, *ROUGHLY*, the delay, in milliseconds,
 on 12MHz 8051 (12 osc cycles).
 You need to adjust the timing for your application!
_*----*/
void DELAY_LOOP_Wait(const tWord DELAY_MS)
 tWord x, y;
 for (x = 0; x \le DELAY_MS; x++)
   for (y = 0; y \le 120; y++);
 }
/*------
 --- END OF FILE ------
```


Preparation for the next seminar

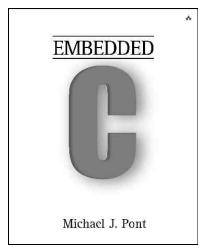

Please read <u>Chapter 6</u> before the next seminar

Seminar 5:


Meeting Real-Time Constraints

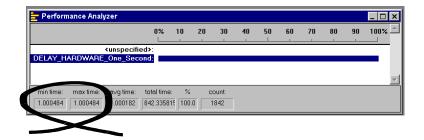

Introduction

In this seminar, we begin to consider the issues involved in the accurate measurement of time.

These issues are important because many embedded systems must satisfy real-time constraints.

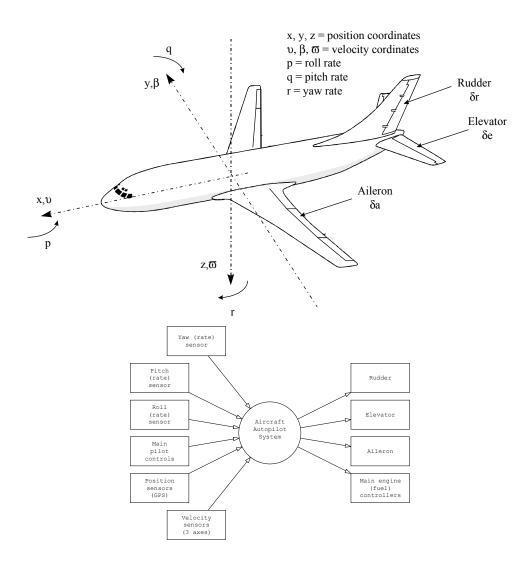

The first problem is that we wait for a 'debounce' period in order to confirm that the switch has been pressed. Because this delay is implemented using a software loop it may not be very precisely timed.

The second problem is even more serious in a system with real-time characteristics: we cause the system to wait - indefinitely - for the user to release the switch.

We'll see how to deal with both of these problems in this seminar

Creating "hardware delays"

All members of the 8051 family have at least two 16-bit timer / counters, known as Timer 0 and Timer 1.

These timers can be used to generate accurate delays.

```
/* Configure Timer 0 as a 16-bit timer */
TMOD &= 0xF0; /* Clear all T0 bits (T1 left unchanged) */
TMOD |= 0x01; /* Set required T0 bits (T1 left unchanged) */
ET0 = 0; /* No interrupts */

/* Values for 50 ms delay */
TH0 = 0x3C; /* Timer 0 initial value (High Byte) */
TL0 = 0xB0; /* Timer 0 initial value (Low Byte) */

TF0 = 0; /* Clear overflow flag */
TR0 = 1; /* Start Timer 0 */

while (TF0 == 0); /* Loop until Timer 0 overflows (TF0 == 1) */
TR0 = 0; /* Stop Timer 0 */
```

Now let's see how this works...

The TCON SFR

Bit	7	6	5	4	3	2	1	0
	(msb)							(lsb)
NAME	TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

TF1 Timer 1 overflow flag

Set by hardware on Timer 1 overflow.

(Cleared by hardware if processor vectors to interrupt routine.)

TR1 Timer 1 run control bit

Set / cleared by software to turn Timer 1 either 'ON' or 'OFF'.

TF0 Timer 0 overflow flag

Set by hardware on Timer 0 overflow.

(Cleared by hardware if processor vectors to interrupt routine.)

TRO Timer 0 run control bit

Set / cleared by software to turn Timer 0 either 'ON' or 'OFF'.

Note that the overflow of the timers can be used to generate an interrupt. We will not make use of this facility in the Hardware Delay code.

To disable the generation of interrupts, we can use the C statements:

```
ET0 = 0; /* No interrupts (Timer 0) */
ET1 = 0; /* No interrupts (Timer 1) */
```

The TMOD SFR

Bit	7	6	5	4	3	2	1	0
NAME	Gate	C/\overline{T}	M1	M0	Gate	C/\overline{T}	M1	M0

Timer 1 Timer 0

Mode 1 (M1 = 0; M0 = 1)

16-bit timer/counter (with manual reload)

Mode 2 (M1 = 1; M0 = 0)

8-bit timer/counter (with 8-bit auto-reload)

GATE Gating control

When set, timer/counter "x" is enabled only while "INT x" pin is high and "TRx" control bit is set. When cleared timer "x" is enabled whenever "TRx" control bit is set.

C/\overline{T} Counter or timer select bit

Set for counter operation (input from "Tx" input pin). Cleared for timer operation (input from internal system clock).

Two further registers


Before we can see how this hardware can be used to create delays, you need to be aware that there are an additional two registers associated with each timer: these are known as TL0 and TH0, and TL1 and TH1.

Example: Generating a precise 50 ms delay

```
Hardware Delay 50ms.C (v1.00)
  A test program for hardware-based delays.
_*____*/
#include <reg52.h>
sbit LED pin = P1^5;
bit LED state G;
void LED FLASH Init(void);
void LED FLASH Change State(void);
void DELAY HARDWARE One Second(void);
void DELAY HARDWARE 50ms (void);
void main(void)
  LED FLASH Init();
  while (1)
     /* Change the LED state (OFF to ON, or vice versa) */
    LED FLASH Change State();
    /* Delay for approx 1000 ms */
    DELAY HARDWARE One Second();
  }
```

```
/*------
 LED FLASH Init()
 Prepare for LED Change State() function - see below.
_*----*/
void LED FLASH Init(void)
  LED state G = 0;
LED FLASH Change State()
 Changes the state of an LED (or pulses a buzzer, etc) on a
 specified port pin.
 Must call at twice the required flash rate: thus, for 1 Hz
 flash (on for 0.5 seconds, off for 0.5 seconds) must call
 every 0.5 seconds.
-*----*/
void LED FLASH Change State(void)
  /* Change the LED from OFF to ON (or vice versa) */
  if (LED state G == 1)
    LED state G = 0;
    LED pin = 0;
    }
  else
    LED state G = 1;
    LED_pin = 1;
  }
```

```
/*-----*-
 DELAY HARDWARE One Second()
 Hardware delay of 1000 ms.
 *** Assumes 12MHz 8051 (12 osc cycles) ***
 *-----*/
void DELAY HARDWARE One Second(void)
  unsigned char d;
  /* Call DELAY HARDWARE 50ms() twenty times */
  for (d = 0; d < 20; d++)
    DELAY HARDWARE 50ms();
  }
/*-----*-
 DELAY HARDWARE 50ms()
 *** Assumes 12MHz 8051 (12 osc cycles) ***
_*____*/
void DELAY HARDWARE 50ms(void)
  /* Configure Timer 0 as a 16-bit timer */
  TMOD &= 0xF0; /* Clear all TO bits (T1 left unchanged) */
  TMOD |= 0x01; /* Set required T0 bits (T1 left unchanged) */
  ET0 = 0;
         /* No interrupts */
  /* Values for 50 ms delay */
  THO = 0x3C; /* Timer O initial value (High Byte) */
  TLO = 0xBO; /* Timer O initial value (Low Byte) */
  TF0 = 0;
                /* Clear overflow flag */
                /* Start timer 0 */
  TR0 = 1:
  while (TF0 == 0); /* Loop until Timer 0 overflows (TF0 == 1) */
  TR0 = 0;
          /* Stop Timer 0 */
  }
```

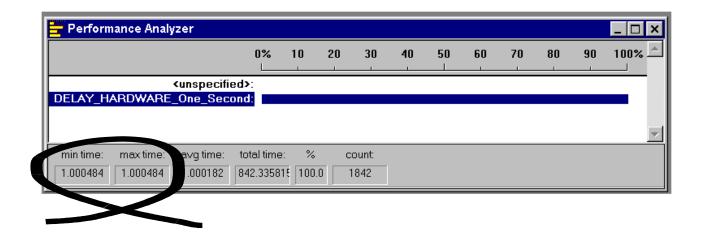

In this case, we assume - again - the standard 12 MHz / 12 oscillations-per-instruction microcontroller environment.

We require a 50 ms delay, so the timer requires the following number of increments before it overflows:

$$\frac{50ms}{1000ms} \times 1000000 = 50000$$
 increments.

The timer overflows when it is incremented from its maximum count of 65535.


Thus, the initial value we need to load to produce a 50 ms delay is:

$$65536 - 50000 = 15536$$
 (decimal) = $0x3CB0$

Example: Creating a portable hardware delay

```
Main.C (v1.00)
 Flashing LED with hardware-based delay (T0).
-*----*/
#include "Main.H"
#include "Port.H"
#include "Delay T0.h"
#include "LED Flash.h"
void main(void)
 LED FLASH Init();
 while (1)
   /* Change the LED state (OFF to ON, or vice versa) */
   LED FLASH Change State();
   /* Delay for *approx* 1000 ms */
   DELAY TO Wait(1000);
  }
/*------
 --- END OF FILE -----
```

```
/* Timer preload values for use in simple (hardware) delays
  - Timers are 16-bit, manual reload ('one shot').
  NOTE: These values are portable but timings are *approximate*
        and *must* be checked by hand if accurate timing is required.
  Define Timer 0 / Timer 1 reload values for ~1 msec delay
  NOTE: Adjustment made to allow for function call overheard etc. */
#define PRELOAD01 (65536 - (tWord)(OSC FREQ / (OSC PER INST * 1020)))
#define PRELOAD01H (PRELOAD01 / 256)
#define PRELOAD01L (PRELOAD01 % 256)
/*----*/
void DELAY T0 Wait(const tword N)
  {
  tWord ms;
  /* Configure Timer 0 as a 16-bit timer */
  TMOD &= 0xF0; /* Clear all TO bits (T1 left unchanged) */
  TMOD |= 0x01; /* Set required T0 bits (T1 left unchanged) */
  ET0 = 0; /* No interrupts */
  /* Delay value is *approximately* 1 ms per loop */
  for (ms = 0; ms < N; ms++)
     {
     TH0 = PRELOAD01H;
     TL0 = PRELOAD01L;
     TF0 = 0;
                    /* Clear overflow flag */
     TR0 = 1;
                     /* Start timer 0 */
     while (TF0 == 0); /* Loop until Timer 0 overflows (TF0 == 1) */
     TR0 = 0; /* Stop Timer 0 */
     }
  }
```

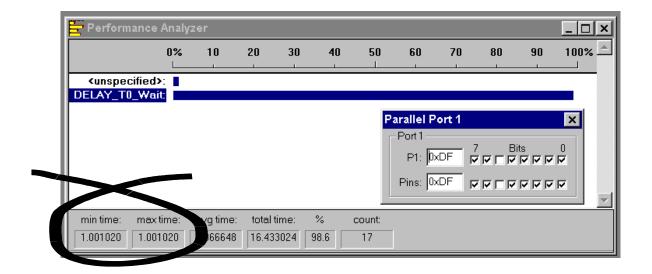

The need for 'timeout' mechanisms - example

The Philips 8Xc552 is an Extended 8051 device with a number of onchip peripherals, including an 8-channel, 10-bit ADC. Philips provide an application note (AN93017) that describes how to use this feature of the microcontroller.

This application note includes the following code:

```
/* Wait until AD conversion finishes (checking ADCI) */
while ((ADCON & ADCI) == 0);
```

Such code is potentially unreliable, because there are circumstances under which our application may 'hang'. This might occur for one or more of the following reasons:

- If the ADC has been incorrectly initialised, we cannot be sure that a data conversion will be carried out.
- If the ADC has been subjected to an excessive input voltage, then it may not operate at all.
- If the variable ADCON or ADCI were not correctly initialised, they may not operate as required.

The Philips example is not intended to illustrate 'production' code. Unfortunately, however, code in this form is common in embedded applications.

Two possible solutions: **Loop timeouts** and **hardware timeouts**.


Creating loop timeouts

```
Basis of loop timeout:
tWord Timeout loop = 0;
while (++Timeout loop);
Original ADC code:
/* Wait until AD conversion finishes (checking ADCI) */
while ((ADCON & ADCI) == 0);
Modified version, with a loop timeout:
tWord Timeout loop = 0;
/* Take sample from ADC
   Wait until conversion finishes (checking ADCI)
   - simple loop timeout */
while (((ADCON & ADCI) == 0) && (++Timeout loop != 0));
Note that this alternative implementation is also useful:
while (((ADCON & ADCI) == 0) && (Timeout loop != 0))
   Timeout loop++; /* Disable for use in hardware simulator */
```

/**-
TimeoutL.H (v1.00)
Simple software (loop) timeout delays for the 8051 family. * THESE VALUES ARE NOT PRECISE - YOU MUST ADAPT TO YOUR SYSTEM *
-**/
<pre>#ifndef _TIMEOUTL_H #define _TIMEOUTL_H</pre>
/* Public constants */
<pre>/* Vary this value to change the loop duration THESE ARE APPROX VALUES FOR VARIOUS TIMEOUT DELAYS ON 8051, 12 MHz, 12 Osc / cycle</pre>
*** MUST BE FINE TUNED FOR YOUR APPLICATION ***
*** Timings vary with compiler optimisation settings *** */
<pre>/* tWord */ #define LOOP_TIMEOUT_INIT_001ms 65435 #define LOOP_TIMEOUT_INIT_010ms 64535 #define LOOP_TIMEOUT_INIT_500ms 14535 /* tLong */ #define LOOP_TIMEOUT_INIT_10000ms 4294795000UL</pre>
#endif
/** END OF FILE*/

Example: Testing loop timeouts

```
Main.C (v1.00)
-*----*/
#include <reg52.H>
#include "TimeoutL.H"
/* Typedefs (see Chap 5) */
typedef unsigned char tByte;
typedef unsigned int tWord;
typedef unsigned long tLong;
/* Function prototypes */
void Test Timeout(void);
/*-----/
void main(void)
 while(1)
   Test Timeout();
  }
/*----*/
void Test Timeout(void)
 tLong Timeout loop = LOOP TIMEOUT INIT 10000ms;
 /* Simple loop timeout... */
 while (++Timeout loop != 0);
```

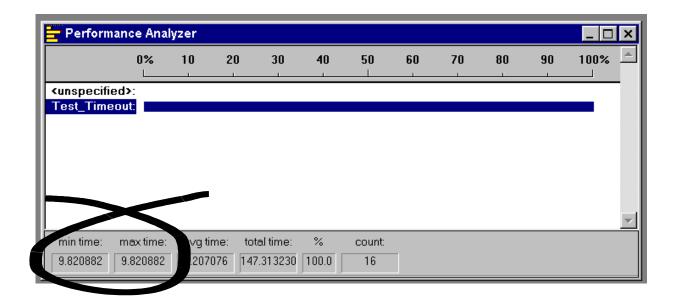

Example: A more reliable switch interface

```
bit SWITCH Get Input(const tByte DEBOUNCE PERIOD)
   {
   tByte Return value = SWITCH NOT PRESSED;
   tLong Timeout loop = LOOP TIMEOUT INIT 10000ms;
   if (Switch pin == 0)
      /* Switch is pressed */
      /* Debounce - just wait... */
      DELAY TO Wait (DEBOUNCE PERIOD);
      /* Check switch again */
      if (Switch pin == 0)
         /* Wait until the switch is released.
            (WITH TIMEOUT LOOP - 10 seconds) */
         while ((Switch pin == 0) && (++Timeout loop != 0));
         /* Check for timeout */
         if (Timeout loop == 0)
            {
            Return value = SWITCH NOT PRESSED;
         else
            Return value = SWITCH PRESSED;
         }
      }
   /* Now (finally) return switch value */
   return Return value;
   }
```

Creating hardware timeouts

```
/* Configure Timer 0 as a 16-bit timer */
TMOD &= 0xF0; /* Clear all T0 bits (T1 left unchanged) */
TMOD |= 0x01; /* Set required T0 bits (T1 left unchanged) */
ET0 = 0; /* No interrupts */

/* Simple timeout feature - approx 10 ms */
TH0 = PRELOAD_10ms_H; /* See Timeout.H for PRELOAD details */
TL0 = PRELOAD_10ms_L;
TF0 = 0; /* Clear flag */
TR0 = 1; /* Start timer */
while (((ADCON & ADCI) == 0) && !TF0);
```


```
/*------
  TimeoutH.H (v1.00)
-*----*/
#ifndef TIMEOUTH H
#define TIMEOUTH H
/* ----- Public constants ----- */
/* Timer T values for use in simple (hardware) timeouts */
  - Timers are 16-bit, manual reload ('one shot'). */
  NOTE: These macros are portable but timings are *approximate*
        and *must* be checked by hand for accurate timing. */
/* Define initial Timer 0 / Timer 1 values for ~50 µs delay */
#define T 50micros (65536 - (tWord) ((OSC FREQ / 26000) / (OSC PER INST)))
#define T 50micros H (T 50micros / 256)
#define T 50micros L (T 50micros % 256)
. . .
/* Define initial Timer 0 / Timer 1 values for ~10 msec delay */
#define T 10ms (65536 - (tWord)(OSC FREQ / (OSC_PER_INST * 100)))
#define T 10ms H (T 10ms / 256)
#define T 10ms L (T 10ms % 256)
/* Define initial Timer 0 / Timer 1 values for ~15 msec delay */
#define T 15ms (65536 - (tWord) (OSC FREQ / (OSC PER INST * 67)))
#define T 15ms H (T 15ms / 256)
#define T 15ms L (T 15ms % 256)
/* Define initial Timer 0 / Timer 1 values for ~20 msec delay */
#define T_20ms (65536 - (tWord)(OSC_FREQ / (OSC_PER_INST * 50)))
#define T 20ms H (T 20ms / 256)
#define T 20ms L (T 20ms % 256)
/* Define initial Timer 0 / Timer 1 values for ~50 msec delay */
#define T 50ms (65536 - (tWord) (OSC FREQ / (OSC PER INST * 20)))
#define T 50ms H (T 50ms / 256)
#define T 50ms L (T 50ms % 256)
#endif
```

Conclusions

The delay and timeout considered in this seminar are widely used in embedded applications.

In the next seminar we go on to consider another key software component in many embedded applications: the operating system.


Preparation for the next seminar

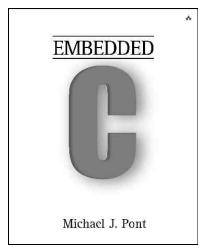

Please read <u>Chapter 7</u> before the next seminar

Seminar 6:

Creating an Embedded Operating System

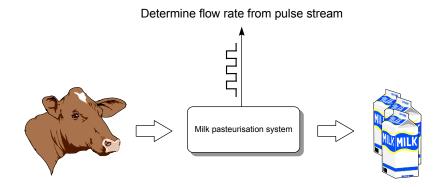


Introduction

```
void main(void)
{
   /* Prepare run function X */
   X_Init();

while(1) /* 'for ever' (Super Loop) */
   {
      X(); /* Run function X */
   }
}
```


A particular limitation with this architecture is that it is very difficult to execute function x() at precise intervals of time: as we will see, this is a very significant drawback.

For example ...

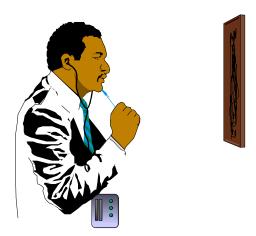

"Item 345 was painted by Selvio Guaranteen early in the 16th century. At this time, Guaranteen, who is generally known as a member of the Slafordic School, was ..."

"Now turn to your left, and locate Item 346, a small painting which was until recently also thought to have been painted by Guarateen but which is now ...".

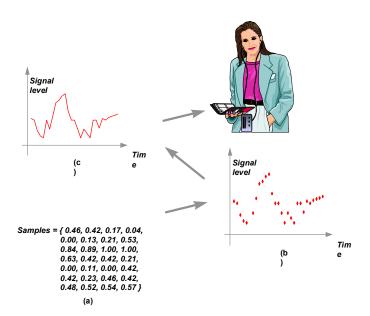

Consider a collection of requirements assembled from a range of different embedded projects (in no particular order):

- The current speed of the vehicle must be measured at 0.5 second intervals.
- The display must be refreshed 40 times every second
- The calculated new throttle setting must be applied every 0.5 seconds.
- A time-frequency transform must be performed 20 times every second.
- The engine vibration data must be sampled 1000 times per second.
- The frequency-domain data must be classified 20 times every second.
- The keypad must be scanned every 200 ms.
- The master (control) node must communicate with all other nodes (sensor nodes and sounder nodes) once per second.
- The new throttle setting must be calculated every 0.5 seconds
- The sensors must be sampled once per second

In practice, many embedded systems must be able to support this type of 'periodic function'.

This will be fine, if:

- 1. We know the precise duration of function x(), and,
- 2. This duration never varies.

Rarely practicallil.

Timer-based interrupts (the core of an embedded OS)

```
#define INTERRUPT Timer 2 Overflow 5
void main(void)
   Timer 2 Init(); /* Set up Timer 2 */
                  /* Globally enable interrupts */
  EA = 1:
                 /* An empty Super Loop */
  while(1);
   }
void Timer 2 Init(void)
   /* Timer 2 is configured as a 16-bit timer,
      which is automatically reloaded when it overflows
      This code (generic 8051/52) assumes a 12 MHz system osc.
      The Timer 2 resolution is then 1.000 us
     Reload value is FC18 (hex) = 64536 (decimal)
      Timer (16-bit) overflows when it reaches 65536 (decimal)
      Thus, with these setting, timer will overflow every 1 ms */
   T2CON = 0x04; /* Load T2 control register */
        = 0xFC; /* Load T2 high byte */
   RCAP2H = 0xFC; /* Load T2 reload capt. reg. high byte */
          TL2
   RCAP2L = 0x18; /* Load T2 reload capt. req. low byte */
   /* Timer 2 interrupt is enabled, and ISR will be called
      whenever the timer overflows - see below. */
   ET2
          = 1:
   /* Start Timer 2 running */
   TR2
       = 1;
   }
void X(void) interrupt INTERRUPT Timer 2 Overflow
   /* This ISR is called every 1 ms */
   /* Place required code here... */
   }
```

The interrupt service routine (ISR)

The interrupt generated by the overflow of Timer 2, invokes the ISR:

The link between this function and the timer overflow is made using the Keil keyword interrupt:

```
void X(void) interrupt INTERRUPT_Timer_2_Overflow
```

...plus the following #define directive:

#define INTERRUPT_Timer_2_Overflow 5

Interrupt source	Address	IE Index
Power On Reset	0x00	-
External Interrupt 0	0x03	0
Timer 0 Overflow	0x0B	1
External Interrupt 1	0x13	2
Timer 1 Overflow	0x1B	3
UART Receive/Transmit	0x23	4
Timer 2 Overflow	0x2B	5

Automatic timer reloads

For our operating system, we have slightly different requirements:

- We require a long series of interrupts, at precisely-determined intervals.
- We would like to generate these interrupts without imposing a significant load on the CPU.

Timer 2 matches these requirements precisely.

In this case, the timer is reloaded using the contents of the 'capture' registers (note that the names of these registers vary slightly between chip manufacturers):

```
RCAP2H = 0xFC; /* Load T2 reload capt. reg. high byte */
RCAP2L = 0x18; /* Load T2 reload capt. reg. low byte */
```

This automatic reload facility ensures that the timer keeps generating the required ticks, at precise 1 ms intervals, with very little software load, and without any intervention from the user's program.

Introducing sEOS

In this case:

- We use a Super Loop and delay code
- We call x () every 60 ms approximately.

Now let's look at a better way of doing this ...

Introducing sEOS

See "Embedded C", Chapter 7

```
Main.c (v1.00)
 Demonstration of sEOS running a dummy task.
-*----*/
#include "Main.H"
#include "Port.H"
#include "Simple EOS.H"
#include "X.H"
/* ----- */
void main(void)
  /* Prepare for dummy task */
 X Init();
 /* Set up simple EOS (60 ms tick interval) */
 sEOS Init Timer2(60);
 while(1) /* Super Loop */
   /* Enter idle mode to save power */
   sEOS_Go_To_Sleep();
  }
---- END OF FILE ------
```

```
Simple EOS.C (v1.00)
  -----
 Main file for Simple Embedded Operating System (sEOS).
 Demonstration version with dummy task X().
-*----*/
#include "Main.H"
#include "Simple EOS.H"
/* Header for dummy task */
#include "X.H"
sEOS ISR()
 Invoked periodically by Timer 2 overflow:
 see sEOS Init Timer2() for timing details.
-*----*/
sEOS ISR() interrupt INTERRUPT Timer 2 Overflow
 /* Must manually reset the T2 flag */
 TF2 = 0;
 /*==== USER CODE - Begin ========== */
 /* Call dummy task here */
 X();
 /*==== USER CODE - End =========== */
```

```
sEOS Init Timer2()
-*----*/
void sEOS Init Timer2(const tByte TICK MS)
  {
  tLong Inc;
  tWord Reload 16;
  tByte Reload 08H, Reload 08L;
  /* Timer 2 is configured as a 16-bit timer,
     which is automatically reloaded when it overflows */
  T2CON = 0x04; /* Load T2 control register */
  /* Number of timer increments required (max 65536) */
  Inc = ((tLong)TICK MS * (OSC FREQ/1000)) /
         (tLong)OSC PER INST;
  /* 16-bit reload value */
  Reload 16 = (tWord) (65536UL - Inc);
  /* 8-bit reload values (High & Low) */
  Reload 08H = (tByte) (Reload 16 / 256);
  Reload 08L = (tByte) (Reload 16 % 256);
  /* Used for manually checking timing (in simulator) */
  /*P2 = Reload 08H; */
  /*P3 = Reload 08L; */
      = Reload_08H; /* Load T2 high byte */
  TH2
  RCAP2H = Reload_08H; /* Load T2 reload capt. reg h byte */
      = Reload 08L; /* Load T2 low byte */
  TL2
  RCAP2L = Reload 08L; /* Load T2 reload capt. reg 1 byte */
  /* Timer 2 interrupt is enabled, and ISR will be called
     whenever the timer overflows. */
  ET2
         = 1;
  /* Start Timer 2 running */
  TR2 = 1;
  EA = 1;
                  /* Globally enable interrupts */
  }
```

```
X.C (v1.00)
 Dummy task to introduce sEOS.
-*----*/
#include "X.H"
X Init()
Dummy task init function.
-*----*/
void X Init(void)
 /* Dummy task init... */
X()
Dummy task called from sEOS ISR.
void X(void)
 /* Dummy task... */
 ---- END OF FILE ------
```

Tasks, functions and scheduling

- In discussions about embedded systems, you will frequently hear and read about 'task design', 'task execution times' and 'multi-tasking' systems.
- In this context, the term 'task' is usually used to refer to a function that is executed on a periodic basis.
- In the case of sEOS, the tasks will be implemented <u>using</u> <u>functions which are called from the timer-driven interrupt service routine</u>.

Setting the tick interval

In the function main(), we can see that the control of the tick interval has been largely automated:

```
/* Set up simple EOS (60 ms tick interval) */
sEOS_Init_Timer2(60);
```

In this example, a tick interval of 60 ms is used: this means that the ISR (the 'update' function) at the heart of sEOS will be invoked every 60 ms:

The 'automatic' tick interval control is achieved using the C preprocessor, and the information included in the project header file (Main.H):

```
/* Oscillator / resonator frequency (in Hz) e.g. (11059200UL) */
#define OSC_FREQ (1200000UL)

/* Number of oscillations per instruction (12, etc) */
...
#define OSC PER INST (12)
```

This information is then used to calculate the required timer reload values in Simple EOS.C as follows:

```
/* Number of timer increments required (max 65536) */
Inc = ((tLong)TICK_MS * (OSC_FREQ/1000)) / (tLong)OSC_PER_INST;

/* 16-bit reload value */
Reload_16 = (tWord) (65536UL - Inc);

/* 8-bit reload values (High & Low) */
Reload_08H = (tByte) (Reload_16 / 256);
Reload_08L = (tByte) (Reload_16 % 256);

TH2 = Reload_08H; /* Load T2 high byte */
RCAP2H = Reload_08H; /* Load T2 reload capt. reg h byte */
TL2 = Reload_08L; /* Load T2 low byte */
RCAP2L = Reload_08L; /* Load T2 reload capt. reg 1 byte */
```

- If using a 12 MHz oscillator, then accurate timing can usually be obtained over a range of tick intervals from 1 ms to 60 ms (approximately).
- If using other clock frequencies (e.g. 11.0592 MHz), precise timing can only be obtained at a much more limited range of tick intervals.
- If you are developing an application where precise timing is required, you must check the timing calculations by hand.

```
/* Used for manually checking timing (in simulator) */
P2 = Reload_08H;
P3 = Reload_08L;
```

Saving power

Using sEOS, we can reduce the power consumption of the application by having the processor enter idle mode when it finishes executing the ISR

Note that the processor will automatically return to 'Normal' mode when the timer next overflows (generating an interrupt).

Device	Normal	ldle	Power Down
Atmel 89S53	11 mA	2 mA	60 μΑ

Using sEOS in your own projects


When using sEOS in your own applications, you will need to include a copy of the files <code>simple_EOS.c</code> and <code>simple_EOS.H</code> in your project: the .C file will then need to be edited - in the area indicated below - in order to match your requirements:

Is this approach portable?

- The presence of an on-chip timer which can be used to generate interrupts in this way is by no means restricted to the 8051 family: almost all processors intended for use in embedded applications have timers which can be used in a manner very similar to that described here.
- For example, similar timers are included on other 8-bit microcontrollers (e.g. Microchip PIC family, the Motorola HC08 family), and also on 16-bit devices (e.g. the Infineon C167 family) as well as on 32-bit processors (e.g. the ARM family, the Motorola MPC500 family).

Example: Milk pasteurization

Determine flow rate from pulse stream

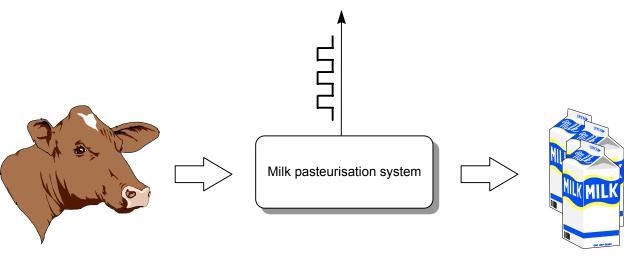

```
/*------
  Port.H (v1.00)
 Port Header file for the milk pasteurization example
 ("Embedded C" Chapter 7)
-*----*/
/* ----- Pulse_Count.C ----- */
/* Connect pulse input to this pin - debounced in software */
sbit Sw pin = P3^0;
/* Connect alarm to this pin (set if pulse is below threshold) */
sbit Alarm pin = P3^7;
/* ----- Bargraph.C ----- */
/* Bargraph display on these pins (the 8 port pins may be
  distributed over several ports, if required). */
sbit Pin0 = P1^0;
sbit Pin1 = P1^1;
sbit Pin2 = P1^2;
sbit Pin3 = P1^3;
sbit Pin4 = P1^4;
sbit Pin5 = P1^5;
sbit Pin6 = P1^6;
sbit Pin7 = P1^7;
--- END OF FILE -----
-*----*/
```

```
/*------
 Main.c (v1.00)
 Milk pasteurization example.
-*-----*/
#include "Main.H"
#include "Port.H"
#include "Simple EOS.H"
#include "Bargraph.H"
#include "Pulse_Count.H"
void main(void)
  PULSE COUNT Init();
  BARGRAPH Init();
  /* Set up simple EOS (30ms tick interval) */
  sEOS_Init_Timer2(30);
  while(1) /* Super Loop */
    /* Enter idle mode to save power */
    sEOS Go To Sleep();
  }
 ---- END OF FILE ------
```

```
/*-----*-
 Simple EOS.C (v1.00)
 Main file for Simple Embedded Operating System (sEOS) for 8051.
  -- This version for milk-flow-rate monitoring.
-*----*/
#include "Main.H"
#include "Simple_EOS.H"
#include "Pulse count.H"
sEOS ISR()
 Invoked periodically by Timer 2 overflow:
 see sEOS Init Timer2() for timing details.
_*____*/
sEOS ISR() interrupt INTERRUPT Timer 2 Overflow
  /* Must manually reset the T2 flag */
 TF2 = 0;
 /*==== USER CODE - Begin ========== */
  /* Call 'Update' function here */
 PULSE COUNT Update();
  /*==== USER CODE - End ============ */
  }
```

```
sEOS Init Timer2()
_*____*/
void sEOS Init Timer2(const tByte TICK MS)
  tLong Inc;
  tWord Reload 16;
  tByte Reload 08H, Reload 08L;
  /* Timer 2 is configured as a 16-bit timer,
     which is automatically reloaded when it overflows */
  T2CON = 0x04; /* Load T2 control register */
  /* Number of timer increments required (max 65536) */
  Inc = ((tLong)TICK MS * (OSC FREQ/1000)) / (tLong)OSC PER INST;
  /* 16-bit reload value */
  Reload 16 = (tWord) (65536UL - Inc);
  /* 8-bit reload values (High & Low) */
  Reload 08H = (tByte) (Reload 16 / 256);
  Reload 08L = (tByte) (Reload 16 % 256);
  /* Used for manually checking timing (in simulator) */
  /*P2 = Reload 08H; */
  /*P3 = Reload 08L; */
      = Reload_08H; /* Load T2 high byte */
  TH2
  RCAP2H = Reload_08H; /* Load T2 reload capt. reg. high byte */
  TL2 = Reload_08L; /* Load T2 low byte */
RCAP2L = Reload 08L; /* Load T2 reload capt. reg. low byte */
  /* Timer 2 interrupt is enabled, and ISR will be called
     whenever the timer overflows. */
  ET2
       = 1;
  /* Start Timer 2 running */
  TR2 = 1;
  EA = 1;
            /* Globally enable interrupts */
  }
```

```
/*------
  Pulse Count.C (v1.00)
  Count pulses from a mechanical switch or similar device.
  Responds to falling edge of pulse:
-*----*/
#include "Main.H"
#include "Port.H"
#include "Bargraph.H"
#include "Pulse Count.H"
/* ----- Private function prototypes ----- */
void PULSE_COUNT_Check_Below_Threshold(const tByte);
/* ----- Public variable declarations ----- */
/* The data to be displayed */
extern tBargraph Data G;
/* ----- Public variable definitions ----- */
/* Set only after falling edge is detected */
bit Falling edge G;
/* ----- Private variable definitions ------
/* The results of successive tests of the pulse signal */
/* (NOTE: Can't have arrays of bits...) */
static bit Test4, Test3, Test2, Test1, Test0;
static tByte Total G = 0;
static tWord Calls G = 0;
/* ----- Private constants ----- */
/* Allows changed of logic without hardware changes */
#define HI LEVEL (0)
#define LO LEVEL (1)
```

```
PULSE COUNT Init()
 Initialisation function for the switch library.
void PULSE COUNT Init(void)
  Sw pin = 1; /* Use this pin for input */
  /* The tests (see text) */
  Test4 = LO LEVEL;
  Test3 = LO LEVEL;
  Test2 = LO LEVEL;
  Test1 = LO LEVEL;
  Test0 = LO LEVEL;
  }
/*------
 PULSE COUNT Check Below Threshold()
 Checks to see if pulse count is below a specified
 threshold value. If it is, the alarm is sounded.
void PULSE COUNT Check Below Threshold(const tByte THRESHOLD)
  if (Data G < THRESHOLD)</pre>
    Alarm pin = 0;
  else
    Alarm pin = 1;
  }
```

```
PULSE COUNT Update()
 This is the main switch function.
 It should be called every 30 ms
  (to allow for typical 20ms debounce time).
_*____*/
void PULSE_COUNT_Update(void)
  {
  /* Clear timer flag */
  TF2 = 0;
  /* Shuffle the test results */
  Test4 = Test3;
  Test3 = Test2;
  Test2 = Test1;
  Test1 = Test0;
  /* Get latest test result */
  Test0 = Sw pin;
  /* Required result:
     Test4 == HI LEVEL
     Test3 == HI LEVEL
     Test1 == LO LEVEL
     Test0 == LO LEVEL */
  if ((Test4 == HI LEVEL) &&
      (Test3 == HI LEVEL) &&
      (Test1 == LO LEVEL) &&
      (Test0 == LO LEVEL))
     /* Falling edge detected */
     Falling edge G = 1;
  else
     /* Default */
     Falling edge G = 0;
```

```
/* Calculate average every 45 calls to this task
     - maximum count over this period is 9 pulses
      if (++Calls G < 45) */
  /* 450 used here for test purposes (in simulator)
     [Because there is a limit to how fast you can simulate pulses
     by hand...] */
  if (++Calls G < 450)
    Total G += (int) Falling edge G;
  else
     /* Update the display */
    Data G = Total G; /* Max is 9 */
    Total G = 0;
    Calls G = 0;
    PULSE COUNT Check Below Threshold(3);
    BARGRAPH Update();
     }
  }
/*-----*-
 ---- END OF FILE ------
```

/**-
Bargraph.h (v1.00)
- See Bargraph.c for details.
-**/
#include "Main.h"
/* Public data type declarations */
typedef tByte tBargraph;
/* Public function prototypes */
<pre>void BARGRAPH_Init(void); void BARGRAPH_Update(void);</pre>
/* Public constants */
#define BARGRAPH_MAX (9) #define BARGRAPH_MIN (0)
/** END OF FILE*/

```
/*------
  Bargraph.c (v1.00)
 _____
  Simple bargraph library.
-*----*/
#include "Main.h"
#include "Port.h"
#include "Bargraph.h"
/* The data to be displayed */
tBargraph Data G;
/* ----- Private constants ----- */
#define BARGRAPH ON (1)
#define BARGRAPH OFF (0)
/* ----- Private variables ----- */
/* These variables store the thresholds
  used to update the display */
static tBargraph M9 1 G;
static tBargraph M9 2 G;
static tBargraph M9 3 G;
static tBargraph M9 4 G;
static tBargraph M9 5 G;
static tBargraph M9 6 G;
static tBargraph M9 7 G;
static tBargraph M9 8 G;
```

```
/*------
 BARGRAPH Init()
 Prepare for the bargraph display.
_*----*/
void BARGRAPH Init(void)
  Pin0 = BARGRAPH OFF;
  Pin1 = BARGRAPH OFF;
  Pin2 = BARGRAPH OFF;
  Pin3 = BARGRAPH OFF;
  Pin4 = BARGRAPH OFF;
  Pin5 = BARGRAPH OFF;
  Pin6 = BARGRAPH OFF;
  Pin7 = BARGRAPH OFF;
  /* Use a linear scale to display data
     Remember: *9* possible output states
     - do all calculations ONCE */
  M9 1 G = (BARGRAPH MAX - BARGRAPH MIN) / 9;
  M9 \ 2 \ G = M9 \ 1 \ G * 2;
  M9 \ 3 \ G = M9 \ 1 \ G * 3;
  M9 \ 4 \ G = M9 \ 1 \ G * 4;
  M9 \ 5 \ G = M9 \ 1 \ G * 5;
  M9 6 G = M9 1 G * 6;
  M9 7 G = M9 1 G * 7;
  M9 8 G = M9 1 G * 8;
  }
```


```
BARGRAPH Update()
 Update the bargraph display.
-*----*/
void BARGRAPH Update(void)
  tBargraph Data = Data G - BARGRAPH MIN;
  Pin0 = ((Data >= M9 1 G) == BARGRAPH ON);
  Pin1 = ((Data >= M9 2 G) == BARGRAPH ON);
  Pin2 = ((Data >= M9 3 G) == BARGRAPH ON);
  Pin3 = ((Data >= M9 4 G) == BARGRAPH ON);
  Pin4 = ((Data >= M9 5 G) == BARGRAPH ON);
  Pin5 = ((Data >= M9 6 G) == BARGRAPH ON);
  Pin6 = ((Data >= M9 7 G) == BARGRAPH ON);
  Pin7 = ((Data >= M9 8 G) == BARGRAPH ON);
  }
--- END OF FILE -----
```

Conclusions

- The simple operating system ('sEOS') introduced in this seminar imposes a very low processor load but is nonetheless flexible and useful
- The simple nature of sEOS also provides other benefits. For example, it means that developers themselves can, very rapidly, port the OS onto a new microcontroller environment. It also means that the architecture may be readily adapted to meet the needs of a particular application.

Perhaps the most important side-effect of this form of simple OS is that unlike a traditional 'real-time operating system' - it becomes part of the application itself, rather than forming a separate code layer.


Preparation for the next seminar

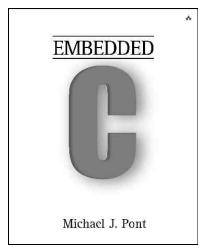

Please read <u>Chapter 8</u> before the next seminar

Seminar 7:

Multi-State Systems and Function Sequences

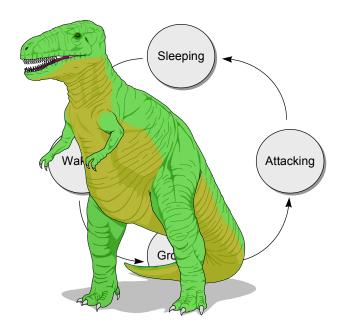

Introduction

Two broad categories of multi-state systems:

• Multi-State (Timed)

In a multi-state (timed) system, the transition between states will depend **only** on the passage of time.

For example, the system might begin in State A, repeatedly executing <code>FunctionA()</code>, for ten seconds. It might then move into State B and remain there for 5 seconds, repeatedly executing <code>FunctionB()</code>. It might then move back into State A, ad infinituum.

A basic traffic-light control system might follow this pattern.

• Multi-State (Input / Timed)

This is a more common form of system, in which the transition between states (and behaviour in each state) will depend both on the passage of time **and** on system inputs.

For example, the system might only move between State A and State B if a particular input is received within X seconds of a system output being generated.

The autopilot system discussed at the start of this seminar might follow this pattern, as might a control system for a washing machine, or an intruder alarm system. For completeness, we will mention on further possibility:

• Multi-State (Input)

This is a comparatively rare form of system, in which the transition between states (and behaviour in each state) depends **only** on the system inputs.

For example, the system might only move between State A and State B if a particular input is received. It will remain indefinitely in State A if this input is not received.

Such systems have no concept of time, and - therefore - no way of implementing timeout or similar behaviours. We will not consider such systems in this course.

In this seminar, we will consider how the Multi-State (Time) and Multi-State (Input / Time) architectures can be implemented in C.

Implementing a Multi-State (Timed) system


We can describe the time-driven, multi-state architecture as follows:

- The system will operate in two or more states.
- Each state may be associated with one or more function calls.
- Transitions between states will be controlled by the passage of time.
- Transitions between states may also involve function calls.

Please note that, in order to ease subsequent maintenance tasks, the system states should not be arbitrarily named, but should - where possible - reflect a physical state observable by the user and / or developer.

Please also note that the system states will usually be represented by means of a switch statement in the operating system ISR.

Example: Traffic light sequencing

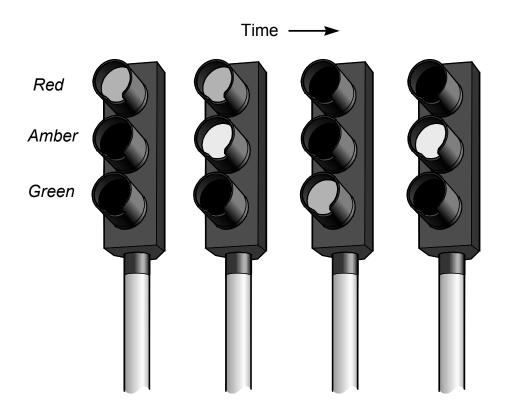

Note:

European sequence!

In this case, the various states are easily identified:

- Red
- Red-Amber
- Green
- Amber

In the code, we will represent these states as follows:

```
/* Possible system states */
typedef enum {RED, RED AND AMBER, GREEN, AMBER} eLight State;
```

We will store the time to be spent in each state as follows:

```
/* (Times are in seconds) */
#define RED_DURATION 20
#define RED_AND_AMBER_DURATION 5
#define GREEN_DURATION 30
#define AMBER_DURATION 5
```

In this simple case, we do not require function calls from (or between) system states: the required behaviour will be implemented directly through control of the (three) port pins which – in the final system – would be connected to appropriate bulbs.

For example:

```
case RED:
    {
     Red_light = ON;
     Amber_light = OFF;
     Green_light = OFF;
```

```
/*------
 Main.c (v1.00)
  Traffic light example.
*----*/
#include "Main.H"
#include "Port.H"
#include "Simple EOS.H"
#include "T Lights.H"
          ------ */
void main(void)
  /* Prepare to run traffic sequence */
 TRAFFIC_LIGHTS Init(RED);
  /* Set up simple EOS (50 ms ticks) */
 sEOS Init Timer2(50);
 while(1) /* Super Loop */
   /* Enter idle mode to save power */
   sEOS_Go_To_Sleep();
  }
        _____+
 ---- END OF FILE ------
```


/**-
$T_Lights.H$ (v1.00)
- See T_Lights.C for details.
-**/
<pre>#ifndef _T_LIGHTS_H #define _T_LIGHTS_H</pre>
/* Public data type declarations */
<pre>/* Possible system states */ typedef enum {RED, RED_AND_AMBER, GREEN, AMBER} eLight_State;</pre>
/* Public function prototypes */
<pre>void TRAFFIC_LIGHTS_Init(const eLight_State); void TRAFFIC_LIGHTS_Update(void);</pre>
#endif
/** END OF FILE
-**/


```
/*-----*-
  T lights.C (v1.00)
-*----*/
#include "Main.H"
#include "Port.H"
#include "T lights.H"
/* ----- Private constants ----- */
/* Easy to change logic here */
#define ON 0
#define OFF 1
/* Times in each of the (four) possible light states
  (Times are in seconds) */
#define RED DURATION 20
#define RED AND AMBER DURATION 5
#define GREEN DURATION 30
#define AMBER DURATION 5
/* ----- Private variables ----- */
/* The state of the system */
static eLight State Light state G;
/* The time in that state */
static tLong Time in state;
/* Used by sEOS */
static tByte Call count G = 0;
TRAFFIC LIGHTS Init()
 Prepare for traffic light activity.
-*----*/
void TRAFFIC LIGHTS Init(const eLight State START STATE)
  Light state G = START STATE; /* Decide on initial state */
```

```
TRAFFIC LIGHTS Update()
 Must be called once per second.
void TRAFFIC_LIGHTS_Update(void)
  switch (Light state G)
     case RED:
        Red light = ON;
        Amber light = OFF;
        Green light = OFF;
        if (++Time in state == RED DURATION)
          Light state G = RED AND AMBER;
          Time in state = 0;
        break;
        }
     case RED AND AMBER:
        Red_light = ON;
        Amber light = ON;
        Green light = OFF;
        if (++Time in state == RED AND AMBER DURATION)
          Light state G = GREEN;
          Time in state = 0;
        break;
```

```
case GREEN:
      Red light = OFF;
      Amber light = OFF;
      Green light = ON;
      if (++Time_in_state == GREEN_DURATION)
         {
         Light state G = AMBER;
         Time in state = 0;
      break;
      }
   case AMBER:
      {
      Red light = OFF;
      Amber light = ON;
      Green light = OFF;
      if (++Time in state == AMBER DURATION)
         Light state G = RED;
         Time_in_state = 0;
      break;
   }
}
---- END OF FILE -----
```

Example: Animatronic dinosaur

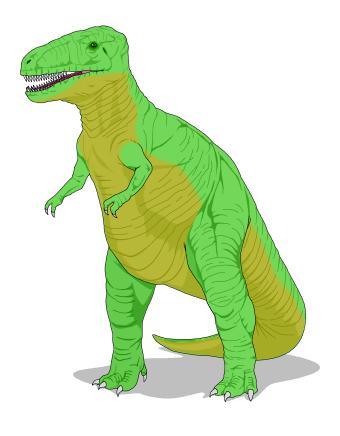

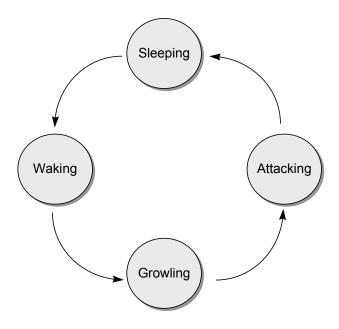

The system states

• Sleeping:

The dinosaur will be largely motionless, but will be obviously 'breathing'. Irregular snoring noises, or slight movements during this time will add interest for the audience.

• Waking:

The dinosaur will begin to wake up. Eyelids will begin to flicker. Breathing will become more rapid.

• Growling:

Eyes will suddenly open, and the dinosaur will emit a very loud growl. Some further movement and growling will follow.

• Attacking:

Rapid 'random' movements towards the audience. Lots of noise (you should be able to hear this from the next floor in the museum).

```
typedef enum {SLEEPING, WAKING, GROWLING, ATTACKING} eDinosaur_State;
```

```
/* Times in each of the (four) possible states */
/* (Times are in seconds) */
#define SLEEPING_DURATION 255
#define WAKING_DURATION 60
#define GROWLING_DURATION 40
#define ATTACKING_DURATION 120
```

```
/*------
  Dinosaur.C (v1.00)
  Demonstration of multi-state (timed) architecture:
  Dinosaur control system.
 -*----*/
#include "Main.h"
#include "Port.h"
#include "Dinosaur.h"
/* ----- Private data type declarations ----- */
/* Possible system states */
typedef
enum {SLEEPING, WAKING, GROWLING, ATTACKING} eDinosaur State;
void DINOSAUR Perform Sleep Movements(void);
void DINOSAUR Perform Waking Movements (void);
void DINOSAUR Growl(void);
void DINOSAUR Perform Attack Movements(void);
/* ----- Private constants ----- */
/* Times in each of the (four) possible states
  (Times are in seconds) */
#define SLEEPING DURATION 255
#define WAKING DURATION 60
#define GROWLING DURATION 40
#define ATTACKING DURATION 120
/* ----- Private variables ----- */
/* The current state of the system */
static eDinosaur State Dinosaur state G;
/* The time in the state */
static tByte Time in state G;
/* Used by sEOS */
static tByte Call count G = 0;
```

```
-----*-
 DINOSAUR Init()
             -----*/
void DINOSAUR Init(void)
  /* Initial dinosaur state */
  Dinosaur state G = SLEEPING;
DINOSAUR_Update()
 Must be scheduled once per second (from the sEOS ISR).
-*----*/
void DINOSAUR Update(void)
  {
  switch (Dinosaur state G)
    case SLEEPING:
      /* Call relevant function */
      DINOSAUR Perform Sleep Movements();
      if (++Time_in_state_G == SLEEPING_DURATION)
         Dinosaur state G = WAKING;
         Time in state G = 0;
      break;
      }
    case WAKING:
      DINOSAUR Perform Waking Movements();
      if (++Time in state G == WAKING DURATION)
         Dinosaur state G = GROWLING;
         Time in state G = 0;
      break;
      }
```

```
case GROWLING:
   {
    /* Call relevant function */
    DINOSAUR_Growl();
   if (++Time_in_state_G == GROWLING_DURATION)
      Dinosaur_state_G = ATTACKING;
      Time in state G = 0;
   break;
case ATTACKING:
    /* Call relevant function */
    DINOSAUR_Perform_Attack_Movements();
   if (++Time_in_state_G == ATTACKING_DURATION)
      {
      Dinosaur state G = SLEEPING;
      Time in state \overline{G} = 0;
  break;
   }
}
```

}

```
void DINOSAUR Perform Sleep Movements(void)
  /* Demo only... */
 P1 = (tByte) Dinosaur state G;
  P2 = Time in state G;
/*----*/
void DINOSAUR Perform Waking Movements (void)
  {
  /* Demo only... */
 P1 = (tByte) Dinosaur state G;
  P2 = Time in state G;
/*----*/
void DINOSAUR Growl(void)
  /* Demo only... */
 P1 = (tByte) Dinosaur state G;
  P2 = Time in state G;
  }
/*----*/
void DINOSAUR Perform Attack Movements (void)
  /* Demo only... */
  P1 = (tByte) Dinosaur state G;
  P2 = Time in state G;
  }
/*-----*-
 --- END OF FILE -----
```

Implementing a Multi-State (Input/Timed) system

- The system will operate in two or more states.
- Each state may be associated with one or more function calls.
- Transitions between states may be controlled by the passage of time, by system inputs or a combination of time and inputs.
- Transitions between states may also involve function calls.

Implementing state timeouts


Consider the following - informal - system requirements:

- The pump should be run for 10 seconds. If, during this time, no liquid is detected in the outflow tank, then the pump should be switched off and 'low water' warning should be sounded. If liquid is detected, the pump should be run for a further 45 seconds, or until the 'high water' sensor is activated (whichever is first).
- After the front door is opened, the correct password must be entered on the control panel within 30 seconds or the alarm will sound.
- The 'down flap' signal will be issued. If, after 50 ms, no flap movement is detected, it should be concluded that the flap hydraulics are damaged. The system should then alert the user and enter manual mode.

To meet this type of requirement, we can do two things:

- Keep track of the time in each system state;
- If the time exceeds a pre-determined error value, then we should move to a different state.

Example: Controller for a washing machine

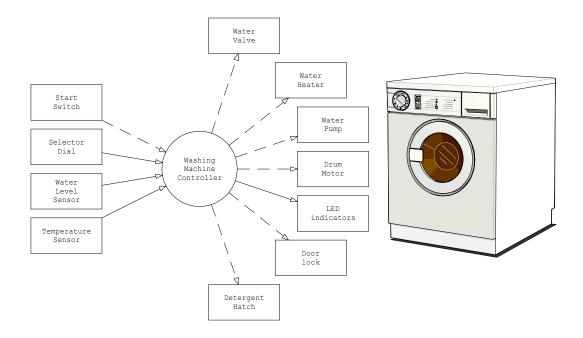

Here is a brief description of the way in which we expect the system to operate:

- 1. The user selects a wash program (e.g. 'Wool', 'Cotton') on the selector dial.
- 2. The user presses the 'Start' switch.
- 3. The door lock is engaged.
- 4. The water valve is opened to allow water into the wash drum.
- 5. If the wash program involves detergent, the detergent hatch is opened. When the detergent has been released, the detergent hatch is closed.
- 6. When the 'full water level' is sensed, the water valve is closed.
- 7. If the wash program involves warm water, the water heater is switched on. When the water reaches the correct temperature, the water heater is switched off.
- 8. The washer motor is turned on to rotate the drum. The motor then goes through a series of movements, both forward and reverse (at various speeds) to wash the clothes. (The precise set of movements carried out depends on the wash program that the user has selected.) At the end of the wash cycle, the motor is stopped.
- 9. The pump is switched on to drain the drum. When the drum is empty, the pump is switched off.

The Input / Timed architecture discussed here is by no means unique to 'white goods' (such as washing machines).

- For example, the sequence of events used to raise the landing gear in a passenger aircraft will be controlled in a similar manner. In this case, basic tests (such as 'WoW' 'Weight on Wheels') will be used to determine whether the aircraft is on the ground or in the air: these tests will be completed before the operation begins.
- Feedback from various door and landing-gear sensors will then be used to ensure that each phase of the manoeuvre completes correctly.

```
/*------
  Washer.C (v1.01)
  Multi-state framework for washing-machine controller.
_*____*/
#include "Main.H"
#include "Port.H"
#include "Washer.H"
/* Possible system states */
typedef enum {INIT, START, FILL DRUM, HEAT WATER,
           WASH 01, WASH 02, ERROR} eSystem state;
/* ----- Private function prototypes ----- */
tByte WASHER Read Selector Dial(void);
bit
    WASHER Read Start Switch (void);
    WASHER Read Water Level(void);
bit
    WASHER Read Water Temperature (void);
bit
void WASHER Control Detergent Hatch(bit);
void WASHER Control Door Lock(bit);
void WASHER Control Motor(bit);
void WASHER Control Pump(bit);
void WASHER Control Water Heater(bit);
void WASHER Control Water Valve(bit);
/* ----- Private constants ----- */
#define OFF 0
#define ON 1
#define MAX FILL DURATION (tLong) 1000
#define MAX_WATER HEAT DURATION (tLong) 1000
#define WASH 01 DURATION 30000
```

```
void WASHER Update(void)
   /* Call once per second */
   switch (System state G)
      case INIT:
         /* For demo purposes only */
         Debug_port = (tByte) System_state_G;
         /* Set up initial state */
         /* Motor is off */
         WASHER Control Motor(OFF);
         /* Pump is off */
         WASHER Control Pump (OFF);
         /* Heater is off */
         WASHER Control Water Heater (OFF);
         /* Valve is closed */
         WASHER Control Water Valve(OFF);
         /* Wait (indefinitely) until START is pressed */
         if (WASHER Read Start Switch() != 1)
             {
             return;
             }
         /* Start switch pressed
            -> read the selector dial */
         Program G = WASHER Read Selector Dial();
          /* Change state */
         System state G = START;
          break;
         }
```

```
case START:
    {
        /* For demo purposes only */
        Debug_port = (tByte) System_state_G;

        /* Lock the door */
        WASHER_Control_Door_Lock(ON);

        /* Start filling the drum */
        WASHER_Control_Water_Valve(ON);

        /* Release the detergent (if any) */
        if (Detergent_G[Program_G] == 1)
            {
                 WASHER_Control_Detergent_Hatch(ON);
        }

        /* Ready to go to next state */
        System_state_G = FILL_DRUM;
        Time_in_state_G = 0;

        break;
    }
}
```

```
case FILL DRUM:
   /* For demo purposes only */
   Debug port = (tByte) System state G;
   /* Remain in this state until drum is full
      NOTE: Timeout facility included here */
   if (++Time in state G >= MAX FILL DURATION)
      /* Should have filled the drum by now... */
      System state G = ERROR;
   /* Check the water level */
   if (WASHER Read Water Level() == 1)
      /* Drum is full */
      /* Does the program require hot water? */
      if (Hot Water G[Program G] == 1)
         WASHER Control Water Heater (ON);
         /* Ready to go to next state */
         System state G = HEAT WATER;
         Time in state G = 0;
         }
      else
         /* Using cold water only */
         /* Ready to go to next state */
         System state G = WASH 01;
         Time in state G = 0;
      }
  break;
```

```
case HEAT WATER:
   /* For demo purposes only */
  Debug port = (tByte) System_state_G;
   /* Remain in this state until water is hot
      NOTE: Timeout facility included here */
  if (++Time in state G >= MAX WATER HEAT DURATION)
      /* Should have warmed the water by now... */
      System state G = ERROR;
  /* Check the water temperature */
  if (WASHER Read Water Temperature() == 1)
      /* Water is at required temperature */
      /* Ready to go to next state */
      System state G = WASH 01;
      Time in state G = 0;
  break;
   }
```

```
case WASH 01:
   /* For demo purposes only */
   Debug_port = (tByte) System_state_G;
   /* All wash program involve WASH 01
      Drum is slowly rotated to ensure clothes are fully wet */
   WASHER Control Motor(ON);
   if (++Time in state G >= WASH 01 DURATION)
      System state G = WASH 02;
      Time in state G = 0;
  break;
/* REMAINING WASH PHASES OMITTED HERE ... */
case WASH 02:
   /* For demo purposes only */
  Debug port = (tByte) System state G;
  break;
   }
case ERROR:
   /* For demo purposes only */
  Debug port = (tByte) System state G;
  break;
}
```


}

```
tByte WASHER Read Selector Dial(void)
  /* User code here... */
  return 0;
  }
/* ----- */
bit WASHER Read Start Switch (void)
  /* Simplified for demo ... */
  if (Start pin == 0)
     /* Start switch pressed */
    return 1;
  else
    return 0;
  }
bit WASHER Read Water Level(void)
  /* User code here... */
  return 1;
/* ----- */
bit WASHER Read Water Temperature (void)
  /* User code here... */
  return 1;
  }
void WASHER Control Detergent Hatch(bit State)
  bit Tmp = State;
  /* User code here... */
  }
```

Conclusions

This seminar has discussed the implementation of multi-state (timed) and multi-state (input / timed) systems. Used in conjunction with an operating system like that presented in "Embedded C" Chapter 7, this flexible system architecture is in widespread use in embedded applications.

Preparation for the next seminar

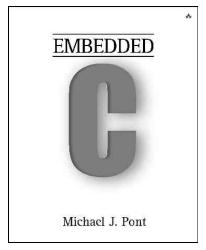


Please read <u>Chapter 9</u> before the next seminar

RIGHT © MICHAEL J. PONT, 2001-2003. Contains material from: M.J. (2002) "Embedded C", Addison-Wesley.	PES I - 210

Seminar 8:

Using the Serial Interface

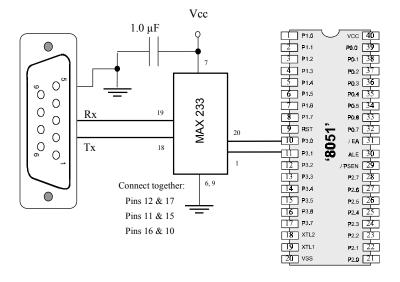

Overview of this seminar

This seminar will:

- Discuss the RS-232 data communication standard
- Consider how we can use RS-232 to transfer data to and from deskbound PCs (and similar devices).

This can be useful, for example:

- In data acquisition applications.
- In control applications (sending controller parameters).
- For general debugging.

What is 'RS-232'?

In 1997 the Telecommunications Industry Association released what is formally known as <u>TIA-232 Version F</u>, a serial communication protocol which has been universally referred to as 'RS-232' since its first 'Recommended Standard' appeared in the 1960s. Similar standards (V.28) are published by the International Telecommunications Union (ITU) and by CCITT (The Consultative Committee International Telegraph and Telephone).

The 'RS-232' standard includes details of:

- The protocol to be used for data transmission.
- The voltages to be used on the signal lines.
- The connectors to be used to link equipment together.

Overall, the standard is comprehensive and widely used, at data transfer rates of up to around 115 or 330 kbits / second (115 / 330 kbits). Data transfer can be over distances of 15 metres or more.

Note that RS-232 is a peer-to-peer communication standard.

Basic RS-232 Protocol

RS-232 is a character-oriented protocol. That is, it is intended to be used to send single 8-bit blocks of data. To transmit a byte of data over an RS-232 link, we generally encode the information as follows:

- We send a 'Start' bit.
- We send the data (8 bits).
- We send a 'Stop' bit (or bits).

•


NOTE: The UART takes care of these details!

Asynchronous data transmission and baud rates

- RS-232 uses an <u>asynchronous</u> protocol.
- Both ends of the communication link have an internal clock, running at the same rate. The data (in the case of RS-232, the 'Start' bit) is then used to synchronise the clocks, if necessary, to ensure successful data transfer.
- RS-232 generally operates at one of a (restricted) range of baud rates.
- Typically these are: 75, 110, 300, 1200, 2400, 4800, <u>9600</u>, 14400, 19200, 28800, 33600, 56000, 115000 and (rarely) 330000 baud.
- 9600 baud is a very 'safe' choice, as it is very widely supported.

RS-232 voltage levels

- The threshold levels used by the receiver are +3 V and -3 V and the lines are inverted.
- The maximum voltage allowed is +/- 15V.
- Note that these voltages cannot be obtained directly from the naked microcontroller port pins: some form of interface hardware is required.
- For example, the Maxim Max232 and Max233 are popular and widely-used line driver chips.

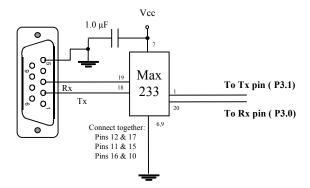

Using a Max 233 as an RS-232 tranceiver.

The software architecture

- Suppose we wish to transfer data to a PC at a standard 9600 baud rate; that is, 9600 bits per second. Transmitting each byte of data, plus stop and start bits, involves the transmission of 10 bits of information (assuming a single stop bit is used). As a result, each byte takes approximately 1 ms to transmit.
- Suppose, for example, we wish to send this information to the PC:


Current core temperature is 36.678 degrees

...then the task sending these 42 characters will take more than 40 milliseconds to complete. This will - frequently be an unacceptably long duration.

• The most obvious way of solving this problem is to increase the baud rate; however, this is not always possible (and it does not really solve the underlying problem).

A better solution is to write all data to a buffer in the microcontroller. <u>The contents of this buffer will then be sent - usually one byte at a time - to the PC, using a regular, scheduled, task.</u>

Overview

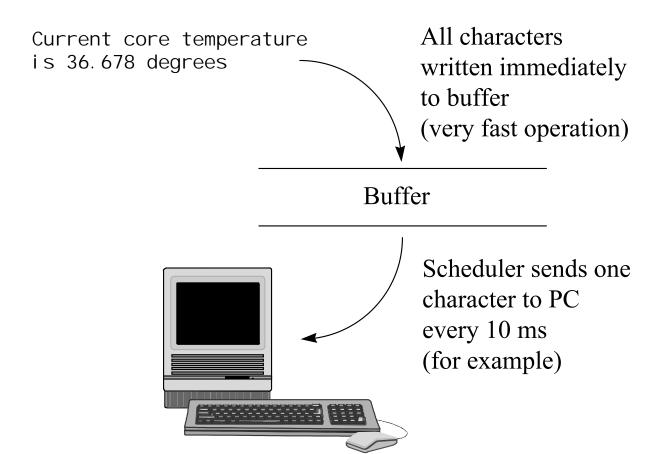

Using the on-chip U(S)ART for RS-232 communications

- The UART is full duplex, meaning it can transmit and receive simultaneously.
- It is also receive-buffered, meaning it can commence reception of a second byte before a previously received byte has been read from the receive register.
- The serial port can operate in 4 modes (one synchronous mode, three asynchronous modes).
- We are primarily interested in Mode 1.
- In this mode, 10 bits are transmitted (through TxD) or received (through RxD): a start bit (0), 8 data bits (lsb first), and a stop bit (1).

Serial port registers

The serial port control and status register is the special function register SCON. This register contains the mode selection bits (and the serial port interrupt bits, TI and RI: not used here).

SBUF is the receive and transmit buffer of serial interface.

Writing to SBUF loads the transmit register and initiates transmission.

```
SBUF = 0x0D; /* Output CR */
```

Reading out SBUF accesses a physically separate receive register.

```
/* Read the data from UART */
Data = SBUF;
```

Baud rate generation

- We are primarily concerned here with the use of the serial port in Mode 1.
- In this mode the baud rate is determined by the overflow rate of Timer 1 or Timer 2.
- We focus on the use of Timer 1 for baud rate generation.

The baud rate is determined by the Timer 1 overflow rate and the value of SMOD follows:

Baud rate (Mode 1) =
$$\frac{2^{SMOD} \times Frequency_{oscillator}}{32 \times Instructions_{cycle} \times (256 - TH1)}$$

Where:

SMOD ...is the 'double baud rate' bit in the PCON register;

Frequency oscillator / resonator frequency;

Instructions ...is the number of machine instructions per oscillator

cycle (e.g. 12 or 6)

*TH*1 ...is the reload value for Timer 1

Note that Timer is used in 8-bit auto-reload mode and that interrupt generation should be disabled.

Why use 11.0592 MHz crystals?

It is very important to appreciate that it is not generally possible to produce standard baud rates (e.g. 9600) using Timer 1 (or Timer 2), unless you use an 11.0592 MHz crystal oscillator.


Remember: this is an asynchronous protocol, and relies for correct operation on the fact that both ends of the connection are working at the same baud rate. In practice, you can generally work with a difference in baud rates at both ends of the connection by up to 5%, but no more.

Despite the possible 5% margin, it is always good policy to get the baud rate as close as possible to the standard value because, **in the field**, there may be significant temperature variations between the oscillator in the PC and that in the embedded system.

Note also that it is generally **essential** to use some form of crystal oscillator (rather than a ceramic resonator) when working with asynchronous serial links (such as RS-232, RS-485, or CAN): the ceramic resonator is not sufficiently stable for this purpose.

PC Software

If your desktop computer is running Windows (95, 98, NT, 2000), then a simple but effective option is the 'Hyperterminal' application which is included with all of these operating systems.

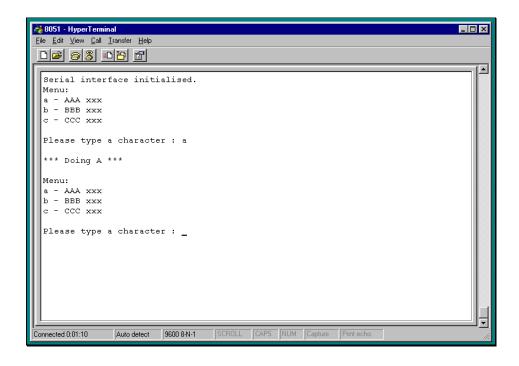

What about printf()?

We do not generally recommend the use of standard library function "printf()", because:

- this function sends data immediately to the UART. As a result, the duration of the transmission is often too long to be safely handled in a co-operatively scheduled application, and,
- most implementations of printf() do not incorporate timeouts, making it possible that use of this functions can 'hang' the whole application if errors occur.


RS-232 and 8051: Overall strengths and weaknesses


- © RS-232 support is part of the 8051 core: applications based on RS-232 are very portable.
- At the PC end too, RS-232 is ubiquitous: every PC has one or more RS-232 ports.
- Unks can with modern tranceiver chips be up to 30 m (100 ft) in length.
- © Because of the hardware support, RS-232 generally imposes a low software load.

BUT:

- **RS-232** is a peer-to-peer protocol (unlike, for example, RS-485): you can only connect one microcontroller directly (simultaneously) to each PC.
- ® RS-232 has little or no error checking at the hardware level (unlike, for example, CAN): if you want to be sure that the data you received at the PC is valid, you need to carry out checks in software.

Example: Displaying elapsed time on a PC

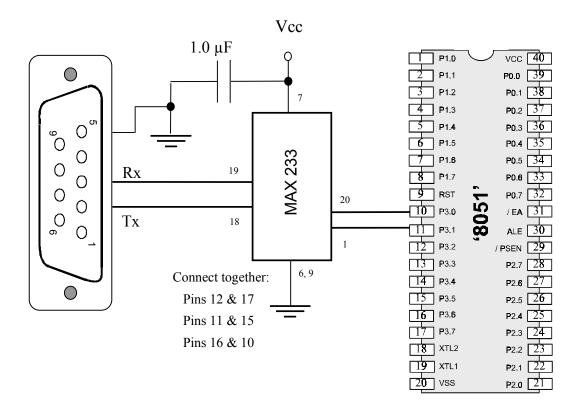

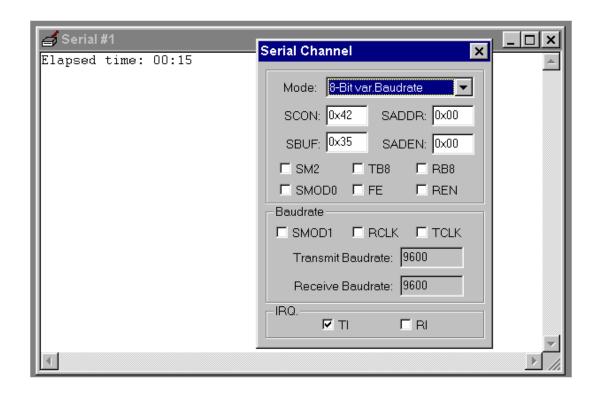

```
/*-----*-
  Main.c (v1.00)
  RS-232 (Elapsed Time) example - sEOS.
#include "Main.H"
#include "Port.H"
#include "Simple EOS.H"
#include "PC O T1.h"
#include "Elap_232.h"
void main(void)
  /* Set baud rate to 9600 */
  PC LINK O Init T1(9600);
  /* Prepare for elapsed time measurement */
  Elapsed Time RS232 Init();
  /* Set up simple EOS (5ms tick) */
  sEOS Init Timer2(5);
  while(1) /* Super Loop */
    sEOS Go To Sleep(); /* Enter idle mode to save power */
  }
/*-----*-
 --- END OF FILE ------
```

```
/*------
 Elap 232.C (v1.00)
  Simple library function for keeping track of elapsed time
 Demo version to display time on PC screen via RS232 link.
_*____*/
#include "Main.h"
#include "Elap 232.h"
#include "PC O.h"
tByte Hou G;
tByte Min G;
tByte Sec G;
/* ----- Public variable declarations ----- */
/* See Char Map.c */
extern const char code CHAR MAP G[10];
Elapsed Time RS232 Init()
 Init function for simple library displaying elapsed time on PC
 via RS-232 link.
-*----*/
void Elapsed Time RS232 Init(void)
  {
 Hou G = 0;
 Min G = 0;
 Sec G = 0;
```

```
-----*/
void Elapsed Time RS232 Update(void)
   char Time Str[30] = "\rElapsed time:
                                                     ";
   if (++Sec G == 60)
      Sec G = 0;
      if (++Min G == 60)
        Min G = 0;
        if (++Hou G == 24)
           Hou_G = 0;
        }
      }
   Time Str[15] = CHAR MAP G[Hou G / 10];
   Time Str[16] = CHAR MAP G[Hou G % 10];
   Time Str[18] = CHAR MAP G[Min G / 10];
   Time Str[19] = CHAR MAP G[Min G % 10];
   Time Str[21] = CHAR MAP G[Sec G / 10];
   Time Str[22] = CHAR MAP G[Sec G % 10];
   /* We use the "seconds" data to turn on and off the colon
      (between hours and minutes) */
   if ((Sec G % 2) == 0)
      Time Str[17] = ':';
     Time_Str[20] = ':';
   else
      Time Str[17] = ' ';
      Time Str[20] = ' ';
      }
   PC_LINK_O_Write_String_To_Buffer(Time_Str);
```

```
/*------
 PC LINK O Init T1()
 This version uses T1 for baud rate generation.
 Uses 8051 (internal) UART hardware
-*----*/
void PC_LINK_O_Init_T1(const tWord BAUD_RATE)
  PCON &= 0x7F; /* Set SMOD bit to 0 (don't double baud rates) */
  /* Receiver disabled
      8-bit data, 1 start bit, 1 stop bit, variable baud */
  SCON = 0x42;
  TMOD = 0 \times 20; /* T1 in mode 2, 8-bit auto reload */
  TH1 = (256 - (tByte))(((tLong)OSC FREQ / 100) * 3125)
          / ((tLong) BAUD_RATE * OSC_PER_INST * 1000)));
  TL1 = TH1;
  TR1 = 1; /* Run the timer */
  TI = 1; /* Send first character (dummy) */
  /* Set up the buffers for reading and writing */
  Out written index G = 0;
  Out waiting index G = 0;
  /* Interrupt *NOT* enabled */
  ES = 0;
  }
```


```
void PC_LINK_O_Update(void)
   /* Deal with transmit bytes here.
      Are there any data ready to send? */
   if (Out written index G < Out waiting index G)
      PC LINK_O_Send_Char(Tran_buffer[Out_written_index_G]);
      Out written index G++;
   else
      /* No data to send - just reset the buffer index */
      Out waiting index G = 0;
      Out_written_index_G = 0;
   }
void PC LINK O Write String To Buffer(const char* const STR PTR)
   tByte i = 0;
   while (STR PTR[i] != '\setminus 0')
      PC_LINK_O_Write_Char_To_Buffer(STR_PTR[i]);
      i++;
      }
   }
```

```
-----*/
void PC LINK O Write Char To Buffer (const char CHARACTER)
  /* Write to the buffer *only* if there is space
      (No error reporting in this simple library...) */
  if (Out waiting index G < TRAN BUFFER LENGTH)
     Tran buffer[Out waiting index G] = CHARACTER;
     Out waiting index G++;
  }
/*-----/
void PC_LINK_O_Send_Char(const char CHARACTER)
  {
  tLong Timeout1 = 0;
  if (CHARACTER == ' n')
     Timeout1 = 0;
     while ((++Timeout1) && (TI == 0));
     if (Timeout1 == 0)
        /* UART did not respond - error
           No error reporting in this simple library... */
        return;
     TI = 0;
     SBUF = 0 \times 0 d; /* Output CR */
     }
  Timeout1 = 0;
  while ((++Timeout1) \&\& (TI == 0));
  if (Timeout1 == 0)
     /* UART did not respond - error
        No error reporting in this simple library... */
     return;
     }
  TI = 0;
  SBUF = CHARACTER;
  }
```

Example: Data acquisition

In this section, we give an example of a simple data acquisition system with a **serial-menu** architecture.

In this case, using the menu, the user can determine the state of the input pins on Port 1 or Port 2:

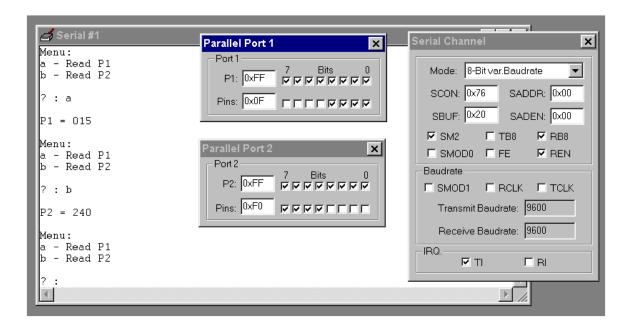

```
void MENU Command Processor (void)
   char Ch;
   if (First time only G == 0)
      First_time_only_G = 1;
      MENU Show Menu();
      }
   /* Check for user inputs */
   PC_LINK_IO_Update();
   Ch = PC LINK IO Get Char From Buffer();
   if (Ch != PC LINK IO NO CHAR)
      MENU Perform Task(Ch);
      MENU Show Menu();
   }
void MENU Show Menu(void)
   PC LINK IO Write String To Buffer("Menu:\n");
   PC LINK IO Write String To Buffer("a - Read P1\n");
   PC LINK IO Write String To Buffer("b - Read P2\n\n");
   PC LINK IO Write String To Buffer("? : ");
   }
```


```
void MENU Perform Task(char c)
   PC LINK IO Write Char To Buffer(c); /* Echo the menu option */
   PC LINK IO Write Char To Buffer('\n');
   /* Perform the task */
   switch (c)
      {
      case 'a':
      case 'A':
         Get Data From Port1();
         break;
         }
      case 'b':
      case 'B':
         {
         Get Data From Port2();
         break;
         }
      }
   }
void Get Data From Port1(void)
   tByte Port1 = Data Port1;
   char String[11] = "\nP1 = XXX\n\n";
   String[6] = CHAR MAP G[Port1 / 100];
   String[7] = CHAR MAP G[(Port1 / 10) % 10];
   String[8] = CHAR MAP G[Port1 % 10];
   PC LINK IO Write String To Buffer(String);
   }
void Get Data From Port2(void)
   tByte Port2 = Data Port2;
   char String[11] = "\nP2 = XXX\n';
   String[6] = CHAR MAP G[Port2 / 100];
   String[7] = CHAR MAP G[(Port2 / 10) % 10];
   String[8] = CHAR MAP G[Port2 % 10];
   PC LINK IO Write String To Buffer(String);
   }
```

Conclusions

In this seminar, we have illustrated how the serial interface on the 8051 microcontroller may be used.

In the next seminar, we will use a case study to illustrate how the various techniques discussed in this can be used in practical applications.

Preparation for the next seminar

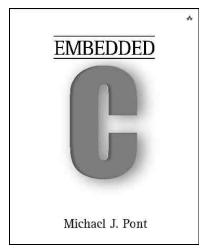


Please read <u>Chapter 10</u> before the next seminar


Seminar 9:


Case Study:

Intruder Alarm System

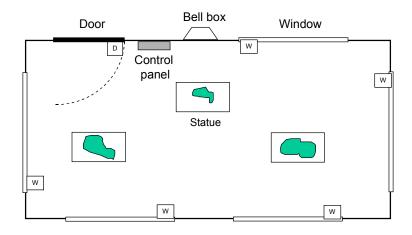

Introduction

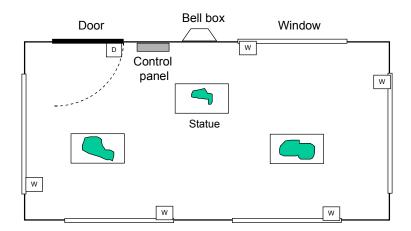

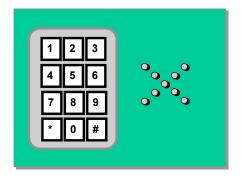

System Operation


- When initially activated, the system is in '<u>Disarmed</u>' state.
- In **Disarmed** state, the sensors are ignored. The alarm does not sound. The system remains in this state until the user enters a valid password via the keypad (in our demonstration system, the password is "1234"). When a valid password is entered, the systems enters 'Arming' state.
- In **Arming** state, the system waits for 60 seconds, to allow the user to leave the area before the monitoring process begins. After 60 seconds, the system enters 'Armed' state.
- In **Armed** state, the status of the various system sensors is monitored. If a window sensor is tripped, the system enters 'Intruder' state. If the door sensor is tripped, the system enters 'Disarming' state. The keypad activity is also monitored: if a correct password is typed in, the system enters 'Disarmed' state.
- In **Disarming** state, we assume that the door has been opened by someone who *may* be an authorised system user. The system remains in this state for up to 60 seconds, after which by default it enters <u>Intruder</u> state. If, during the 60-second period, the user enters the correct password, the system enters 'Disarmed' state.
- In **Intruder** state, an alarm will sound. The alarm will keep sounding (indefinitely), until the correct password is entered.

Key software components used in this example

This case study uses the following software components:

- Software to control external port pins (to activate the external bell), as introduced in "Embedded C" Chapter 3.
- Switch reading, as discussed in "Embedded C" Chapter 4, to process the inputs from the door and window sensors. Note that in this simple example (intended for use in the simulator) no switch debouncing is carried out. This feature can be added, if required, without difficulty.
- The embedded operating system, sEOS, introduced in "Embedded C" Chapter 7.
- A simple 'keypad' library, based on a bank of switches. Note that to simplify the use of the keypad library in the simulator we have assumed the presence of only eight keys in the example program (0 7). This final system would probably use at least 10 keys: support for additional keys can be easily added if required.
- The RS-232 library (from "Embedded C" Chapter 9) is used to illustrate the operation of the program. This library would not be necessary in the final system (but it might be useful to retain it, to support system maintenance).

Running the program

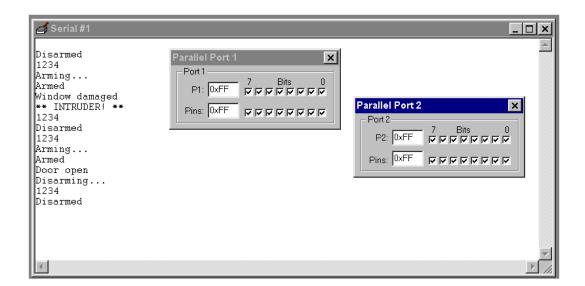

The software

```
/*------
 Port.H (v1.00)
 'Port Header' (see Chap 5) for project INTRUDER (see Chap 10)
-*----*/
/* ----- Keypad.C ----- */
#define KEYPAD PORT P2
sbit K0 = KEYPAD PORT^0;
sbit K1 = KEYPAD PORT^1;
sbit K2 = KEYPAD PORT^2;
sbit K3 = KEYPAD PORT^3;
sbit K4 = KEYPAD PORT^4;
sbit K5 = KEYPAD PORT^5;
sbit K6 = KEYPAD PORT^6;
sbit K7 = KEYPAD PORT^7;
/* ----- Intruder.C ----- */
sbit Sensor pin = P1^0;
sbit Sounder pin = P1^7;
/* ----- Lnk O.C ------ */
/* Pins 3.0 and 3.1 used for RS-232 interface */
--- END OF FILE -----
```

```
/*------
  Main.c (v1.00)
  Simple intruder alarm system.
#include "Main.H"
#include "Port.H"
#include "Simple EOS.H"
#include "PC O T1.h"
#include "Keypad.h"
#include "Intruder.h"
void main(void)
  /* Set baud rate to 9600 */
  PC LINK O Init T1(9600);
  /* Prepare the keypad */
  KEYPAD Init();
  /* Prepare the intruder alarm */
  INTRUDER Init();
  /* Set up simple EOS (5ms tick) */
  sEOS Init Timer2(5);
  while(1) /* Super Loop */
    sEOS Go To Sleep(); /* Enter idle mode to save power */
  }
--- END OF FILE -----
```

```
/*------
  Intruder.C (v1.00)
-*----*/
. . .
/* ----- Private data type declarations ----- */
/* Possible system states */
typedef enum {DISARMED, ARMING, ARMED, DISARMING, INTRUDER}
          eSystem state;
/* ----- Private function prototypes ----- */
bit INTRUDER Get Password G(void);
bit INTRUDER Check Window Sensors(void);
bit INTRUDER Check Door Sensor(void);
void INTRUDER Sound Alarm(void);
/* ----- */
void INTRUDER Init(void)
  /* Set the initial system state (DISARMED) */
  System state G = DISARMED;
  /* Set the 'time in state' variable to 0 */
  State call count G = 0;
  /* Clear the keypad buffer */
  KEYPAD Clear Buffer();
  /* Set the 'New state' flag */
  New state G = 1;
  /* Set the (two) sensor pins to 'read' mode */
  Window sensor pin = 1;
  Sounder pin = 1;
  }
```

```
void INTRUDER Update(void)
   /* Incremented every time */
   if (State call count G < 65534)
      State call count G++;
   /* Call every 50 ms */
   switch (System state G)
      case DISARMED:
         if (New state G)
            PC_LINK_O_Write_String_To_Buffer("\nDisarmed");
            New state G = 0;
            }
         /* Make sure alarm is switched off */
         Sounder pin = 1;
         /* Wait for correct password ... */
         if (INTRUDER_Get_Password G() == 1)
            System state G = ARMING;
            New state G = 1;
            State call count G = 0;
            break;
            }
         break;
```

```
case ARMING:
    {
    if (New_state_G)
        {
        PC_LINK_O_Write_String_To_Buffer("\nArming...");
        New_state_G = 0;
    }

    /* Remain here for 60 seconds (50 ms tick assumed) */
    if (++State_call_count_G > 1200)
        {
        System_state_G = ARMED;
        New_state_G = 1;
        State_call_count_G = 0;
        break;
    }

    break;
}
```

```
case ARMED:
   if (New state G)
      PC LINK O Write String To Buffer("\nArmed");
      New state G = 0;
      }
   /* First, check the window sensors */
   if (INTRUDER Check Window Sensors() == 1)
      /* An intruder detected */
      System state G = INTRUDER;
      New state G = 1;
      State call count G = 0;
     break;
   /* Next, check the door sensors */
   if (INTRUDER Check Door Sensor() == 1)
      /* May be authorised user - go to 'Disarming' state */
      System state G = DISARMING;
      New state G = 1;
      State call count G = 0;
      break;
      }
   /* Finally, check for correct password */
   if (INTRUDER Get Password G() == 1)
      System state G = DISARMED;
      New state G = 1;
      State call count_G = 0;
      break;
      }
  break;
   }
```

```
case DISARMING:
   if (New state G)
      PC LINK O Write String To Buffer("\nDisarming...");
      New state G = 0;
      }
   /* Remain here for 60 seconds (50 ms tick assumed)
      to allow user to enter the password
      - after time up, sound alarm. */
   if (++State call count G > 1200)
      System state G = INTRUDER;
      New state G = 1;
      State call count G = 0;
     break;
      }
   /* Still need to check the window sensors */
   if (INTRUDER Check Window Sensors() == 1)
      /* An intruder detected */
      System state G = INTRUDER;
      New state G = 1;
      State call count G = 0;
      break;
   /* Finally, check for correct password */
   if (INTRUDER Get Password G() == 1)
      System state G = DISARMED;
      New state G = 1;
      State call count G = 0;
      break:
      }
  break;
```

```
case INTRUDER:
{
   if (New_state_G)
     {
      PC_LINK_O_Write_String_To_Buffer("\n** INTRUDER! **");
      New_state_G = 0;
   }

   /* Sound the alarm! */
   INTRUDER_Sound_Alarm();

   /* Keep sounding alarm until we get correct password */
   if (INTRUDER_Get_Password_G() == 1)
      {
      System_state_G = DISARMED;
      New_state_G = 1;
      State_call_count_G = 0;
    }

   break;
   }
}
break;
}
```

```
bit INTRUDER Get Password G(void)
   signed char Key;
   tByte Password G count = 0;
   tByte i;
   /* Update the keypad buffer */
   KEYPAD Update();
   /* Are there any new data in the keypad buffer? */
   if (KEYPAD Get Data From Buffer(&Key) == 0)
      /* No new data - password can't be correct */
      return 0;
      }
   /* If we are here, a key has been pressed */
   /* How long since last key was pressed?
      Must be pressed within 50 seconds (assume 50 ms 'tick') */
   if (State call count G > 1000)
      /* More than 5 seconds since last key
         - restart the input process */
      State call count G = 0;
      Position G = 0;
   if (Position G == 0)
      PC LINK O Write Char To Buffer('\n');
   PC LINK O Write Char To Buffer (Key);
   Input G[Position G] = Key;
```

```
/* Have we got four numbers? */
if ((++Position G) == 4)
   Position G = 0;
   Password G count = 0;
   /* Check the password */
   for (i = 0; i < 4; i++)
       if (Input_G[i] == Password_G[i])
          Password_G_count++;
       }
   }
if (Password G count == 4)
   /* Password correct */
   return 1;
else
   /* Password NOT correct */
   return 0;
   }
}
```

```
bit INTRUDER Check Window Sensors (void)
   /* Just a single window 'sensor' here
      - easily extended. */
   if (Window sensor pin == 0)
      /* Intruder detected... */
      PC LINK O Write String To Buffer("\nWindow damaged");
      return 1;
   /* Default */
   return 0;
   }
bit INTRUDER_Check_Door_Sensor(void)
   /* Single door sensor (access route) */
   if (Door sensor pin == 0)
      /* Someone has opened the door... */
      PC LINK_O_Write_String_To_Buffer("\nDoor open");
      return 1;
      }
   /* Default */
   return 0;
   }
void INTRUDER Sound Alarm(void)
   if (Alarm_bit)
      /* Alarm connected to this pin */
      Sounder pin = 0;
      Alarm bit = 0;
   else
      Sounder pin = 1;
      Alarm bit = 1;
      }
   }
```

```
void KEYPAD Update(void)
   char Key;
   /* Scan keypad here... */
   if (KEYPAD Scan(&Key) == 0)
      /* No new key data - just return */
      return;
      }
   /* Want to read into index 0, if old data has been read
      (simple ~circular buffer). */
   if (KEYPAD in waiting index == KEYPAD in read index)
      KEYPAD in waiting index = 0;
      KEYPAD in read index = 0;
      }
   /* Load keypad data into buffer */
   KEYPAD recv buffer[KEYPAD in waiting index] = Key;
   if (KEYPAD in waiting index < KEYPAD RECV BUFFER LENGTH)
      /* Increment without overflowing buffer */
      KEYPAD in waiting index++;
   }
bit KEYPAD Get Data From Buffer(char* const pKey)
   /* If there is new data in the buffer */
   if (KEYPAD in read index < KEYPAD in waiting index)
      *pKey = KEYPAD recv buffer[KEYPAD in read index];
      KEYPAD in read_index++;
      return 1;
      }
   return 0;
```

```
bit KEYPAD Scan(char* const pKey)
   char Key = KEYPAD NO NEW DATA;
   if (K0 == 0) \{ Key = '0'; \}
   if (K1 == 0) \{ Key = '1'; \}
   if (K2 == 0) \{ Key = '2'; \}
   if (K3 == 0) \{ Key = '3'; \}
   if (K4 == 0) \{ Key = '4'; \}
   if (K5 == 0) \{ Key = '5'; \}
   if (K6 == 0) \{ Key = '6'; \}
   if (K7 == 0) \{ Key = '7'; \}
   if (Key == KEYPAD NO NEW DATA)
      /* No key pressed */
      Old key G = KEYPAD NO NEW DATA;
      Last valid key G = KEYPAD NO NEW DATA;
      return 0; /* No new data */
      }
   /* A key has been pressed: debounce by checking twice */
   if (Key == Old key G)
      /* A valid (debounced) key press has been detected */
      /* Must be a new key to be valid - no 'auto repeat' */
      if (Key != Last valid key G)
         /* New key! */
         *pKey = Key;
         Last valid key G = Key;
         return 1;
         }
      }
   /* No new data */
   Old key G = Key;
   return 0;
   }
```

Extending and modifying the system

• How would you add a "real" keypad?

(See "Patterns for Time-Triggered Embedded Systems, Chap. 20)

• How would you add an LCD display?

(See "Patterns for Time-Triggered Embedded Systems, Chap. 22)

• How would you add additional nodes?

(See "Patterns for Time-Triggered Embedded Systems, Part F)

Conclusions

This case study has illustrated most of the key features of embedded C, as discussed throughout the earlier sessions in this course.


We'll consider a final case study in the next seminar.

(RIGHT © MICHAEL J. PONT, 2001-2003. Contains material from: M.J. (2002) "Embedded C", Addison-Wesley.	PES I - 262

Seminar 10:


Case Study:

Controlling a Mobile Robot

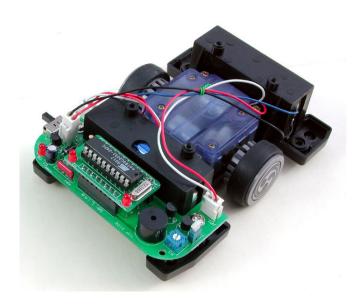

Overview

In this session, we will discuss the design of software to control a small mobile robot.

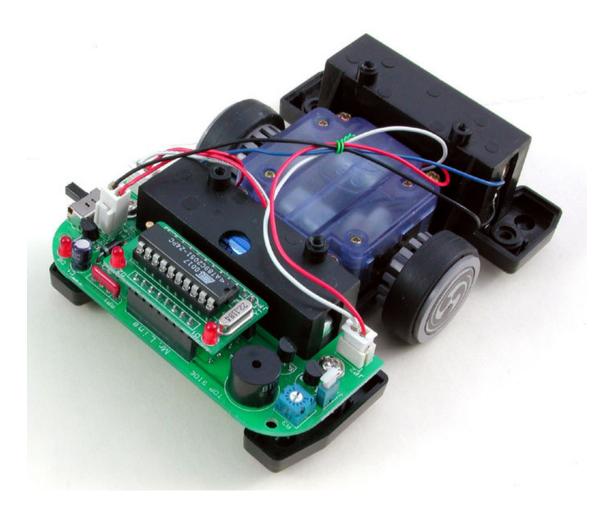

The robot is "Mr Line"

He is produced by "Microrobot NA"

http://www.microrobotna.com

What can the robot do?

The robot has IR sensors and transmitters that allow him to detect a black line on a white surface - and follow it.




http://www.microrobotna.com

The robot brain

Mr Line is controlled by an 8051 microcontroller (an AT89C2051).


We'll use a pin-compatible AT89C4051 in this study.

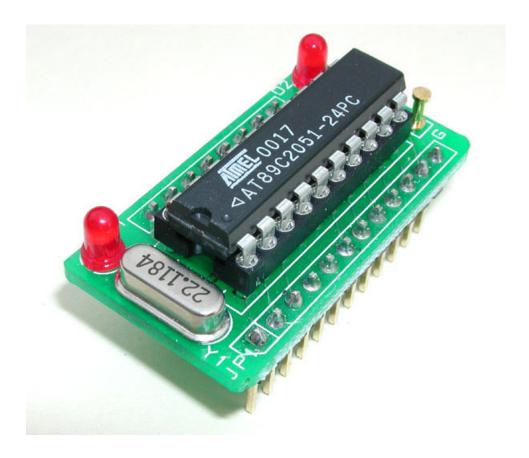

http://www.microrobotna.com


How does the robot move?

Mr Line has two DC motors: by controlling the relative speed of these motors, we can control the speed and direction in which he will move.

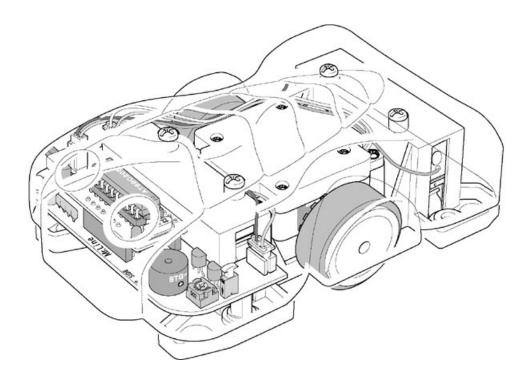

http://www.microrobotna.com

Pulse-width modulation

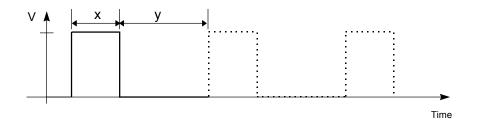

Duty cycle (%) =
$$\frac{x}{x+y} \times 100$$

Period = x + y, where x and y are in seconds.

Frequency = $\frac{1}{x+y}$, where x and y are in seconds.

The key point to note is that the average voltage seen by the load is given by the duty cycle multiplied by the load voltage.

See: "Patterns for Time-Triggered Embedded Systems", Chapter 33

Software PWM

```
PWM_PERIOD_G
PWM_G
PWM_position_G

if (PWM_position_G < PWM_G)
{
    PWM_pin = PWM_ON;
}
else
{
    PWM_pin = PWM_OFF;
}</pre>
```

See: "Patterns for Time-Triggered Embedded Systems", Chapter 33

The resulting code

< We'll discuss the resulting code in the lecture ... >

More about the robot

Please see:

http://www.le.ac.uk/engineering/mjp9/robot.htm

Conclusions

That brings us to the end of this course!