

Inspector walk — every screen, step by step

Before you start — five minutes, once

1. On the shop PC, double-click **START.cmd**; it prints the address for the tablet.
2. On the tablet, turn **mobile data off** and join the shop Wi-Fi.
3. Install the certificate on the tablet once — **server\certs\lan-cert.crt**, as in TABLET_TRUST.md — so the address opens with no warning and the camera and offline mode are allowed.
4. Open the address START.cmd printed and accept *Add to home screen*.
5. Sign in with the inspector account you were given.

Then go step by step. Each step shows the screen as it should look, the taps in order, what must be on your screen, and what to suspect when it is not. Tick **Seen it** only when you saw it.

Verified on the packaged build

22 / 22

 steps verified

When 21 September 2026

On the packaged bundle, seeded with the demonstration record, on a phone-sized screen with the camera allowed

By hand 2 steps (2.7, 2.18) need a person or a second device


[2.1 – 2.9 · The bench — springs](#)[2.10 · One spring on a wagon](#)[2.11 – 2.17 · A wagon — WR/BCNHL/40112 and SER/BOXNHL/30914](#)[2.18 – 2.19 · The camera and the manual](#)[2.20 – 2.22 · No network, no permission, sign out](#)

The bench — springs 2.1 – 2.9

Sign in as an inspector. Everything here is one tap per spring.

2.1 The inspector's home screen

☐ Seen it

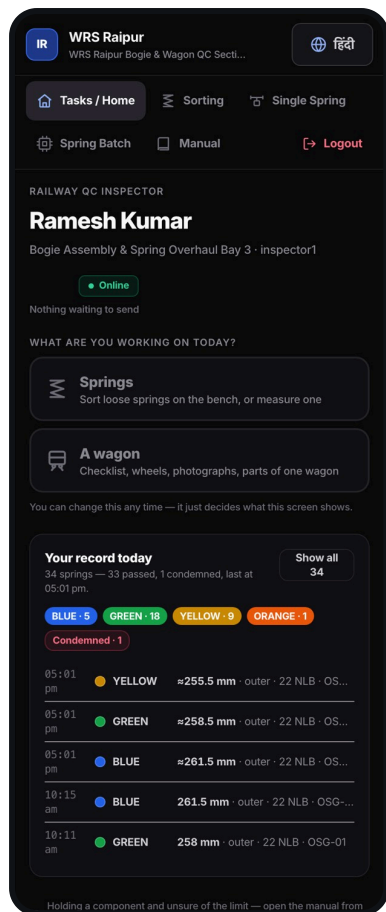

home

DO

1. Sign in with the inspector account you were given.
2. Stay on the first screen — do not tap anything yet.

YOU MUST SEE

- ▶ Two large cards under *What are you working on today?*: **Ssprings** and **A wagon**.
- ▶ Under them, **Your record today**: how many springs, how many passed, the band tallies and the newest few with a time each.
- ▶ A green **Online** dot and *Nothing waiting to send*.

WHAT IT PROVES

The first person to use this screen asked for two things: to see at once whether they are on springs or a wagon, and to see what they have logged. Both are here before a single tap.


CHECKED ON THE BUILD

verified · 05:01:36 pm

- ✓ the Springs card is on the home screen
- ✓ the "A wagon" card is on the home screen
- ✓ "Your record today" sits under the two cards

IF IT IS NOT THERE

- No **Your record today** box: the phone is not reaching the server — check the address and that the certificate was installed (section 1.4).
- A red **Offline** dot: Wi-Fi is off, or the phone has switched to mobile data — turn mobile data off.

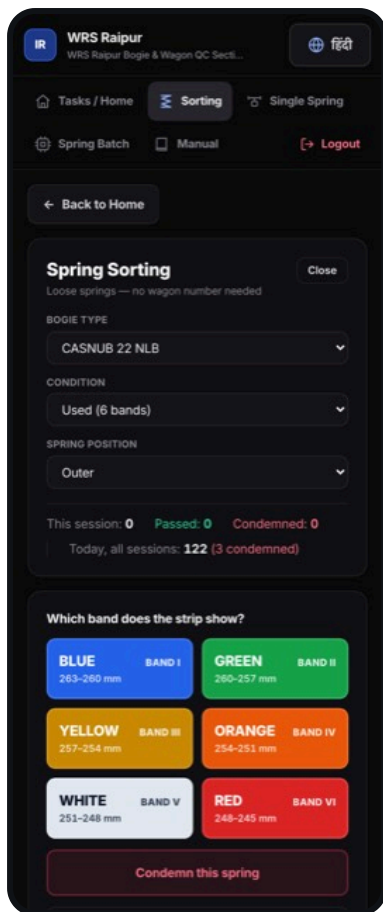

sorting

DO

1. Tap **Sorting** in the bar (or the **Springs** card, then **Sort springs**).

YOU MUST SEE

- ▶ **Bogie type** CASNUB 22 NLB, **Condition** Used (6 bands), **Spring position** Outer.
- ▶ The strip: six coloured buttons — **Blue I 263–260** **Green II 260–257** **Yellow III 257–254** **Orange IV 254–251** **White V 251–248** **Red VI 248–245** mm.
- ▶ Below the strip a red **Condemn this spring** bar and the **Gauge** picker.

WHAT IT PROVES

These are the six bands of the shop's own G-95 Rev-II (Tables 28–33), not a five-band draft from the internet. The Roman numerals and heights should match the strip on the bench exactly.


CHECKED ON THE BUILD

verified • 05:01:37 pm

- ✓ a Bogie type chooser
- ✓ Used / New
- ✓ Outer / Inner / Snubber
- ✓ six coloured band buttons for a used spring (6 found)
- ✓ each button carries a height range: BLUE BAND I 263–260 mm | GREEN BAND II 260–257 mm | YELLOW BAND III 257–254 mm | ORANGE BAND IV 254–251 mm | WHITE BAND V 251–248 mm | RED BAND VI 248–245 mm

IF IT IS NOT THERE

- Three buttons, not six: **Condition** is on New — set it to Used.
- No strip at all, a height box instead: **Bogie type** is on LWLH25 or LCCF20 (see 2.8).

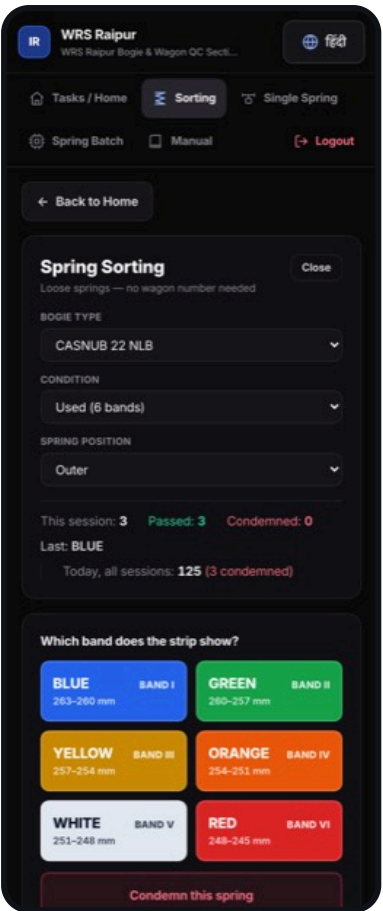

three sorted

DO

1. Tap **Green**, then **Yellow**, then **Blue**, a second apart.

YOU MUST SEE

- *This session*: rises 1 → 2 → 3, *Passed*: 3, and *Last*: names the band just tapped.
- A short chime on each tap.
- In **Your record today** under the strip: the three new lines at the top, newest first — Blue, then Yellow, then Green — each with the time, ≈height, position, bogie and gauge.

WHAT IT PROVES

One tap per spring is the whole bench workflow. At 700 springs a shift nothing else is fast enough, and the record under the strip is how an inspector proves their own count at the end of the day.


CHECKED ON THE BUILD

verified · 05:01:40 pm

- ✓ session total went 0 → 3
- ✓ Your record today lists the three newest first — 05:01 pm BLUE ≈261.5 mm · outer · 22 NLB / 05:01 pm YELLOW ≈255.5 mm · outer · 22 N / 05:01 pm GREEN ≈258.5 mm · outer · 22 NL
- ✓ with a time against each

IF IT IS NOT THERE

- The count rises but the record does not change: the record box is fetched from the server after each tap — if the phone is offline it says so and fills in when the network returns (see 2.20).

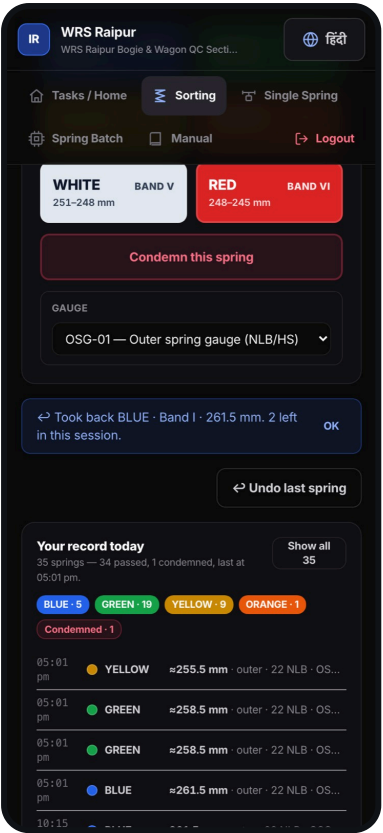

DO

1. Tap ↩ **Undo last spring** (right, under the strip).

YOU MUST SEE

- *This session* drops by one.
- A line names what was taken back: *Took back BLUE · Band I · 261.5 mm. 2 left in this session.*
- The line disappears from **Your record today**.

WHAT IT PROVES

A wrong tap is a certainty at bench speed, so the undo is one tap and says exactly what it undid. The record keeps a "taken back" mark internally — nothing is silently deleted.


CHECKED ON THE BUILD

verified · 05:01:45 pm

- ✓ total went 3 → 2
- ✓ the undone spring is named: "↩ Took back BLUE · Band I · 261.5 mm. 2 left in this session. OK"

IF IT IS NOT THERE

- **Undo last spring** greyed out: the session is empty, or the last tap is still sending — wait a second.

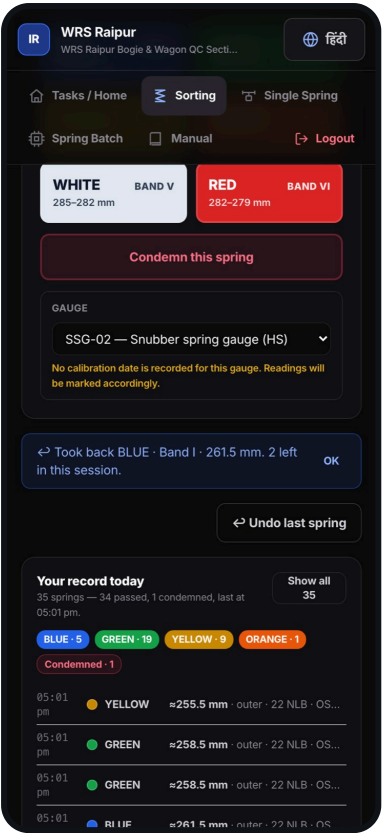

ssg 02

DO

1. Open the **Gauge** picker and read the list.
2. Set **Spring position** to Snubber.
3. Pick **SSG-02** in the gauge picker.

YOU MUST SEE

- ▶ The gauges are named: **ISG-01**, **OSG-01**, **OSG-02**, **SSG-02**, each with what it measures.
- ▶ On SSG-02 an amber note: *No calibration date is recorded for this gauge. Readings will be marked accordingly.*

WHAT IT PROVES

Every reading carries the gauge it was made with, so a drifting gauge can be found later (the admin sees this on the gauge register). An uncalibrated gauge does not stop work — it marks the readings.


CHECKED ON THE BUILD

verified · 05:01:47 pm


- ✓ gauges named: ISG-01 — Inner spring gauge (N, OSG-01 — Outer spring gauge (N, OSG-02 — Outer spring gauge (N, SSG-02 — Snubber spring gauge
- ✓ amber note: "No calibration date is recorded for this gauge. Readings will be marked accordingly."

IF IT IS NOT THERE

- No amber note on SSG-02: the gauge register has a date for it — the admin can check under Gauges; the demo seed leaves it blank on purpose.
- Set **Spring position** back to **Outer** before the next step.

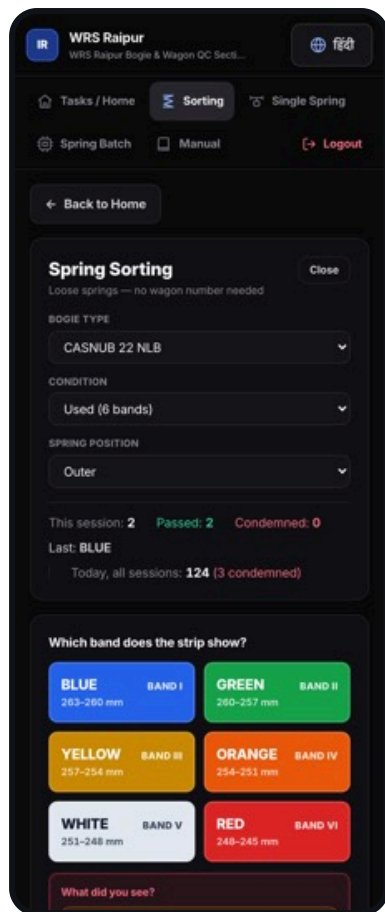

condemn open

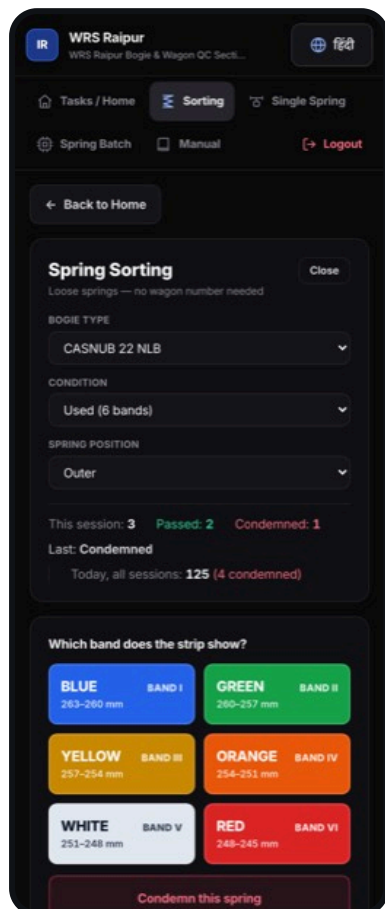

condemned

DO

1. Tap the red **Condemn this spring** bar.
2. Read the panel, tap **Back** — nothing is recorded.
3. Tap **Condemn this spring** again, then tap **Crack**.

YOU MUST SEE

- ▶ The panel asks *What did you see?* with **Off the strip (height), Crack, Corrosion, Deformation, Something else** and **Back**.
- ▶ An amber note says that for a crack, corrosion or deformation the photograph is the evidence — switch on photographing (2.7).
- ▶ The tap on **Crack** records it: *Condemned: 1*, a low buzz, and in **Your record today** a red line — **Condemned Crack · outer · 22 NLB · OSG-01**.
- ▶ No question about re-measuring — nothing was measured.

WHAT IT PROVES

The reason is the record. A spring condemned for a crack must never be filed as "200 mm" — the record shows the word, not an invented height.


CHECKED ON THE BUILD

verified · 05:01:50 pm

- ✓ reasons offered: "What did you see? For a crack, corrosion or deformation the photograph is the evidence. Switch on "Photograph springs while sorting" above —"
- ✓ Cancel closes it without recording
- ✓ the day's record shows it red, with the reason and no invented height: "05:01 pm Condemned Crack · outer · 22 NLB · OSG-01"
- ✓ session total 2 → 3, condemned count up by one
- ✓ no "re-measure?" question — nothing was measured

IF IT IS NOT THERE

- The record line shows a height instead of the reason, or a yellow *Worth a second look* panel appears asking you to re-measure: the phone is showing an old build — pull down to reload the page once.

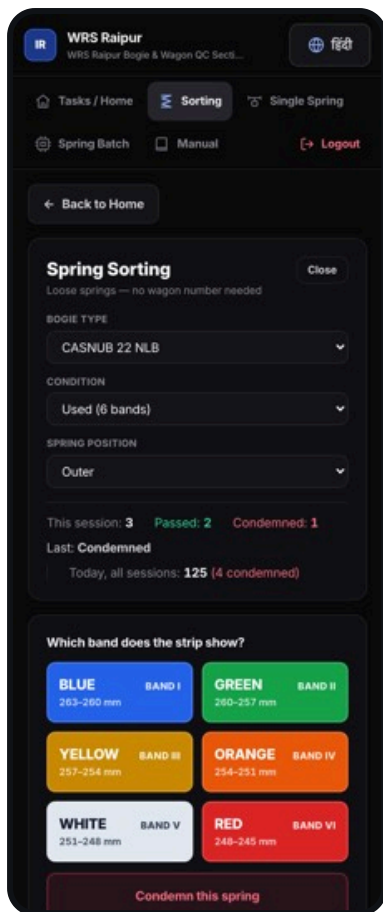

camera on

DO

1. Tick **Photograph springs while sorting**.
2. Put a spring in front of the camera and tap its band.
3. Put your hand in front of the lens and watch the badge.

YOU MUST SEE

- ▶ The live camera opens directly under the tick box, large (not a thumbnail), with a green **Photographing** badge.
- ▶ Each band tap saves a frame against the spring — no extra taps.
- ▶ A hand in front → *person excluded*. It never says "spring 98 %".
- ▶ **Teach the camera (advanced)** stays folded — it is not part of the day's work.

WHAT IT PROVES

The camera records evidence; it does not decide. The photograph is what a supervisor opens months later to see the crack that condemned the spring.

CHECKED ON THE BUILD

verified · 05:01:57 pm

- ✓ the live camera opens under the tick box
- ✓ the picture is large (260 px tall)
- ✓ a green "Photographing" badge
- ✓ "Teach the camera (advanced)" is folded away

By hand: The spring and the hand are yours.

IF IT IS NOT THERE

- No camera, a grey box: the browser has no camera permission or the page is on plain http — the address must start with **https://** and the certificate must be installed (section 1.4).
- The camera opens somewhere else on the page: reload once.

WRS Raipur
WRS Raipur Bogie & Wagon QC Sect...

Tasks / Home Sorting Single Spring

Spring Batch Manual Logout

Back to Home

Spring Sorting Close

Loose springs — no wagon number needed

BOGIE TYPE
LWLH25 (BOXNS)

CONDITION
Used

SPRING POSITION
Outer

This session: 3 Passed: 2 Condemned: 1
Last: Condemned
Today, all sessions: 125 (4 condemned)

What is the free height? (mm)

No colour band is published for this bogie — only serviceable or condemned. WMM 2.0 §309C

mm Record

Condemn this spring

GAUGE
OSG-01 — Outer spring gauge (NLB/HS)

Undo last spring

lwlh25

DO

1. Untick photographing.
2. Set **Bogie type** to **LWLH25 (BOXNS)**.
3. Then set it back to **CASNUB 22 NLB**.

YOU MUST SEE

- ▶ The six-button strip disappears; a single *Free height — how many mm?* box appears.
- ▶ A note: *No band table is published for this bogie — serviceable / condemn only. WMM 2.0 §309C.*
- ▶ The snubber position splits into Snubber outer / inner (G-112 Table 26).

WHAT IT PROVES

Where the standard publishes no bands, the app refuses to invent them. LWLH25 springs are judged serviceable or condemned against §309C, by a typed height.


CHECKED ON THE BUILD

verified · 05:02:02 pm

- ✓ the six-band strip is gone (0 band buttons)
- ✓ a height is typed instead
- ✓ the condemning height is cited to WMM §309C / G-112

IF IT IS NOT THERE

- A six-button strip on LWLH25: that would be an invented table — report it at once.

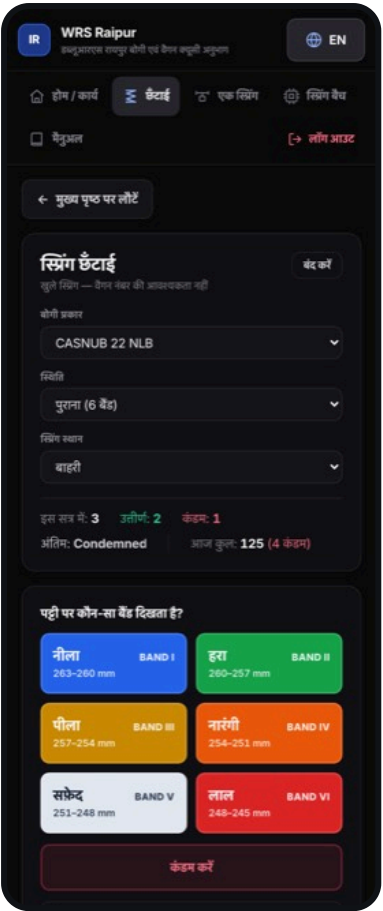

hindi

DO

1. Tap **हिंदी** top right.
2. Look at the strip, then tap **EN** to come back.

YOU MUST SEE

- ▶ **स्प्रिंग छँटाई** as the title; the bands read **नीला · हरा · पीला · नारंगी · सफ़ेद · लाल** in the same colours, with BAND I–VI and the same millimetres.
- ▶ The gauge names (OSG-01 ...) stay as printed on the gauges.

WHAT IT PROVES

Numbers and colours are the shared language of the bench; the words follow whoever is holding the phone.

CHECKED ON THE BUILD

verified · 05:02:05 pm


- ✓ the screen title is in Hindi
- ✓ band names in Hindi: नीला BAND I 263–26 | हरा BAND II 260–25 | पीला BAND III 257– | नारंगी BAND IV 254 | सफ़ेद BAND V 251–2 | लाल BAND VI 248–24
- ✓ the numbers are unchanged

IF IT IS NOT THERE


- A line still in English inside a Hindi screen: note which one — it is a missing translation, not a fault in the record.

One spring on a wagon 2.10

The same tables, tied to a wagon and bogie.

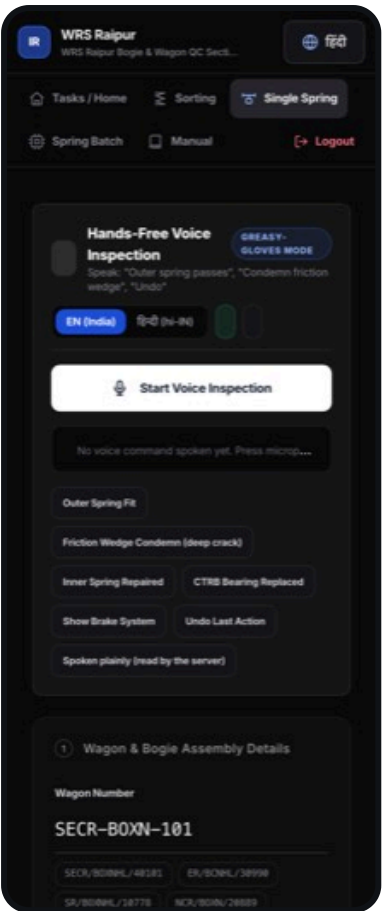

single spring

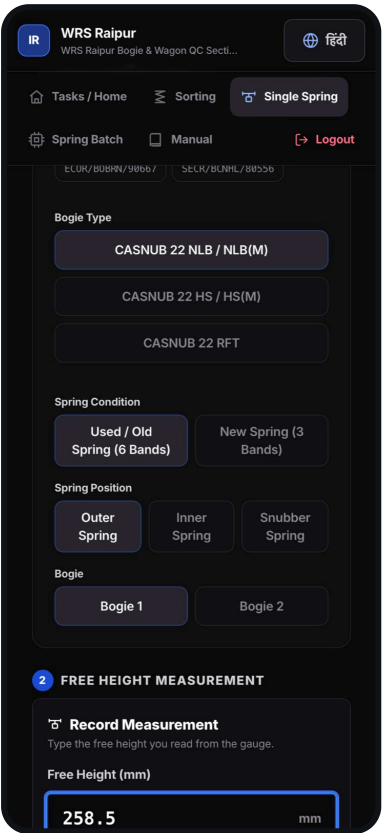

single 258 5

DO

1. Tap **Single Spring** in the bar.
2. Note it first asks which wagon and bogie.
3. Scroll to the height box and type **258.5**, then **244**, then **263.1**, then try to type **abc**.

YOU MUST SEE

- ▶ 258.5 → **Green**, Band II, *Table 28* cited.
- ▶ 244 → **CONDEMNED** with the reason (below the condemning limit).
- ▶ 263.1 → over height, condemned.
- ▶ "abc" cannot be typed at all — the box only takes a number; nothing crashes.

WHAT IT PROVES

The same tables as the bench, but tied to one wagon and bogie so the spring can be traced. Every verdict quotes its table.

CHECKED ON THE BUILD

verified · 05:02:09 pm

- ✓ it first asks which wagon and bogie
- ✓ a Free height box is on the screen
- ✓ 258.5 → Green
- ✓ Table 28 cited
- ✓ 244 → CONDEMNED
- ✓ 263.1 → over-height, condemned
- ✓ "abc" is refused (the box holds ""), no crash

IF IT IS NOT THERE

- A verdict without a table reference: report it — a verdict must always say where it came from.

IR

WRS Raipur

WRS Raipur Bogle & Wagon QC Secti...

हिंदी

Tasks / Home

Sorting

Single Spring

Spring Batch

Manual

Logout

ELDR/BDNRN/30667

SER/BCNHL/80556

Bogle Type

CASNUB 22 NLB / NLB(M)

CASNUB 22 HS / HS(M)

CASNUB 22 RFT

Spring Condition

Used / Old Spring (6 Bands)

New Spring (3 Bands)

Spring Position

Outer Spring

Inner Spring

Snubber Spring

Bogle

Bogle 1

Bogle 2

2

FREE HEIGHT MEASUREMENT

Record Measurement

Type the free height you read from the gauge.


Free Height (mm)

244mm


single 244

A wagon — WR/BCNHL/40112 and SER/BOXNHL/30914 2.11 – 2.17

Checklist, photographs, parts, the brake proforma, the timeline, a wheel.

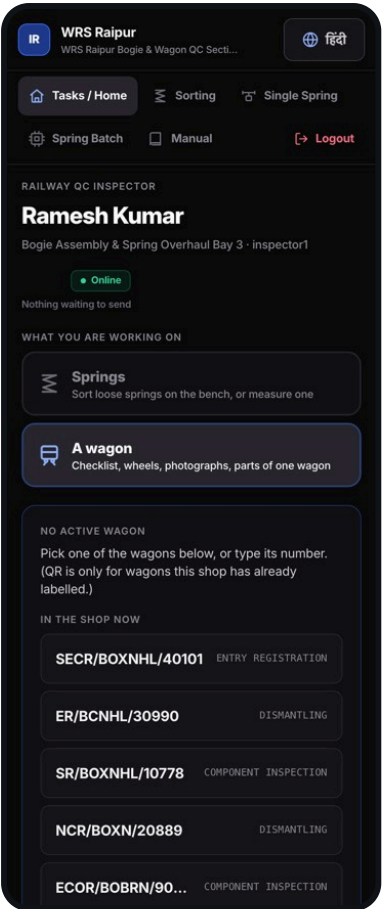

choose wagon

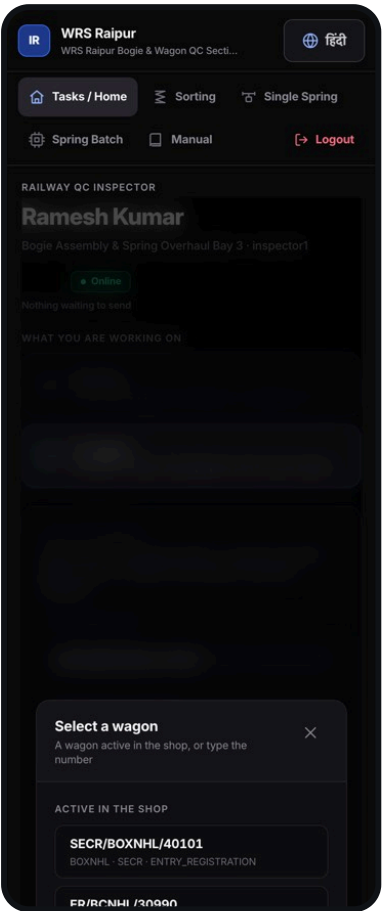

all wagons

DO

1. Tap **Tasks / Home**, then the **A wagon** card.
2. Tap **All wagons**.
3. Type **WR/BCNHL/40112** in *Or enter the number* and tap **Select** (or pick it from the list).
4. Tap **Continue checklist**.

YOU MUST SEE

- ▶ The picker lists the wagons in the shop with their stage; WR/BCNHL/40112 is at **Reassembly** (stage 5 of 7 on the stage bar).
- ▶ The wagon opens with its tabs: Checklist · Condition report · Release checks · Passport · Parts · Photos (4) · Timeline · Air-brake test · Sound.

WHAT IT PROVES

One wagon is "active" on the phone until you switch; every photograph, reading and part event lands on it.

CHECKED ON THE BUILD

verified · 05:02:18 pm

- ✓ the wagons in the shop, each with its stage
- ✓ WR/BCNHL/40112 opens

IF IT IS NOT THERE

- "No such wagon": check the slashes — WR/BCNHL/40112, capital letters.
- The picker shows a different set of wagons: the demo data was not seeded — run DEMO-DATA.cmd on the PC.

WRS Raipur

WRS Raipur Bogies & Wagon QC Back...

Tasks / Home

Sorting

Single Spring

Spring Batch

Manual

Logout

Back to Wagons List

WR/BCNHL/40112

BCNHL

WR

Due out: 2026-09-19

Advance to Next Stage

1

2

3

4

5

6

7

Entry ...

Dims ...

Comp ...

Repair ...

Reas ...

Final ...

Corr ...

Checklist

Condition report

Release check

Suggestions from history

Drawn from what this shop recorded on the same part before.

Nothing applies itself — each one shows its evidence and waits for you.

Suggest from history

Wheels — what the gauge read

BCN / BCN on CASHUB: new 1000 mm, may not leave a PCH below 919 mm, condemned below 906 mm (WD-67037-5-01)


(WMM Ch 6, WD-66266/5-10). Diameters on one axle within 0.5 mm, one bogie 13 mm, the wagon 25 mm. Thread diameter is measured 66.5 mm from the rim face (63.5 mm from the flange end).

Diameters: Wagon Maintenance Manual Ch 6 (2020 WD-66266/5-6, Variation: RCA Part 6 Rule 2.6.3.2, Flange and far left). RCA Part 6 Page 12 (type defect) gauge. Hollow type: WMM notes.

AXLE 1 - RODS 1

AXLE 2 - RODS 1

40112 open

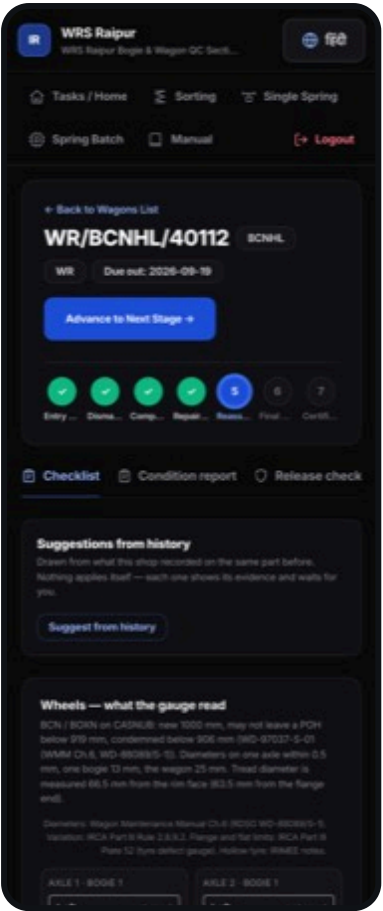

40112 checklist

DO

1. Tap the **Checklist** tab.
2. Pick a category chip (Springs, Wheels & Axles, Bearings ...).

YOU MUST SEE

- ▶ Each item has **Pass** • **Fail** • **Condemned** • **Repaired** • **Replaced**.
- ▶ Condemning an item asks for a note; a **Mandatory** item cannot be skipped.
- ▶ The eight category chips above: Springs, Wheels & Axles, Bearings, Brake System & Rigging, Couplers & Draft Gear, Bogie Frame & Bolster, Friction Wedges, Body & Underframe.

WHAT IT PROVES

The eight CASNUB categories from the WMM, item by item, with the standard each item cites.


CHECKED ON THE BUILD

verified • 05:02:30 pm


- ✓ Pass • Fail • Condemned • Repaired • Replaced per item
- ✓ category tabs

IF IT IS NOT THERE

- Buttons greyed out: the wagon is already released, or you are signed in as a role that cannot inspect.

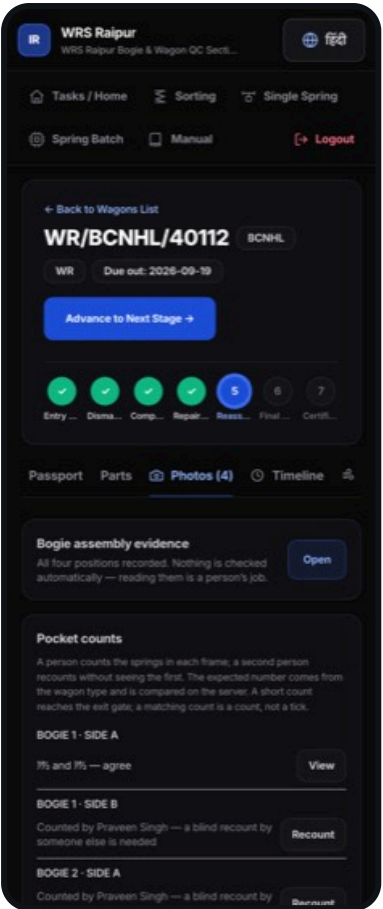

40112 photos

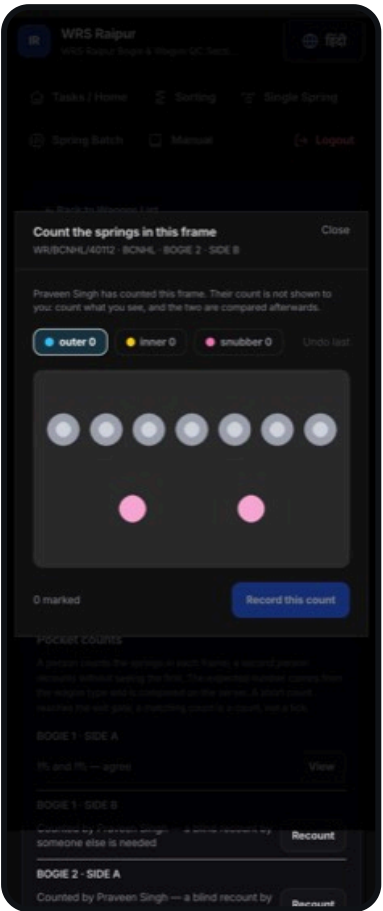

40112 counter

DO

1. Tap the **Photos (4)** tab.
2. Read the four **Pocket counts** lines.
3. Tap **Recount** on Bogie 2 · Side B and look at the counter, then close it.

YOU MUST SEE

- ▶ Four frames: Bogie 1 · Side A/B, Bogie 2 · Side A/B.
- ▶ Bogie 1 · Side A: $\frac{7}{2}$ and $\frac{7}{2}$ — agree.
- ▶ Bogie 2 · Side B: *Counted by Praveen Singh — a blind recount by someone else is needed*, and **no figures**.
- ▶ The counter never shows the expected number — you count what is in the photograph.

WHAT IT PROVES

A second person counts without seeing the first count. Only a supervisor sees "6 of 7 outer — one pocket may be empty". This is how a short bogie is caught before the exit gate, without anyone being led.


CHECKED ON THE BUILD

verified · 05:02:33 pm

- ✓ four frames (4)
- ✓ Bogie 1·A: "BOGIE 1 · SIDE A $\frac{7}{2}$ and $\frac{7}{2}$ — agree View"
- ✓ Bogie 2·B: "BOGIE 2 · SIDE B Counted by Praveen Singh — a blind recount by someone else is needed Recount" — no figures
- ✓ the counter does not show the expected number

IF IT IS NOT THERE

- The inspector's screen shows "6 of 7" or "short": that is a leak of the supervisor's view — report it.
- The counter shows "expected 7": same — report it.

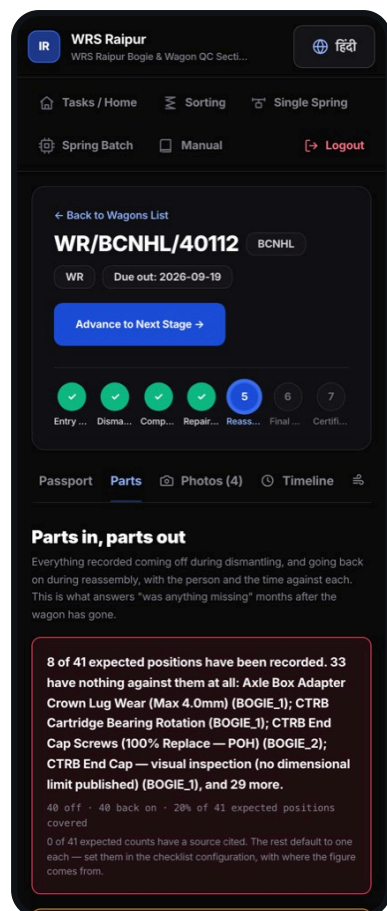

40112 parts

DO

1. Tap the **Parts** tab.
2. Read the balance line and open **Show every entry**.
3. Look at the form: **Came off · Went back on · Replaced with new · Scrapped · Not being refitted**, then Category, Position, Part, How many.

YOU MUST SEE

- ▶ The heading **Parts in, parts out** and a balance such as *40 off · 40 back on · 20 % of 41 expected positions covered*.
- ▶ In the list: the springs off at Dismantling, one outer spring **Replaced with new — crack at the second coil, new from Stores**, the rest back on at Reassembly. No warning box about a position with more back on than came off.
- ▶ Recording a part asks which position; Scrapped and Not being refitted ask for a reason.

WHAT IT PROVES

Months after the wagon has gone, this list answers "was anything missing" — with the person and the time against each entry.


CHECKED ON THE BUILD

verified · 05:02:40 pm

- ✓ "Parts in, parts out"
- ✓ the ledger balance: "40 off · 40 back on · 20% of 41 expected positions covered 0 of 41 expected counts have a source cited"
- ✓ the "Came off" button
- ✓ the "Went back on" button
- ✓ the "Replaced with new" button
- ✓ the "Scrapped" button
- ✓ the "Not being refitted" button
- ✓ Category, Position, Part, How many — then "Record: ..."
- ✓ the replaced spring is in the list with its reason
- ✓ no position has more back on than came off

IF IT IS NOT THERE

- A red box saying the wagon has no parts record at all: the demo data on this server predates this build — re-seed with DEMO-DATA.cmd on the PC.

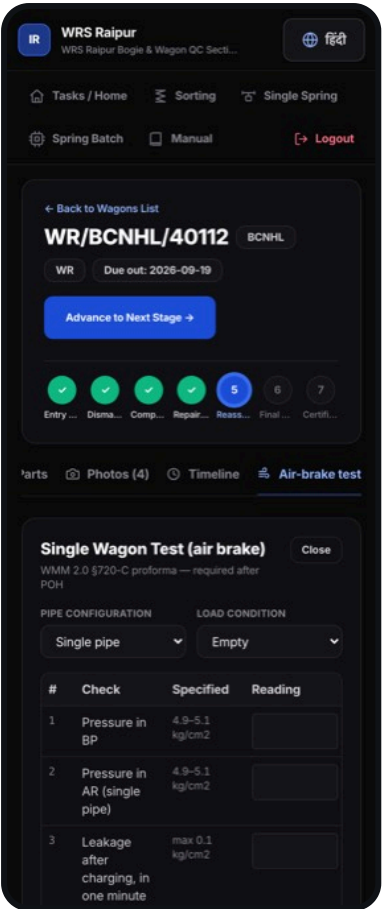

40112 swt

DO

1. Tap the **Air-brake test** tab.
2. Type **3.2** in row 1 *Pressure in BP*, watch the box, then clear it.

YOU MUST SEE

- ▶ **Single Wagon Test (air brake)** — WMM 2.0 §720-C — 14 rows: 12 readings with the specified range beside each, 2 yes/no rows (**As specified** / **Not**).
- ▶ 3.2 against 4.9–5.1 turns the box red as you type.
- ▶ The foot says how many rows are still blank; **Record test** refuses until every row is answered.

WHAT IT PROVES


The proforma the WMM requires after POH, with each limit beside the box so the person testing does not have to remember it.

CHECKED ON THE BUILD verified • 05:02:44 pm

- ✓ the proforma has 14 rows (12 readings, 2 yes/no)
- ✓ headed WMM 2.0 §720-C
- ✓ 3.2 in "Pressure in BP" (4.9–5.1) turns the box red as you type
- ✓ the "Not" button on a yes/no row is fully on screen

IF IT IS NOT THERE

- The **Not** button cut off at the right edge: an old build on the phone — reload once.

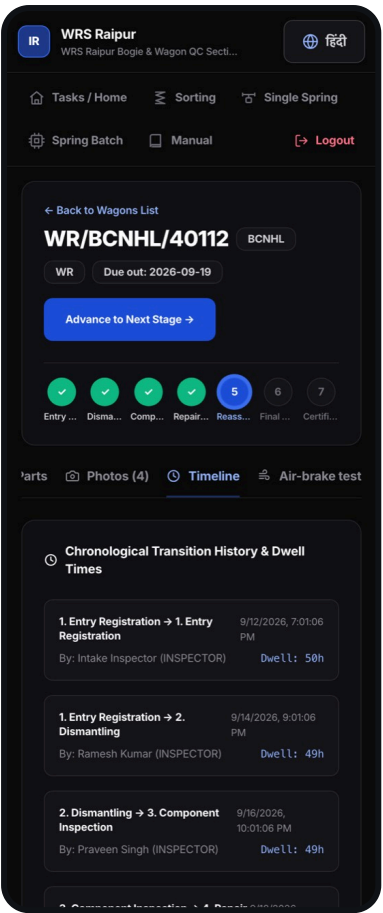

40112 timeline

DO

1. Tap the **Timeline** tab.

YOU MUST SEE

- Every stage the wagon has passed, with the date and who moved it: Entry registration → Dismantling → Component inspection → Repair → Reassembly.


WHAT IT PROVES

Turnaround and "which stage is slow" on the DRM dashboard are computed from exactly these lines — nothing is estimated.


CHECKED ON THE BUILD

- ✓ stages listed
- ✓ with dates

verified · 05:02:48 pm

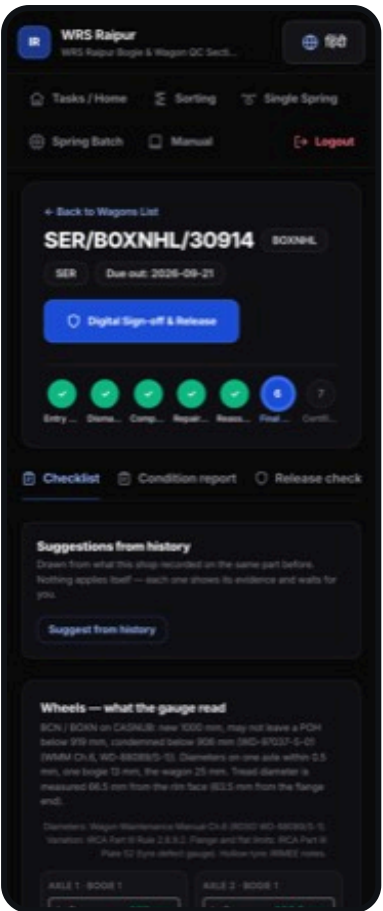

30914 wheels

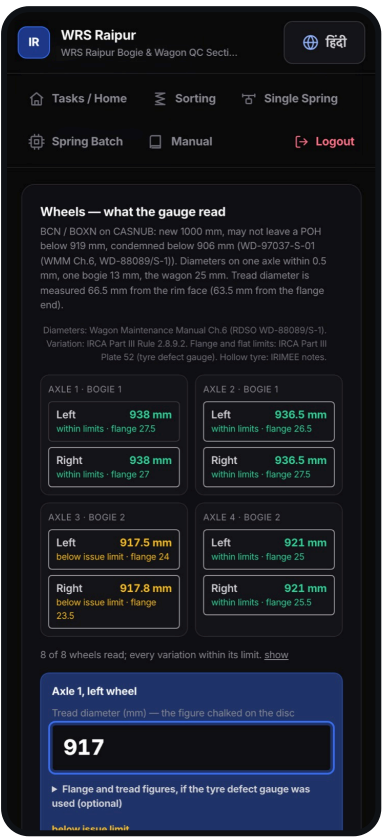

30914 wheel 917

DO

1. Home → **Switch wagon** → **All wagons** → **SER/BOXNHL/30914** → Continue checklist.
2. On the Checklist tab scroll to the wheels (Axle 1 · bogie 1 ... Axle 4 · bogie 2).
3. Tap **Axle 1 · Left**. Type **917**.

YOU MUST SEE

- ▶ One large box: *Tread diameter (mm) — the figure chalked on the disc.*
- ▶ Under it, as you type: **below issue limit** — *Tread diameter 917 mm — last shop issue 919 mm, condemn 906 mm (WD-97037-S-01 (WMM Ch.6, WD-88089/S-1)).*
- ▶ Flange figures are folded under *Flange and tread figures, if the tyre defect gauge was used (optional).*
- ▶ Axle 3 already reads 917.5 / 917.8 in amber — this is the pair that blocks the wagon at the gate (section 3).

WHAT IT PROVES

The one number every wheel has is the chalked diameter; the rest is optional and stays out of the way. The limit and its drawing are quoted, never remembered.

CHECKED ON THE BUILD

verified · 05:02:52 pm

- ✓ SER/BOXNHL/30914 opens
- ✓ one large box for the tread diameter
- ✓ 917 → "below issue limit Tread diameter 917 mm — last shop issue 919 mm, condemn 906 mm (WD-97037-S-01 (WMM Ch.6, WD-88089/S-1))"
- ✓ the drawing and rule are cited beneath
- ✓ flange figures are folded under "optional"


IF IT IS NOT THERE

- A row of six empty boxes with no verdict: an old build — reload.
- Tap **Cancel** — do not record 917 on axle 1; the demo relies on axle 3 being the blocked pair.

Reading a painted number; asking the manual in its own words.

2.18 Reading a wagon number with the camera

☐ Seen it

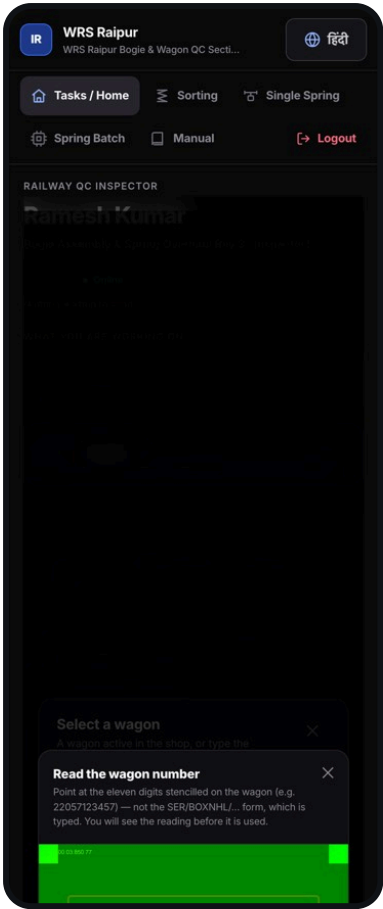

number camera

DO

- 1. Home → **Switch wagon** → **All wagons** → tap the camera icon **Read the number painted on the wagon.**
- 2. Point at the **eleven stencilled digits** — a sheet with **22057123457** in large bold digits is enough (a valid BOXNHL number). Not the SER/BOXNHL/... form: that is typed.

YOU MUST SEE

- ▶ The camera opens with a frame guide the width of a stencilled number.
- ▶ It proposes the digits and the wagon type they imply; you **confirm** or correct. Nothing is recorded until you confirm.
- ▶ A number whose check digit fails is not offered; letters are never read.

WHAT IT PROVES

Eleven characters with gloves on, standing at the wagon, is exactly what a camera is for — but the person, not the camera, commits the number.

CHECKED ON THE BUILD


verified · 05:03:05 pm

- ✓ the camera opens
- ✓ it will propose the text for you to confirm or correct


By hand:

IF IT IS NOT THERE

- Reads nothing: you are pointing at letters (SER/BOXNHL/...) or a number with a wrong check digit — use the eleven digits; more light, closer, hold still. Typing the number is always there beneath.

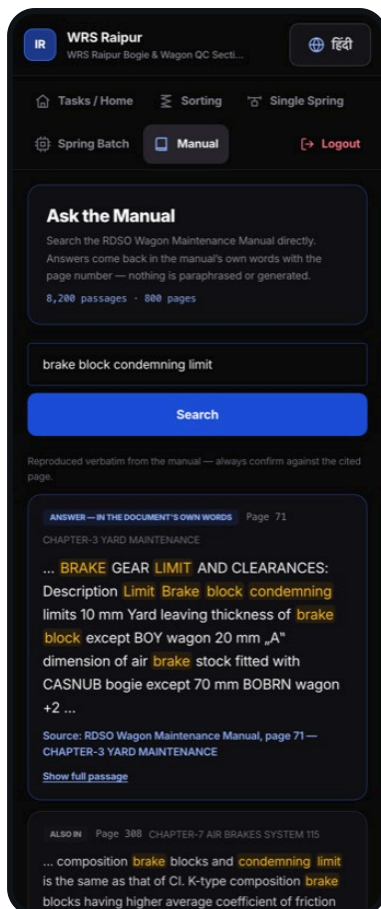

manual brake block

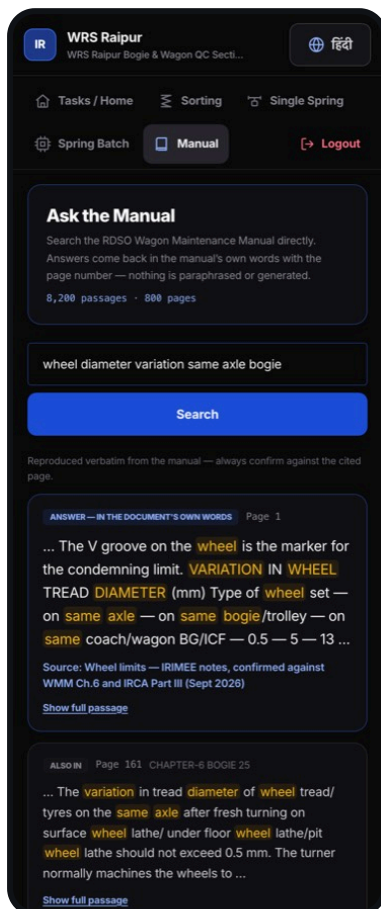

manual irca

DO

1. Tap **Manual** in the bar.
2. Search **brake block condemning limit**.
3. Then search **wheel diameter variation same axle bogie**.

YOU MUST SEE

- ▶ The first hit is labelled **ANSWER — IN THE DOCUMENT'S OWN WORDS**, large, with the page number, and a *Source*: line naming the manual and page.
- ▶ More hits under **ALSO IN**.
- ▶ The wheel question names **IRCA Part III** as its source.

WHAT IT PROVES

It quotes; it never paraphrases. 8,200 passages from the shipped manuals, on the phone, with no internet. If a passage does not exist it says so rather than inventing one.

CHECKED ON THE BUILD


verified • 05:04:44 pm

- ✓ "Answer — in the document's own words"
- ✓ a Source line beneath it
- ✓ more under "Also in"
- ✓ IRCA Part III named for the wheel question


IF IT IS NOT THERE

- "Manual not indexed": run INDEX-MANUALS.cmd on the PC.

What must keep working and what must be refused.

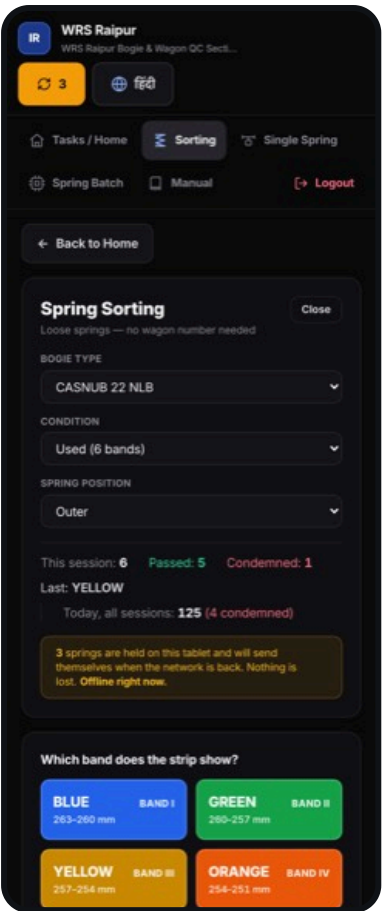

offline three

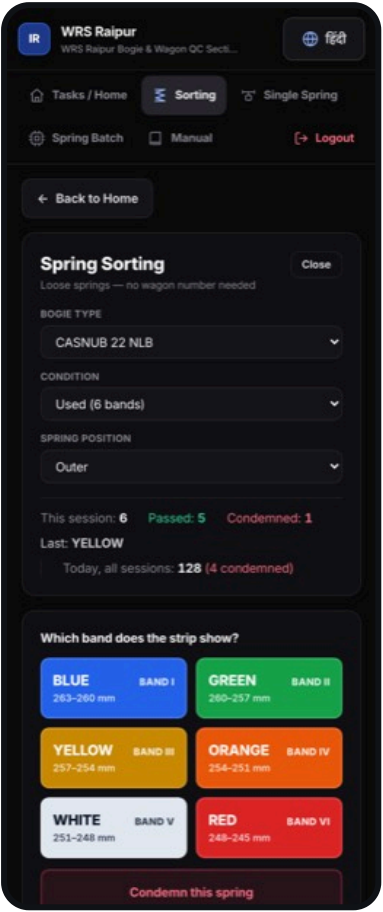

back online

DO

1. Turn the phone's Wi-Fi off (mobile data is already off).
2. On **Sorting**, tap three bands.
3. Turn Wi-Fi back on and wait up to a minute.

YOU MUST SEE

- ▶ The three record with the usual chime; a banner: *3 springs are held on this tablet and will send themselves when the network is back. Nothing is lost.*
- ▶ With Wi-Fi back the banner clears and **Your record today** gains exactly three lines — no duplicates.

WHAT IT PROVES

The shed has dead spots. Work continues; the record catches up; nothing doubles when the network flickers.


CHECKED ON THE BUILD

verified • 05:04:55 pm

- ✓ three springs sort with no network
- ✓ the queued count shows: "3 springs are held on this tablet and will send themselves when the network is back. Nothing is lost"
- ✓ the queue empties once the network is back
- ✓ exactly three more in the records (36 → 39), no duplicates

IF IT IS NOT THERE

- The page will not open with Wi-Fi off: the app was never installed for offline use — that needs the certificate and one visit over https first (section 1.4).
- Six lines instead of three: report it with the time — that would be a duplicate on resend, which the server is built to refuse.

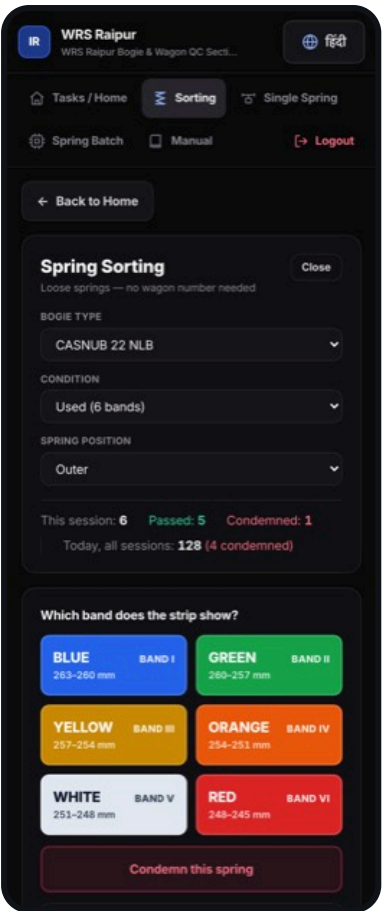

typed dashboard

DO

1. In the address bar add **/dashboard** to the app address and open it.
2. Do the same with **/audit**.

YOU MUST SEE

- ▶ Only the inspector's own screens appear — there is no DRM dashboard or audit page to reach by typing.
- ▶ On the server the DRM's analytics and the audit data answer **403 refused** to an inspector's sign-in.

WHAT IT PROVES

Roles are enforced on the server by capability, not by hiding buttons.


CHECKED ON THE BUILD

verified · 05:05:07 pm

- ✓ the DRM's analytics answer 403 (refused) to an inspector's token
- ✓ the audit data answers 403 (refused) to an inspector's token
- ✓ the inspector still sees only the inspector's screens

IF IT IS NOT THERE

- A dashboard with figures on an inspector's phone: report it — that is a permission fault.

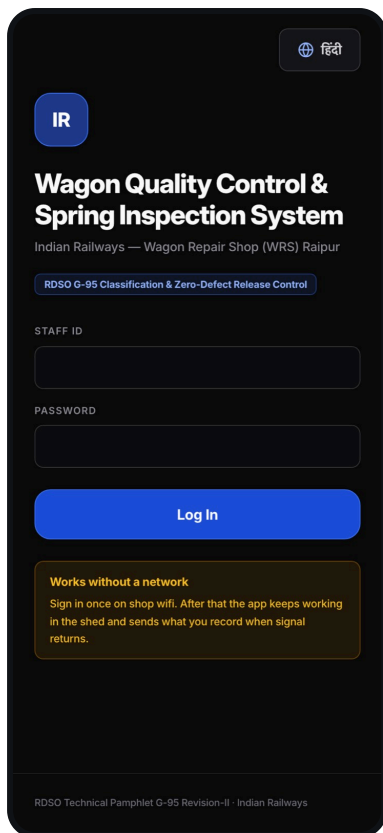

signed out

DO

1. Tap the red **Logout** in the bar.
2. Press the phone's back button.

YOU MUST SEE

- The sign-in page.
- Back does not reopen a signed-in screen.

WHAT IT PROVES

A phone left on the bench must not carry a live session.

CHECKED ON THE BUILD

verified • 05:05:11 pm

- ✓ the sign-in page
- ✓ the back button does not reopen a signed-in screen