


CHARGE-PERMIT-01 v0.4 – ARM pull-down 47k for MCU inverter; complete charger NOT qualified

FAULT_BUS_N LOW clears Q even with ARM HIGH. Releasing fault alone does not re-arm.
D and PRE tied HIGH. Only a new ARM rising edge after reset recovery may set Q. Q-bar intentionally unused.
External fault sources / MCU revoke must sink or release; never drive shared bus HIGH.

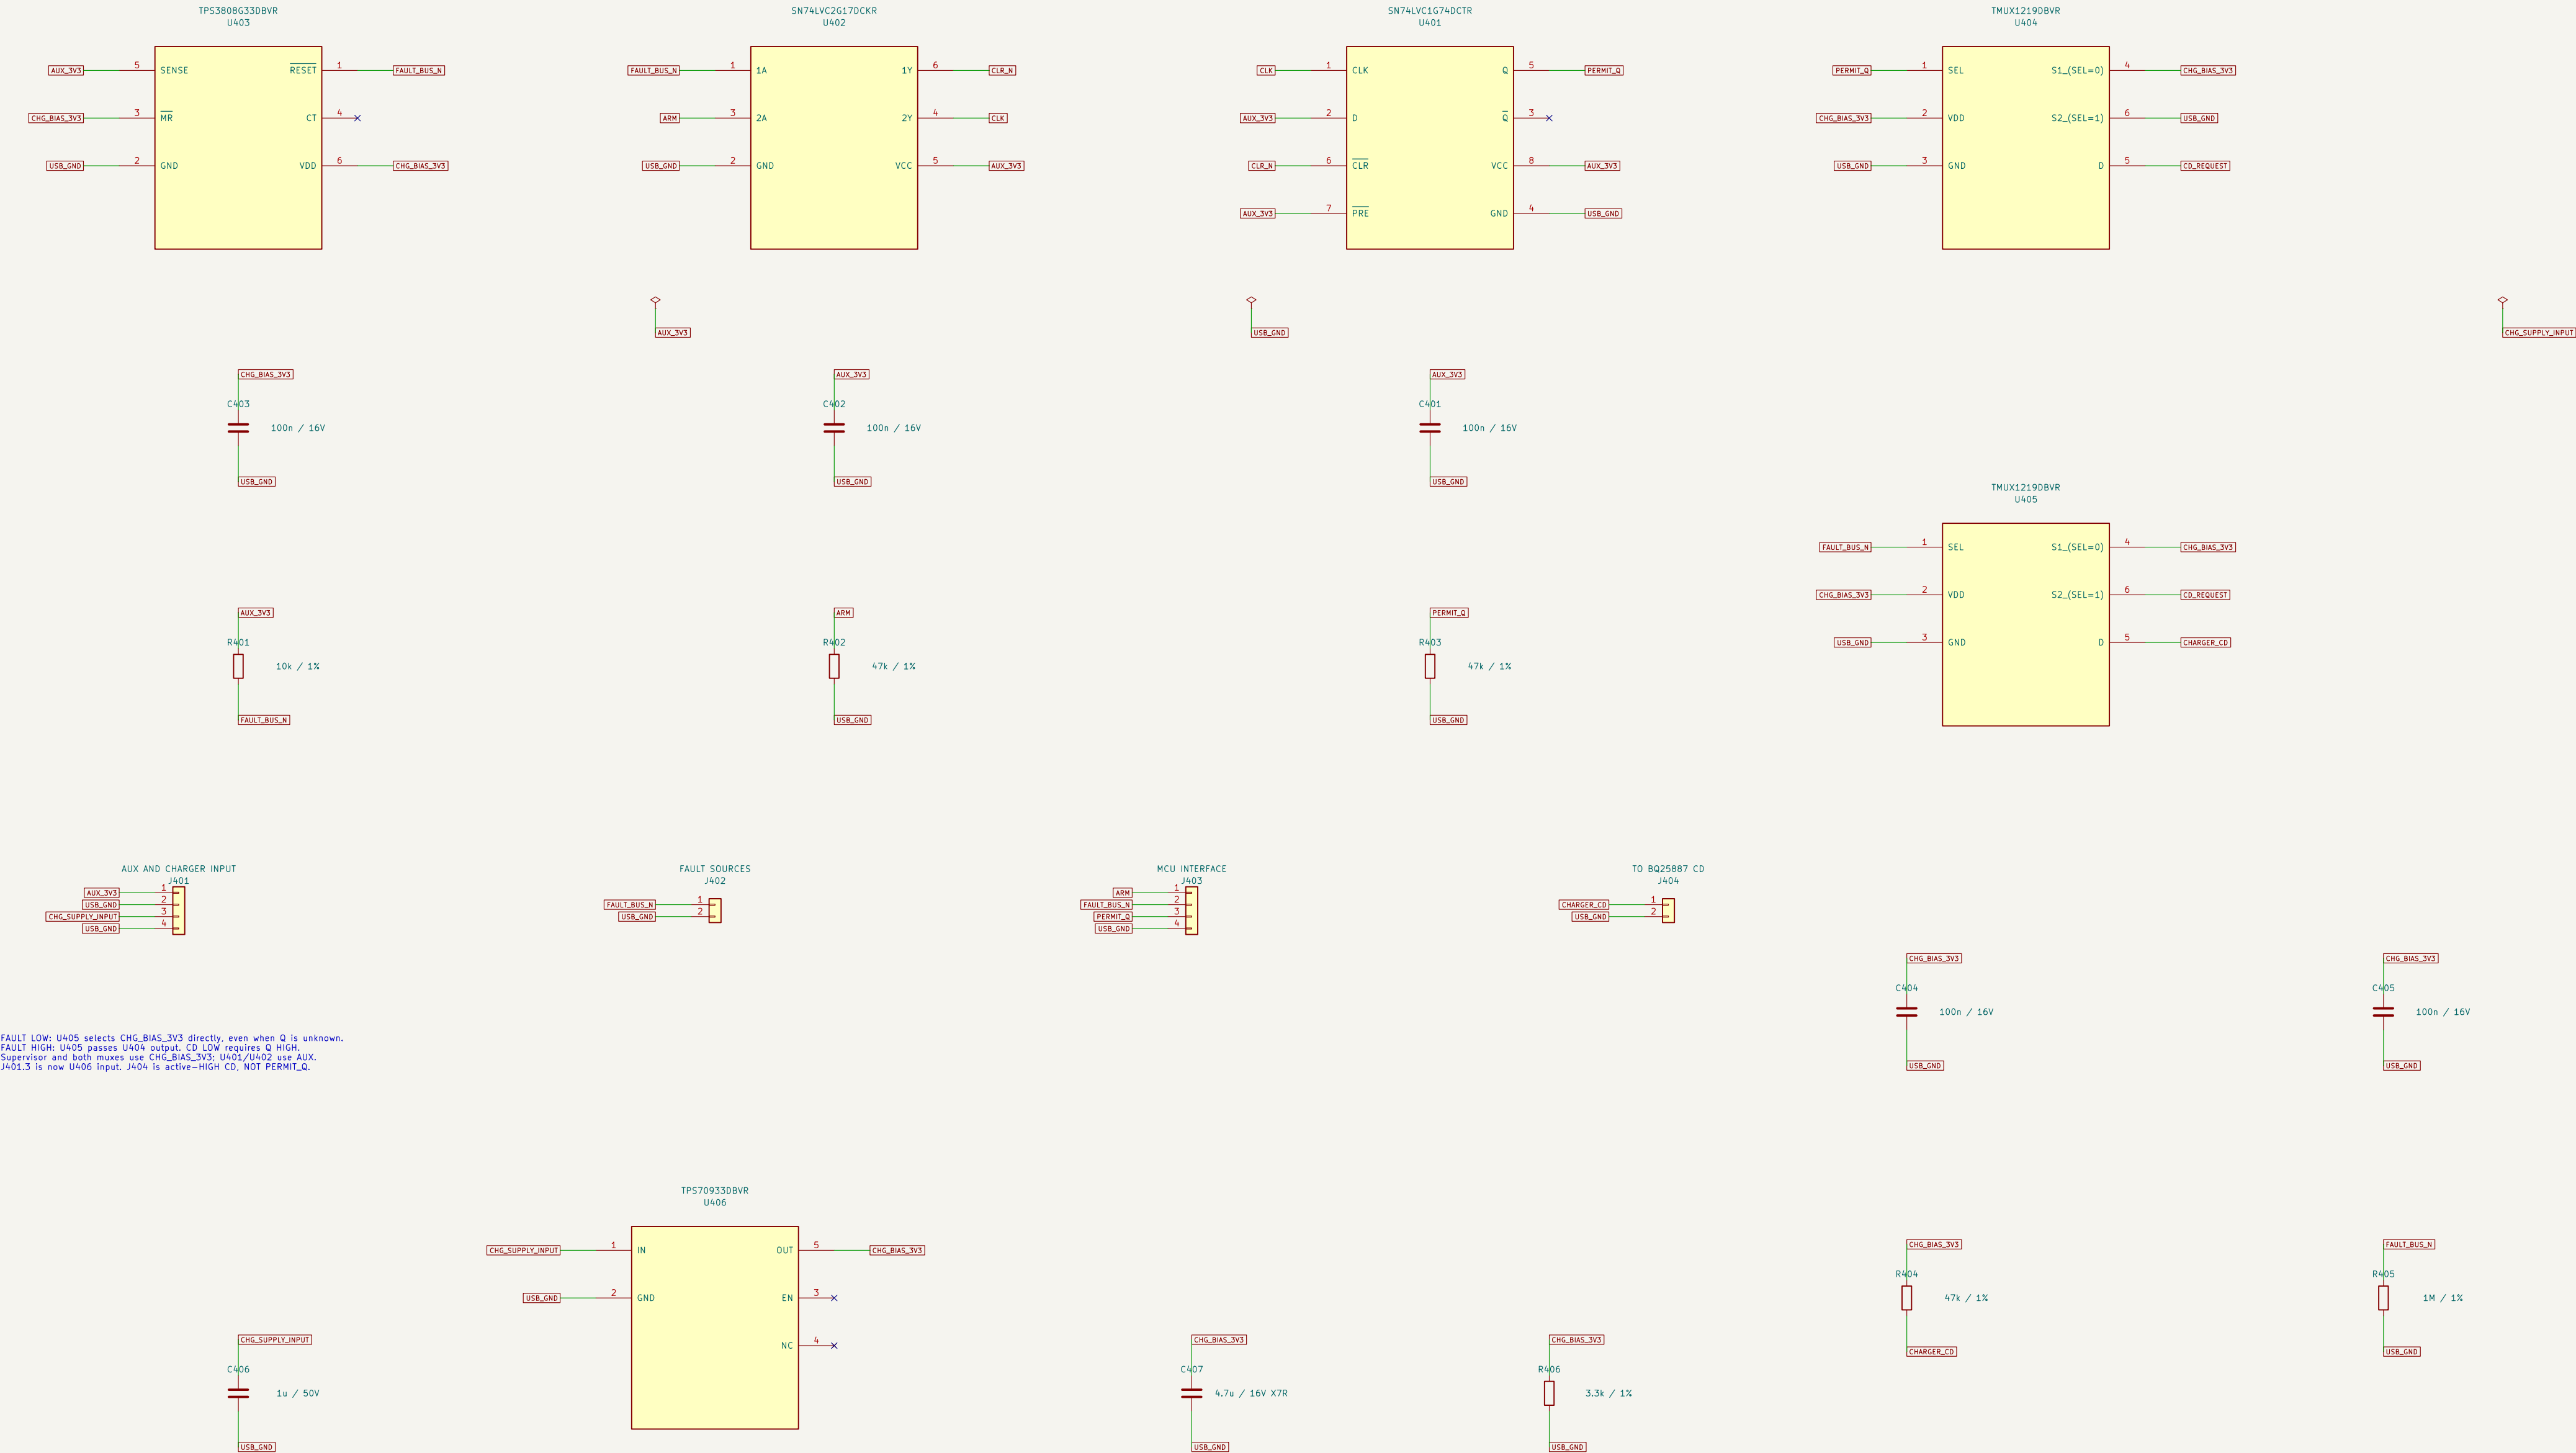

CHG_BIAS_3V3 is now regulated 3.3V, target 3.0-3.6V. U406 tolerates the conditional 5.55V input clamp.
AUX 3.0-3.6V; SENSE falling nominal 3.07V. Delays/fast ramps/bias loss and restart still require measurement.
No MCU, watchdog, INA300 or charger power stage here. This sheet does not authorize battery connection.