
ProtoBot Arduino Soldering Guide

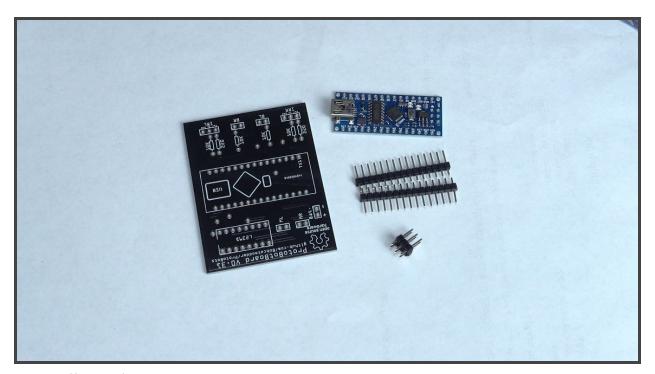

You will need:

Parts:


• 1 x Arduino with pin headers (comes in a little antistatic baggy)

Tools:


• Soldering iron with fine tip

Note: The board is nice to have on hand to keep the pins at the correct angle while soldering.




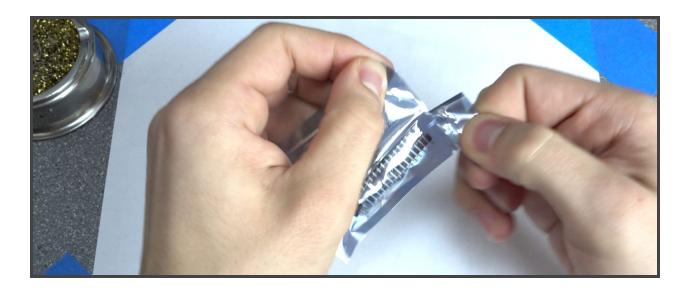

• Open the anti-static baggy and remove its contents

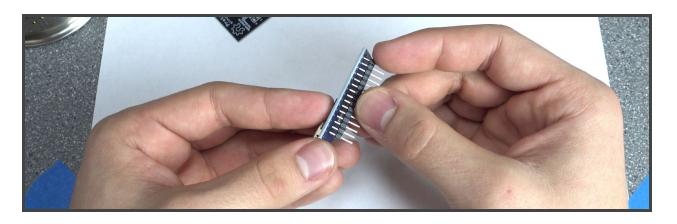


• Insert the long rows of header pins into the bottom of the arduino, short side up, on both sides

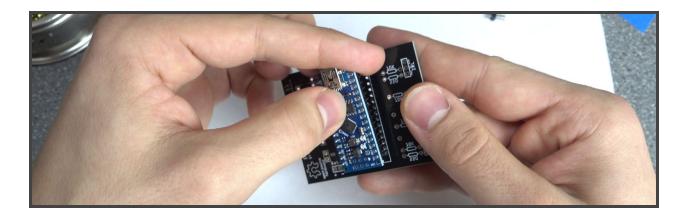

• Insert the arduino and header pins into the board, to hold it in place while soldering



Begin with the corner pins, and solder each pin to the Arduino

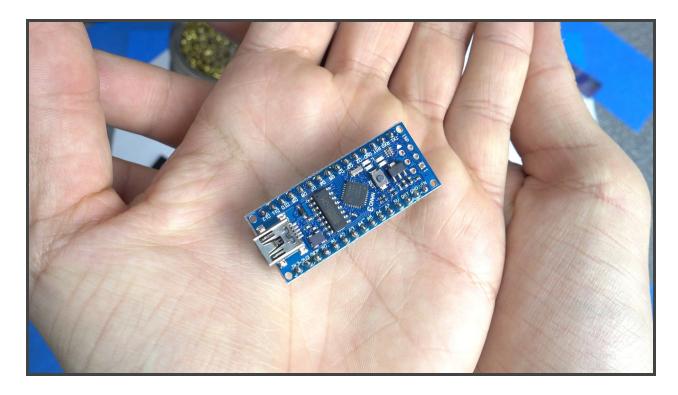

Your Arduino is ready to use!