

OPC Unified Architecture

Specification

Part 10: Programs

Release 1.03

July 19, 2015

Specification Type:	Industry Standard Specification	Comments:	Report or view errata: http://www.opcfoundation.org/errata
Title:	OPC Unified Architecture	Date:	July 19, 2015
	Part 10 :Programs		
Version:	Release 1.03	Software: Source:	MS-Word OPC UA Part 10 - Programs 1.03 Specification.docx
Author:	Siemens AG	Status:	Release

CONTENTS

	CUDEC	OSITIENTO	
R		3 Highlights	
1	Scope.		1
2	Referer	nce documents	1
3	Terms,	definitions and conventions	1
	3.1 Te	erms and definitions	1
	3.2 Al	obreviations	2
4	Concep	ts	2
	4.1 G	eneral	2
	4.2 Pi	rograms	3
	4.2.1	Overview	3
	4.2.2	Security considerations	4
	4.2.3	Program Finite State Machine	4
	4.2.4	Program states	5
	4.2.5	State transitions	6
	4.2.6	Program state transition stimuli	
	4.2.7	Program Control Methods	
	4.2.8	Program state transition effects	
	4.2.9	Program result data	
	4.2.10	Program lifetime	
5	Model .		8
		eneral	
		rogramType	
	5.2.1	Overview	
	5.2.2	ProgramType Properties	
	5.2.3	ProgramType components	
	5.2.4	ProgramType causes (Methods)	
	5.2.5	ProgramType effects (Events)	
	5.2.6	AuditProgramTransitionEventType	19
	5.2.7	FinalResultData	
	5.2.8	ProgramDiagnostic DataType	
	5.2.9	ProgramDiagnosticType VariableType	
Αı	,	formative) Program example	
		verview	
		omainDownload Program	
	A.2.1	General	
	A.2.2	DomainDownload states	
	A.2.3	DomainDownload transitions	
	A.2.4	DomainDownload Methods	
	A.2.5	DomainDownload Events	
	A.2.6	DomainDownload model	∠ɔ

FIGURES

Figure 1 – Automation facility control	3
Figure 2 – Program illustration	4
Figure 3 – Program states and transitions	5
Figure 4 – Program Type	9
Figure 5 – Program FSM References	11
Figure 6 – ProgramType causes and effects	15
Figure A.1 – Program example	22
Figure A.2 – DomainDownload state diagram	23
Figure A.3 – DomainDownloadType partial state model	29
Figure A.4 – Ready To Running model	32
Figure A.5 – Opening To Sending To Closing model	34
Figure A.6 – Running To Suspended model	35
Figure A.7 – Suspended To Running model	36
Figure A.8 – Running To Halted – Aborted model	37
Figure A.9 – Suspended To Aborted model	38
Figure A.10 – Running To Completed model	39
Figure A.11 – Sequence of operations	40
TABLES	
Table 1 – Program Finite State Machine	4
Table 2 – Program states	
Table 3 – Program state transitions	
Table 4 – Program Control Methods	
Table 5 – ProgramType	
Table 6 – Program states	12
Table 7 – Program transitions	13
Table 8 – ProgramType causes	15
Table 9 - ProgramTransitionEventType	17
Table 10 – ProgramTransitionEvents	18
Table 11 – AuditProgramTransitionEventType	19
Table 12 – ProgramDiagnosticDataType structure	20
Table 13 – ProgramDiagnosticDataType definition	20
Table 14 – ProgramDiagnosticType VariableType	21
Table A.1 – DomainDownload states	24
Table A.2 – DomainDownload Type	25
Table A.3 – Transfer State Machine Type	26
Table A.4 – Transfer State Machine – states	27
Table A.5 – Finish State Machine Type	27
Table A.6 – Finish State Machine – states	28
Table A.7 – DomainDownload Type Property Attributes variable values	28
Table A.8 – Additional DomainDownload transition types	30

Table A.9 – Start Method additions	32
Table A.10 – StartArguments	33
Table A.11 – IntermediateResults Object	34
Table A.12 – Intermediate result data Variables	35
Table A.13 – FinalResultData	38
Table A.14 – Final result Variables	39

UNIFIED ARCHITECTURE -

FOREWORD

This specification is the specification for developers of OPC UA applications. The specification is a result of an analysis and design process to develop a standard interface to facilitate the development of applications by multiple vendors that shall inter-operate seamlessly together.

Copyright © 2006-2015, OPC Foundation, Inc.

AGREEMENT OF USE

COPYRIGHT RESTRICTIONS

Any unauthorized use of this specification may violate copyright laws, trademark laws, and communications regulations and statutes. This document contains information which is protected by copyright. All Rights Reserved. No part of this work covered by copyright herein may be reproduced or used in any form or by any means--graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems--without permission of the copyright owner.

OPC Foundation members and non-members are prohibited from copying and redistributing this specification. All copies must be obtained on an individual basis, directly from the OPC Foundation Web site http://www.opcfoundation.org.

PATENTS

The attention of adopters is directed to the possibility that compliance with or adoption of OPC specifications may require use of an invention covered by patent rights. OPC shall not be responsible for identifying patents for which a license may be required by any OPC specification, or for conducting legal inquiries into the legal validity or scope of those patents that are brought to its attention. OPC specifications are prospective and advisory only. Prospective users are responsible for protecting themselves against liability for infringement of patents.

WARRANTY AND LIABILITY DISCLAIMERS

WHILE THIS PUBLICATION IS BELIEVED TO BE ACCURATE, IT IS PROVIDED "AS IS" AND MAY CONTAIN ERRORS OR MISPRINTS. THE OPC FOUDATION MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, WITH REGARD TO THIS PUBLICATION, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF TITLE OR OWNERSHIP, IMPLIED WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR USE. IN NO EVENT SHALL THE OPC FOUNDATION BE LIABLE FOR ERRORS CONTAINED HEREIN OR FOR DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, RELIANCE OR COVER DAMAGES, INCLUDING LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY ANY USER OR ANY THIRD PARTY IN CONNECTION WITH THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

The entire risk as to the quality and performance of software developed using this specification is borne by you.

RESTRICTED RIGHTS LEGEND

This Specification is provided with Restricted Rights. Use, duplication or disclosure by the U.S. government is subject to restrictions as set forth in (a) this Agreement pursuant to DFARs 227.7202-3(a); (b) subparagraph (c)(1)(i) of the Rights in Technical Data and Computer Software clause at DFARs 252.227-7013; or (c) the Commercial Computer Software Restricted Rights clause at FAR 52.227-19 subdivision (c)(1) and (2), as applicable. Contractor / manufacturer are the OPC Foundation,. 16101 N. 82nd Street, Suite 3B, Scottsdale, AZ, 85260-1830

COMPLIANCE

The OPC Foundation shall at all times be the sole entity that may authorize developers, suppliers and sellers of hardware and software to use certification marks, trademarks or other special designations to indicate compliance with these materials. Products developed using this specification may claim compliance or conformance with this specification if and only if the software satisfactorily meets the certification requirements set by the OPC Foundation. Products that do not meet these requirements may claim only that the product was based on this specification and must not claim compliance or conformance with this specification.

TRADEMARKS

Most computer and software brand names have trademarks or registered trademarks. The individual trademarks have not been listed here.

GENERAL PROVISIONS

Should any provision of this Agreement be held to be void, invalid, unenforceable or illegal by a court, the validity and enforceability of the other provisions shall not be affected thereby.

This Agreement shall be governed by and construed under the laws of the State of Minnesota, excluding its choice or law rules.

This Agreement embodies the entire understanding between the parties with respect to, and supersedes any prior understanding or agreement (oral or written) relating to, this specification.

ISSUE REPORTING

The OPC Foundation strives to maintain the highest quality standards for its published specifications; hence they undergo constant review and refinement. Readers are encouraged to report any issues and view any existing errata here: http://www.opcfoundation.org/errata.

Revision 1.3 Highlights

The following table includes the Mantis issues resolved with this revision.

Mantis ID	Summary	Resolution
2580	Clarify Node Class of ProgramDiagnosticType	The ProgramDiagnosticType is a variable type that has a structured data type (ProgramDiagnosticDataType). The data type ProgramDiagnosticDataType does also has been defined.
2253	NIST security review has suggested that execution of a program should be limited to appropriate personnel and the concurrent invocation of these should also be monitored and restricted.	Added a paragraph that suggests proper user authorisation for programs. Also, some diagnostic information is already defined.
2516	Change "Inherit the properties of" into "Subtype of"	Changed as suggested.

OPC Unified Architecture Specification

Part 10: Programs

1 Scope

This specification is part of the overall OPC Unified Architecture (OPC UA) standard series and defines the information model associated with *Programs*. This includes the description of the *NodeClasses*, standard *Properties*, *Methods* and *Events* and associated behaviour and information for *Programs*.

The complete address space model including all *NodeClass*es and *Attributes* is specified in Part 3. The services such as those used to invoke the *Methods* used to manage *Programs* are specified in Part 4.

2 Reference documents

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

Part 1, OPC Unified Architecture – Part 1: Overview and Concepts

Part 3:-1, OPC Unified Architecture - Part 3: Address Space Model

Part 4:-2, OPC Unified Architecture - Part 4: Services

Part 5:-3, OPC Unified Architecture - Part 5: Information Model

Part 74, OPC Unified Architecture - Part 7: Profiles

3 Terms, definitions and conventions

3.1 Terms and definitions

For the purposes of this document, the terms and definitions given in Part 1, Part 3, as well as the following apply.

3.1.1

function

programmatic task performed by a server or device, usually accomplished by computer code execution

3.1.2

Finite State Machine

sequence of states and valid state transitions along with the causes and effects of those state transitions that define the actions of a *Program* in terms of discrete stages

3.1.3

ProgramType

type definition of a Program and is a subtype of the FiniteStateMachineType

¹ Under consideration.

² Under consideration.

³ Under consideration.

⁴ Under consideration.

3.1.4

Program Control Method

Method having specific semantics designed for the control of a *Program* by causing a state transition

3.1.5

Program Invocation

unique Object instance of a Program existing on a Server

Note 1 to entry: A *Program Invocation* is distinguished from other *Object* instances of the same *ProgramType* by the object node's unique browse path.

3.2 Abbreviations

DA Data Access

FSM Finite State Machine

HMI Human Machine Interfaces

PCM Program Control Method

PGM Program

PI Program Invocation

UA Unified Architecture

4 Concepts

4.1 General

Integrated automation facilities manage their operations through the exchange of data and the coordinated invocation of system functions as illustrated in Figure 1. Services are required to perform the data exchanges and to invoke the functions that constitute system operation. These functions may be invoked through Human Machine Interfaces, cell controllers, or other supervisory control and data acquisition type systems. OPC UA defines Methods and Programs as an interoperable way to advertise, discover, and request these functions. They provide a normalizing mechanism for the semantic description, invocation, and result reporting of these functions. Together Methods and Programs complement the other OPC UA Services and ObjectTypes to facilitate the operation of an automation environment using a client-server hierarchy.

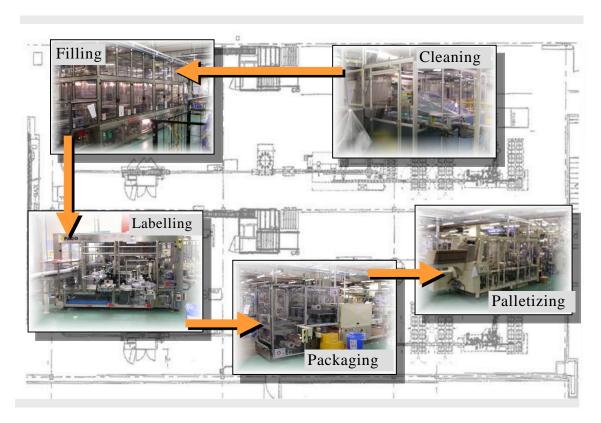


Figure 1 – Automation facility control

Methods and Programs model functions typically have different scopes, behaviours, lifetimes, and complexities in OPC Servers and the underlying systems. These functions are not normally characterized by the reading or writing of data which is accomplished with the OPC UA Attribute service set.

Methods represent basic functions in the Server that can be invoked by a Client. Programs, by contrast, model more complex and stateful functionality in the system. For example, a method call may be used to perform a calculation or reset a counter. A Program is used to run and control a batch process, execute a machine tool part program, or manage a domain download. Methods and their invocation mechanism are described in Part 3 and Part 4.

This standard describes the extensions to, or specific use of, the core capabilities defined in Part 5 as required for *Programs*.

4.2 Programs

4.2.1 Overview

Programs are complex functions in a server or underlying system that can be invoked and managed by a *Client*. *Programs* can represent any level of functionality within a system or process in which client control or intervention is required and progress monitoring is desired. Figure 2 illustrates the model.

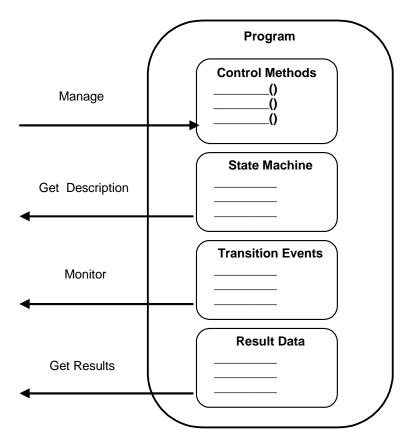


Figure 2 - Program illustration

Programs are state full and transition through a prescribed sequence of states as they execute. Their behaviour is defined by a *Program Finite State Machine (PFSM)*. The elements of the PFSM describe the phases of a *Program's* execution in terms of valid transitions between a set of states, the stimuli or causes of those transitions, and the resultant effects of the transitions.

4.2.2 Security considerations

Since *Programs* can be used to perform advanced control algorithms or other actions, their use should be restricted to personnel with appropriate access rights. It is recommended that *AuditUpdateMethodEvents* are generated to allow monitoring the number of running *Programs* in addition to their execution frequency.

4.2.3 Program Finite State Machine

The states, transitions, causes and effects that compose the *Program Finite State Machine* are listed in Table 1 and illustrated in Figure 3.

No.	Transition name	Cause	From state	To state	Effect
1	HaltedToReady	Reset Method	Halted	Ready	Report Transition 1 Event/Result
2	ReadyToRunning	Start Method	Ready	Running	Report Transition 2 Event/Result
3	RunningToHalted	Halt Method or Internal (Error)	Running	Halted	Report Transition 3 Event/Result
4	RunningToReady	Internal	Running	Ready	Report Transition 4 Event/Result
5	RunningToSuspended	Suspend Method	Running	Suspended	Report Transition 5 Event/Result
6	SuspendedToRunning	Resume Method	Suspended	Running	Report Transition 6 Event/Result

Table 1 - Program Finite State Machine

No.	Transition name	Cause	From state	To state	Effect
7	SuspendedToHalted	Halt Method	Suspended	Halted	Report Transition 7 Event/Result
8	SuspendedToReady	Internal	Suspended	Ready	Report Transition 8 Event/Result
9	ReadyToHalted	Halt Method	Ready	Halted	Report Transition 9 Event/Result

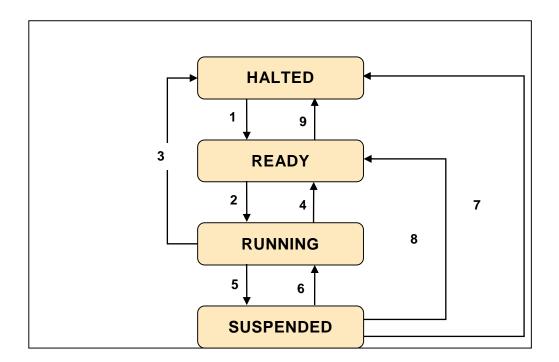


Figure 3 - Program states and transitions

4.2.4 Program states

A standard set of base states is defined for *Programs* as part of the *Program Finite State Machine*. These states represent the stages in which a *Program* can exist at an instance in time as viewed by a *Client*. This state is the *Program*'s current state. All *Programs* shall support this base set. A *Program* may or may not require a *Client* action to cause the state to change. The states are formally defined in Table 2.

Table 2 – Program states

State	Description
Ready The <i>Program</i> is properly initialized and may be started.	
Running	The Program is executing making progress towards completion.
Suspended	The <i>Program</i> has been stopped prior to reaching a terminal state but may be resumed.
Halted	The <i>Program</i> is in a terminal or failed state, and it cannot be started or resumed without being reset.

The set of states defined to describe a *Program* can be expanded. *Program* sub states can be defined for the base states to provide more resolution of a process and to describe the cause and effect(s) of additional stimuli and transitions. Standards bodies and industry groups may extend the base *Program Finite State Model* to conform to various industry models. For example, the Halted state can include the sub states "Aborted" and "Completed" to indicate if the function achieved a successful conclusion prior to the transition to Halted. Transitional

states such as "Starting" or "Suspending" might also be extensions of the Running state, for example.

4.2.5 State transitions

A standard set of state transitions is defined for the *Program Finite State Machine*. These transitions define the valid changes to the *Program's* current state in terms of an initial state and a resultant state. The transitions are formally defined in Table 3.

Table 3 - Program state transitions

Transition no.	Transition name	Initial state	Resultant state
1	HaltedToReady	Halted	Ready
2	ReadyToRunning	Ready	Running
3	RunningToHalted	Running	Halted
4	RunningToReady	Running	Ready
5	RunningToSuspended	Running	Suspended
6	SuspendedToRunning	Suspended	Running
7	SuspendedToHalted	Suspended	Halted
8	SuspendedToReady	Suspended	Ready
9	ReadyToHalted	Ready	Halted

4.2.6 Program state transition stimuli

The stimuli or causes for a *Program's* state transitions can be internal to the *Server* or external. The completion of machining steps, the detection of an alarm condition, or the transmission of a data packet are examples of internal stimuli. *Methods* are an example of external stimuli. Standard *Methods* are defined which act as stimuli for the control of a *Program*.

4.2.7 Program Control Methods

Clients manage a *Program* by calling *Methods*. The *Methods* impact a *Program*'s behaviour by causing specified state transitions. The state transitions dictate the actions performed by the *Program*. This standard defines a set of standard *Program Control Methods*. These *Methods* provide sufficient means for a client to run a *Program*.

Table 4 lists the set of defined *Program Control Methods*. Each *Method* causes transitions from specified states and shall be called when the *Program* is in one of those states.

Individual *Programs* can optionally support any subset of the *Program Control Methods*. For example, some *Programs* may not be permitted to suspend and so would not provide the *Suspend* and *Resume Methods*.

Programs can support additional user defined *Methods*. User defined *Methods* shall not change the behaviour of the base *Program Finite State Machine*.

Reset

Method Name	Description
Start	Causes the <i>Program</i> to transition from the Ready state to the Running state.
Suspend	Causes the <i>Program</i> to transition from the Running state to the Suspended state.
Resume	Causes the <i>Program</i> to transition from the Suspended state to the Running state.
Halt	Causes the <i>Program</i> to transition from the Ready, Running or Suspended state to the Halted state.

Table 4 - Program Control Methods

Program Control Methods can include arguments that are used by the Program. For example, a Start Method may include an options argument that specifies dynamic options used to determine some program behaviour. The arguments can differ on each ProgramType. The Method Call service specified in Part 4:–, 5.11 defines a return status. This return status indicates the success of the Program Control Method or a reason for its failure.

Causes the *Program* to transition from the Halted state to the Ready state.

4.2.8 Program state transition effects

A *Program*'s state transition generally has a cause and also yields an effect. The effect is a by product of a *Program* state transition that can be used by a *Client* to monitor the progress of the *Program*. Effects can be internal or external. An external effect of a state transition is the generation of an *Event* notification. Each *Program* state transition is associated with a unique *Event*. These *Events* reflect the progression and trajectory of the *Program* through its set of defined states. The internal effects of a state transition can be the performance of some programmatic action such as the generation of data.

4.2.9 Program result data

4.2.9.1 Overview

Result data is generated by a running *Program*. The result data can be intermediate or final. Result data may be associated with specific *Program* state transitions.

4.2.9.2 Intermediate result data

Intermediate result data is transient and is generated by the *Program* in conjunction with non-terminal state transitions. The data items that compose the intermediate results are defined in association with specific *Program* state transitions. Their values are relevant only at the transition level.

Each *Program* state transition can be associated with different result data items. Alternately, a set of transitions can share a result data item. Percentage complete is an example of intermediate result data. The value of percentage complete is produced when the state transition occurs and is available to the *Client*.

Clients acquire intermediate result data by subscribing to *Program* state transition *Events*. The *Events* specify the data items for each transition. When the transition occurs, the generated *Event* conveys the result data values captured to the subscribed *Clients*. If no *Client* is monitoring the *Program*, intermediate result data may be discarded.

4.2.9.3 Terminal result data

Terminal result data is the final data generated by the *Program* as it ceases execution. Total execution time, number of widgets produced, and fault condition encountered are examples of terminal result data. When the *Program* enters the terminal state, this result data can be conveyed to the client by the transition *Event*. Terminal result data is also available within the *Program* to be read by a *Client* after the program stops. This data persists until the *Program* Instance is rerun or deleted.

4.2.9.4 Monitoring Programs

Clients can monitor the activities associated with a *Program's* execution. These activities include the invocation of the management *Methods*, the generation of result data, and the progression of the *Program* through its states. Audit Events are provided for *Method Calls* and

state transitions. These *Events* allow a record to be maintained of the *Clients* that interacted with any *Program* and the *Program* state transitions that resulted from that interaction.

4.2.10 Program lifetime

4.2.10.1 Overview

Programs can have different lifetimes. Some *Programs* may always be present on a *Server* while others are created and removed. Creation and removal can be controlled by a *Client* or may be restricted to local means.

A *Program* can be *Client* creatable. If a *Program* is *Client* creatable, then the *Client* can add the *Program* to the *Server*. The *Object Create Method* defined in Part 3:–, 5.5.4, is used to create the *Program* instance. The initial state of the *Program* can be Halted or Ready. Some *Programs*, for example, may require that a resource becomes available after its creation and before it is ready to run. In this case, it would be initialized in the Halted state and transition to Ready when the resource is delivered.

A *Program* can be *Client* removable. If the *Program* is *Client* removable, then the *Client* can delete the *Program* instance from the *Server*. The *DeleteNodes Service* defined in Part 4 is used to remove the *Program* Instance. The *Program* shall be in a Halted state to be removed. A *Program* may also be auto removable. An auto removable *Program* deletes itself when execution has terminated.

4.2.10.2 Program instances

Programs can be multiple instanced or single instanced. A Server can support multiple instances of a Program if these Program Instances can be run in parallel. For example, the Program may define a Start Method that has an input argument to specify which resource is acted upon by its functions. Each instance of the Program is then started designating use of different resources. The Client can discover all instances of a Program that are running on a Server. Each instance of a Program is uniquely identified on the Server and is managed independently by the Client.

4.2.10.3 Program recycling

Programs can be run once or run multiple times (recycled). A *Program* that is run once will remain in the Halted state indefinitely once it has run. The normal course of action would be to delete it following the inspection of its terminal results.

Recyclable *Programs* may have a limited or unlimited cycle count. These *Programs* may require a reset step to transition from the Halted state to the Ready state. This allows for replenishing resources or reinitializing parameters prior to restarting the *Program*. The *Program Control Method "Reset"* triggers this state transition and any associated actions or effects.

5 Model

5.1 General

The *Program* model extends the *FiniteStateMachineType* and basic *ObjectType* models presented in Part 5. Each *Program* has a *Type Definition* that is the subtype of the *FiniteStateMachineType*. The *ProgramType* describes the *Finite State Machine* model supported by any *Program Invocation* of that type. The *ProgramType* also defines the property set that characterizes specific aspects of that *Program's* behaviour such as lifetime and recycling as well as specifying the result data that is produced by the *Program*.

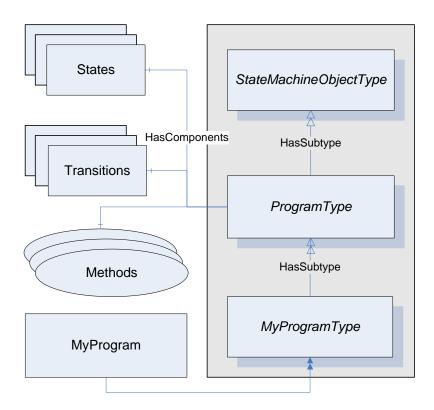


Figure 4 - Program Type

The base *ProgramType* defines the standard *Finite State Machine* specified for all *Programs*. This includes the states, transitions, and transition causes (*Methods*) and effects (*Events*). Subtypes of the base *ProgramType* can be defined to extend or more specifically characterize the behaviour of an individual *Program* as illustrated with "MyProgramType" in Figure 4.

5.2 ProgramType

5.2.1 Overview

The additional properties and components that compose the *ProgramType* are listed in Table 5. No *ProgramType* specific semantics are assigned to the other base *ObjectType* or *FiniteStateMachineType Attributes* or *Properties*.

Table 5 - ProgramType

Attribute	Value						
	Includes all attributes specified for the FiniteStateMachineType						
BrowseName	ProgramType						
IsAbstract	False						
Defenence	No de Class						
References	NodeClass	BrowseName	Data Type	TypeDefinition	Modelling Rule		
HasProperty	Variable	Creatable	Boolean	PropertyType			
HasProperty	Variable	Deletabe	Boolean	PropertyType	Mandatory		
HasProperty	Variable	AutoDelete	Boolean	PropertyType	Mandatory		
HasProperty	Variable	RecycleCount	Int32	PropertyType	Mandatory		
HasProperty	Variable	InstanceCount	UInt32	PropertyType			
HasProperty	Variable	MaxInstanceCount	UInt32	PropertyType			
HasProperty	Variable	MaxRecycleCount	UInt32	PropertyType			
HasComponent	Variable	ProgramDiagnostic	ProgramDiagn osticDataType	ProgramDiagnos ticType	Optional		
HasComponent	Object	Halted		StateType	Mandatory		
HasComponent	Object	Ready		StateType	Mandatory		
HasComponent	Object	Running		StateType	Mandatory		
HasComponent	Object	Suspended		StateType	Mandatory		
HasComponent	Object	HaltedToReady		TransitionType	Mandatory		
HasComponent	Object	ReadyToRunning		TransitionType	Mandatory		
HasComponent	Object	RunningToHalted		TransitionType	Mandatory		
HasComponent	Object	RunningToReady		TransitionType	Mandatory		
HasComponent	Object	RunningToSuspended		TransitionType	Mandatory		
HasComponent	Object	SuspendedToRunning		TransitionType	Mandatory		
HasComponent	Object	SuspendedToHalted		TransitionType	Mandatory		
HasComponent	-	·		• • • • • • • • • • • • • • • • • • • •	Mandatory		
HasComponent	Object Object	SuspendedToReady ReadyToHalted		TransitionType TransitionType	Mandatory		
Паэсопіропені	Object	ready For failed		Transmont ype	wanuatory		
HasComponent	Method	Start			Optional		
HasComponent	Method	Suspend			Optional		
HasComponent	Method	Reset			Optional		
HasComponent	Method	Halt			Optional		
HasComponent	Method	Resume			Optional		
HasComponent	Object	FinalResultData		BaseObjectType	Optional		

5.2.2 ProgramType Properties

The Creatable Property is a boolean that specifies if Program Invocations of this ProgramType can be created by a Client. If False, these Program Invocations are persistent or may only be created by the Server.

The *Deletable Property* is a boolean that specifies if a *Program Invocation* of this *ProgramType* can be deleted by a *Client*. If False, these *Program Invocations* can only be deleted by the *Server*.

The AutoDelete Property is a boolean that specifies if Program Invocations of this ProgramType are removed by the Server when execution terminates. If False, these Program Invocations persist on the Server until they are deleted by the Client. When the Program Invocation is deleted, any result data associated with the instance is also removed.

The RecycleCount Property is an unsigned integer that specifies the number of times a Program Invocation of this type has been recycled or restarted from its starting point (not resumed). Note that the Reset Method may be required to prepare a Program to be restarted.

The MaxRecycleCount Property is an integer that specifies the maximum number of times a Program Invocation of this type can be recycled or restarted from its starting point (not resumed). If the value is less than 0, then there is no limit to the number of restarts. If the value is zero, then the Program may not be recycled or restarted.

The *InstanceCount Property* is an unsigned integer that specifies the number of *Program Invocations* of this type that currently exist.

The MaxInstanceCount Property is an integer that specifies the maximum number of Program Invocations of this type that can exist simultaneously on this Server. If the value is less than 0, then there is no limit.

5.2.3 ProgramType components

5.2.3.1 Overview

The *ProgramType* components consist of a set of *References* to the *Object* instances of *StateTypes*, *TransitionTypes*, *EventTypes* and the *Methods* that collectively define the *Program FiniteStateMachine*.

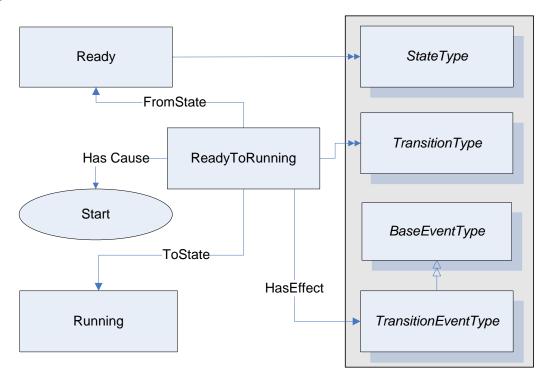


Figure 5 - Program FSM References

Figure 5 illustrates the component *References* that define the associations between two of the *ProgramType's* states, Ready and Running. The complementary ReferenceTypes have been omitted to simplify the illustration.

5.2.3.2 ProgramType states

Table 6 specifies the *ProgramType's* state *Objects*. These *Objects* are instances of the *StateType* defined in Part 5:-, Annex B. Each state is assigned a unique *StateNumber* value.

Subtypes of the *ProgramType* can add references from any state to a subordinate or nested *StateMachine Object* to extend the *FiniteStateMachine*.

Table 6 – Program states

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	NOTES
States			•		•
Halted	HasProperty	StateNumber	1	PropertyType	
	ToTransition	HaltedToReady		TransitionType	
	FromTransition	RunningToHalted		TransitionType	
	FromTransition	SuspendedToHalted		TransitionType	
	FromTransition	ReadyToHalted		TransitionType	
Ready	HasProperty	StateNumber	2	PropertyType	
	FromTransition	HaltedToReady		TransitionType	
	ToTransition	ReadyToRunning		TransitionType	
	FromTransition	RunningToReady		TransitionType	
	ToTransition	ReadyToHalted		TransitionType	
Running	HasProperty	StateNumber	3	PropertyType	
	ToTransition	RunningToHalted		TransitionType	
	ToTransition	RunningToReady		TransitionType	
	ToTransition	RunningToSuspended		TransitionType	
	FromTransition	ReadyToRunning		TransitionType	
	FromTransition	SuspendedToRunning		TransitionType	
Suspended	HasProperty	StateNumber	4	PropertyType	
	ToTransition	SuspendedToRunning		TransitionType	
	ToTransition	SuspendedToHalted		TransitionType	
	ToTransition	SuspendedToReady		TransitionType	
	FromTransition	RunningToSuspended		TransitionType	

The Halted state is the idle state for a *Program*. It can be an initial state or a terminal state. As an initial state, the *Program Invocation* cannot begin execution due to conditions at the *Server*. As a terminal state, Halted can indicate either a failed or completed *Program*. A subordinate state or result can be used to distinguish the nature of the termination. The Halted state references four *Transition Objects*, which identify the allowed state transitions to the Ready state and from the Ready, Running, and Suspended states.

The Ready state indicates that the *Program* is prepared to begin execution. *Programs* that are ready to begin upon their creation may transition immediately to the Ready state. The Ready state references four *Transition Objects*, which identify the allowed state transitions to the Running and Halted states and from the Halted and Ready states.

The Running state indicates that the *Program* is actively performing its function. The Running state references five *Transition Objects*, which identify the allowed state transitions to the Halted, Ready, and Suspended states and from the Ready and Suspended states.

The Suspended state indicates that the *Program* has stopped performing its function, but retains the ability to resume the function at the point at which it was executing when suspended. The Suspended state references four *Transition Objects*, which identify the allowed state transitions to the Ready, Running, and Halted state and from the Ready state.

5.2.3.3 ProgramType transitions

ProgramType Transitions are instances of the TransitionType defined in Part 5 which also includes the definitions of the ToState, FromState, HasCause, and HasEffect references used. Table 7 specifies the transitions defined for the ProgramType. Each transition is assigned a unique TransitionNumber. The Notes column indicates when a cause is referencing Methods and when effects are optional.

Table 7 – Program transitions

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	Notes
Transitions			•		
HaltedToReady	HasProperty	TransitionNumber	1	PropertyType	
	ToState	Ready		StateType	
	FromState	Halted		StateType	
	HasCause	Reset			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
ReadyToRunning	HasProperty	TransitionNumber	2	PropertyType	
	ToState	Running		StateType	
	FromState	Ready		StateType	
	HasCause	Start			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
RunningToHalted	HasProperty	TransitionNumber	3	PropertyType	
	ToState	Halted		StateType	
	FromState	Running		StateType	
	HasCause	Halt			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
RunningToReady	HasProperty	TransitionNumber	4	PropertyType	
	ToState	Ready		StateType	
	FromState	Runnning		StateType	
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
RunningToSuspend ed	HasProperty	TransitionNumber	5	PropertyType	
	ToState	Running		StateType	
	FromState	Suspended		StateType	
	HasCause	Suspend			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
SuspendedToRunni ng	HasProperty	TransitionNumber	6	PropertyType	
	ToState	Running		StateType	

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	Notes
	FromState	Suspended		StateType	
	HasCause	Resume			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
SuspendedToHalted	HasProperty	TransitionNumber	7	PropertyType	
	ToState	Halted		StateType	
	FromState	Suspended		StateType	
	HasCause	Halt			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
SuspendedToReady	HasProperty	TransitionNumber	8	PropertyType	
	ToState	Ready		StateType	
	FromState	Suspended		StateType	
	HasCause	Reset			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
ReadyToHalted	HasProperty	TransitionNumber	9	PropertyType	
	ToState	Halted		StateType	
	FromState	Ready		StateType	
	HasCause	Halt			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			

The *HaltedToReady* transition specifies the transition from the Halted to Ready states. It may be caused by the *Reset Method*.

The *ReadyToRunning* transition specifies the transition from the Ready to *Running* states. It is caused by the *Start Method*.

The *RunningToHalted* transition specifies the transition from the *Running* to Halted states. It is caused by the *Halt Method*.

The RunningToReady transition specifies the transition from the Running to Ready states. The RunningToSuspended transition specifies the Transition from the Running to Suspended states. It is caused by the Suspend Method.

The SuspendedToRunning transition specifies the transition from the Suspended to Running states. It is caused by the Resume Method.

The SuspendedToHalted transition specifies the transition from the Suspended to Halted states. It is caused by the Halt Method.

The SuspendedToReady transition specifies the transition from the Suspended to Ready states. It is caused internally.

The ReadyToHalted transition specifies the transition from the Ready to Halted states. It is caused by the Halt Method.

Two HasEffect references are specified for each Program transition. These effects are Events of ProgramTransitionEventType and AuditProgramTransitionEventType defined in 5.2.5. The

ProgramTransitionEventType notifies Clients of the Program transition and conveys result data. The AuditProgramTransitionEventType is used to audit transitions that result from Program Control Methods. The "Audit Server Facet" Profile defined in Part 7 requires support of the AuditProgramTransitionEventType.

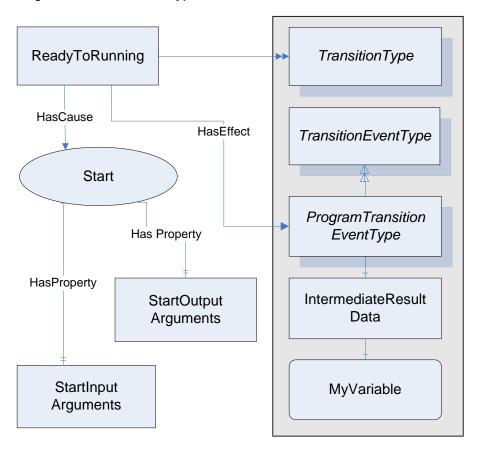


Figure 6 - ProgramType causes and effects

5.2.4 ProgramType causes (Methods)

5.2.4.1 Overview

The ProgramType includes references to the Causes of specific Program state transitions. These causes refer to Method instances. Programs that do not support a Program Control Method will omit the Causes reference to that Method from the ProgramType references. If a Method's Causes reference is omitted from the ProgramType then a Client cannot cause the associated state transition. The Method instances referenced by the ProgramType identify the InputArguments and OutputArguments required for the Method calls to Program Invocations of that ProgramType. Table 8 specifies the Methods defined as Causes for ProgramTypes. Figure 6 illustrates the References associating the components and Properties of Methods and Events with Program transitions.

BrowseName References Target BrowseName Value Target **NOTES** TypeDefinition Causes Start HasProperty InputArguments Optional PropertyType HasProperty OutputArguments PropertyType Optional Suspend Optional HasProperty InputArguments PropertyType HasProperty OutputArguments PropertyType Optional

Table 8 - ProgramType causes

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	NOTES
Resume	HasProperty	InputArguments		PropertyType	Optional
	HasProperty	OutputArguments		PropertyType	Optional
Halt	HasProperty	InputArguments		PropertyType	Optional
	HasProperty	OutputArguments		PropertyType	Optional
Reset	HasProperty	InputArguments		PropertyType	Optional
	HasProperty	OutputArguments		PropertyType	Optional
				_	

The Start Method causes the ReadyToRunning Program transition.

The Suspend Method causes the RunningToSuspended Program transition.

The Resume Method causes the SuspendedToRunning Program transition.

The Halt Method causes the RunningToHalted, SuspendedToHalted, or ReadyToHalted Program transition depending on the current state of the Program.

The Reset Method causes the HaltedToReady Program transition.

5.2.4.2 Standard attributes

The Executable Method attribute indicates if a method can currently be executed. For Program Control Methods, this means that the owning Program has a current state that supports the transition caused by the Method.

5.2.4.3 Standard properties

5.2.4.3.1 Overview

Methods can reference a set of InputArguments. For each ProgramType, a set of InputArguments may be defined for the supported Program Control Methods. The data passed in the arguments supplements the information required by the Program to perform its function. All calls to a Program Control Method for each Program Invocation of that ProgramType shall pass the specified arguments.

Methods can reference a set of OutputArguments. For each ProgramType, a set of OutputArguments is defined for the supported Program Control Methods. All calls to a Program Control Method for each Program Invocation of that ProgramType shall pass the specified arguments.

5.2.5 ProgramType effects (Events)

5.2.5.1 Overview

The *ProgramType* includes component references to the Effects of each of the *Program's* state transitions. These Effects are *Events*. Each *Transition* shall have a *HasEffect Reference* to a *ProgramTransitionEventType* and can have an *AuditProgramTransitionEventType*. When the transition occurs, *Event* notifications of the referenced type are generated for subscribed *Clients*. The *Program Invocation* may serve as the *EventNotifier* for these *Events* or an owning *Object* or the *Server Object* may provide the notifications.

ProgramTransitionEventTypes provide the means for delivering result data and confirming state transitions for subscribed Clients on each defined Program State Transition. The AuditProgramTransitionEventType allows the auditing of changes to the Program's state in conjunction with Client Method Calls.

5.2.5.2 ProgramTransitionEventType

The *ProgramTransitionEventType* is a subtype of the *TransitionEventType*. It is used with *Programs* to acquire intermediate or final results or other data associated with a state transition. A *Program* can have a unique *ProgramTransitionEventType* definition for any transition. Each *ProgramTransitionEventType* specifies the *IntermediateResult* data specific to the designated state transition on that *ProgramType*. Each transition can yield different intermediate result data. Table 9 specifies the *ProgramTransitionEventType*.

Table 10 identifies the *ProgramTransitionEventTypes* that are specified for *ProgramTypes*.

Table 9 - ProgramTransitionEventType

Attribute		Value						
BrowseName	ProgramTran	ProgramTransitionEventType						
IsAbstract	True	True						
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule			
Subtype of the base <i>TransitionEventType</i> defined in Part 5:-, B.4.16.								
HasComponent	Object	IntermediateResult		BaseObjectType	Optional			

TransitionNumber identifies the Program transition that triggered the Event.

FromStateNumber identifies the state before the Program transition.

ToStateNumber identifies the state after the Program transition.

The IntermediateResult is an Object that aggregates a set of Variables whose values are relevant for the Program at the instant of the associated transition. The ObjectType for the IntermediateResult specifies the collection of Variables using a set of HasComponent References.

Table 10 - ProgramTransitionEvents

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	Notes
Effects					
HaltedToReadyEvent					
	HasProperty	TransitionNumber	1	PropertyType	
	HasProperty	FromStateNumber	1	PropertyType	
	HasProperty	ToStateNumber	2	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional
ReadyToRunningEvent					
	HasProperty	TransitionNumber	2	PropertyType	
	HasProperty	FromStateNumber	2	PropertyType	
	HasProperty	ToStateNumber	3	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional
RunningToHaltedEvent					
	HasProperty	TransitionNumber	3	PropertyType	
	HasProperty	FromStateNumber	3	PropertyType	
	HasProperty	ToStateNumber	1	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional
RunningToReadyEvent					
	HasProperty	TransitionNumber	4	PropertyType	
	HasProperty	FromStateNumber	3	PropertyType	
	HasProperty	ToStateNumber	2	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional
RunningToSuspendedEve nt					
	HasProperty	TransitionNumber	5	PropertyType	
	HasProperty	FromStateNumber	3	PropertyType	
	HasProperty	ToStateNumber	4	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional
SuspendedToRunningEve nt					
	HasProperty	TransitionNumber	6	PropertyType	
	HasProperty	FromStateNumber	4	PropertyType	
	HasProperty	ToStateNumber	3	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional
SuspendedToHaltedEvent					
	HasProperty	TransitionNumber	7	PropertyType	
	HasProperty	FromStateNumber	4	PropertyType	
	HasProperty	ToStateNumber	1	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	Notes
SuspendedToReadyEvent					
	HasProperty	TransitionNumber	8	PropertyType	
	HasProperty	FromStateNumber	4	PropertyType	
	HasProperty	ToStateNumber	2	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional
ReadyToHaltedEvent					
	HasProperty	TransitionNumber	9	PropertyType	
	HasProperty	FromStateNumber	2	PropertyType	
	HasProperty	ToStateNumber	1	PropertyType	
	HasComponent	IntermediateResults		ObjectType	Optional

5.2.6 AuditProgramTransitionEventType

The AuditProgramTransitionEventType is a subtype of the AuditUpdateStateEventType. It is used with Programs to provide a means to audit the Program State transitions associated with any Client invoked Program Control Method. Servers shall generate AuditProgramTransitionEvents if they support the Audit Server Facet Profile defined in Part 7.

Table 11 specifies the definition of the *AuditProgramTransitionEventType*.

Attribute Value BrowseName AuditProgramTransitionEventType **IsAbstract** True NodeClass **BrowseName TypeDefinition** ModellingRule References DataType Subtype of the AuditUpdateStateEventType defined in Part 5:-, B.4.17. HasProperty Variable TransitionNumber UInt32 PropertyType Mandatory

Table 11 - AuditProgramTransitionEventType

This *EventType* inherits all *Properties* of the *AuditUpdateStateEventType* defined in Part 5:–, B.4.17, except as noted below.

The Status Property, specified in Part 5:-, 6.4.3,, identifies whether the state transition resulted from a Program Control Method call (set Status to TRUE) or not (set Status to FALSE).

The SourceName specified in Part 5:-, 6.4.2, identifies the Method causing the Program transition when it is the result of a Client invoked ProgramControlMethod. The SourceName is prefixed with "Method/" and the name of the ProgramControlMethod, "Method/Start" for example.

The *ClientUserId Property*, specified in Part 5:–, 6.4.3, identifies the user of the *Client* that issued the *Program Control Method* if it is associated with this *Program* state transition.

The ActionTimeStamp Property, specified in Part 5, clause 6.4.3 "AuditEventType", identifies when the time the Program state transition that resulted in the Event being generated occurred.

The *TransitionNumber Property* is a *Variable* that identifies the transition that triggered the *Event*.

5.2.7 FinalResultData

The FinalResultData ObjectType specifies the VariableTypes that are preserved when the Program has completed its function. The ObjectType includes a HasComponent for a VariableType of each Variable that comprises the final result data.

5.2.8 ProgramDiagnostic DataType

This structure contains elements that chronicle the *Program Invocation's* activity and can be used to aid in the diagnosis of *Program* problems. Its composition is defined in Table 12.

Table 12 - ProgramDiagnosticDataType structure

Name	Туре	Description
ProgramDiagnosticDataType	structure	
createSessionId	Nodeld	The CreateSessionId contains the SessionId of the Sessionon which the call to the Create Method was issued to create the Program Invocation.
createClientName	String	The CreateClientName is the name of the client of the Sessionthat created the Program Invocation.
invocationCreationTime	UTCTime	The InvocationCreationTime identifies the time the Program Invocation was created.
lastTransitionTime	UTCTime	The LastTransitionTime identifies the time of the last Program state transition that occurred.
lastMethodCall	String	The LastMethodCall identifies the last Program Method called on the Program Invocation.
lastMethodSessionId	Nodeld	The LastMethodSessionId contains the SessionId of the Sessionon which the last Program Control Method call to the Program Invocation was issued.
lastMethodInputArguments	Argument[]	The LastMethodInputArguments preserves the values of the input arguments on the last Program Method call.
lastMethodOutputArguments	Argument[]	The LastMethodOutputArguments preserves the values of the output arguments on the last Program Method call.
lastMethodCallTime	UTCTime	The LastMethodCallTime identifies the time of the last Method call to the Program Invocation.
lastMethodReturnStatus	StatusResult	The LastMethodReturnStatus preserves the value of the return status for the last Program Control Method requested for this Program Invocation.

Its representation in the AddressSpace is defined in Table 13.

Table 13 - ProgramDiagnosticDataType definition

Attributes	Value
BrowseName	ProgramDiagnosticDataType

5.2.9 ProgramDiagnosticType VariableType

This *VariableType* aggregates simple *Variables* using simple *DataTypes* that reflect the elements of the ProgramDiagnosticDataType structure. Its *DataVariables* have the same semantic as defined in in 5.2.8. The *VariableType* is formally defined in Table 14.

Table 14 – ProgramDiagnosticType VariableType

Attribute	Value							
BrowseName	ProgramDiag	ProgramDiagnosticType						
IsAbstract	False	False						
References	NodeClass	Class BrowseName DataType / TypeDefinition						
Subtype of the BaseDataVariableType defined in Part 5.								
HasComponent	Variable	CreateSessionId	Nodeld	Mandatory				
HasComponent	Variable	CreateClientName	String	Mandatory				
HasComponent	Variable	InvocationCreationTime	UTCTime	Mandatory				
HasComponent	Variable	LastTransitionTime	UTCTime	Mandatory				
HasComponent	Variable	LastMethodCall	String	Mandatory				
HasComponent	Variable	LastMethodSessionId	Nodeld	Mandatory				
HasComponent	Variable	LastMethodInputArguments	Argument[]	Mandatory				
HasComponent	Variable	LastMethodOutputArguments	Argument[]	Mandatory				
HasComponent	Variable	LastMethodCallTime	UTCTime	Mandatory				
HasComponent	Variable	LastMethodReturnStatus	StatusResult	Mandatory				

Annex A (informative)

Program example

A.1 Overview

This example illustrates the use of a *Program* to manage a domain download into a control system as depicted in Figure A.1. The download requires the segmented transfer of control operation data from a secondary storage device to the local memory within a control system.

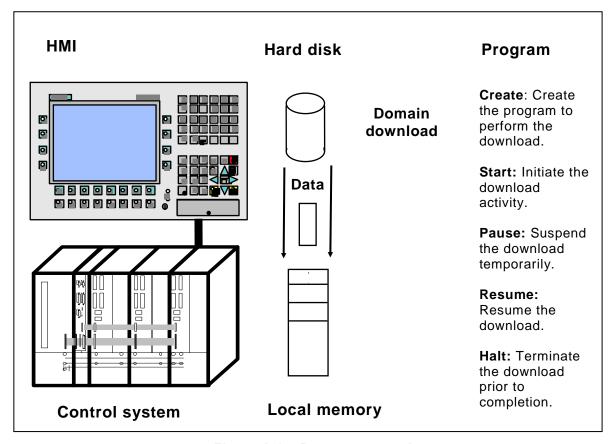


Figure A.1 – Program example

The domain download has a source and a target location which are identified when the download is initiated. Each time a segment of the domain is successfully transferred the client is notified and informed of the amount of data that has been downloaded. The client is also notified when the download is finished. The percentage of the total data received is reported periodically while the download continues. If the download fails, the cause of the failure is reported. At the completion of the download, the performance information is kept at the *Server*.

A.2 DomainDownload Program

A.2.1 General

The *Client* uses the "DomainDownload" *Program* to manage and monitor the download of a domain at the *Server*.

A.2.2 DomainDownload states

The basic state model for the DomainDownload *Program* is presented in Figure A.2. The *Program* has three primary states, Ready, Running, and Halted which are aligned with the standard states of a *ProgramType*. Additionally, the *DomainDownloadType* extends the *ProgramType* by defining subordinate state machines for the *Program's* Running and Halted

states. The subordinate states describe the download operations in greater detail and allow the *Client* to monitor the activity of the download at a finer resolution.

An instance (*Program Invocation*) of a DomainDownload *Program* is created by the *Client* each time a download is to be performed. The instance exists until explicitly removed by the *Client*. The initial state of the *Program* is Ready and the terminal state is Halted. The DomainDownload can be temporarily suspended and then resumed or aborted. Once halted, the program may not be restarted.

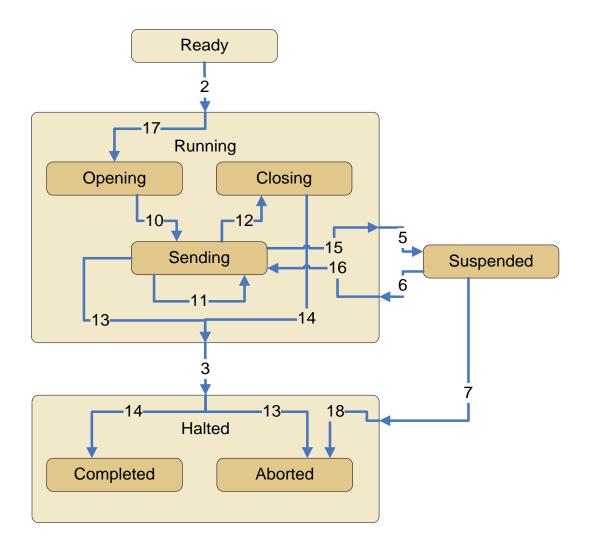


Figure A.2 - DomainDownload state diagram

The sequence of state transitions is illustrated in Figure A.2. Once the download is started, The *Program* progresses to the Opening state. After the source of the data is opened, a sequence of transfers occurs in the Sending state. When the transfer completes the *Objects* are closed in the Closing state. If the transfer is terminated before all of the data is downloaded or an error is encountered then the download is halted and the *Program* transitions to the Aborted state; otherwise the *Program* halts in the Completed state. The states are presented in Table A.1 along with the state transitions.

A.2.3 DomainDownload transitions

The valid state transitions specified for the DomainDownload *Program* are specified in Table A.1. Each of the transitions defines a start state and end state for the transition and is identified by a unique number. Five of the transitions are from the base *ProgramType* and retain the transition identifier numbers specified for *Programs*. The additional transitions relate the base *Program* states with the subordinate states defined for the DomainDownload.

These states have been assigned unique transition identifier numbers that distinguish them from the base *Program* transition identifiers. In cases where transitions occur between substates and the *Program's* base states, two transitions are specified. One transition identifies the base state change and a second sub-state change. For example, Ready to Running and to Opening occurs at the same time.

The table also specifies the defined states, causes for the transitions, and the effects of each transition. *Program Control Methods* are used by the *Client* to "run" the DomainDownload. The *Methods* cause or trigger the specified transitions. The transition effects are the specified *EventTypes* which notify the *Client* of *Program* activity.

No.	Transition name	Cause	From State	To State	Effect
2	ReadyToRunning	Start Method	Ready	Running	Report Transition 2 Event/Result
3	RunningToHalted	Halt Method/Error or Internal.	Running	Halted	Report Transition 3 Event/Result
5	RunningToSuspended	Suspend Method	Running	Suspended	Report Transition 5 Event/Result
6	SuspendedToRunning	Resume Method	Suspended	Running	Report Transition 6 Event/Result
7	SuspendedToHalted	Halt Method	Suspended	Halted	Report Transition 7 Event/Result
10	OpeningToSending	Internal	Opening	Sending	Report Transition 10 Event/Result
11	SendingToSending	Internal	Sending	Sending	Report Transition 11 Event/Result
12	SendingToClosing	Internal	Sending	Closing	Report Transition 12 Event/Result
13	SendingToAborted	Halt Method/Error	Opening	Aborted	Report Transition 13 Event/Result
14	ClosingToCompleted	Internal	Closing	Completed	Report Transition 14 Event/Result
15	SendingToSuspended	Suspend Method	Sending	Suspended	Report Transition 16 Event/Result
16	SuspendedToSending	Resume Method	Suspended	Sending	Report Transition 17 Event/Result
18	SuspendedToAborted	Halt Method	Suspended	Aborted	Report Transition 18 Event/Result
17	ToOpening	Internal	Ready	Opening	Report Transition 19 Event/Result

Table A.1 - DomainDownload states

A.2.4 DomainDownload Methods

A.2.4.1 General

Four standard *Program Methods* are specified for running the DomainDownload *Program, Start, Suspend, Resume, and Halt.* No additional *Methods* are specified. The base behaviours of these *Methods* are defined by the *ProgramType.* The *Start Method* initiates the download activity and passes the source and destination locations for the transfer. The *Suspend Method* is used to pause the activity temporarily. The *Resume Method* reinitiates the download, when paused. The *Halt Method* aborts the download. Each of the *Methods* causes a *Program* state transition and a sub state transition. The specific state transition depends on the current state at the time the *Method* is called. If a *Method Call* is made when the DomainDownload is in a state for which that *Method* has no associated transition, the *Method* returns an error status indicating invalid state for the *Method*.

A.2.4.2 Method Arguments

The *Start Method* specifies three input arguments to be passed when it is called: Domain Name, DomainSource, and DomainDestination. The other *Methods* require no input arguments. No output arguments are specified for the DomainDownload *Methods*. The resultant error status for the *Program* is part of the *Call Service*.

A.2.5 DomainDownload Events

A.2.5.1 General

A ProgramTransitionEventType is specified for each of the DomainDownload Program transitions. The EventTypes trigger a specific Event notification to the Client when the

associated state transition occurs in the running *Program* Instance. The *Event* notification identifies the transition. The SendingToSending state transition also includes intermediate result data.

A.2.5.2 Event information

The SendingToSending *Program* transition *Event* relays intermediate result data to the *Client* along with the notification. Each time the transition occurs, data items describing the amount and percentage of data transferred are sent to the *Client*.

A.2.5.3 Final result data

The DomainDownload *Program* retains final result data following a completed or aborted download. The data includes the total transaction time and the size of the domain. In the event of an aborted download, the reason for the termination is retained.

A.2.6 DomainDownload model

A.2.6.1 Overview

The OPC UA model for the DomainDownload *Program* is presented in the following tables and figures. Collectively they define the components that constitute this *Program*. For clarity, the figures present a progression of portions of the model that complement the contents of the tables and illustrate the *Program's* composition.

The type definition for the DomainDownload *Program* precisely represents the behaviour of the *Program* in terms of OPC UA components. These components can be browsed by a *Client* to interpret or validate the actions of the *Program*.

A.2.6.2 DomainDownloadType

The DomainDownloadType is a subtype derived from the *ProgramType*. It specifies the use or non-use of optional *ProgramType* components, valid extensions such as subordinate state machines, and constrained attribute values applied to instances of DomainDownload *Programs*.

Table A.2 specifies the optional and extended components defined by the DomainDownload Type. Note the references to two sub *State Machine Types*, *TransferStateMachine* and *FinishStateMachine*. The DomainDownloadType omits references to the *Reset Program Control Method* and its associated state transition (HaltedToReady), which it does not support.

Table A.2 - DomainDownload Type

Attribute	Value							
	Includes all no	Includes all non-optional attributes specified for the ProgramType						
BrowseName	DomainDownl	DomainDownloadType						
IsAbstract	False							
References	NodeClass	NodeClass BrowseName Data TypeDefinition Modelling Rule						
HasComponent	Object	TransferStateMachine		StateMachineType	Mandatory			
HasComponent	Object	FinishStateMachine		StateMachineType	Mandatory			
HasComponent	Variable	ProgramDiagnostic		ProgramDiagnosticType	Mandatory			
HasComponent	Object	ReadyToRunning		TransitionType	Mandatory			
HasComponent	Object	RunningToHalted		TransitionType	Mandatory			
HasComponent	Object	RunningToSuspended		TransitionType	Mandatory			
HasComponent	Object	SuspendedToRunning		TransitionType	Mandatory			
HasComponent	Object	SuspendedToHalted		TransitionType	Mandatory			
HasComponent	Method	Start			Mandatory			
HasComponent	Method	Suspend			Mandatory			
HasComponent	Method	Halt			Mandatory			
HasComponent	Method	Resume			Mandatory			

HasComponent Ob	oject FinalResultData	BaseObjectType Mandatory	
-----------------	-----------------------	--------------------------	--

Table A.3 specifies the *Transfer State Machine type* that is a sub state machine of the DomainDownload *Program Type*. This definition identifies the *StateTypes* that compose the sub states for the *Program's* Running *StateType*.

Table A.3 - Transfer State Machine Type

Attribute	Value Includes all attributes specified for the FiniteStateMachineType					
BrowseName	TransferStateMachineType					
IsAbstract	False					
References	NodeClass	BrowseName	Data Type	TypeDefinition	Modelling Rule	
HasComponent	Object	Opening		StateType	Mandatory	
HasComponent	Object	Sending		StateType	Mandatory	
HasComponent	Object	Closing		StateType	Mandatory	
HasComponent	Object	ReadyToOpening		TransitionType	Mandatory	
HasComponent	Object	OpeningToSending		TransitionType	Mandatory	
HasComponent	Object	SendingToClosing		TransitionType	Mandatory	
HasComponent	Object	SendingToAborted		TransitionType	Mandatory	
HasComponent	Object	SendingToSuspended		TransitionType	Mandatory	
HasComponent	Object	SuspendedToSending		TransitionType	Mandatory	
HasComponent	Method	Start			Mandatory	
HasComponent	Method	Suspend			Mandatory	
HasComponent	Method	Halt			Mandatory	
HasComponent	Method	Resume			Mandatory	

Table A.3 specifies the *StateTypes* associated with the Transfer State Machine Type. All of these states are sub states of the *Running* state of the base *ProgramType*.

The Opening state is the preparation state for the domain download.

The Sending state is the activity state for the transfer in which the data is moved from the source to destination.

The Closing state is the cleanup phase of the download.

Table A.4 defines the states of the *TransferStateMachineType*.

Table A.4 - Transfer State Machine - states

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	NOTES
States			•	•	
Opening	HasProperty	StateNumber	5	PropertyType	
	ToTransition	OpeningToSending		TransitionType	
	FromTransition	ToOpening		TransitionType	
	ToTransition	OpeningToSending		TransitionType	
Sending	HasProperty	StateNumber	6	PropertyType	
	FromTransition	OpeningToSending		TransitionType	
	ToTransition	SendingToSending		TransitionType	
	ToTransition	SendingToClosing		TransitionType	
	ToTransition	SendingToSuspended		TransitionType	
	FromTransition	ToSending		TransitionType	
Closing	HasProperty	StateNumber	7	PropertyType	
	ToTransition	ClosingToCompleted		TransitionType	
	ToTransition	ClosingToAborted		TransitionType	
	FromTransition	SendingToClosing		TransitionType	

Table A.5 specifies the *Finish State Machine Type* that is a sub state machine of the DomainDownload *ProgramType*. This definition identifies the *StateTypes* that compose the sub states for the *Program's* Halted *StateType*.

Table A.5 - Finish State Machine Type

Attribute	Value						
	Includes all attributes specified for the FiniteStateMachineType						
BrowseName	TransferStat	TransferStateMachineType					
IsAbstract	False						
References	NodeClass	BrowseName	Data Type	TypeDefinition	Modelling Rule		
HasComponent	Object	Completed		StateType	Mandatory		
HasComponent	Object	Aborted		StateType	Mandatory		

Table A.6 specifies the *StateTypes* associated with the *Finish State Machine Type*. Note these are final states and that they have no associated transitions between them.

Table A.6 - Finish State Machine - states

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	NOTES
States					
Aborted	HasProperty	StateNumber	8	PropertyType	
	FromTransition	OpeningToAborted		TransitionType	
	FromTransition	ClosingToAborted		TransitionType	
Completed	HasProperty	StateNumber	9	PropertyType	
	FromTransition	ClosingToCompleted		TransitionType	

The Aborted state is the terminal state that indicates an incomplete or failed domain download operation.

The Completed state is the terminal state that indicates a successful domain download.

Table A.7 specifies the constraining behaviour of a DomainDownload.

Table A.7 – DomainDownload Type Property Attributes variable values

NodeClass	BrowseName	Data Type	Data Value	Modelling Rule
Variable	Creatable	Boolean	True	
Variable	Deletable	Boolean	True	Mandatory
Variable	AutoDelete	Boolean	False	Mandatory
Variable	RecycleCount	Int32	0	Mandatory
Variable	InstanceCount	UInt32	PropertyType	
Variable	MaxInstanceCount	UInt32	500	
Variable	MaxRecycleCount	UInt32	0	

A DomainDownload *Program Invocation* can be created and also destroyed by a *Client*. The *Program Invocation* will not delete itself when halted, but will persist until explicitly removed by the *Client*. A DomainDownload *Program Invocation* cannot be reset to restart. The *Server* will support up to 500 concurrent DomainDownload *Program Invocations*.

Figure A.3 presents a partial DomainDownloadType model that illustrates the association between the states and the DomainDownload, Transfer, and Finish State Machines. Note that the current state number for the sub state machines is only valid when the DomainDownload active base state references the sub state machine, Running for the Transfer current state and Halted for the Finish current state.

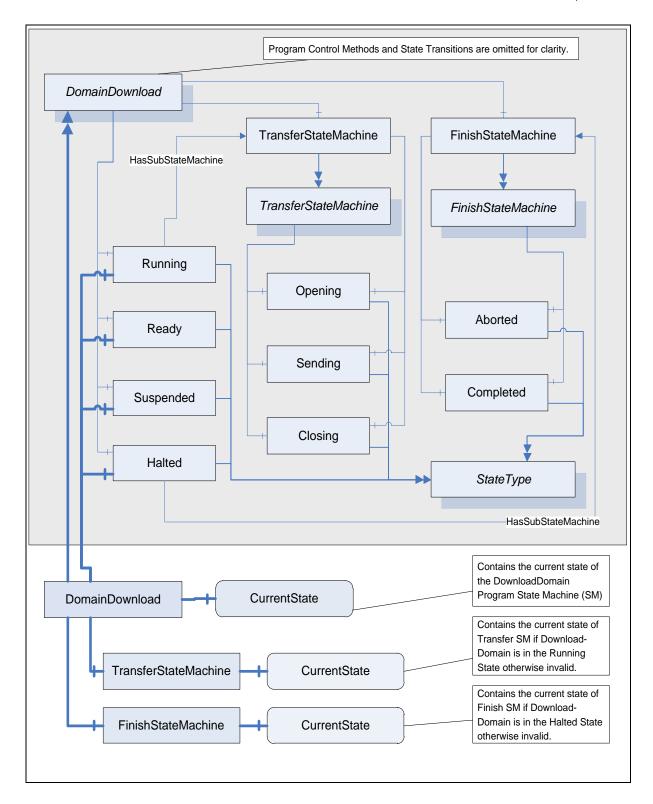


Figure A.3 - DomainDownloadType partial state model

Table A.8 specifies the *ProgramTransitionTypes* that are defined in addition to the *ProgramTransitionTypes* specified for *Programs* in Table 7. These types associate the Transfer and Finish sub state machine states with the states of the base *Program*.

Table A.8 – Additional DomainDownload transition types

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	NOTES
Transitions					
ToSending	HasProperty	TransitionNumber	10	PropertyType	
	ToState	Sending		StateType	
	FromState	Opening		StateType	
	HasCause	Start			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
SendingToSending	HasProperty	TransitionNumber	11	PropertyType	
	ToState	Sending		StateType	
	FromState	Sending		StateType	
	HasEffect	ProgramTransitionEventType			
SendingToClosing	HasProperty	TransitionNumber	12	PropertyType	
	ToState	Closing		StateType	
	FromState	Sending		StateType	
	HasEffect	ProgramTransitionEventType			
SendingToAborted	HasProperty	TransitionNumber	13	PropertyType	
	ToState	Aborted		StateType	
	FromState	Sending		StateType	
	HasCause	Halt			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
ClosingToComplete	HasProperty	TransitionNumber	14	PropertyType	
d					
	ToState	Completed		StateType	
	FromState	Closing		StateType	
	HasEffect	ProgramTransitionEventType			
SendingToSuspend	HasProperty	TransitionNumber	15	PropertyType	
ed	ToState	Suspended		StateType	
	FromState			StateType	
	HasCause	Sending Suspend		State Type	Method
					Method
	HasEffect HasEffect	ProgramTransitionEventType AuditProgramTransitionEventType			
	1 IddElloot	. wan regiani ranomoni ventrype			
SuspendedToSendi ng	HasProperty	TransitionNumber	16	PropertyType	
	†	0 "	İ		1
	ToState	Sending		StateType	

BrowseName	References	Target BrowseName	Value	Target TypeDefinition	NOTES
Transitions		•			
	HasCause	Resume			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventType			
SuspendedToAborte d	HasProperty	TransitionNumber	18	PropertyType	
	ToState	Aborted		StateType	
	FromState	Suspended		StateType	
	HasCause	Halt			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventTy pe			
ReadyToOpening	HasProperty	TransitionNumber	17	PropertyType	
Ready 100 penning	ToState		17		
		Opening		StateType	
	FromState	Ready		StateType	
	HasCause	Start			Method
	HasEffect	ProgramTransitionEventType			
	HasEffect	AuditProgramTransitionEventTy pe			

Figure A.4 through Figure A.10 illustrate portions of the DomainDownloadType model. In each figure, the referenced tates, *Methods*, transitions, and *EventTypes* are identified for one or two state transitions.

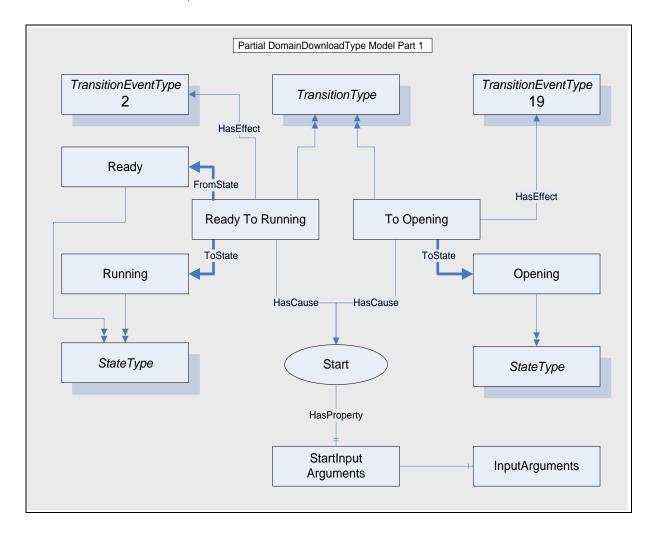


Figure A.4 - Ready To Running model

Figure A.4 illustrates the model for the ReadyToRunning *Program* transition. The transition is caused by the *Start Method*. The *Start Method* requires three input arguments. The *Method Call* service is used by the *Client* to invoke the *Start Method* and pass the arguments. When successful, the *Program Invocation* enters the Running state and the subordinate Transfer Opening state. The *Server* issues two *Event* notifications, ReadyToRunning (2), and ToOpening (19).

Table A.9 - Start Method additions

Attribute	Value						
BrowseName	Start						
IsAbstract	False	False					
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule		
HasProperty	Variable	InputArgument	Argument[]	PropertyType			

Table A.9 specifies that the *Start Method* for the *DomainDownloadType* requires input arguments. Table A.10 identifies the *Start Arguments* required.

Table A.10 – StartArguments

Name	Туре	Value
Argument 1	structure	
name	String	SourcePath
dataType	Nodeld	StringNodeId
valueRank	Int32	-1 (-1 = scalar)
arrayDimensions	UInt32[]	null
description	LocalizedText	The source specifier for the domain
Argument 2	structure	
Name	String	DesinationPath
dataType	Nodeld	StringNodeId
valueRank	Int32	-1 (-1 = scalar)
arrayDimensions	UInt32[]	null
description	LocalizedText	The destination specifier for the domain
Argument 3	structure	
name	String	DomainName
dataType	Nodeld	StringNodeId
arrayDimensions	UInt32[]	null
valueRank	Int32	-1 (-1 = scalar)
description	LocalizedText	The name of the domain

Figure A.5 illustrates the model for the Opening To Sending and the Sending to Closing *Program* transitions. As specified in the transition table, these state transitions require no *Methods* to occur, but rather are driven by the internal actions of the *Server. Events* are generated for each state transition (10 to 12), when they occur.

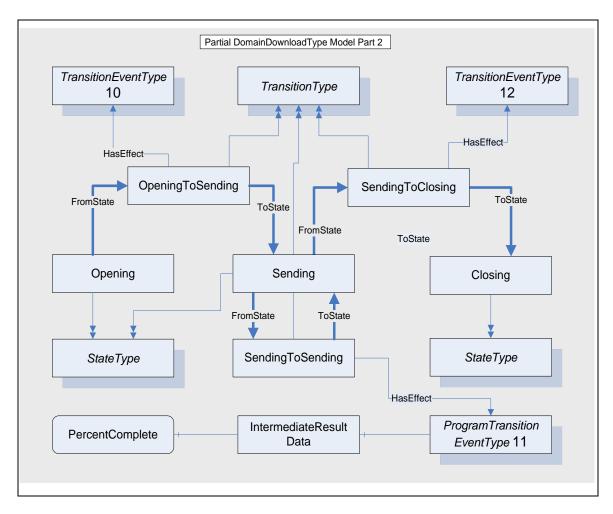


Figure A.5 - Opening To Sending To Closing model

Notice that a state transition can initiate and terminate at the same state (Sending). In this case the transition serves a purpose. The *ProgramTransitionEventType* effect referenced by the SendingToSending state transition has an *IntermediateResultData Object Reference*. The *IntermediateResultData Object* serves to identify two *Variables* whose values are obtained each time the state transition occurs. The values are sent to the *Client* with the *Event* notification. Table A.11 defines the *IntermediateResults ObjectType* and Table A.13 defines the *Variables* of the *ObjectType*.

Table A.11 - IntermediateResults Object

Attribute	Value							
	Includes all att	Includes all attributes specified for the ObjectType						
BrowseName	IntermediateRe	IntermediateResults						
IsAbstract	False	False						
References	NodeClass	BrowseName	Data Type	TypeDefinition	Modelling Rule			
HasComponent	Variable	AmountTransferred	Long	VariableType	Mandatory			
HasComponent	Variable	PercentageTransferred	Long	VariableType	Mandatory			

Intermediate Result Variables	Туре	Value	
Variable 1	Structure		
Name	String	AmountTransferred	
dataType	Nodeld	StringNodeld	
description	LocalizedText	Bytes of domain data transferred.	
Variable 2	Structure		
Name	String	PercentageTransferred	
dataType	Nodeld	StringNodeld	
description	LocalizedText	Percentage of domain data transferred.	

Table A.12 - Intermediate result data Variables

The model for the Running To Suspended state transition is illustrated in Figure A.6. The cause for this transition is the *Suspend Method*. The *Client* can pause the download of domain data to the control. The transition from Running to Suspended invokes the *Event* generation for *TransitionEventTypes* 5 and 16. Note that there is no longer a valid current state for the Transfer State Machine.

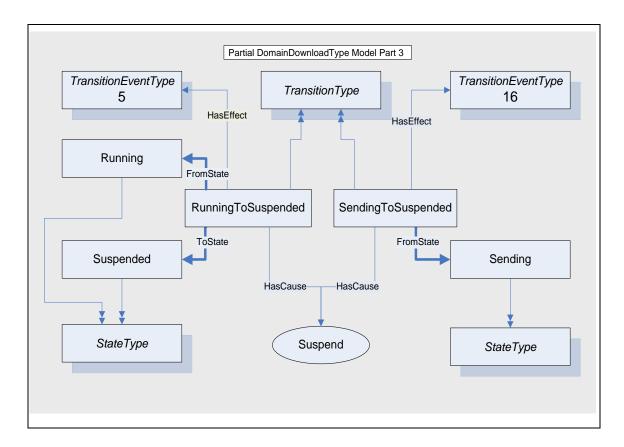


Figure A.6 – Running To Suspended model

The model for the SuspendedToRunning state transition is illustrated in Figure A.7. The cause for this transition is the *Resume Method*. The *Client* can resume the download of domain data to the control. The transition from Suspended to Running generates the *Event* for *TransitionEventTypes* 6 and 17. Now that the Running state is active, the Sending state of the Transfer State Machine is again specified for the *CurrentStateNumber*.

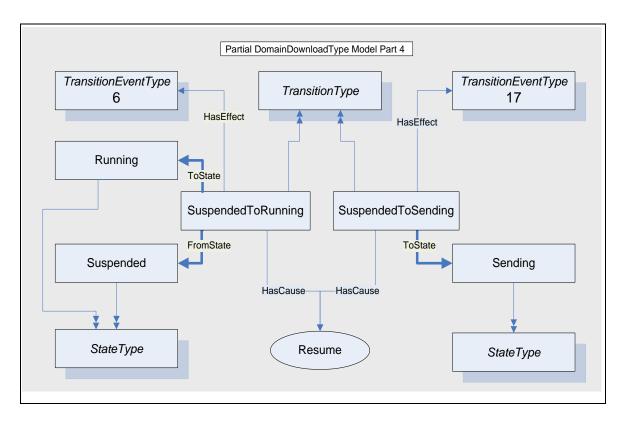


Figure A.7 - Suspended To Running model

The model for the Running To Halted state transition for an abnormal termination of the domain download is illustrated in Figure A.8. The cause for this transition is the *Halt Method*. The *Client* can terminate the download of domain data to the control. The transition from Running To Halted generates the *Event* for *TransitionEventTypes* 3 and 15. The *TransitionEventType* 15 indicates the transition from the Sending state as the Running State ends and then to the Aborted state as the Halted state is entered.

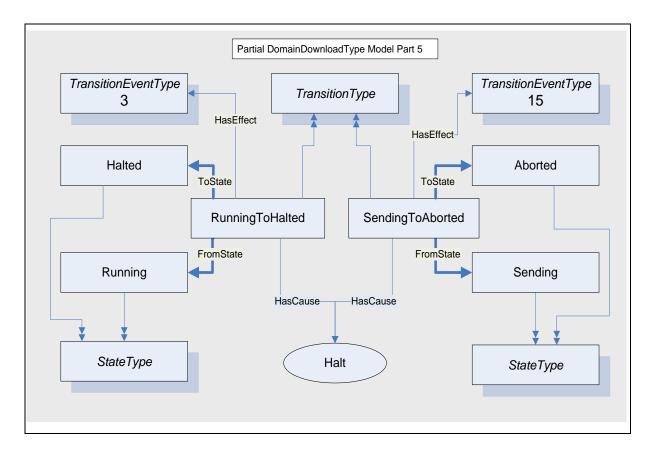


Figure A.8 – Running To Halted – Aborted model

Figure A.9 illustrates the model for the Suspended To Halted state transition for an abnormal termination of the domain download. The cause for this transition is the *Halt Method*. The *Client* can terminate the download of domain data to the control while it is suspended. The transition from SuspendedToHalted invokes the *Event* notifiers for *TransitionEventTypes* 7 and 18.

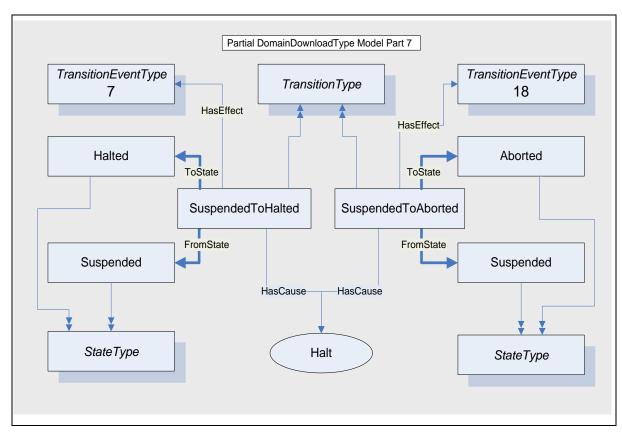


Figure A.9 - Suspended To Aborted model

The model for the Running To Completed state transition for a normal termination of the domain download is illustrated in Figure A.10. The cause for this transition is internal. The transition from Closing To Halted generates the Event for *TransitionEventTypes* 3 and 14. The *TransitionEventType* 14 indicates the transition from the Closing state as the Running state ends and then to the Completed state as the Halted state is entered.

The DomainDownloadType includes a component reference to a *FInalResultData Object*. This *Object* references *Variables* that persists information about the domain download once it has completed. This data can be read by *Clients* who are not subscribed to *Event* notifications. The result data is described in Table A.13 and the *Variables* in Table A.14.

Attribute		Value					
	Includes all a	Includes all attributes specified for the ObjectType					
BrowseName	FinalResultD	FinalResultData					
IsAbstract	False	False					
References	NodeClass	BrowseName	Data Type	TypeDefinition	Modelling Rule		
HasComponent	Variable	DownloadPerformance	Long	VariableType	Mandatory		
HasComponent	Variable	FailureDetails	Long	VariableType	Mandatory		

Table A.13 - FinalResultData

The Domain Download net transfer data rate and detailed reason for aborted downloads is retained as final result data for each *Program Invocation*.

Table A.14 - Final result Variables

Final Result Variables	Туре	Value
Variable 1	Structure	
Name	String	DownloadPerformance
dataType	Nodeld	Double
description	LocalizedText	Data rate for domain data transferred
Variable 2	Structure	
Name	String	FailureDetails
dataType	Nodeld	StringNodeId
description	LocalizedText	Description of reason for abort

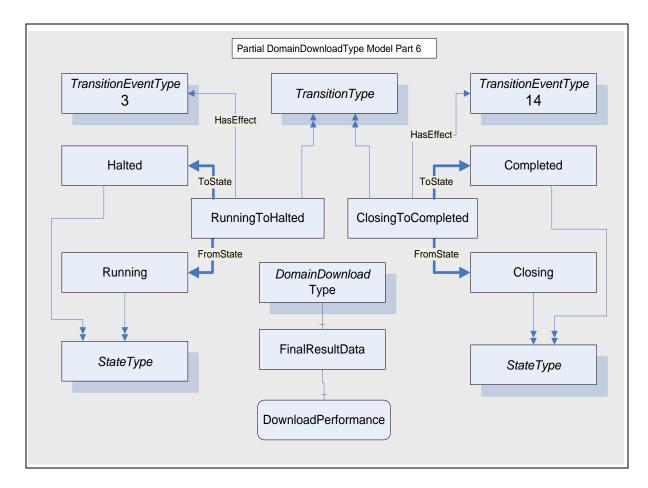


Figure A.10 - Running To Completed model

A.2.6.3 Sequence of operations

Figure A.11 illustrates a normal sequence of service exchanges between a *Client* and *Server* that would occur during the life cycle of a DomainDownloadType *Program Invocation*.

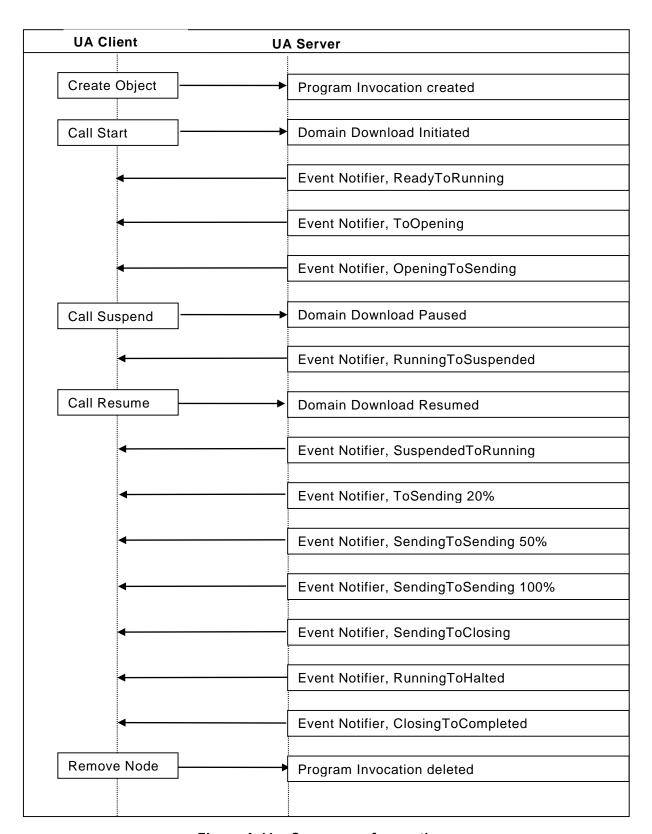


Figure A.11 – Sequence of operations