REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-25	AC

TOP VIEW

Scale 1:2; looking down (along -Z)

FRONT VIEW

Scale 1:2; looking at the front (along +Y)

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)

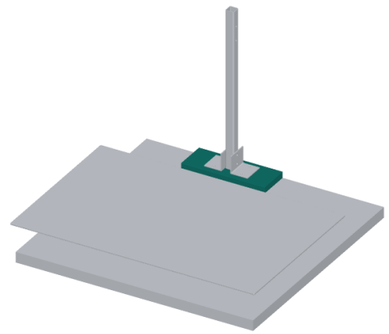

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut one piece 240 long x 90 deep from 18 mm plywood; sand the edges.
Mark a centre line across it, 120 mm from each end, on the top face and down the front edge: it lines up with the mat's centre mark.
The post stands on the centre line, 45 mm back from the front edge.
Four pilot holes 3 mm, 12 mm deep, for the foot angle screws:
39 mm each side of the centre line, 25 and 65 mm back from the front edge.
Better: drill them through the foot angles when fitting (step 2).
Paint the front edge the mat's grey so it disappears if it shows at all.
Fit: back edge flush with the back edge of the bench, held by two G-clamps 20 mm in from each end. The front edge is where the mat stops.
Check: flat, square corners, centre line marked on top and front.

WASTEWISE-ML

github.com/BoujeeEnjinia1701/WasteWise-ml

WasteWise-ml base board: making sketch

DRAWING NO.	REV	SHEET	SIZE
WML-DWG-101	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:2	mm		2026-10-25	Amish Chadha

MATERIAL / NOTES

Plywood 18 mm, exterior or birch grade

Licensed MIT · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand