REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-25	AC

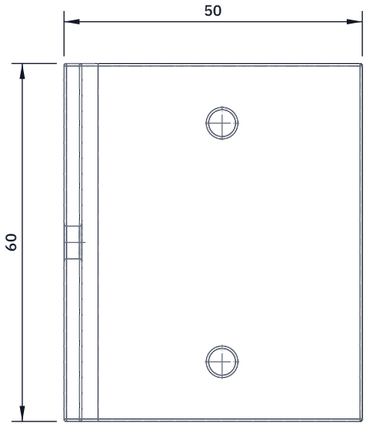

TOP VIEW

Scale 1:1; looking down (along -Z)

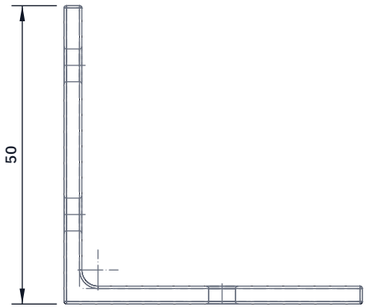

FRONT VIEW

Scale 1:1; looking at the front (along +Y)

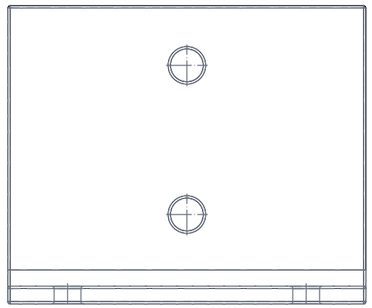

RIGHT VIEW

Scale 1:1; looking at the right side (along -X)

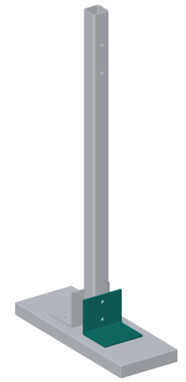

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two, the same. Cut 60 mm lengths of 50 x 50 x 3 angle; square and deburr the ends.

Upright leg (against the post): two 5.5 mm holes at mid-length (30 mm), 15 and 40 mm up from the underside of the flat leg.

Flat leg (on the board): two 4.5 mm holes, 26.5 mm out from the back of the upright leg, 10 and 50 mm along the length.

Drill the two angles clamped together so the holes match, then countersink the flat-leg holes lightly for the screw heads.

Fit: the back of the upright leg sits flat on a side face of the post, the flat leg points away from the post and sits flat on the board.

Two M5 bolts go through both angles and the post (step 1).

Check: the two angles stand square and level on a flat bench.

WASTEWISE-ML github.com/BoujeeEnjinia1701/WasteWise-ml

WasteWise-ml foot angle (make 2): making sketch

DRAWING NO.	REV	SHEET	SIZE
WML-DWG-102	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:1	mm		2026-10-25	Amish Chadha

MATERIAL / NOTES

Aluminium equal angle 50 x 50 x 3 mm, 6063 class

Licensed MIT · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand