REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-25	AC



TOP VIEW

Scale 1:2; looking down (along -Z)



FRONT VIEW

Scale 1:2; looking at the front (along +Y)

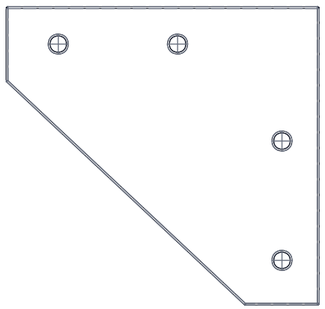

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)

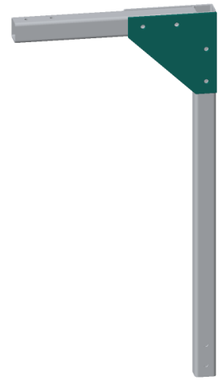

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two, the same. Mark a 105 x 100 mm rectangle on 3 mm sheet: the 105 mm edge is the top (level with the top of the arm), the 100 mm edge at one end is the back (it lines up with the post's back face).
Cut off the lower front corner: from 25 mm down the front edge to 25 mm in from the back along the bottom edge. File the cut straight.
Holes 5.5 mm, 12.5 mm below the top edge, 17.5 and 57.5 mm from the front edge (into the arm).
Holes 5.5 mm, 12.5 mm in from the back edge, 45 and 85 mm below the top edge (into the post).
Drill the two plates clamped together. Round the corners about 2 mm.
Fit: one plate flat on each side of the post and arm, top edge level with the arm top; four M5 bolts through plates and tubes (step 3).
Check: the plates match each other hole for hole.

WASTEWISE-ML

github.com/BoujeeEnjinia1701/WasteWise-ml

WasteWise-ml corner plate (make 2): making sketch

DRAWING NO.	REV	SHEET	SIZE
WML-DWG-105	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:2	mm		2026-10-25	Amish Chadha

MATERIAL / NOTES

Aluminium sheet 3 mm, 5052 or 6061 class

Licensed MIT · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand