


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC

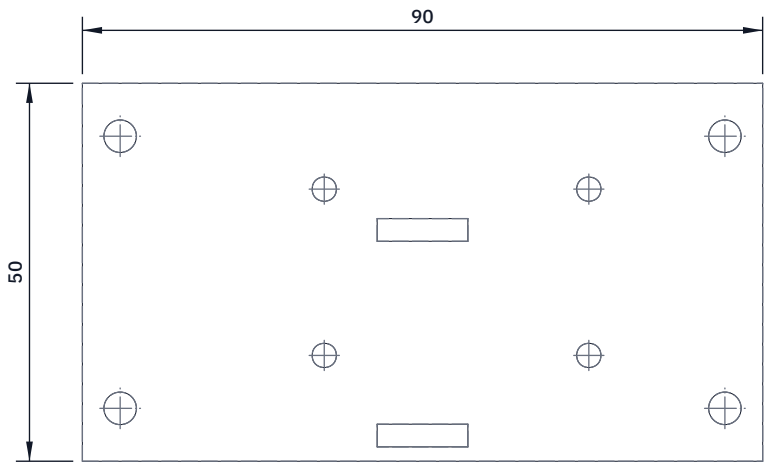


TOP VIEW
Scale 1:1; looking down (along -Z)



FRONT VIEW
Scale 1:1; looking at the front (along +Y)



RIGHT VIEW
Scale 1:1; looking at the right side (along -X)

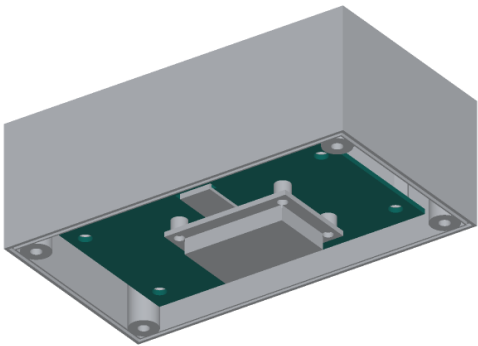

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut the board to 90 x 50 mm with a fine saw; file the edges smooth.

Measure from the centre lines. The top face carries the cell and the breakouts; the driver board hangs under the other face.

Fixing holes: four 4.3 mm at 40 and 18 mm each side of centre.

Driver board holes: four 3.2 mm at -13 and 22 mm along, 11 mm each side across. Match your driver board's holes.

Strap slots: two 12 x 3 mm on the cross line, 5.6 mm toward the back edge and 21.6 mm toward the front edge. Drill and file.

Lay out on the top: cell holder along the front half; module, sensor breakouts, power parts and capacitor along the back half.

Fit: the top face sits on the four standoff ends, held by four M4 screws from below.

Check: the board drops onto the standoffs without forcing.

BINLEVEL				github.com/BoujeeEnjinia1701/binlevel					
BinLevel electronics board: making sketch									
DRAWING NO. BNL - DWG - 104				REV P1		SHEET 1 of 1		SIZE ANSI B	
SCALE 1:1		UNITS mm		PROJECTION 		DATE 2026-09-30		DRAWN Amish Chadha	
MATERIAL / NOTES Perforated prototyping board, FR-4, 1.6 mm, 2.54 mm pitch									
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com								Generated from cad/src; do not edit by hand	