



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC

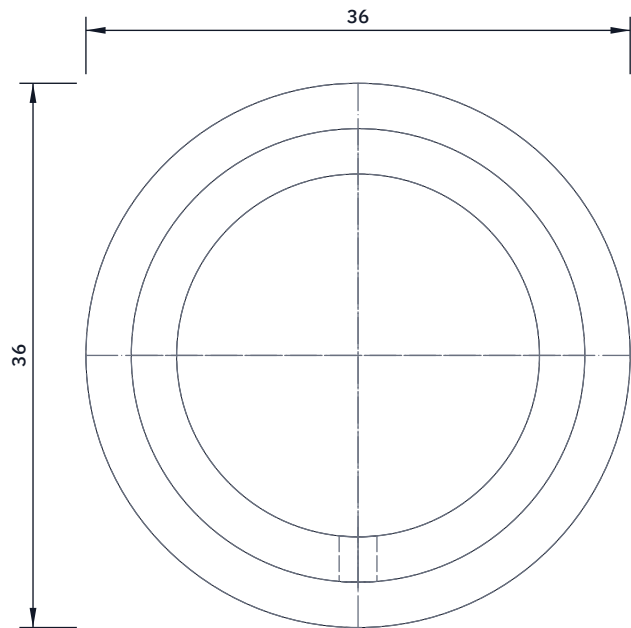


TOP VIEW

Scale 2:1; looking down (along -Z)

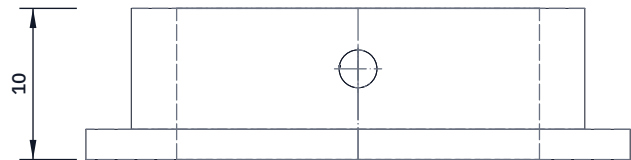


FRONT VIEW

Scale 2:1; looking at the front (along +Y)

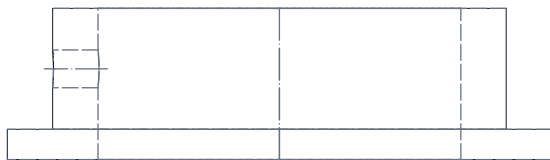

RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

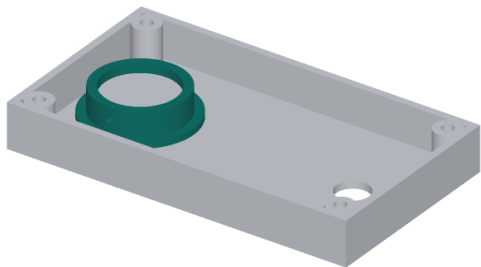

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Flange 36 mm across, 2 mm thick; tube 30 mm across, 10 mm tall overall; bore 24.0 mm to suit the probe.

Print flange down in ASA in an enclosed printer. Measure your probe first and print the bore 0.1 to 0.2 mm under it, for a push fit.

Add a 2.5 mm hole through the tube wall 6 mm above the flange and tap it M3 for a nylon-tipped grub screw.

Fit: push the probe through the cover hole from outside so its face stands 14.5 mm proud. Seal the gap in the hole with neutral-cure silicone; slide the collar over the probe from inside and bond the flange to the floor with two-part plastics epoxy.

Tighten the grub screw finger tight once the epoxy has cured.

Check: the probe does not move when pushed by hand.

BINLEVEL

github.com/BoujeeEnjinia1701/binlevel

BinLevel probe collar: making sketch

DRAWING NO. BNL - DWG - 105		REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-09-30	DRAWN Amish Chadha
MATERIAL / NOTES ASA, 3D printed, 100 % infill				
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand	