

BREAKHOOK · BUILD PLAN

BreakHook prototype build plan

Design Molecule Lab · designmolecule.com

DOCUMENT CONTROL

Document ID	BHK-BLD-001	Version	0.3
Status	Draft	Date	2026-10-03
Author	Amish Chadha	License	CERN-OHL-S-2.0
Project TRL	TRL 3 Proof of concept		
Repository	github.com/BoujeeEnjinia1701/breakhook		
Source	docs/05-build-plan.md @ uncommitted		

REVISION HISTORY

Version	Date	Author	Change
0.3	2026-10-03	Amish Chadha	Reach and drill checks worded for the prop holder's placement-only stand-off at 2.9 m (BHK-DDR-004, Amish's round-2 decision 5A)
0.2	2026-10-03	Amish Chadha	Fork prop added (BHK-DDR-003); new section 3.8, Figures 14 to 16, Step 13; rack and stowing steps renumbered 14 and 15
0.1	2026-10-03	Amish Chadha	First build plan; design made constructable (BHK-DDR-002)

BreakHook prototype build plan


Plan, not yet built. How to build the first proof-of-concept prototype, component by component. Building and testing to it is TRL 4 work. Decisions still to be made are kept in the design decisions register ([docs/06-design-decisions.md](#)), not here.

■ 1. What you are building

BreakHook: one set and its rack, in build order

Every component, pulled apart and numbered in build order

- 1 Hook plate
- 2 Socket tube
- 3 Hook head welds
- 4 Pole section 1 (butt)
- 5 Pole section 2 (middle)
- 6 Pole section 3 (top)
- 7 Joint sleeves (2, one shown)
- 8 Joint pins (2, one shown)
- 9 Hand band
- 10 Butt cap
- 11 Friction ring
- 12 Shackles (2, one shown)
- 13 Wire rope leader
- 14 Pull rope
- 15 Hauling toggles and prusik cords (10)
- 16 Fork prop: lower tube, foot cap and band
- 17 Fork prop: upper tube
- 18 Fork plate and two nylon bolts
- 19 Prop setting pin
- 20 Rack uprights (2, one shown)

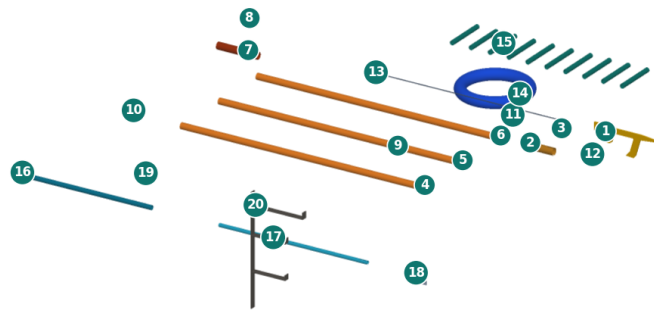

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 1. One set, its fork prop and one rack upright, pulled apart and numbered in build order.

The prototype is one BreakHook set and its wall rack: a yellow steel hook head on a 5.9 m orange fibreglass pole in three sections, a short steel wire rope leader, a 25 m blue pull rope with ten hauling toggles, a light fork prop that holds the pole at mid-length while the hook is set, and two steel rack uprights. A community kit is two sets on one rack. Seven components are made: the hook plate and the socket tube (welded together into the hook head), the pole sections, the joint sleeves, the toggles, the fork prop and the rack uprights. Everything else is bought: shackles, wire rope leader, pull rope, nylon pins, cord, tape, caps, the lock and the seals. The work is cutting and welding steel plate and tube, cutting, drilling and gluing fibreglass tube, and tying knots. The parts for a community kit cost about USD 1,170 from the bill of materials.

Safety: This is a pulling tool used near fire, around people and possibly near electrical wiring. In the workshop the hazards are hot work (cutting and welding steel), fibreglass dust, and, at first load, a rope system under 6 kN. Weld only with fire precautions and eye protection; cut and drill fibreglass outdoors or with extraction, in a dust mask and gloves. Never stand in line with a loaded rope or leader. No part of this plan involves pulling down a real dwelling; first trials use a purpose-built test frame, outside this plan.

■ 2. What changed to make it buildable

The concept showed what BreakHook does; several parts could not be made or joined as first drawn. Each change below keeps what the tool does and is recorded in decision record BHK-DDR-002.

Table 1. Changes from the concept.

Component	The concept had	The buildable design has	Why
Hook head	A forged or fabricated hook with a spike	One profile cut from 10 mm steel plate (Figure 2)	No forging; any welder can cut it
Hook to pole	Hook on the end of the pole	A slotted steel socket with the plate welded into both slots (Figure 3)	A face-to-face welded joint a welder can check by eye
Pole in socket	Not defined	A slip fit with a rubber tape ring that releases at a firm 50 N pull (Figure 5)	The pole must come off before anyone hauls
Pole joints	Not defined	A fibreglass sleeve glued to the lower section and a nylon pin through the upper one (Figure 8)	Foam-filled tube cannot take an inside spigot; no metal in the insulated length
Rope attachment	Rope tied to the hook head	A shackle in a hole in line with the hook's arm, a 1.5 m wire rope leader, a second shackle to the rope (Figures 12 and 13)	No knot to weaken or cut; the pull runs straight through the hook
Hook plate size	40 mm shank and arm in ordinary steel	36 mm shank and 48 mm arm in S355 steel	The arm needed more strength on deep beams; the slimmer shank keeps the weight under 8 kg
Hauling handles	Handles or toggles	Fibreglass toggles on prusik cord loops (Figure 10)	They slide along the rope when slack and grip when pulled
Rack	A rack and a seal	Two welded flat-bar uprights with lipped arms and a rope peg (Figure 11)	Every piece rests on an arm without touching its neighbour
Holding the pole up	Two people holding the pole out by hand	A fork prop under the pole at mid-length, carried separately (Figures 14 to 16; decision record BHK-DDR-003)	The hand-held pole sagged about 0.66 m at the hook; on the prop it sags about 0.27 m and nobody has to lift it

■ 3. Making the components

Make and check each component before the assembly step that needs it. Sizes are in millimetres. "Front" is the end with the hook; the hook's arm points down. Workshop tolerance is 1 mm unless a step says otherwise; drawings carry no tolerances before TRL 4.

3.1 Hook plate

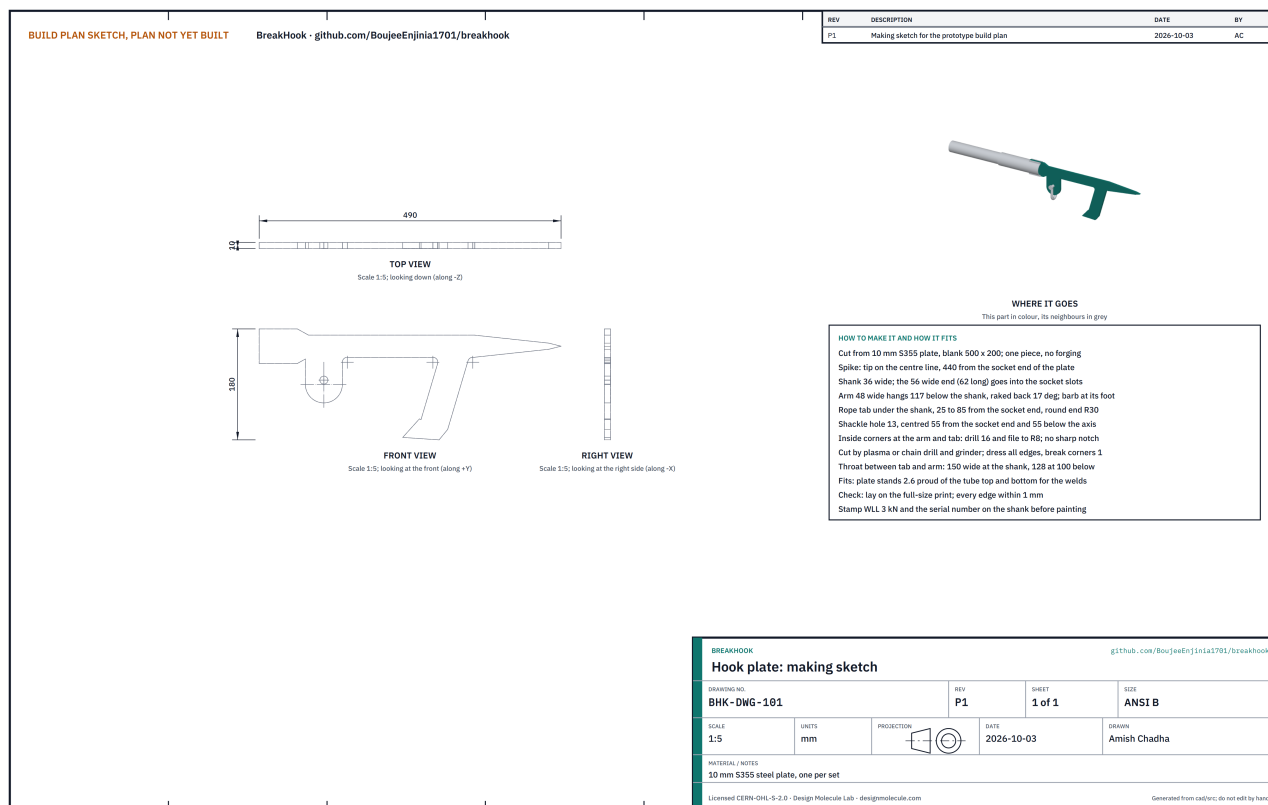


Figure 2. Hook plate making sketch (BHK-DWG-101).

What it is and what it is made from. The working part of the tool: a forward spike, a straight shank, an arm that hangs down behind a beam, a small barb at the arm's foot, and a rope tab with the shackle hole. One piece of 10 mm S355 steel plate, from a blank 500 x 200.


How to make it.

1. Print the profile from the making sketch at full size, glue it to the plate and centre-punch the corners and the hole centre.
2. Drill the 13 mm shackle hole, centred 55 from the socket end of the plate and 55 below the centre line of the shank.
3. Drill a 16 mm hole at each inside corner where the arm and the tab meet the shank, so the corners end up round (about 8 mm radius), never a sharp notch.
4. Cut the outline by plasma, or by chain drilling and an angle grinder with a cutting disc. The end that goes into the socket is 56 wide and 62 long; the shank is 36 wide; the arm is 48 wide and hangs 117 below the shank, sloping back toward the user by about 17°; the spike tip is on the centre line, 440 from the socket end.
5. Grind every edge clean, break the corners by about 1 mm, and dress the spike to a point with no burr.
6. Stamp "WLL 3 kN" and the serial number on the shank, near the socket end.

How it fits the parts next to it. The wide end slides 50 deep into the socket's two slots and stands 2.6 proud of the tube top and bottom for the welds (Figure 3). In use the shank rests on the top of a wall plate or rafter and the arm hangs behind it (Figure 4); the rope pulls through the shackle hole, which lines up with the middle of a 75 mm beam.

Joint 1: hook plate in the socket slots

The plate goes 50 into slots top and bottom and is welded along both sides of each slot

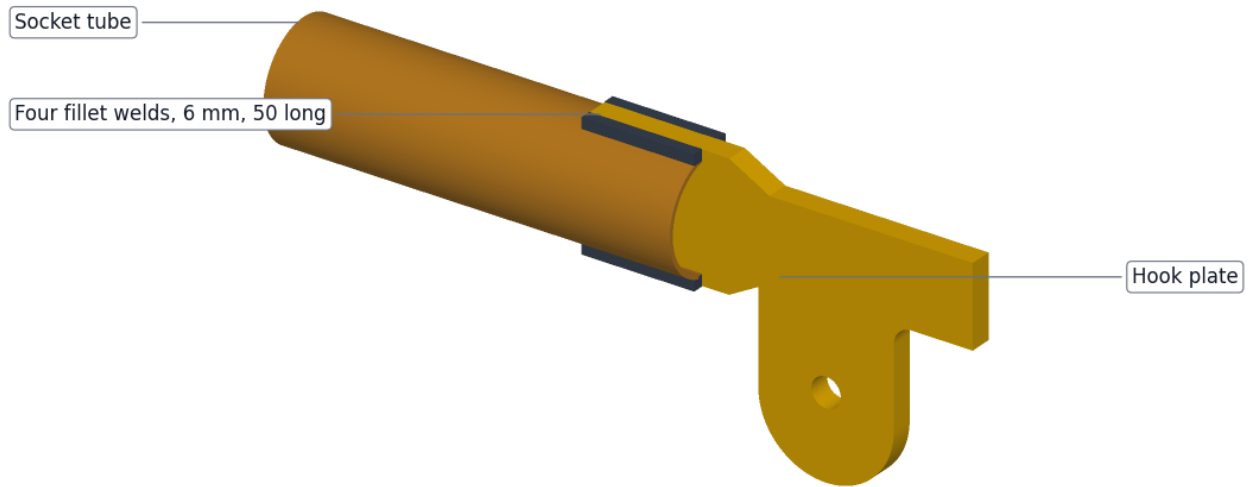


BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 3. The plate sits in slots top and bottom and is welded along both sides of each slot.

Joint 7: the hook on a wall plate (in use)

Shank on the plate, arm behind it; a pull on the rope draws the plate toward the haulers

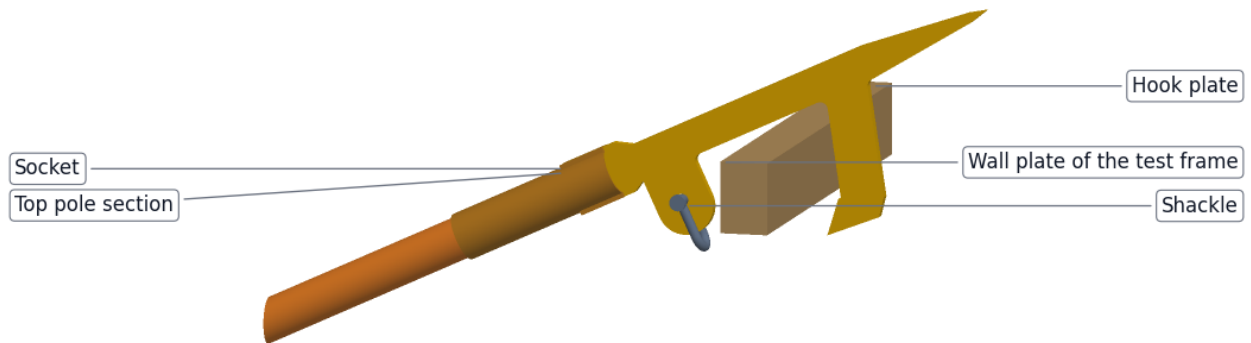

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 4. In use: shank on the plate, arm behind it.

Check before moving on. Lay the plate on the full-size print: every edge within 1 mm. A 75 x 50 timber offcut fits under the shank against the arm, and a 100 mm deep one fits too.

3.2 Socket tube

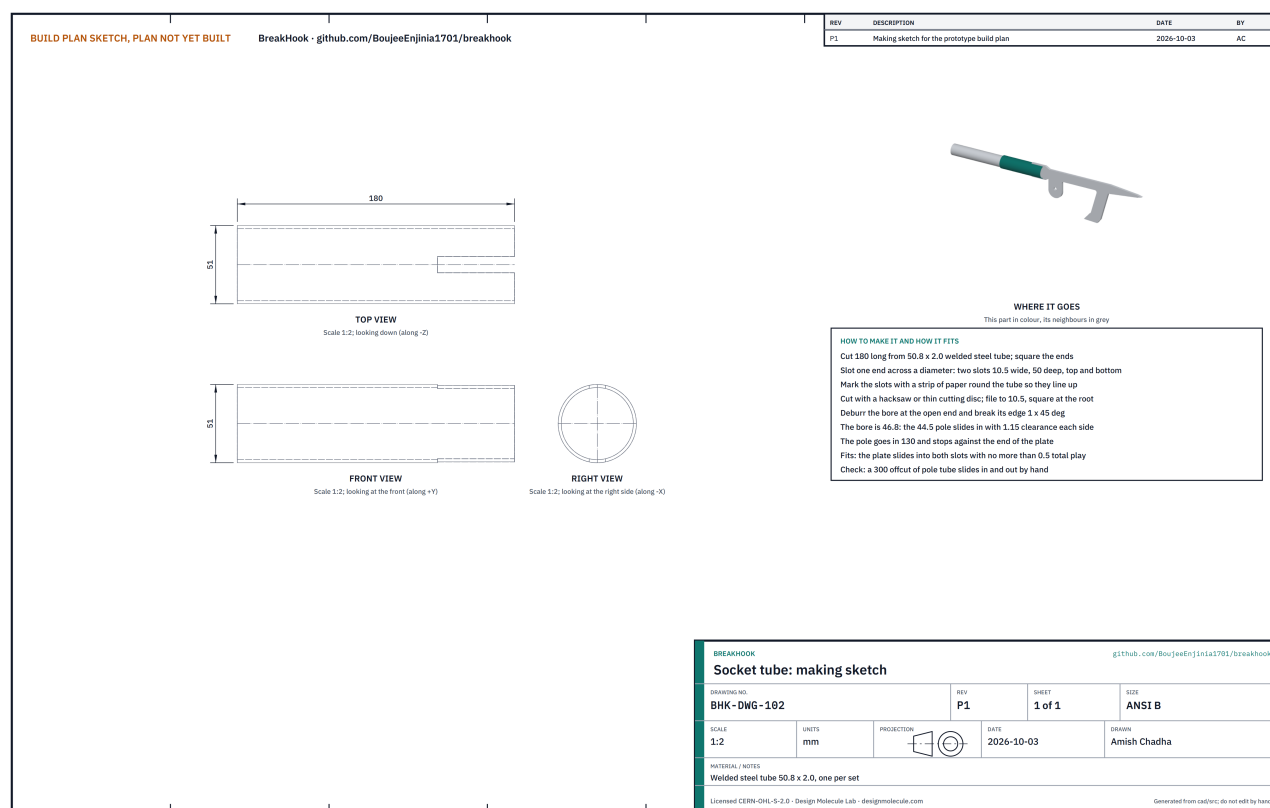


Figure 5a. Socket tube making sketch (BHK-DWG-102).

What it is and what it is made from. The short steel tube the pole slides into. Welded steel tube 50.8 x 2.0, cut to 180.


How to make it.

1. Cut 180 from the tube and square both ends.
2. Wrap a strip of paper round one end to mark two slots exactly opposite each other, 10.5 wide and 50 deep.
3. Cut the slots with a hacksaw or a thin cutting disc and file them to width, square at the bottom.
4. Deburr the bore at the open end and break its edge.

How it fits the parts next to it. The bore is 46.8; the 44.5 pole slides in with about 1.15 clearance all round and goes in 130 until it stops on the end of the plate. A ring of rubber tape on the pole tip makes it a firm push fit (Figure 5).

Joint 2: pole tip in the hook head

Cut open: the pole goes in 130 and stops on the plate; the tape ring gives a firm 50 N push-off

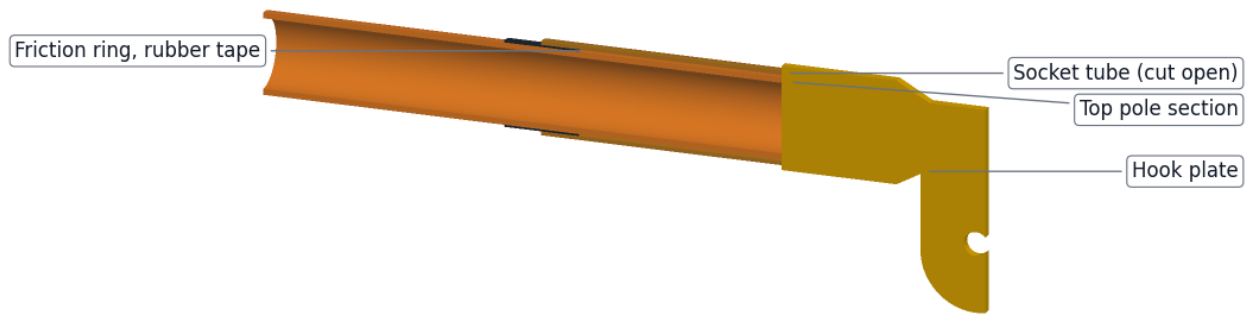

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 5. Cut open: the pole stops on the plate; the tape ring holds it.

Check before moving on. A 300 offcut of pole tube slides in and out by hand; the plate goes into both slots with no more than 0.5 total play.

Welding the hook head (Step 2). Tack the plate in the slots, check it is square to the tube and centred, then run a 6 mm fillet weld along both sides of each slot, outside the tube. Clean, prime with zinc-rich primer and paint high-visibility yellow.

3.3 Pole sections (make 3)

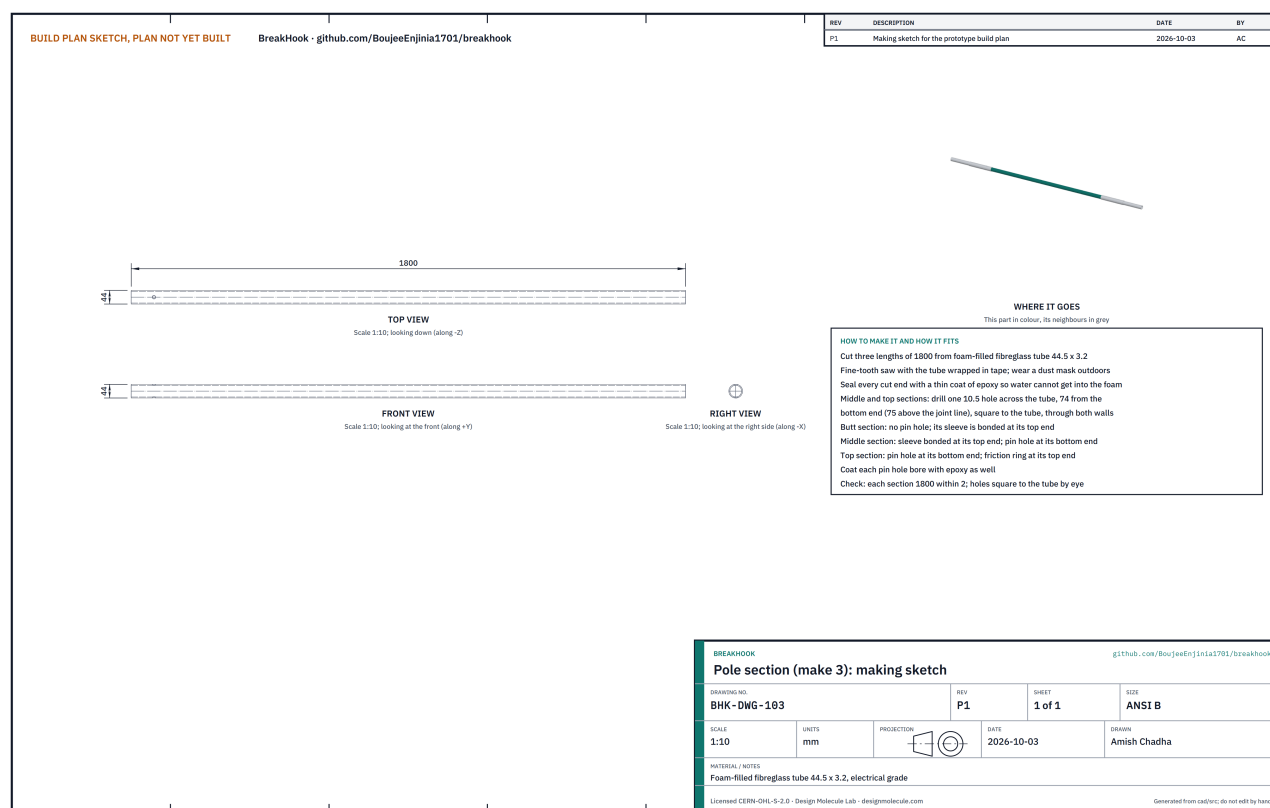


Figure 6. Pole section making sketch (BHK-DWG-103).

What it is and what it is made from. Three 1.8 m lengths of foam-filled, electrical-grade fibreglass tube 44.5 x 3.2 that carries the maker's dielectric test certificate. The butt section is the bottom one, the top section carries the hook head.

How to make it.

1. Cut three lengths of 1800 with a fine-tooth saw, the tube wrapped in tape where you cut. Work outdoors in a dust mask and gloves.
2. Middle and top sections: drill one 10.5 hole straight across the tube, through both walls, 74 from the bottom end.
3. Seal every cut end and the bore of every pin hole with a thin coat of epoxy, so water cannot get into the foam.

How it fits the parts next to it. The butt and middle sections each get a sleeve glued on their top ends (section 3.4); the section above slides into that sleeve and is pinned. The butt section also gets a rubber cap and a red hand band 1550 to 1600 from its bottom end. The top section gets the friction ring 110 to 150 below its tip.

Check before moving on. Each section is 1800 within 2; the pin holes are square to the tube by eye.

3.4 Joint sleeves (make 2)

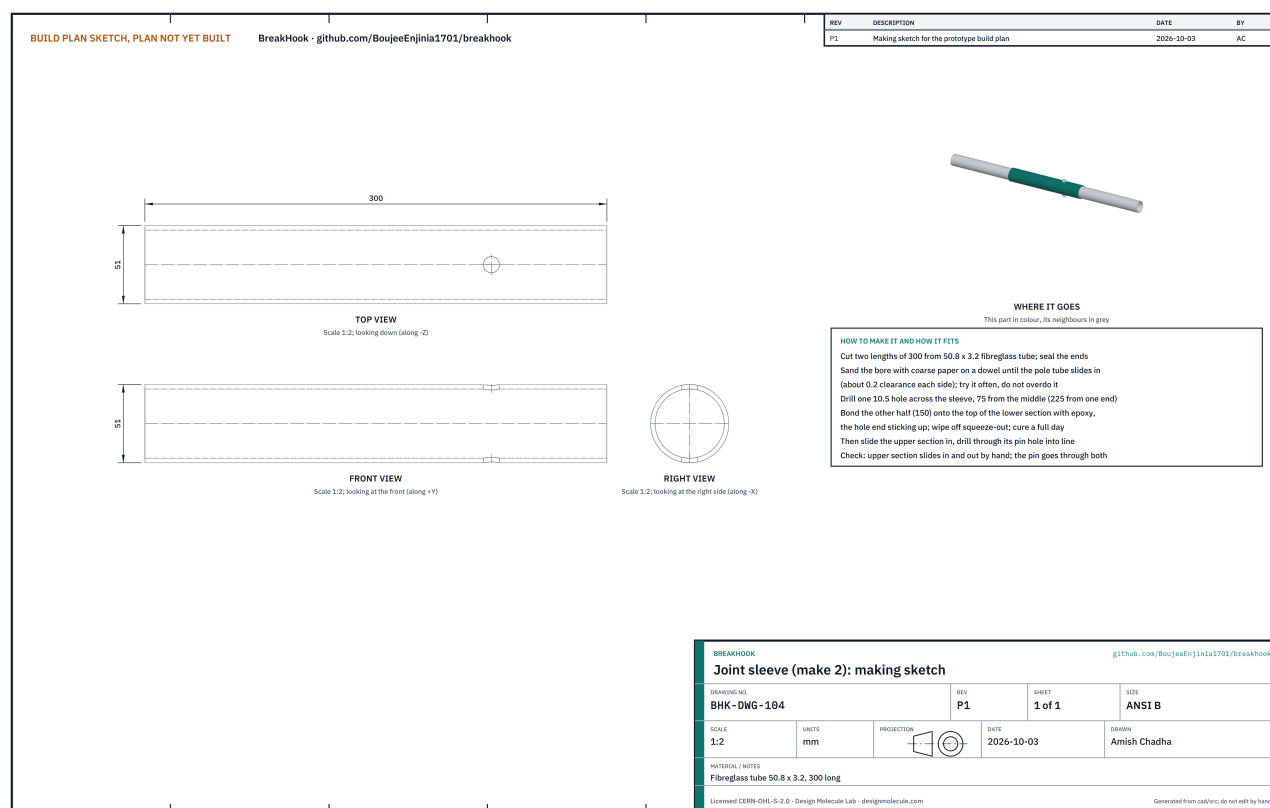


Figure 7. Joint sleeve making sketch (BHK-DWG-104).

What it is and what it is made from. A 300 length of fibreglass tube 50.8 x 3.2 that joins two pole sections.


How to make it.

1. Cut two lengths of 300 and seal the ends with epoxy.
2. Sand the bore with coarse paper on a dowel, trying a pole offcut often, until the pole slides in with about 0.2 clearance all round.
3. Drill one 10.5 hole straight across, 75 from the middle of the sleeve.
4. Glue the half without the hole (150) onto the top of the butt section, and the other sleeve onto the top of the middle section, with structural epoxy. Wipe off the squeeze-out and let it cure a full day.

How it fits the parts next to it. The two sections meet in the middle of the sleeve with a 2 gap. The upper section slides into the free half and a nylon pin goes through the sleeve and the section (Figure 8).

Joint 3: pole joint

Cut open: sections meet in the middle of the sleeve; glued below, pinned above

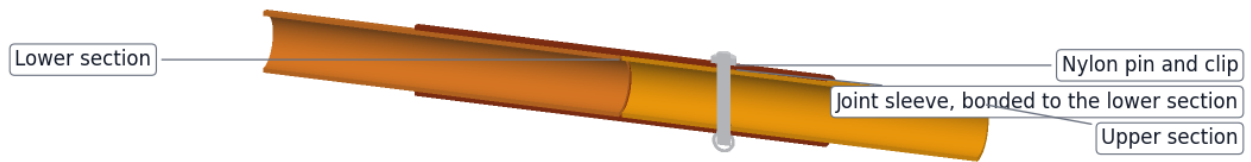

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 8. Cut open: glued below the joint line, pinned above it.

Check before moving on. The upper section slides in and out by hand and the pin goes through both holes without forcing.

3.5 Hauling toggles (make 10 per set)

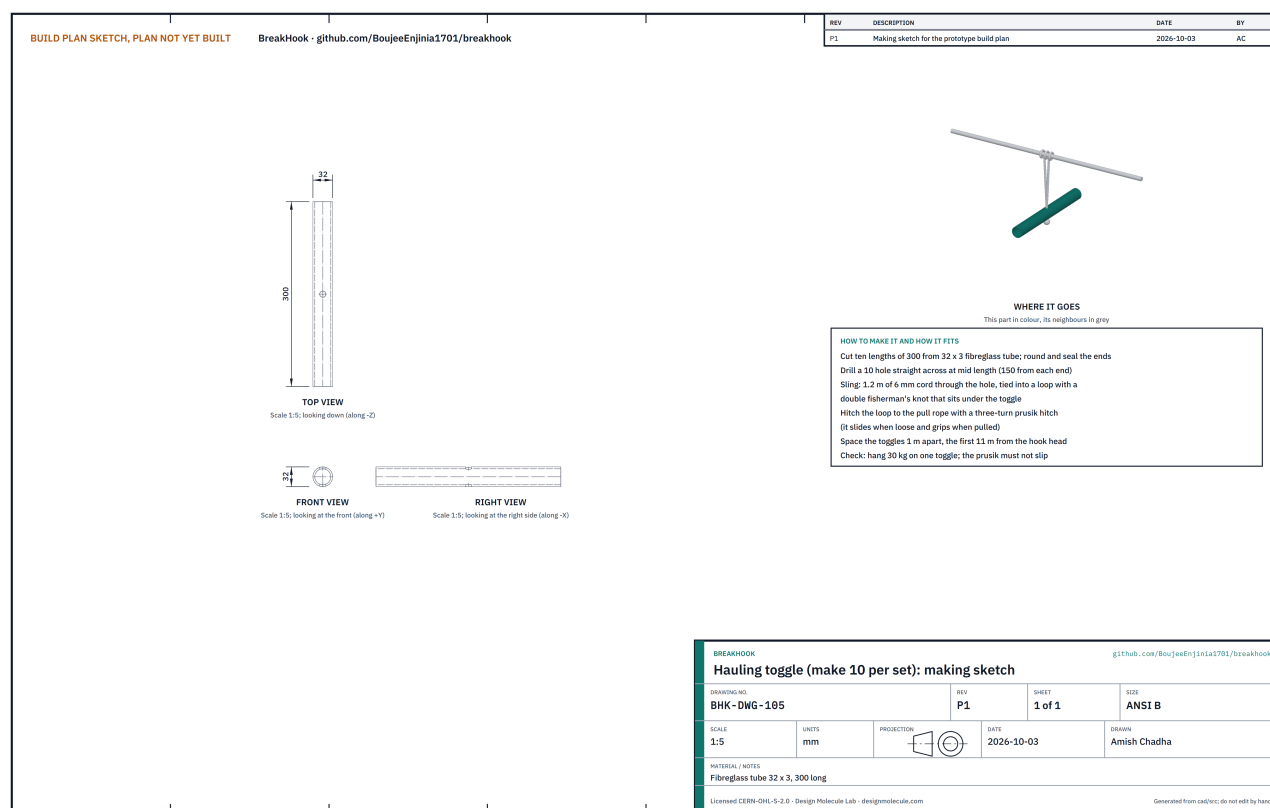


Figure 9. Hauling toggle making sketch (BHK-DWG-105).

What it is and what it is made from. A 300 length of fibreglass tube 32 x 3 that a hauler holds, hung from the pull rope on a loop of 6 mm cord.


How to make it.

1. Cut ten lengths of 300; round and seal the ends.
2. Drill a 10 hole straight across at mid length.
3. Pass 1.2 m of 6 mm cord through the hole and tie it into a loop with a double fisherman's knot that sits under the toggle.

How it fits the parts next to it. The loop goes onto the pull rope with a three-turn prusik hitch, which slides when slack and grips under load (Figure 10). Toggles go 1 m apart from 11 m along the line.

Joint 6: hauling toggle on the rope

Three-turn prusik: slides when slack, grips under load

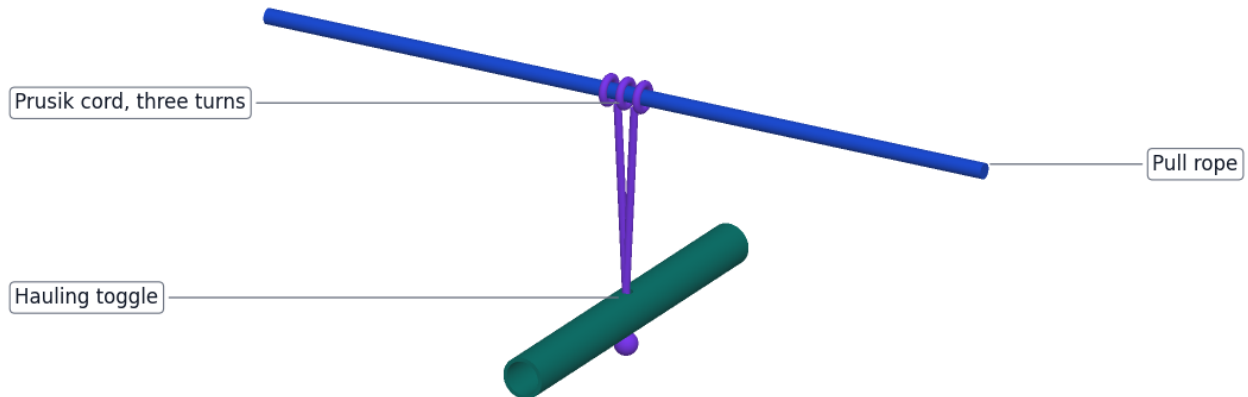

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 10. Three-turn prusik on the 12 mm rope.

Check before moving on. Hang 30 kg from one toggle on a length of the rope: the prusik does not slip.

3.6 Rack uprights (make 2)

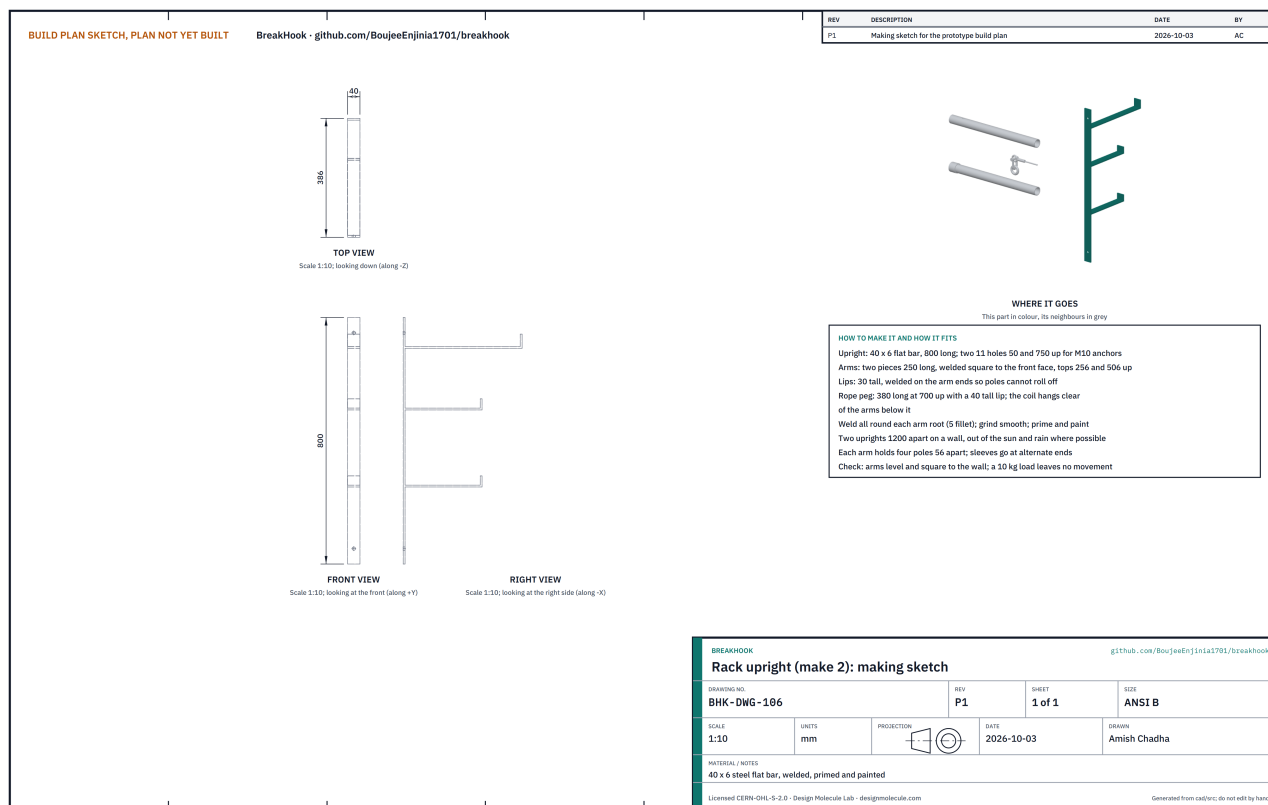


Figure 11a. Rack upright making sketch (BHK-DWG-106).

What it is and what it is made from. A wall bracket of 40 x 6 steel flat bar: an 800 upright, two 250 arms with 30 lips, and a 380 rope peg with a 40 lip.


How to make it.

1. Cut the upright, two arms, a peg and three lips from 40 x 6 flat bar.
2. Drill two 11 holes in the upright, 50 and 750 up, for M10 anchors.
3. Weld the lips on the ends of the arms and the peg, standing up.
4. Weld the arms square to the front face of the upright with their tops 256 and 506 up, and the peg at 700 up.
Weld all round each root.
5. Grind smooth, prime and paint.

How it fits the parts next to it. The two uprights go 1200 apart on a wall. Each arm holds four poles 56 apart, with the sleeves at alternate ends so they do not touch. The rope coil hangs on the peg clear of the arms below (Figure 11).

Joint 8: poles on the rack arms

Four poles per arm, 56 apart, held by the lips; the coil hangs on the peg clear of the arms

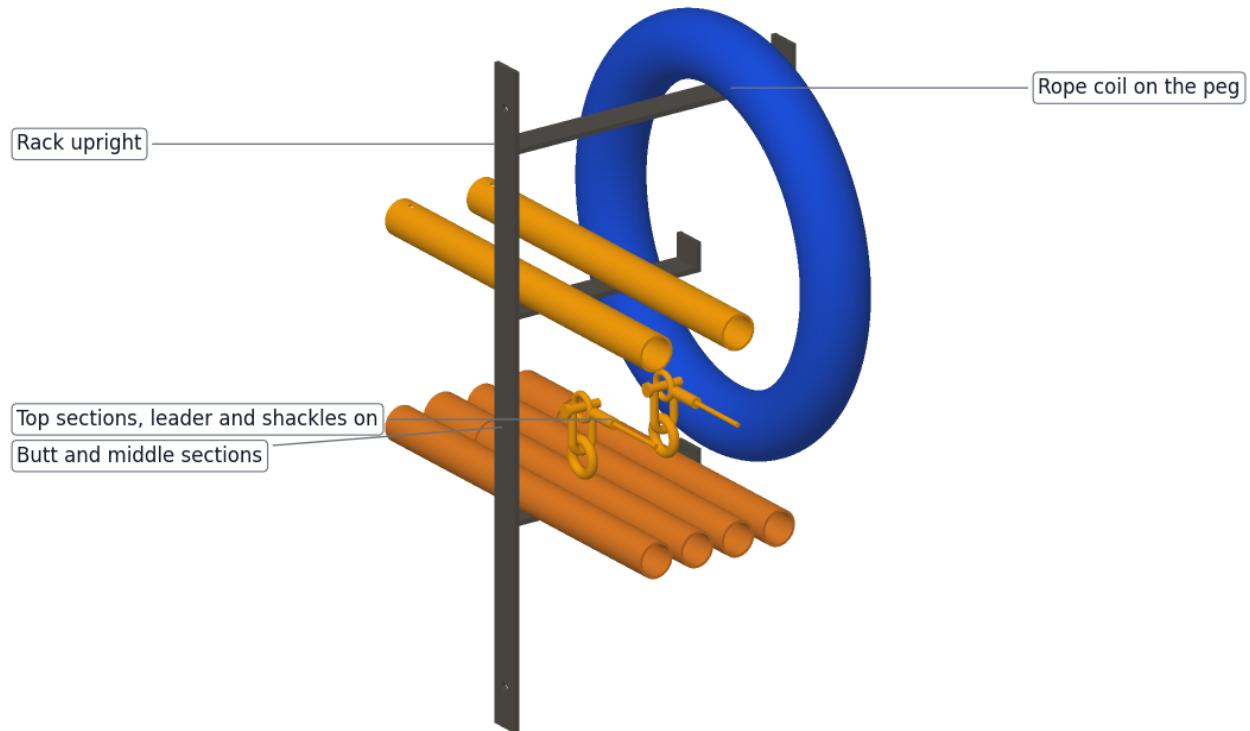

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 11. Lower arms hold the butt and middle sections, upper arms the top sections with their hook heads.


Check before moving on. Arms level and square to the wall; a 10 kg load leaves no movement.

3.7 Bought components

- **Shackles (four per kit):** 3/8 in (10 mm) screw-pin bow shackles, galvanised, rated 1 t and marked. Check the jaw takes the 10 mm plate and the pin passes the 13 mm hole. Mouse each pin with soft wire after fitting.
- **Wire rope leaders (two):** 6 mm 6x19 galvanised wire rope, 1.5 m between thimble eyes with pressed ferrules, proof tested and tagged by the rigging shop (Figures 12 and 13).
- **Pull ropes (two):** 12 mm polyester double braid, breaking strength 25 kN or more, 25 m with a spliced eye; whip the tail.
- **Nylon pins (four):** 10 mm nylon 66 clevis pins with nylon hitch clips; tie each to its section with a cord lanyard.
- **Friction ring tape, red tape and clear sleeve, butt caps, structural epoxy, cord, paint:** as the bill of materials.
- **Nylon M8 bolts, prop setting pins and prop foot caps:** for the fork prop (section 3.8).
- **Lock cable and padlock, numbered seals, fall zone tape and stakes, check cards, rigger gloves:** used in Step 15 and in training.

Joint 4: shackle in the rope eye

Shackle pin through the 13 mm hole, nut side moused with wire; the leader eye on the bow

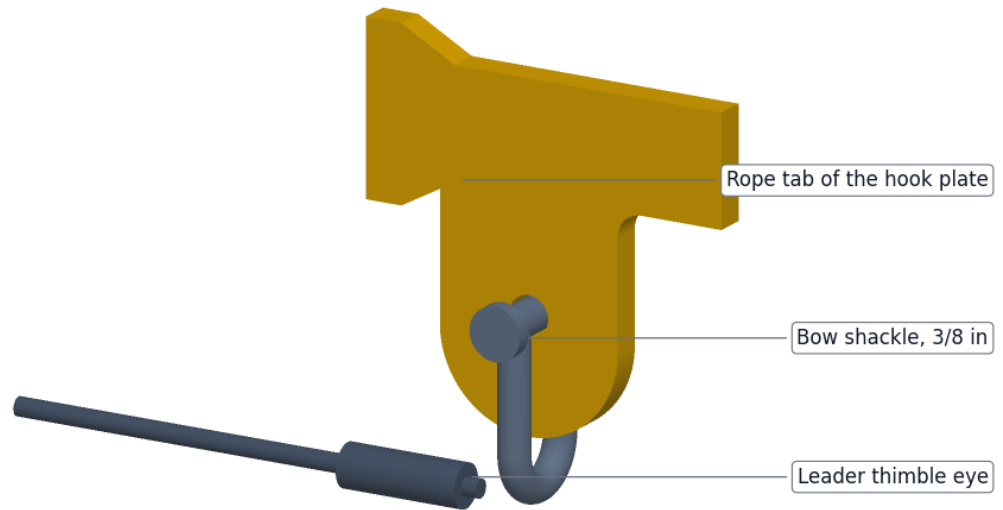


BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 12. Shackle pin through the 13 mm hole; leader eye on the bow.

Joint 5: leader to pull rope

Second shackle through the leader eye; the rope's spliced eye on its bow

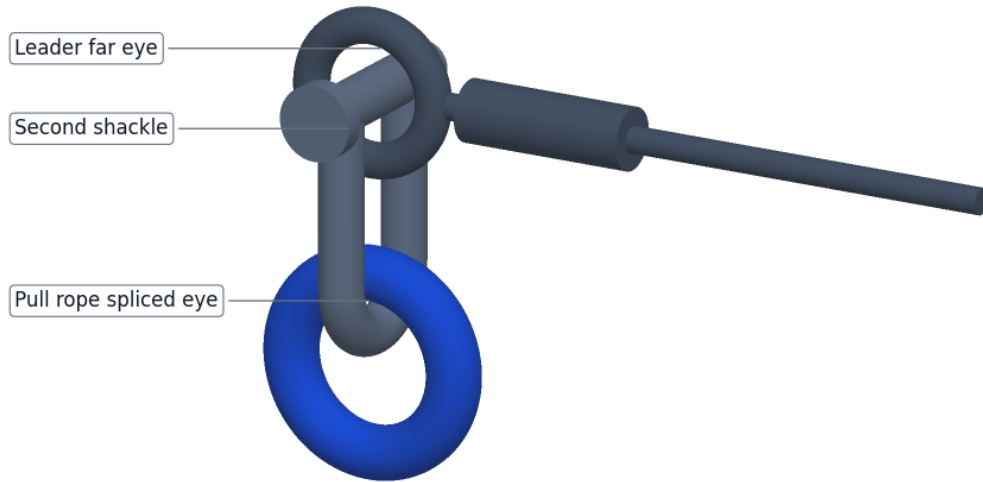

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 13. Second shackle through the far leader eye; the rope's spliced eye on its bow.

3.8 Fork prop (make 1 per set)

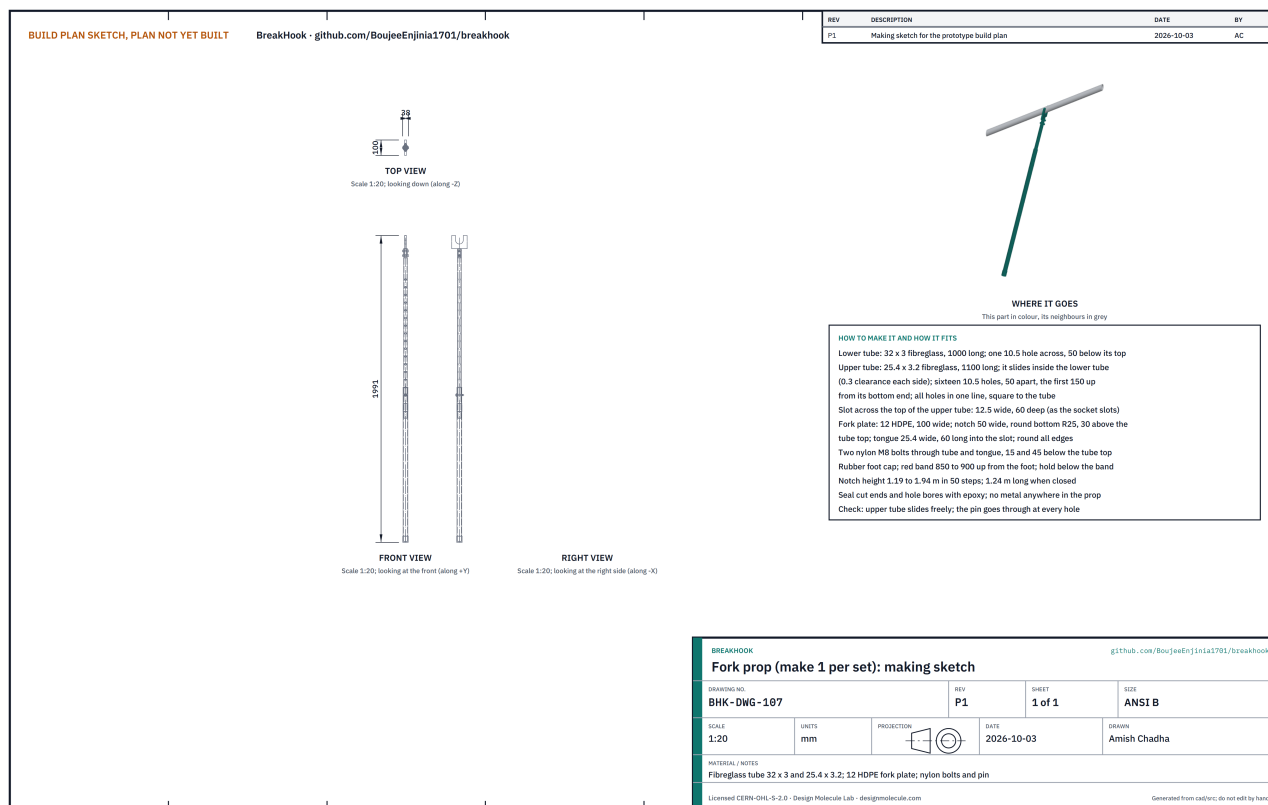


Figure 14. Fork prop making sketch (BHK-DWG-107).

What it is and what it is made from. A light, adjustable prop with a fork at its top. While the hook is set, the pole lies in the fork at its mid-length, so nobody has to hold the pole out at arm's length. It is carried separately from the pole. It has a lower tube of fibreglass 32 x 3 (the same stock as the toggles), an upper tube of fibreglass 25.4 x 3.2 that slides inside it, a fork plate cut from 12 mm HDPE plastic, two nylon M8 bolts, a nylon setting pin and a rubber foot cap. There is no metal in it.

How to make it.


1. Cut the lower tube 1000 long and the upper tube 1100 long. Seal the cut ends with epoxy.
2. Lower tube: drill one 10.5 hole straight across, 50 below its top.
3. Upper tube: mark a straight line along it and drill sixteen 10.5 holes on that line, 50 apart, the first 150 from its bottom end, all square to the tube. Seal the hole bores with epoxy.
4. Upper tube: cut a slot straight across its top, 12.5 wide and 60 deep, as for the socket slots (section 3.2), at right angles to the line of holes.
5. Fork plate: print the profile from the making sketch at full size and cut it from 12 mm HDPE with a jigsaw or coping saw. It is 100 wide; the notch at the top is 50 wide with a round bottom of 25 radius, 30 above the top of the tube; the tongue at the bottom is 25.4 wide and 60 long. Round every edge with a file or scraper.
6. Push the tongue into the slot until the plate sits on the tube, drill two 8.5 holes through tube and tongue, 15 and 45 below the top of the tube, and fit the nylon bolts and nuts hand tight.

7. Push the rubber cap on the bottom of the lower tube. Wrap red tape from 850 to 900 up from the foot and shrink a clear sleeve over it, as on the pole.
8. Slide the upper tube into the lower tube and fit the setting pin through the lower tube's hole and one of the upper tube's holes. Tie the pin to the lower tube with its lanyard.

How it fits the parts next to it. The upper tube slides in the lower tube with about 0.3 clearance all round; the pin sets the height of the fork in 50 steps, from 1.19 m to 1.94 m above the ground (Figure 15). The pole lies loose in the notch with about 2.75 clearance at each side; the fork lifts the pole and never clamps it (Figure 16). In use the prop stands under the middle pole section, about 2.95 m from the butt, leaning about 13° with its top toward the wall. Its holder holds it below the red band.

Joint 9: fork plate and setting pin on the prop

Tongue 60 deep in the slot, two nylon bolts; the pin sets the height in 50 mm steps

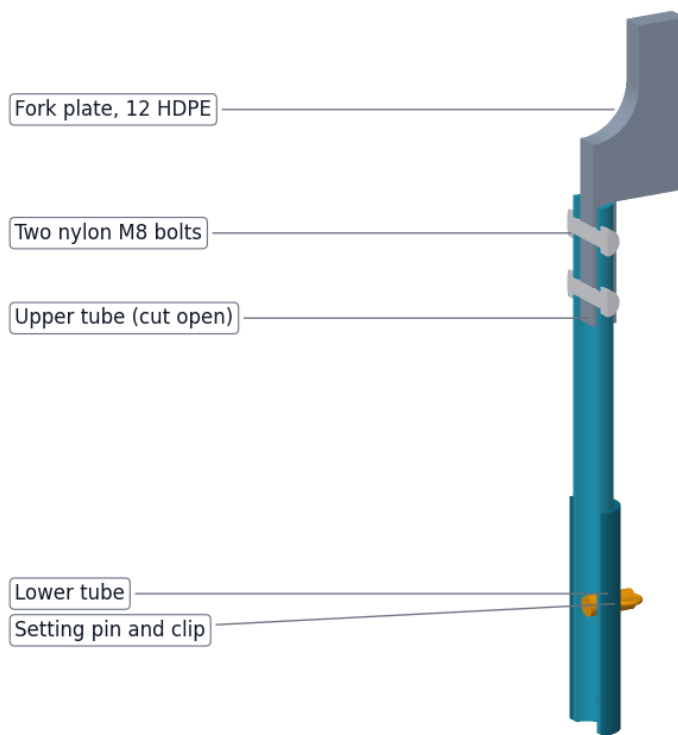


BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 15. Cut open: the fork's tongue in the slot with two nylon bolts; the setting pin through both tubes.

Joint 10: the pole resting in the fork (in use)

The pole lies loose in the notch at mid-length; the fork lifts, it never clamps

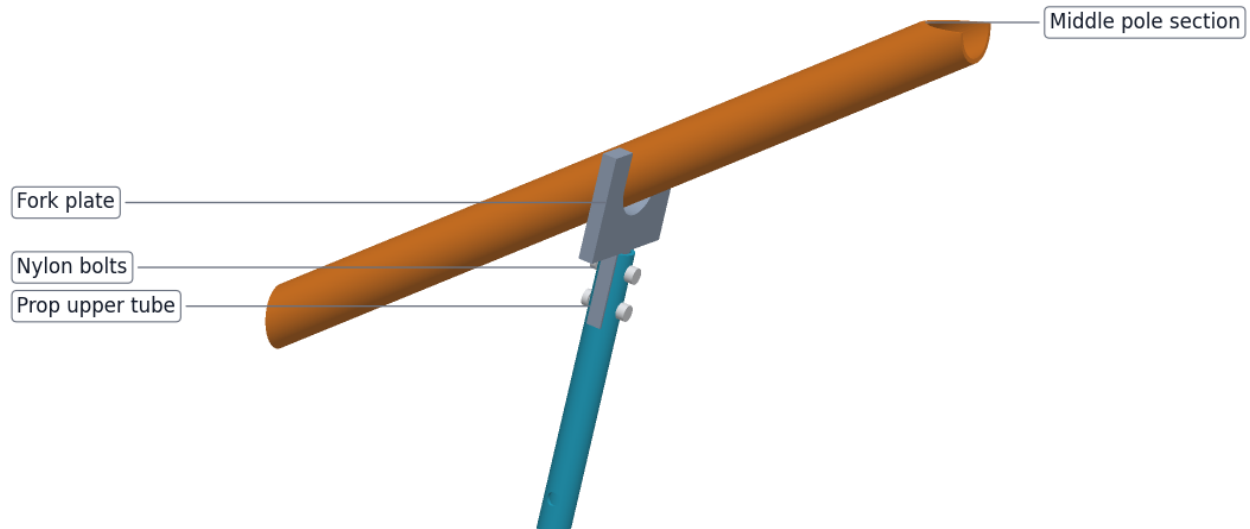

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Figure 16. In use: the middle pole section lies in the notch.


Check before moving on. The upper tube slides in and out by hand at every hole and the pin goes through each of them. The fork plate does not rock in the slot. Closed to its shortest, the prop is about 1.24 m long. Mark the hole for the community's usual wall height with tape.

■ 4. Putting it together

In each picture the parts already fitted are grey and the part being fitted is in colour, with an arrow showing the way it goes in. Long parts are drawn cut short around the joint.

Step 1: hook plate into the socket slots**Step 1: hook plate into the socket slots**

Slide the plate's wide end into both slots until it is 50 deep

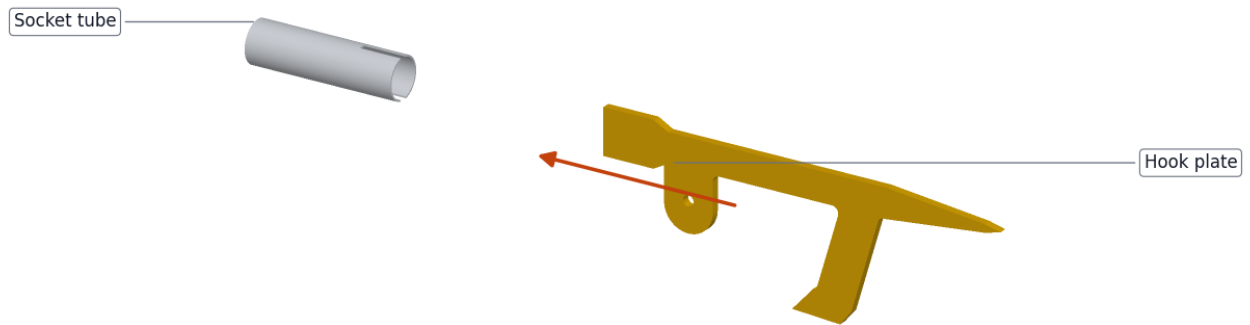

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Slide the plate's wide end into both slots until it bottoms, 50 deep, with the arm pointing down.

Step 2: weld, clean and paint the hook head

Step 2: weld, clean and paint the hook head

Tack, check square, then weld both sides of each slot; prime and paint yellow

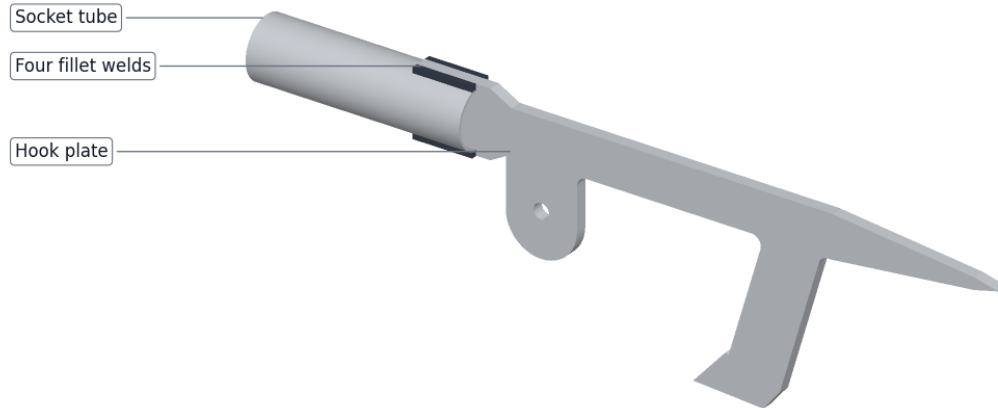

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Tack, check square, then weld both sides of each slot (section 3.2). **Hold point:** safety stop S1.

Step 3: bond a sleeve onto the butt section

Step 3: bond a sleeve onto the butt section

150 onto the top end with epoxy; cure a full day

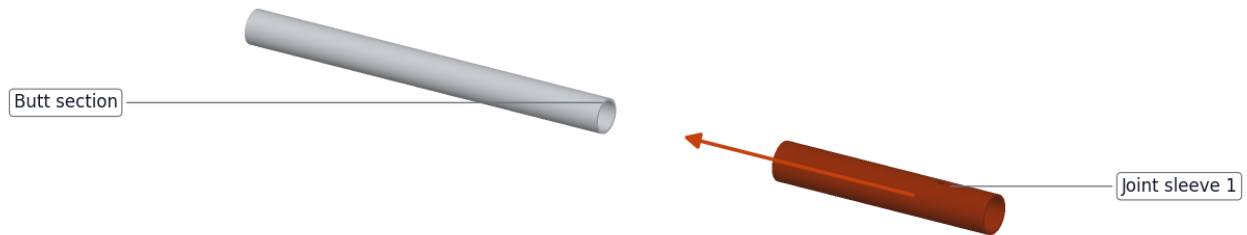

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

150 onto the top end with epoxy, the drilled half sticking up. Cure a full day.

Step 4: bond a sleeve onto the middle section

Step 4: bond a sleeve onto the middle section

Same as step 3, on the middle section's top end

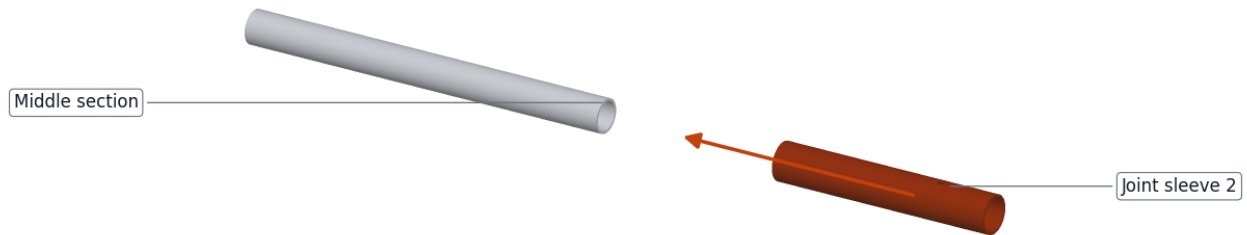

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

As Step 3, on the middle section's top end.

Step 5: butt cap and hand band

Step 5: butt cap and hand band

Cap pushed on; red band 1550 to 1600 from the butt end, under clear sleeve

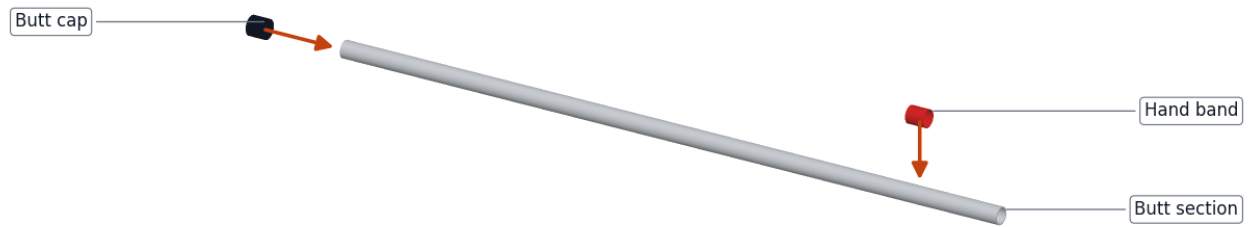

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Push the cap onto the butt end. Wrap red tape from 1550 to 1600 up from the butt end and shrink a clear sleeve over it.

Step 6: friction ring on the top section

Step 6: friction ring on the top section

Two or three turns of tape, 110 to 150 below the tip

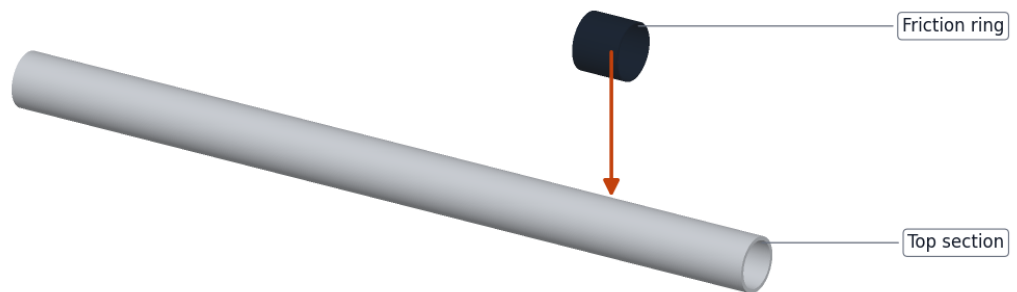

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Two or three turns of rubber tape, 110 to 150 below the tip, stretched as you wrap.

Step 7: join the butt and middle sections

Step 7: join the butt and middle sections

Push fully home, line up the holes, pin and clip

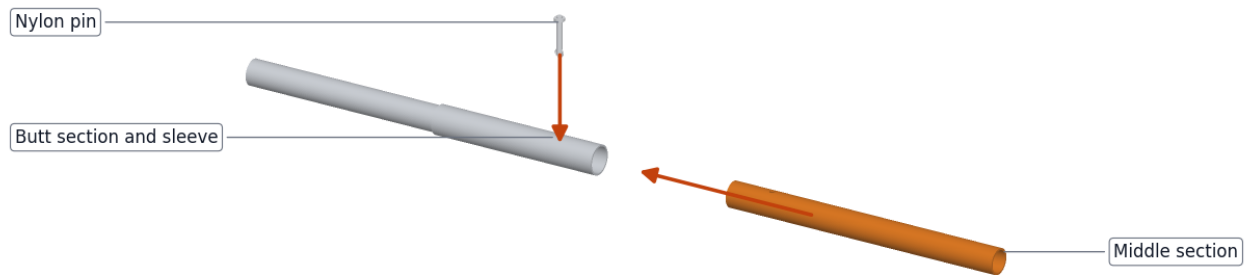

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Push the middle section fully into the sleeve, line up the holes, fit the nylon pin from the top and clip it.

Step 8: join the middle and top sections

Step 8: join the middle and top sections

As step 7

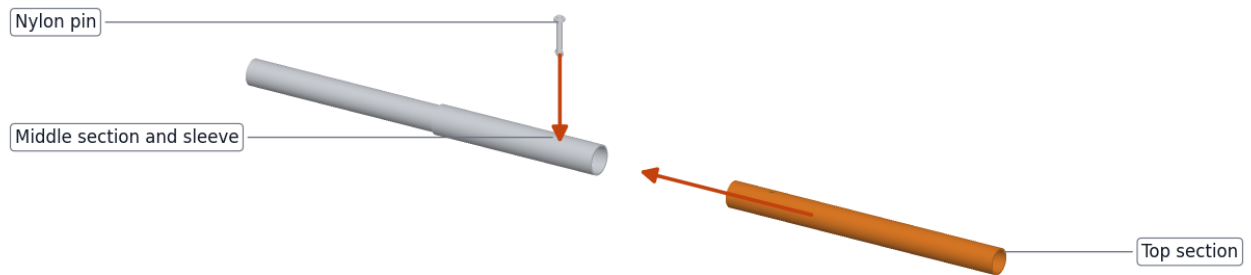

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

As Step 7.

Step 9: hook head onto the pole

Step 9: hook head onto the pole

Push on over the friction ring until the pole stops on the plate

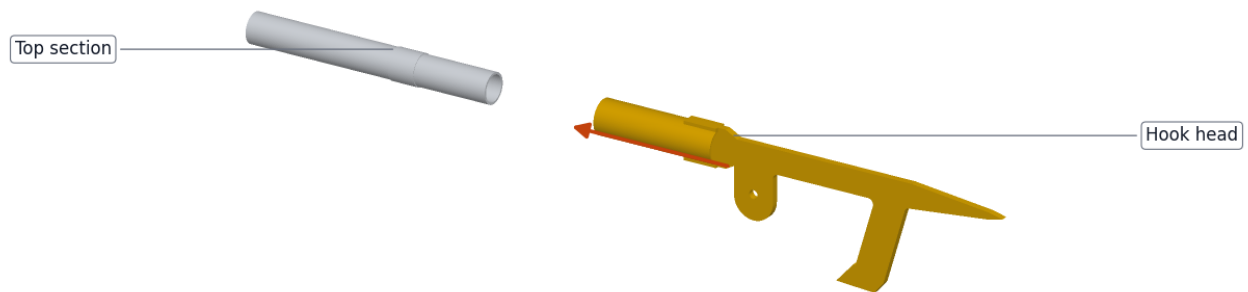

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Push the hook head over the friction ring until the pole stops on the plate. Pull it off and on again: it should need a firm pull of about 50 N (a 5 kg spring balance). Add or remove a turn of tape until it does.

Step 10: shackle and leader onto the hook

Step 10: shackle and leader onto the hook

Leader eye on the shackle bow; pin through the hole, tighten and mouse

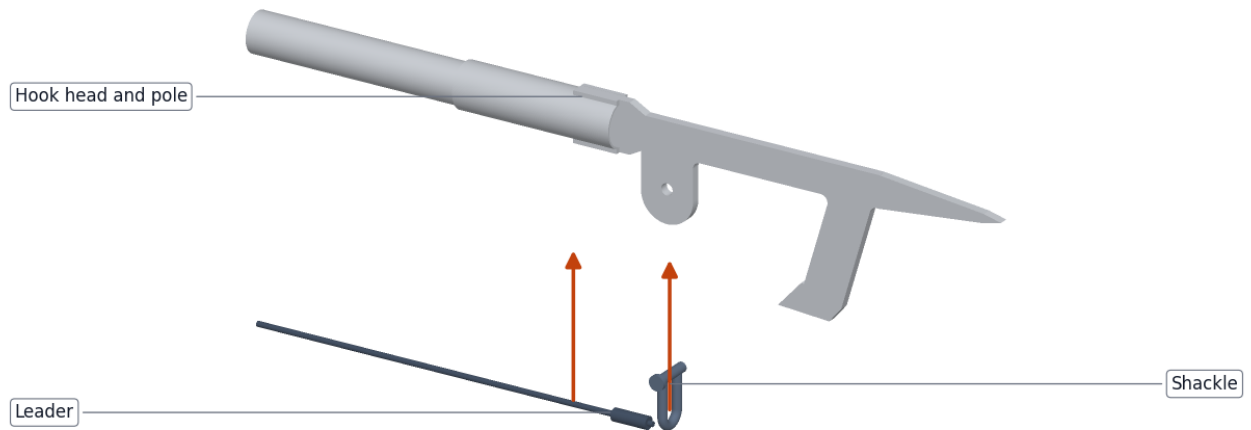

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Put the leader's eye on the shackle bow, the pin through the 13 mm hole, tighten by hand and mouse it with wire.

Step 11: pull rope onto the leader

Step 11: pull rope onto the leader

Second shackle through the far leader eye, rope eye on its bow; mouse the pin

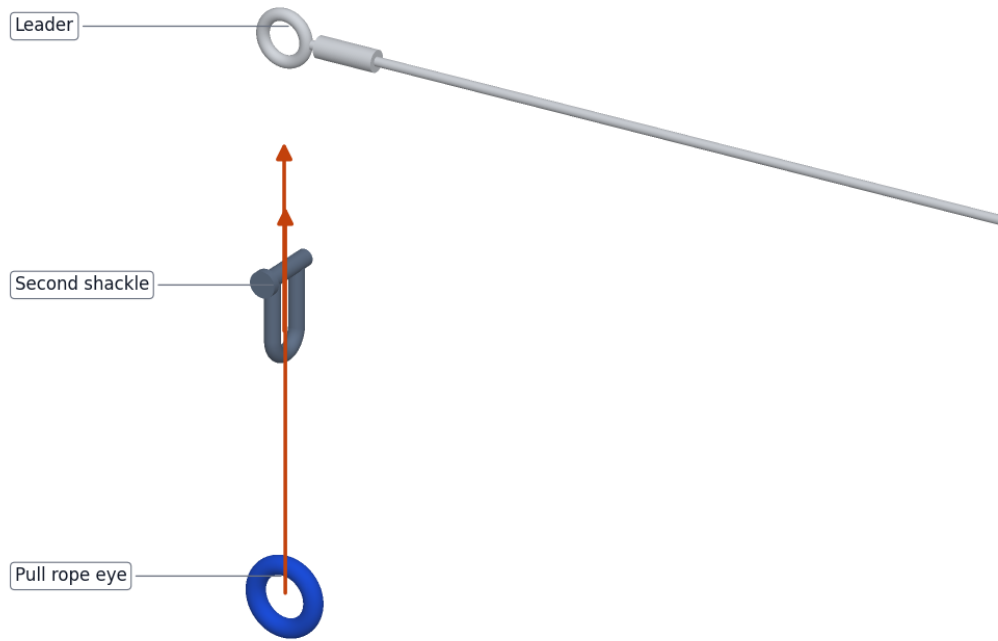

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Second shackle through the far eye of the leader, the rope's spliced eye on its bow; mouse the pin. **Hold point:** safety stop S2.

Step 12: toggles onto the rope

Step 12: toggles onto the rope

Ten toggles, 1 m apart, the first 11 m from the hook head

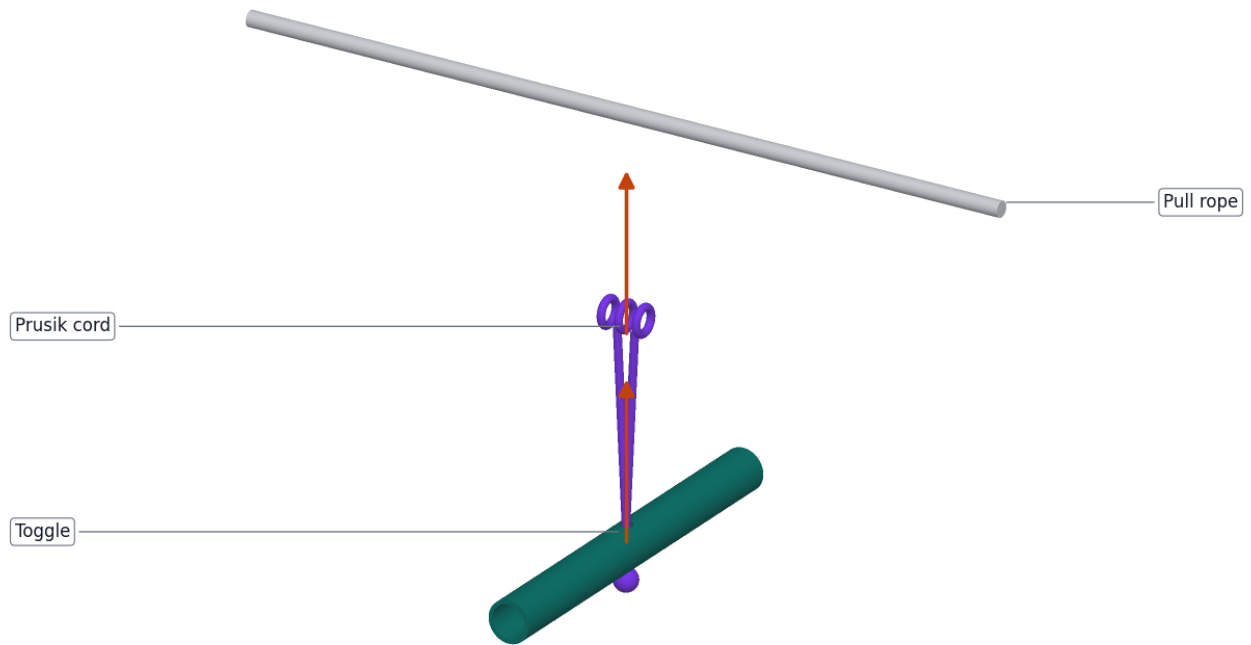

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Ten toggles, 1 m apart, the first 11 m from the hook head.

Step 13: assemble the fork prop

Step 13: assemble the fork prop

Fork bolted into the upper tube; upper tube into the lower; pin at the set hole

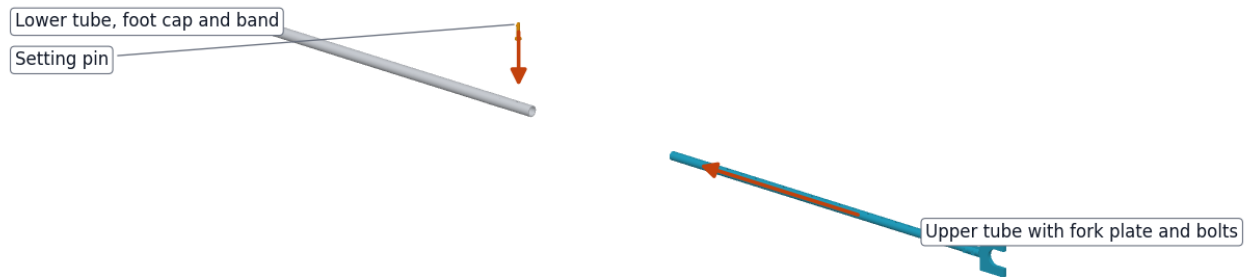

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

Fork plate bolted into the top of the upper tube; upper tube into the lower tube; setting pin through the marked hole, clip on (section 3.8).

Step 14: rack uprights onto the wall

Step 14: rack uprights onto the wall

1200 apart, plumb, two M10 anchors each

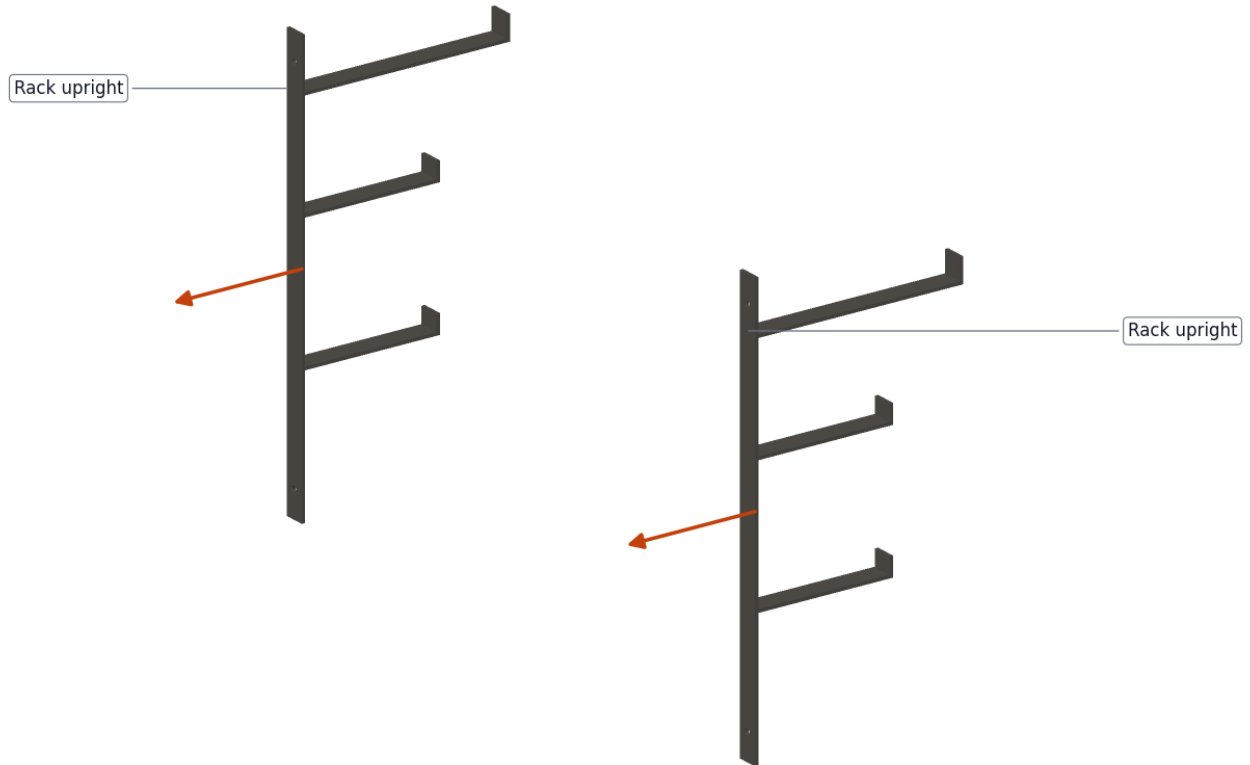

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT


github.com/BoujeeEnjinia1701/breakhook

1200 apart, plumb, with two M10 anchors each into masonry or coach screws into a timber post.

Step 15: stow the kit, lock and seal

Step 15: stow the kit, lock and seal

Cable through every section, both props and both hook eyes; padlock and seal

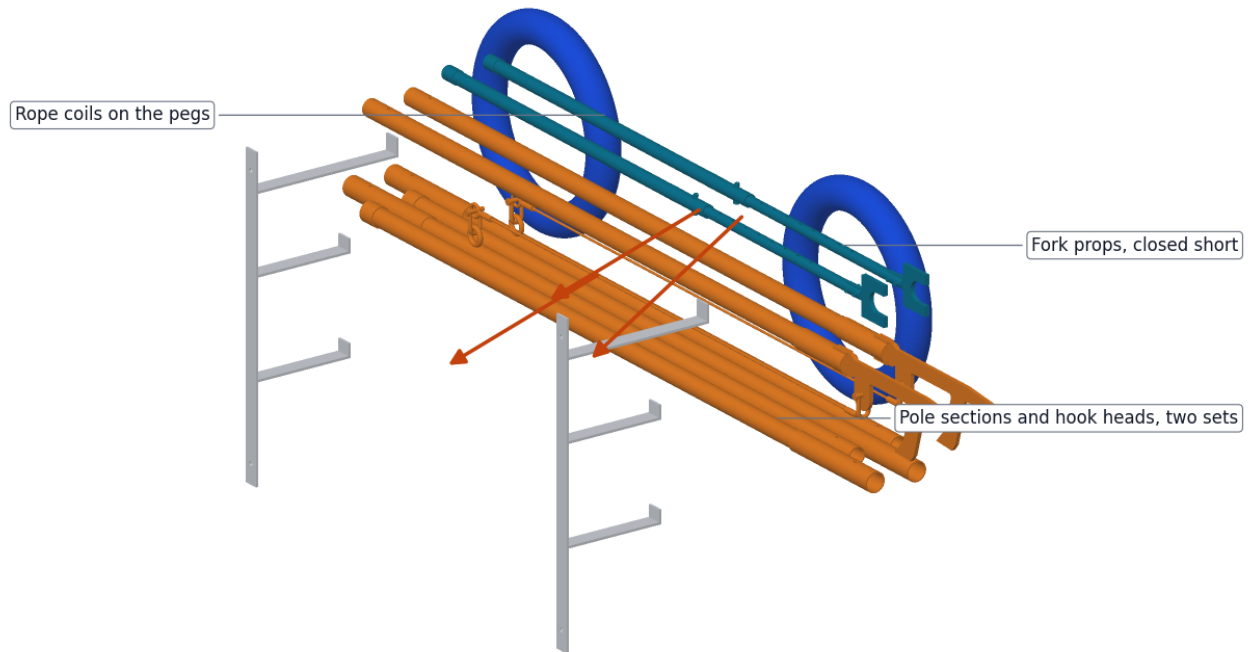

BUILD PLAN ILLUSTRATION, PLAN NOT YET BUILT

github.com/BoujeeEnjinia1701/breakhook

Butt and middle sections on the lower arms, sleeves at alternate ends; top sections with their hook heads, shackles and leaders on the upper arms; the two fork props closed short on the upper arms between the top sections, forks beyond the arm; ropes coiled on the pegs with the toggles. Run the lock cable through every section, both props and both hook eyes, padlock it and fit a numbered seal. **Hold point:** safety stop S4.

■ 5. First checks

These are the checks a TRL 4 test report would record; this plan only lists them. Requirement numbers are those of BHK-REQ-001.

Table 3. First checks.

Check	Requirement	How	Pass when
Proof load	R2	Hook head, shackles and leader loaded to 6 kN for 1 minute through a 75 x 100 timber in the hook, on CalRig or at a rigging shop	No crack, no visible bend, no weld mark; hook throat opening changes by less than 1 mm
Mass	R5	Weigh the pole with the hook head	8 kg or less (7.82 kg estimated)
Longest piece	R8	Measure each section with its sleeve	2.0 m or less
Release	R12	Spring balance on the pole while the hook head is held	Releases at about 50 N
Insulated length and certificate	R4, R14	Measure from the socket mouth to the top of the band; read the tube certificate	3.0 m or more; certificate to ASTM F711 present
Beam fit	R11	Hang the hook on 75 x 50 and 100 x 120 timber offcuts	Shank rests on top, arm behind, no forcing
Reach	R1	Pole team sets the hook on a 3 m high timber rail, the pole on the fork prop at mid-length and the rear hand at the butt	Hook set in three tries or fewer; droop measured (about 0.27 m expected); distance of each person from the rail measured: pole hands 4 m, prop holder about 2.9 m for about 25 s; confirms the stand-off accepted in BHK-DDR-004
Prop	R1, R8	Set the prop at each marked hole under the pole; close it	Pin goes through at every hole; the prop stands steady at its lean; closed length 1.3 m or less
Toggle grip	R13	30 kg hung on a toggle on the rope	No slip
Deployment drill	R6	Four people, kit 100 m from the rail, stopwatch	Hook set and pole withdrawn in 3 min or less; the prop holder withdraws with the pole, so nobody stands nearer than the 4 m pole-hand distance at the haul

■ 6. Safety stops

Stop at each point. Carry on only when everything listed is true.

- **S1. Before any weld is loaded.** The welds have been looked at by the welder and a second person: full length, no cracks, no undercut at the slot ends. The plate is square to the tube.
- **S2. Before the first proof load.** The rig and the load path are rated above 6 kN; the shackle pins are moused; nobody stands in line with the rope, leader or hook, or within 3 m of the load path; a heavy blanket or mat is laid over the leader to catch it if it parts.
- **S3. After the proof load.** Any bend, crack or shifted ferrule takes that part out of service for good; nothing is straightened and reused.
- **S4. Before the kit is issued to a community.** Proof load passed and tagged for both sets; tube certificate on file; check cards, gloves and fall zone tape in the kit; the community's fire plan, agreed with the fire service, names the keyholders and the caller; training has been given.

- **S5. Before any trial pull (outside this plan).** Only on a purpose-built test frame, never an occupied or lived-in structure; the frame checked empty; no overhead lines within 3 m; fall zone taped; pole and fork prop withdrawn and the pole team out of the zone; haulers at least 10 m back, in gloves, on the caller's word.

■ 7. Tools, skills and workspace

Tools. Angle grinder with cutting and flap discs, or access to a plasma cutter; bench drill with drills to 16 mm; centre punch and letter stamps; MIG or stick welder; hacksaw; fine-tooth saw for fibreglass; jigsaw or coping saw for the HDPE fork plate; files; coarse abrasive paper and a dowel; tape measure, steel rule, square and calipers; 5 kg spring balance; bathroom or hanging scale; paint brushes; heat gun for the clear sleeve.

Skills. A competent welder for the hook head and rack; basic workshop skills for the rest; knot tying (double fisherman's knot, prusik hitch), which a rigging shop or climbing club can teach. The proof load is done by a rigging shop or on CalRig with someone trained to use it.

Workspace. A metalworking bench with a fire-safe area for welding; an outdoor or ventilated space for cutting and drilling fibreglass; 6 m of clear floor to lay out and join the pole.

Personal protective equipment. Welding helmet, gloves and jacket for hot work; safety glasses for cutting, grinding and drilling; dust mask (FFP2 or N95) and gloves for fibreglass; hearing protection for grinding; rigger gloves for handling rope under load.

■ 8. Where the numbers come from

- Model and constructability checks: `cad/src/model.py` (`python cad/src/model.py --check`); STEP and STL exports in `cad/step/` and `cad/stl/`.
- Pictures: `cad/src/build_plan_media.py`, using `.kit/build_views.py`; written to `docs/05-build-plan/` and `cad/drawings/BHK-DWG-101` to `BHK-DWG-107`.
- General arrangement: `cad/drawings/BHK-DWG-001.pdf`, Rev P2.
- Calculations: `docs/04-calcs/01-sizing.md` (BHK-CAL-001 v0.2) and `docs/04-calcs/sizing.py`.
- Bill of materials: `bom/bom.csv`.
- Decisions: `docs/decisions/0001-trl2-review-decisions.md` (BHK-DDR-001)
`docs/decisions/0002-design-for-construction.md` (BHK-DDR-002) and `docs/decisions/0003-fork-prop.md` (BHK-DDR-003).
- Requirements: `docs/03-requirements.md` (BHK-REQ-001 v0.3).