



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC

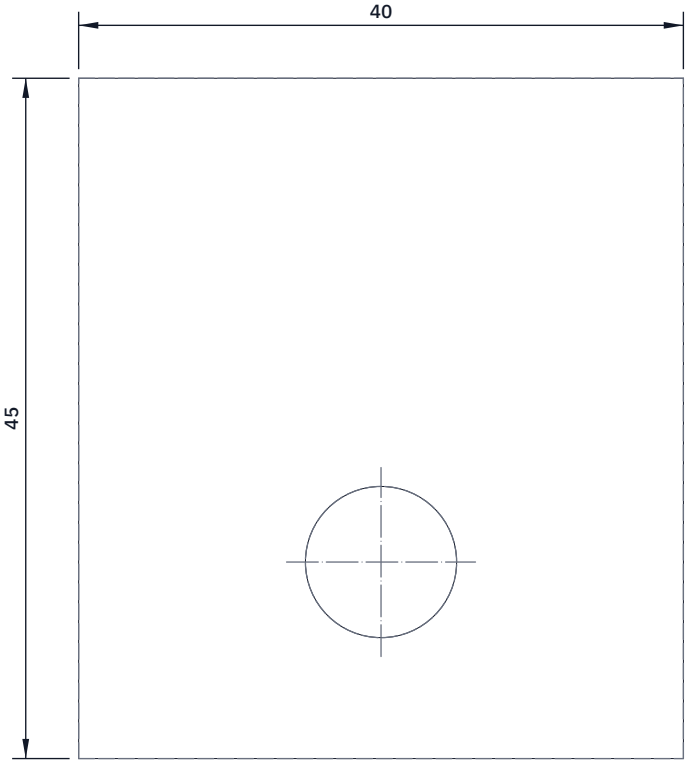


TOP VIEW
Scale 2:1; looking down (along -Z)

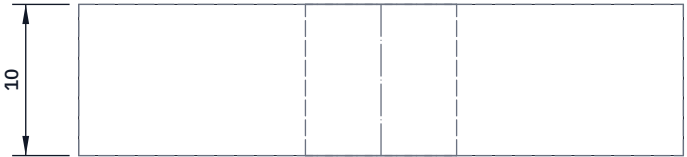

FRONT VIEW
Scale 2:1; looking at the front (along +Y)



RIGHT VIEW
Scale 2:1; looking at the right side (along -X)

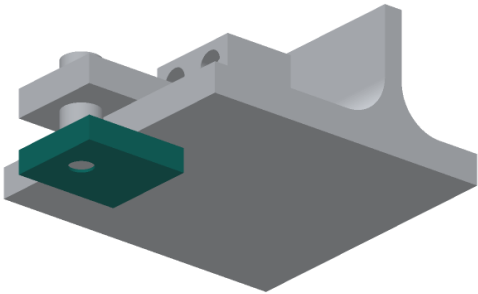

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Jaw: cut two 45 mm lengths of 40 x 10 mm steel flat bar; deburr.
Drill 8.5 mm and tap M10 right through, 13 from one end, on the centre line.
Break the edges; zinc plate or paint with zinc-rich primer.
Packer: cut two lengths of steel tube, 16 mm outside, 10.5 mm or more inside, 12.2 long: the flange thickness less 0.5 mm.
Measure the real flange first and cut to suit; square the ends.
Fit: the jaw goes under the flange, 22 mm in from the tip, its tapped end out past the tip. The packer stands on the jaw beside the tip.
The M10 x 35 bolt comes down through the foot block tail and the packer into the jaw; it must not stand out below the jaw.
Check: the bolt runs into the jaw by hand, and its tip stops 1 mm or more short of the jaw's underside.

BRIDGEPULSE			github.com/BoujeeEnjinia1701/bridgepulse		
BridgePulse clamp jaw and packer (make 2 each): making sketch					
DRAWING NO. BRP-DWG-103		REV P1	SHEET 1 of 1		SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-09-30		DRAWN Amish Chadha
MATERIAL / NOTES Steel flat bar 40 x 10 mm, zinc plated; packer: steel tube 16 mm outside					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					
Generated from cad/src; do not edit by hand					